 


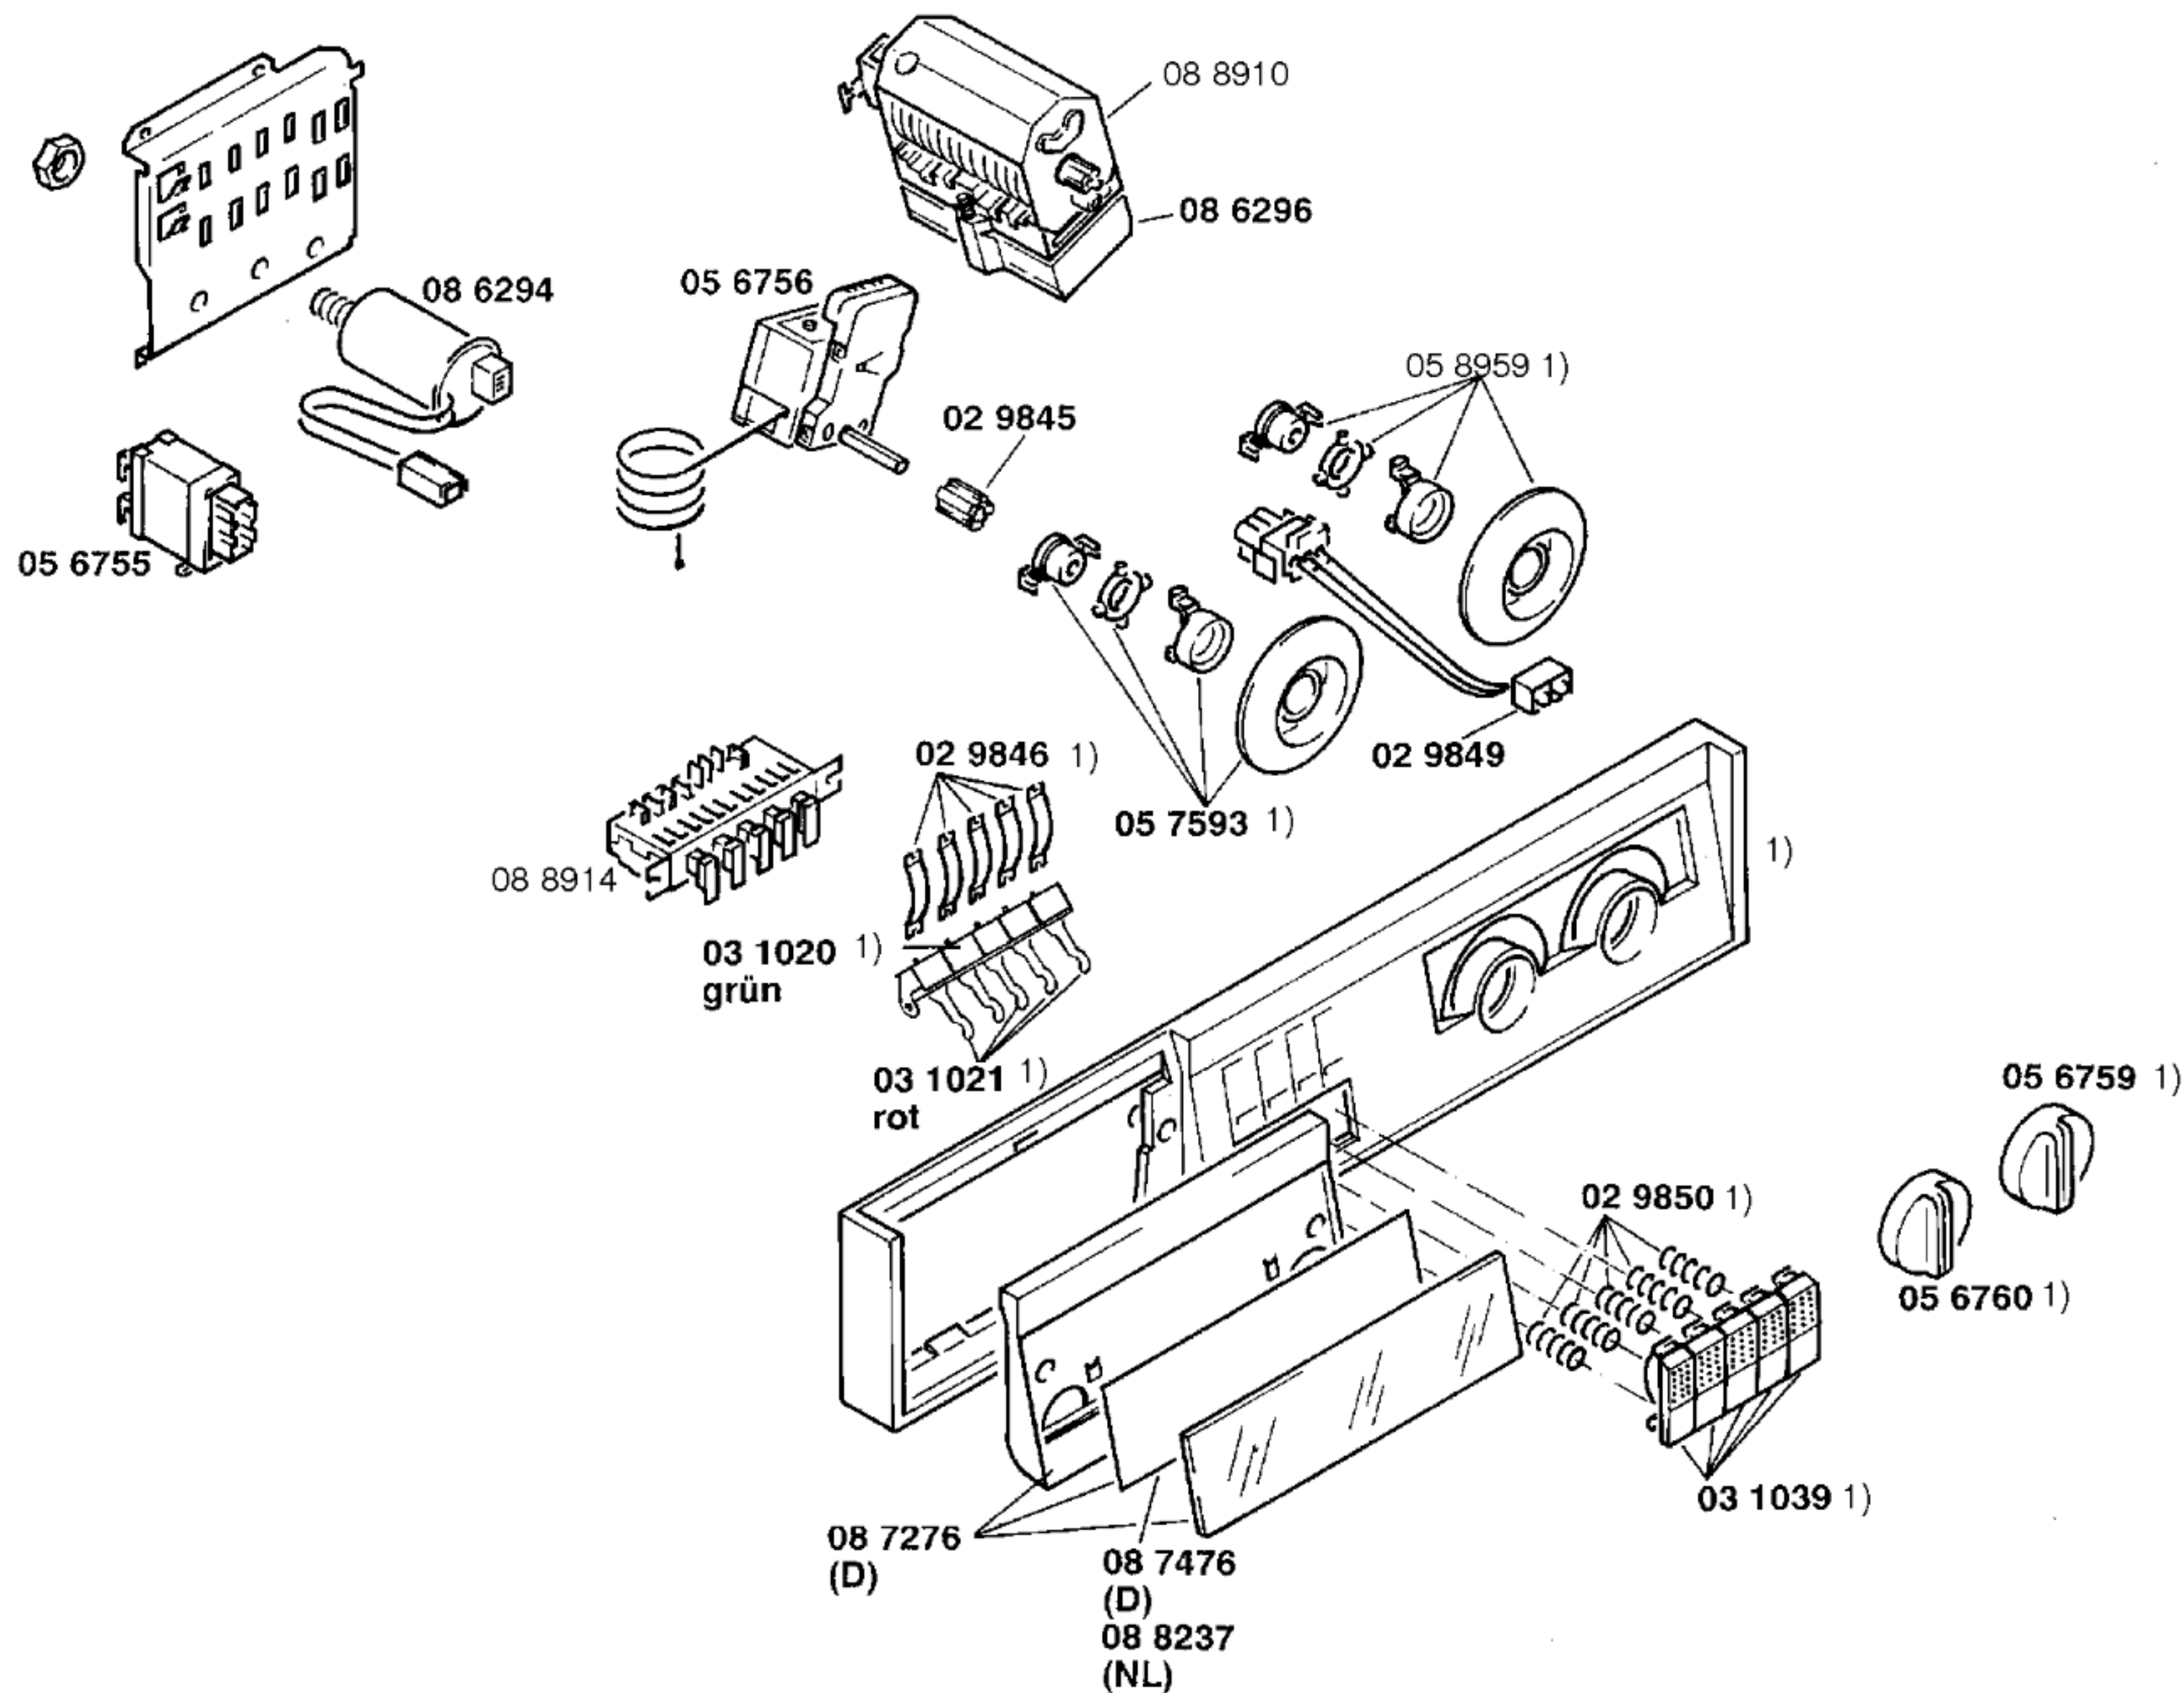

Gebrauchsanweisungen:

51 4118

(D)

51 4592

(NL,F,E,GB)

Programmtabellen:

51 3940

(D)

51 3555

(NL,F,E,GB)

Aufstellanweisungen:

51 3965

(D)

51 3969

(NL,F,E,GB)

 
1) 27 3969

 
(D)

28 3388

(Symbole)

Blende kompl.

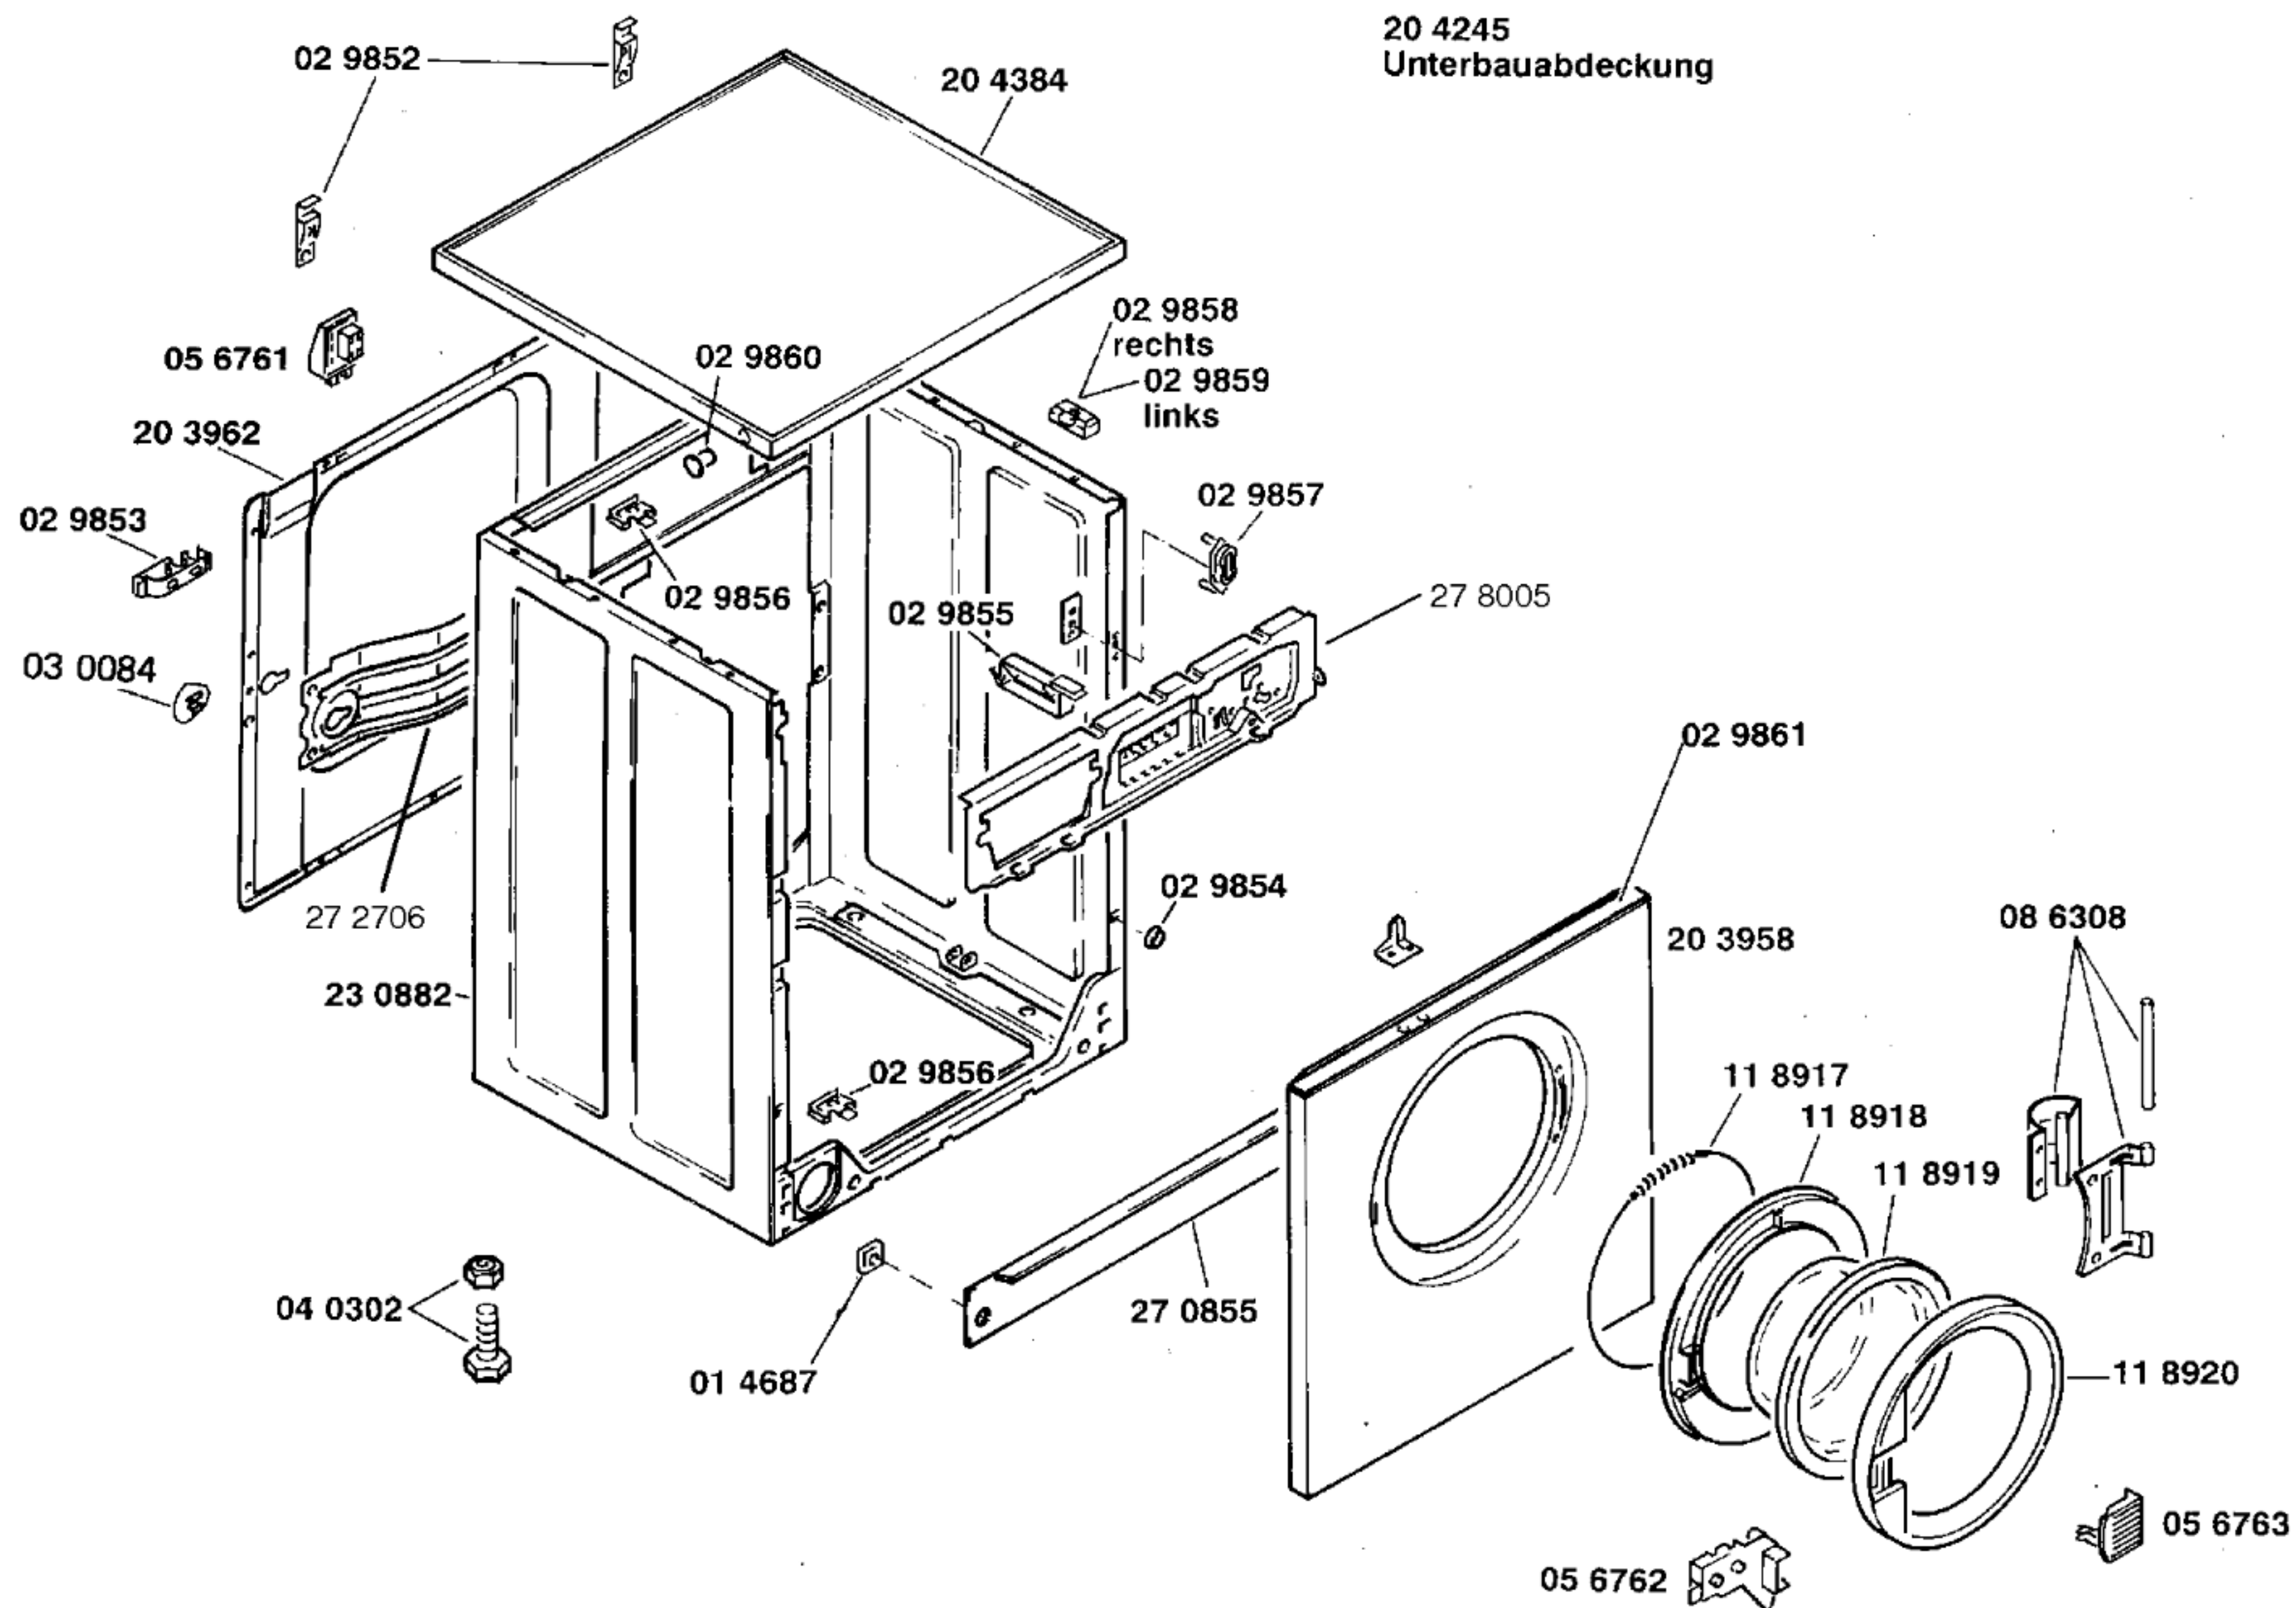

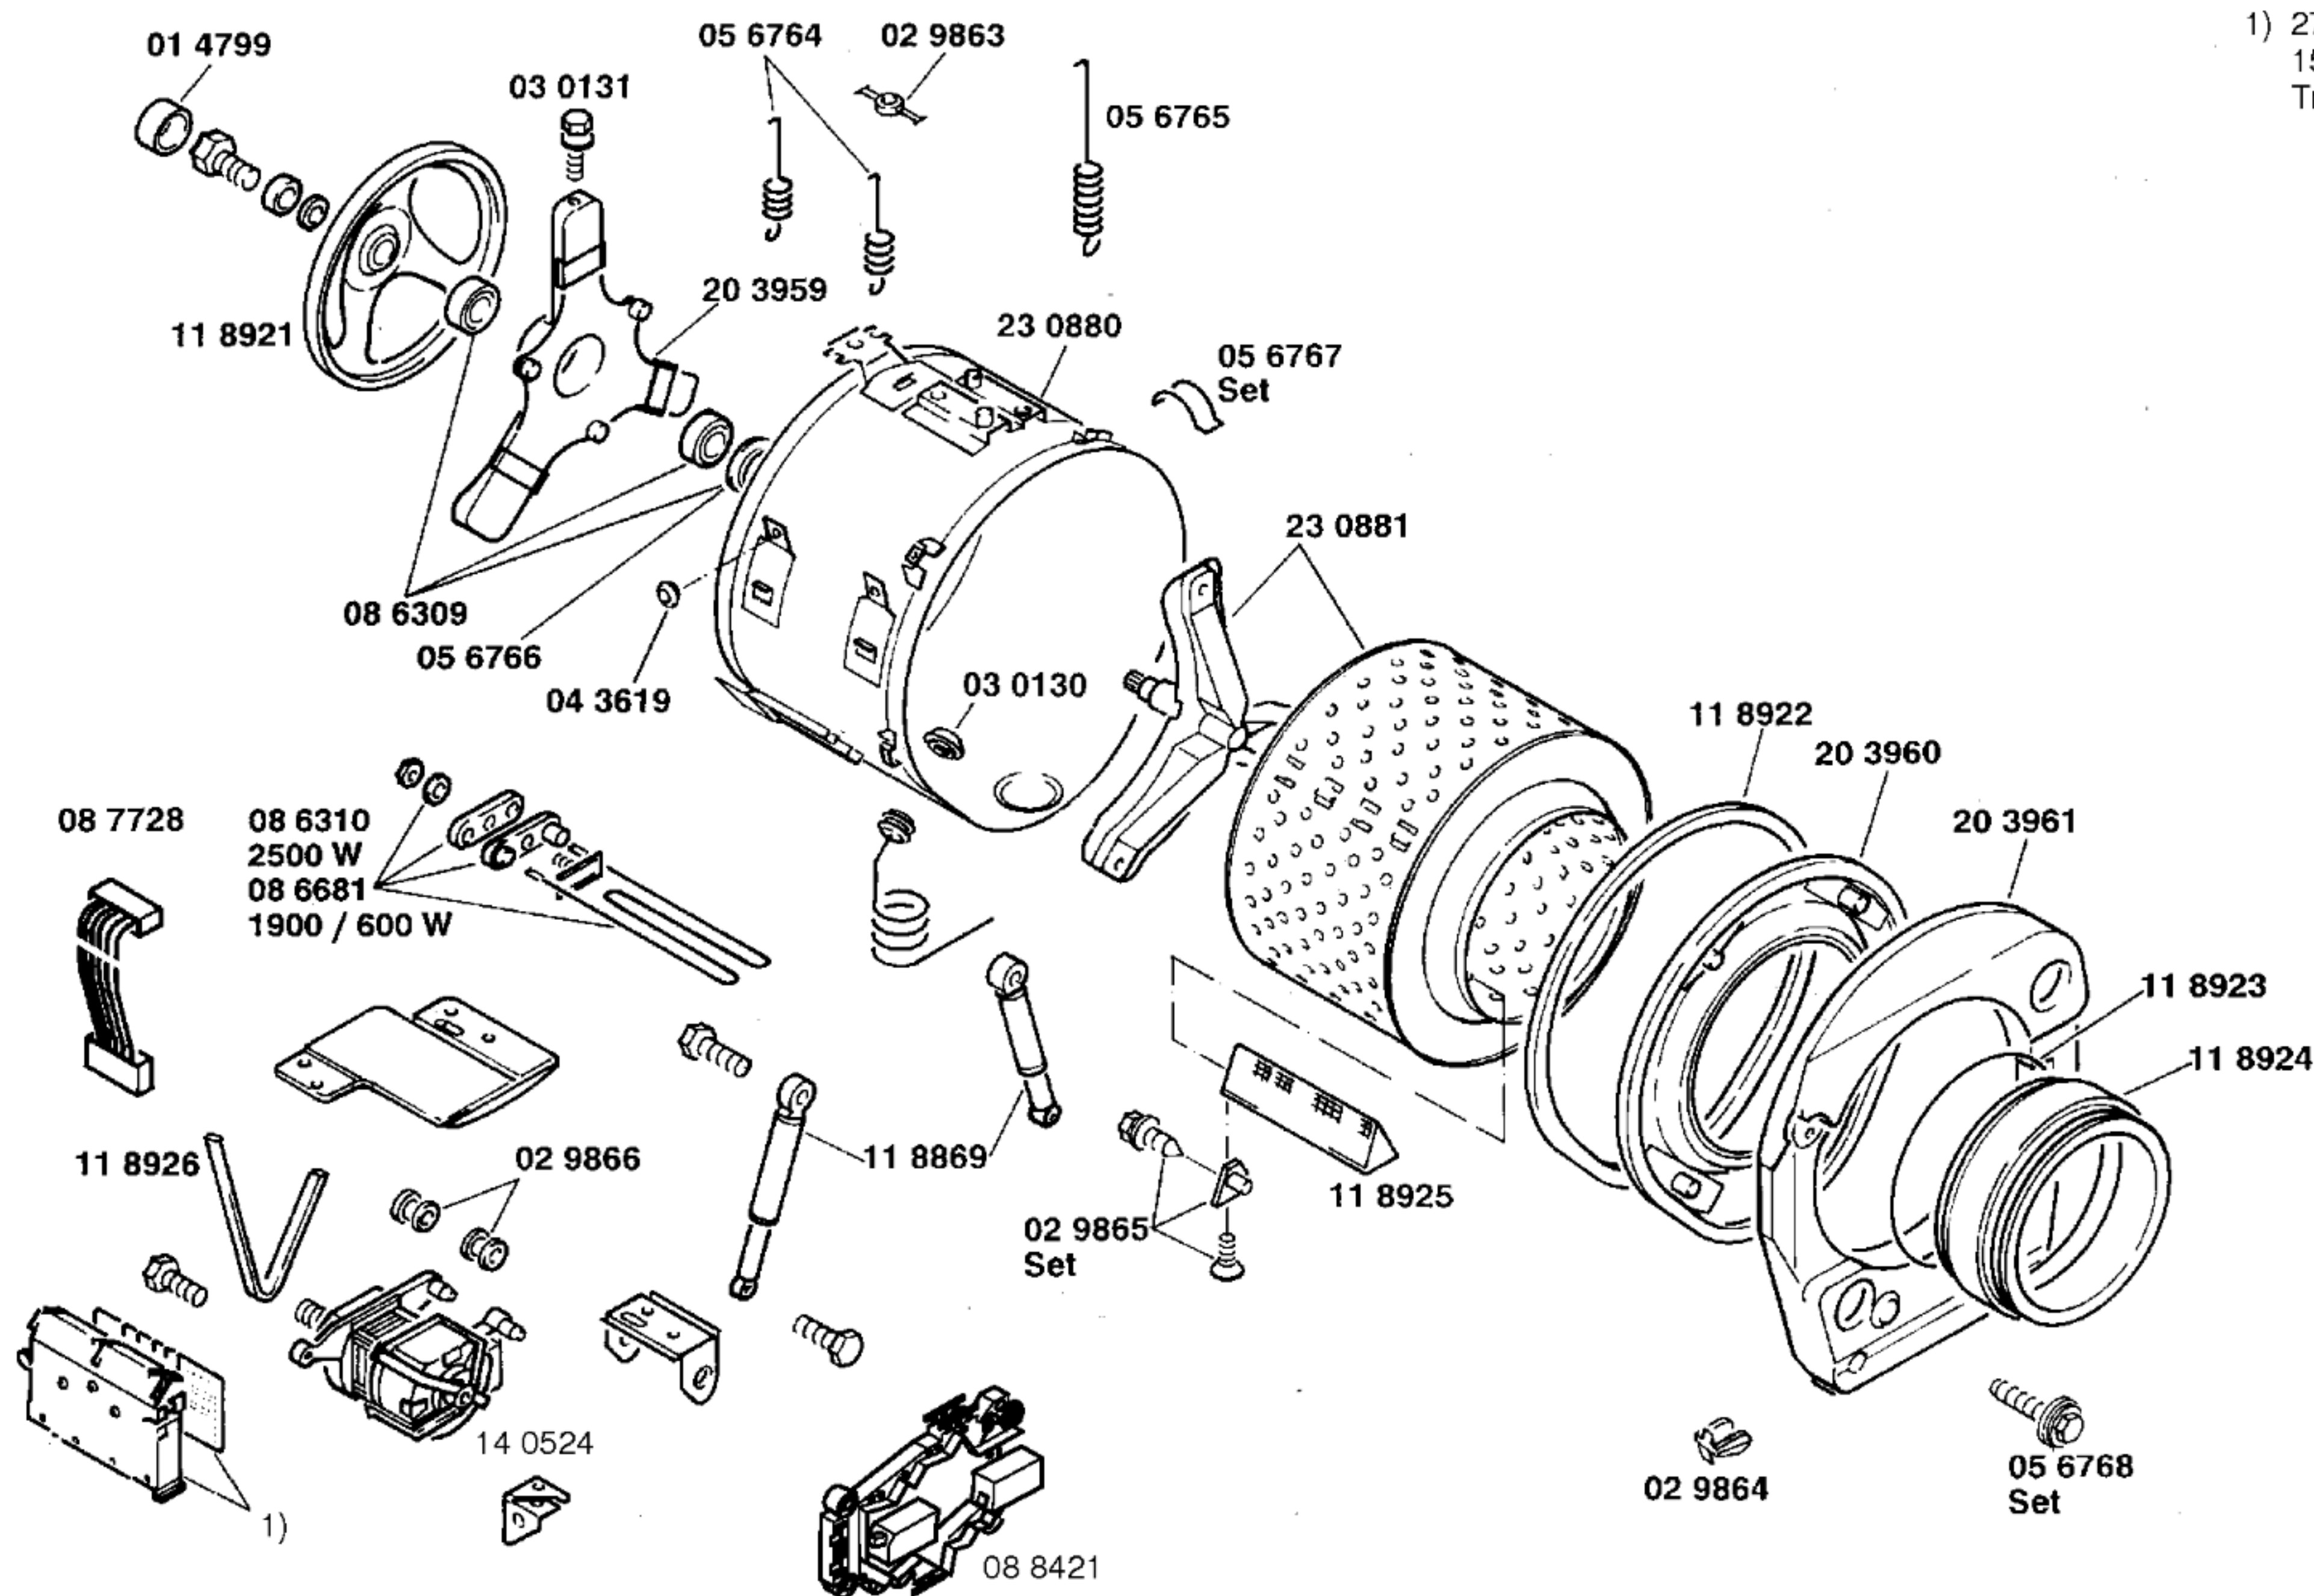

1) 27 1716
15 5272
Triac-Motorleistung

