


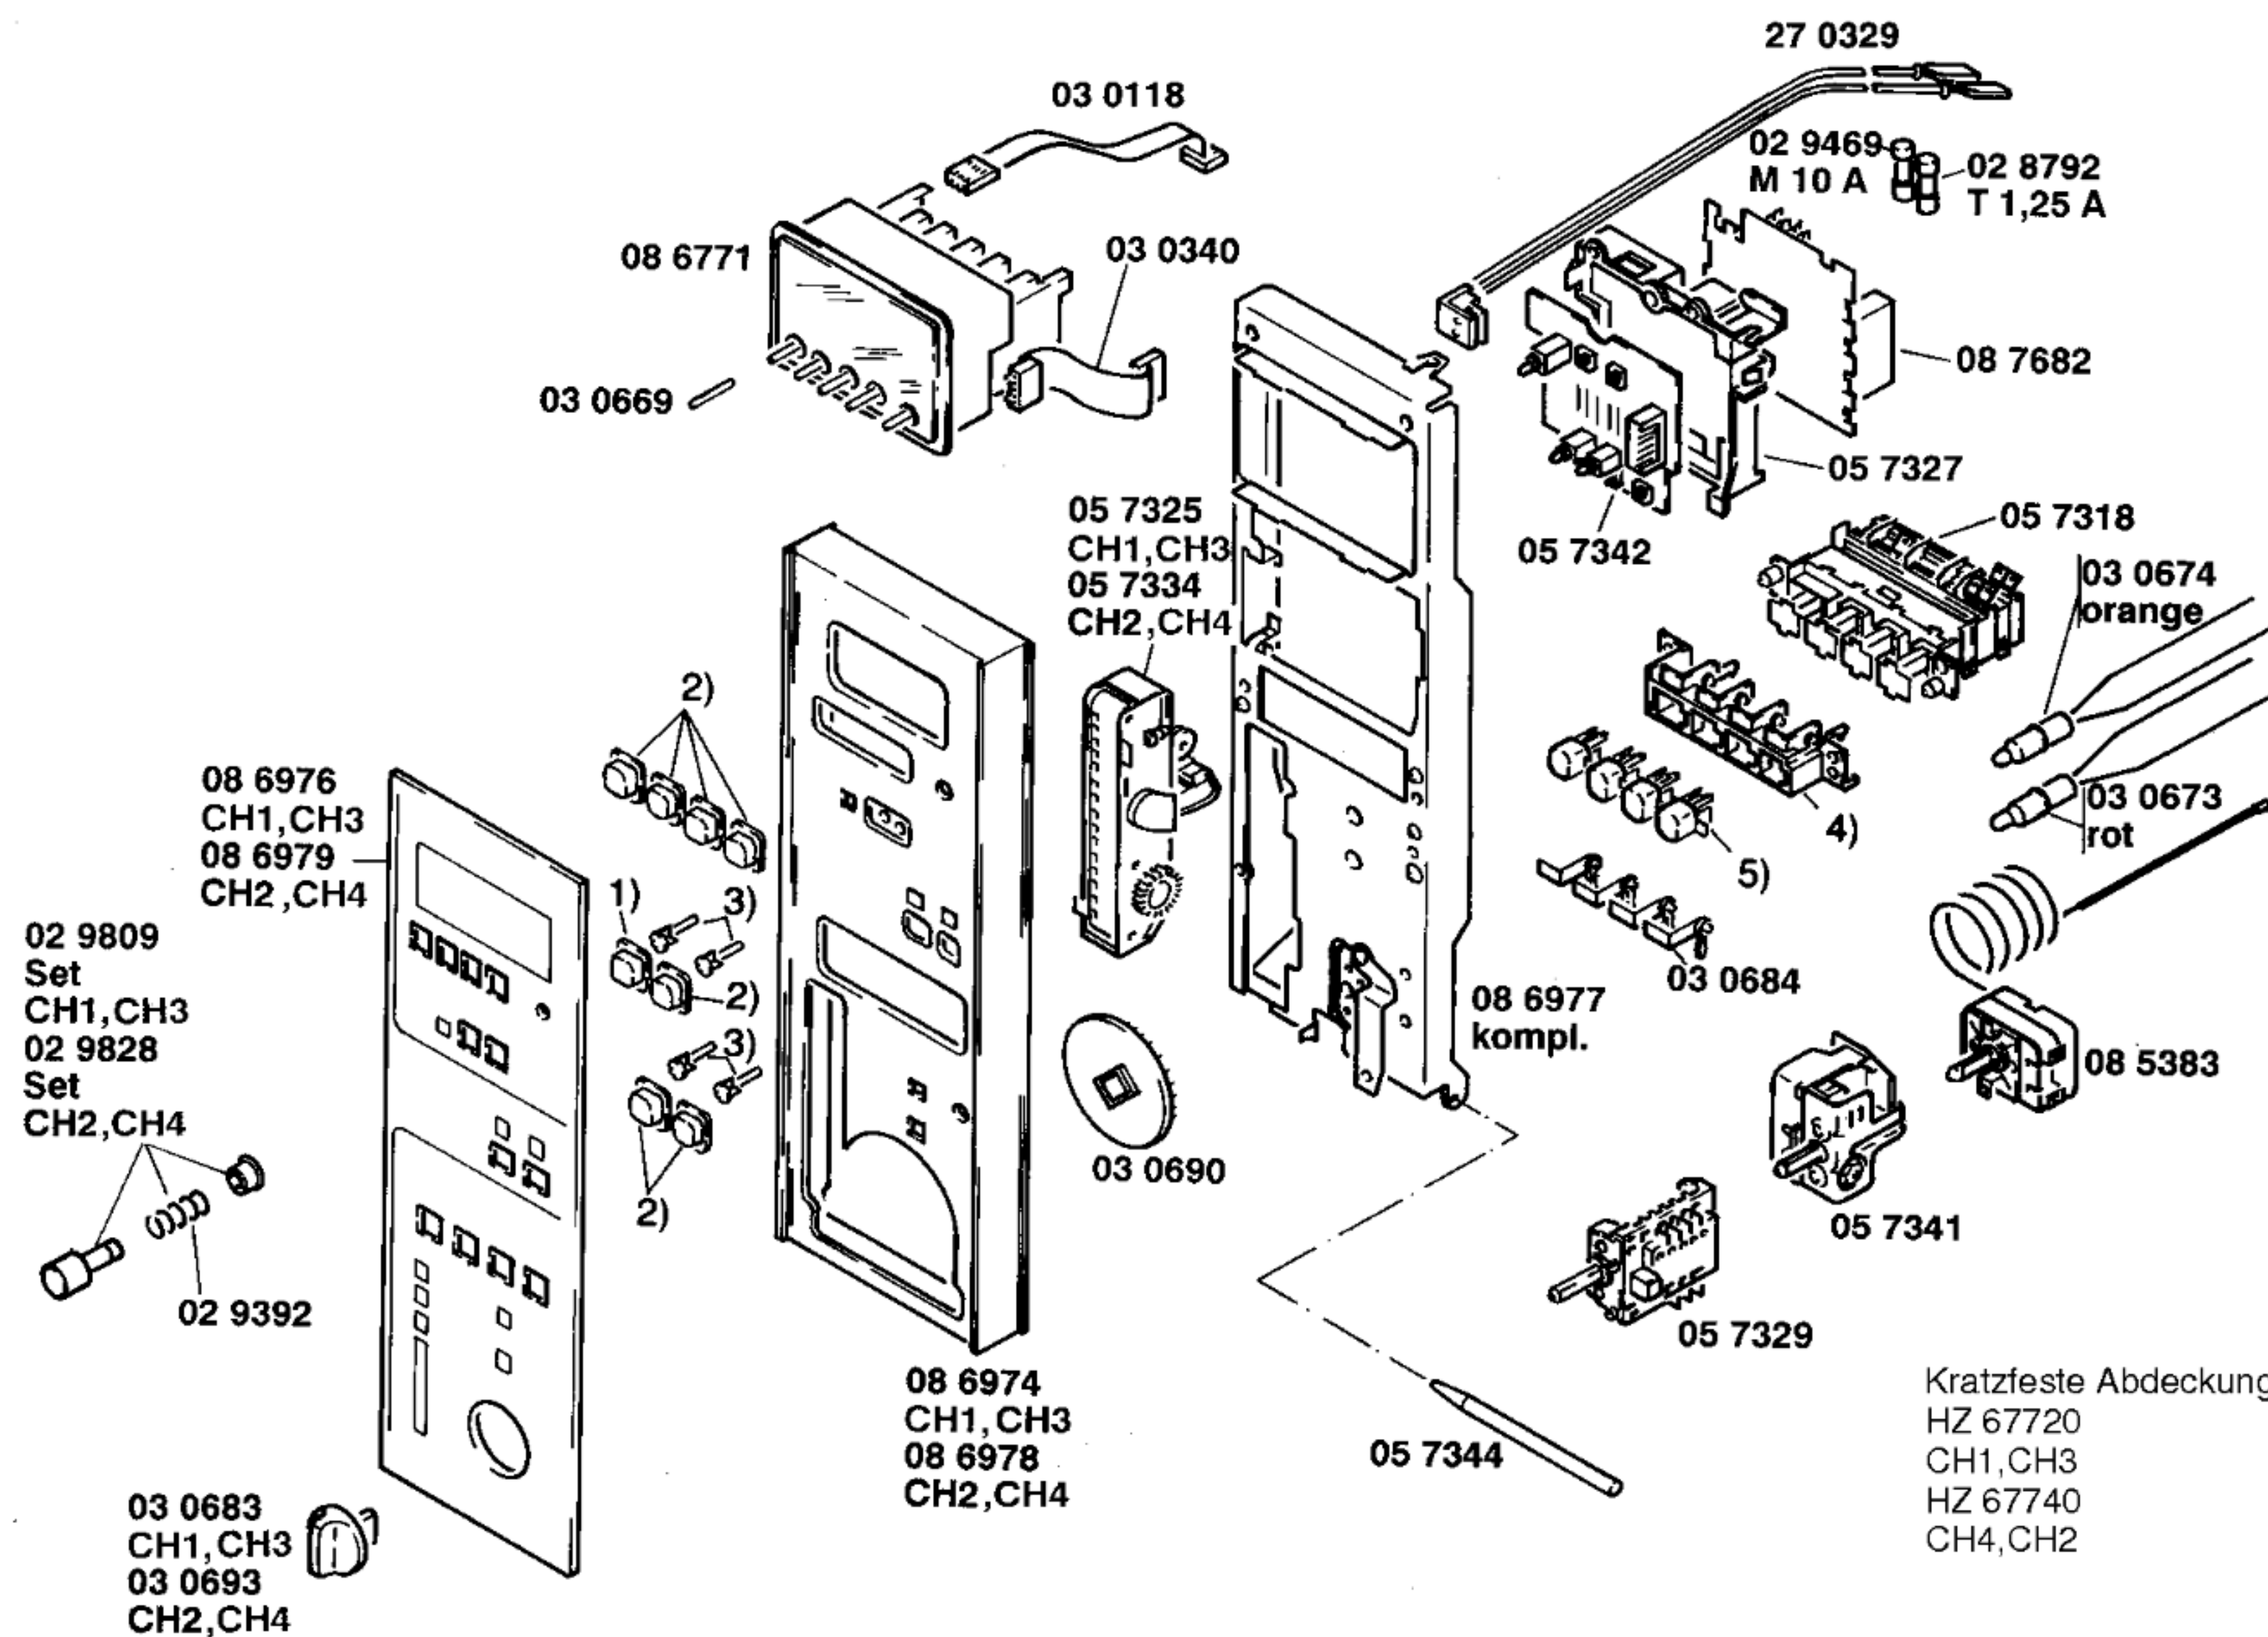


51 4310
Gebrauchsanweisung
8D, F, I)
Kochbuch
51 3930
(D)
51 4062
(F)


- 1) 03 0681
grün
- 2) 03 0680
CH1, CH3
03 0691
CH2, CH4
- 3) 03 0679
- 4) 05 7322
CH1, CH3
05 7333
CH2, CH4
- 5) 03 0682
CH1, CH3
03 0692
CH2, CH4


Zubehör:

Alu-Backblech
HZ 8055
Glaspfanne
HZ 8056
Universalpfanne
HZ 67615
Glasbräter
HZ 9150
Einbaurahmen
HZ 67020
CH1, CH3
HZ 67040
CH2, CH4

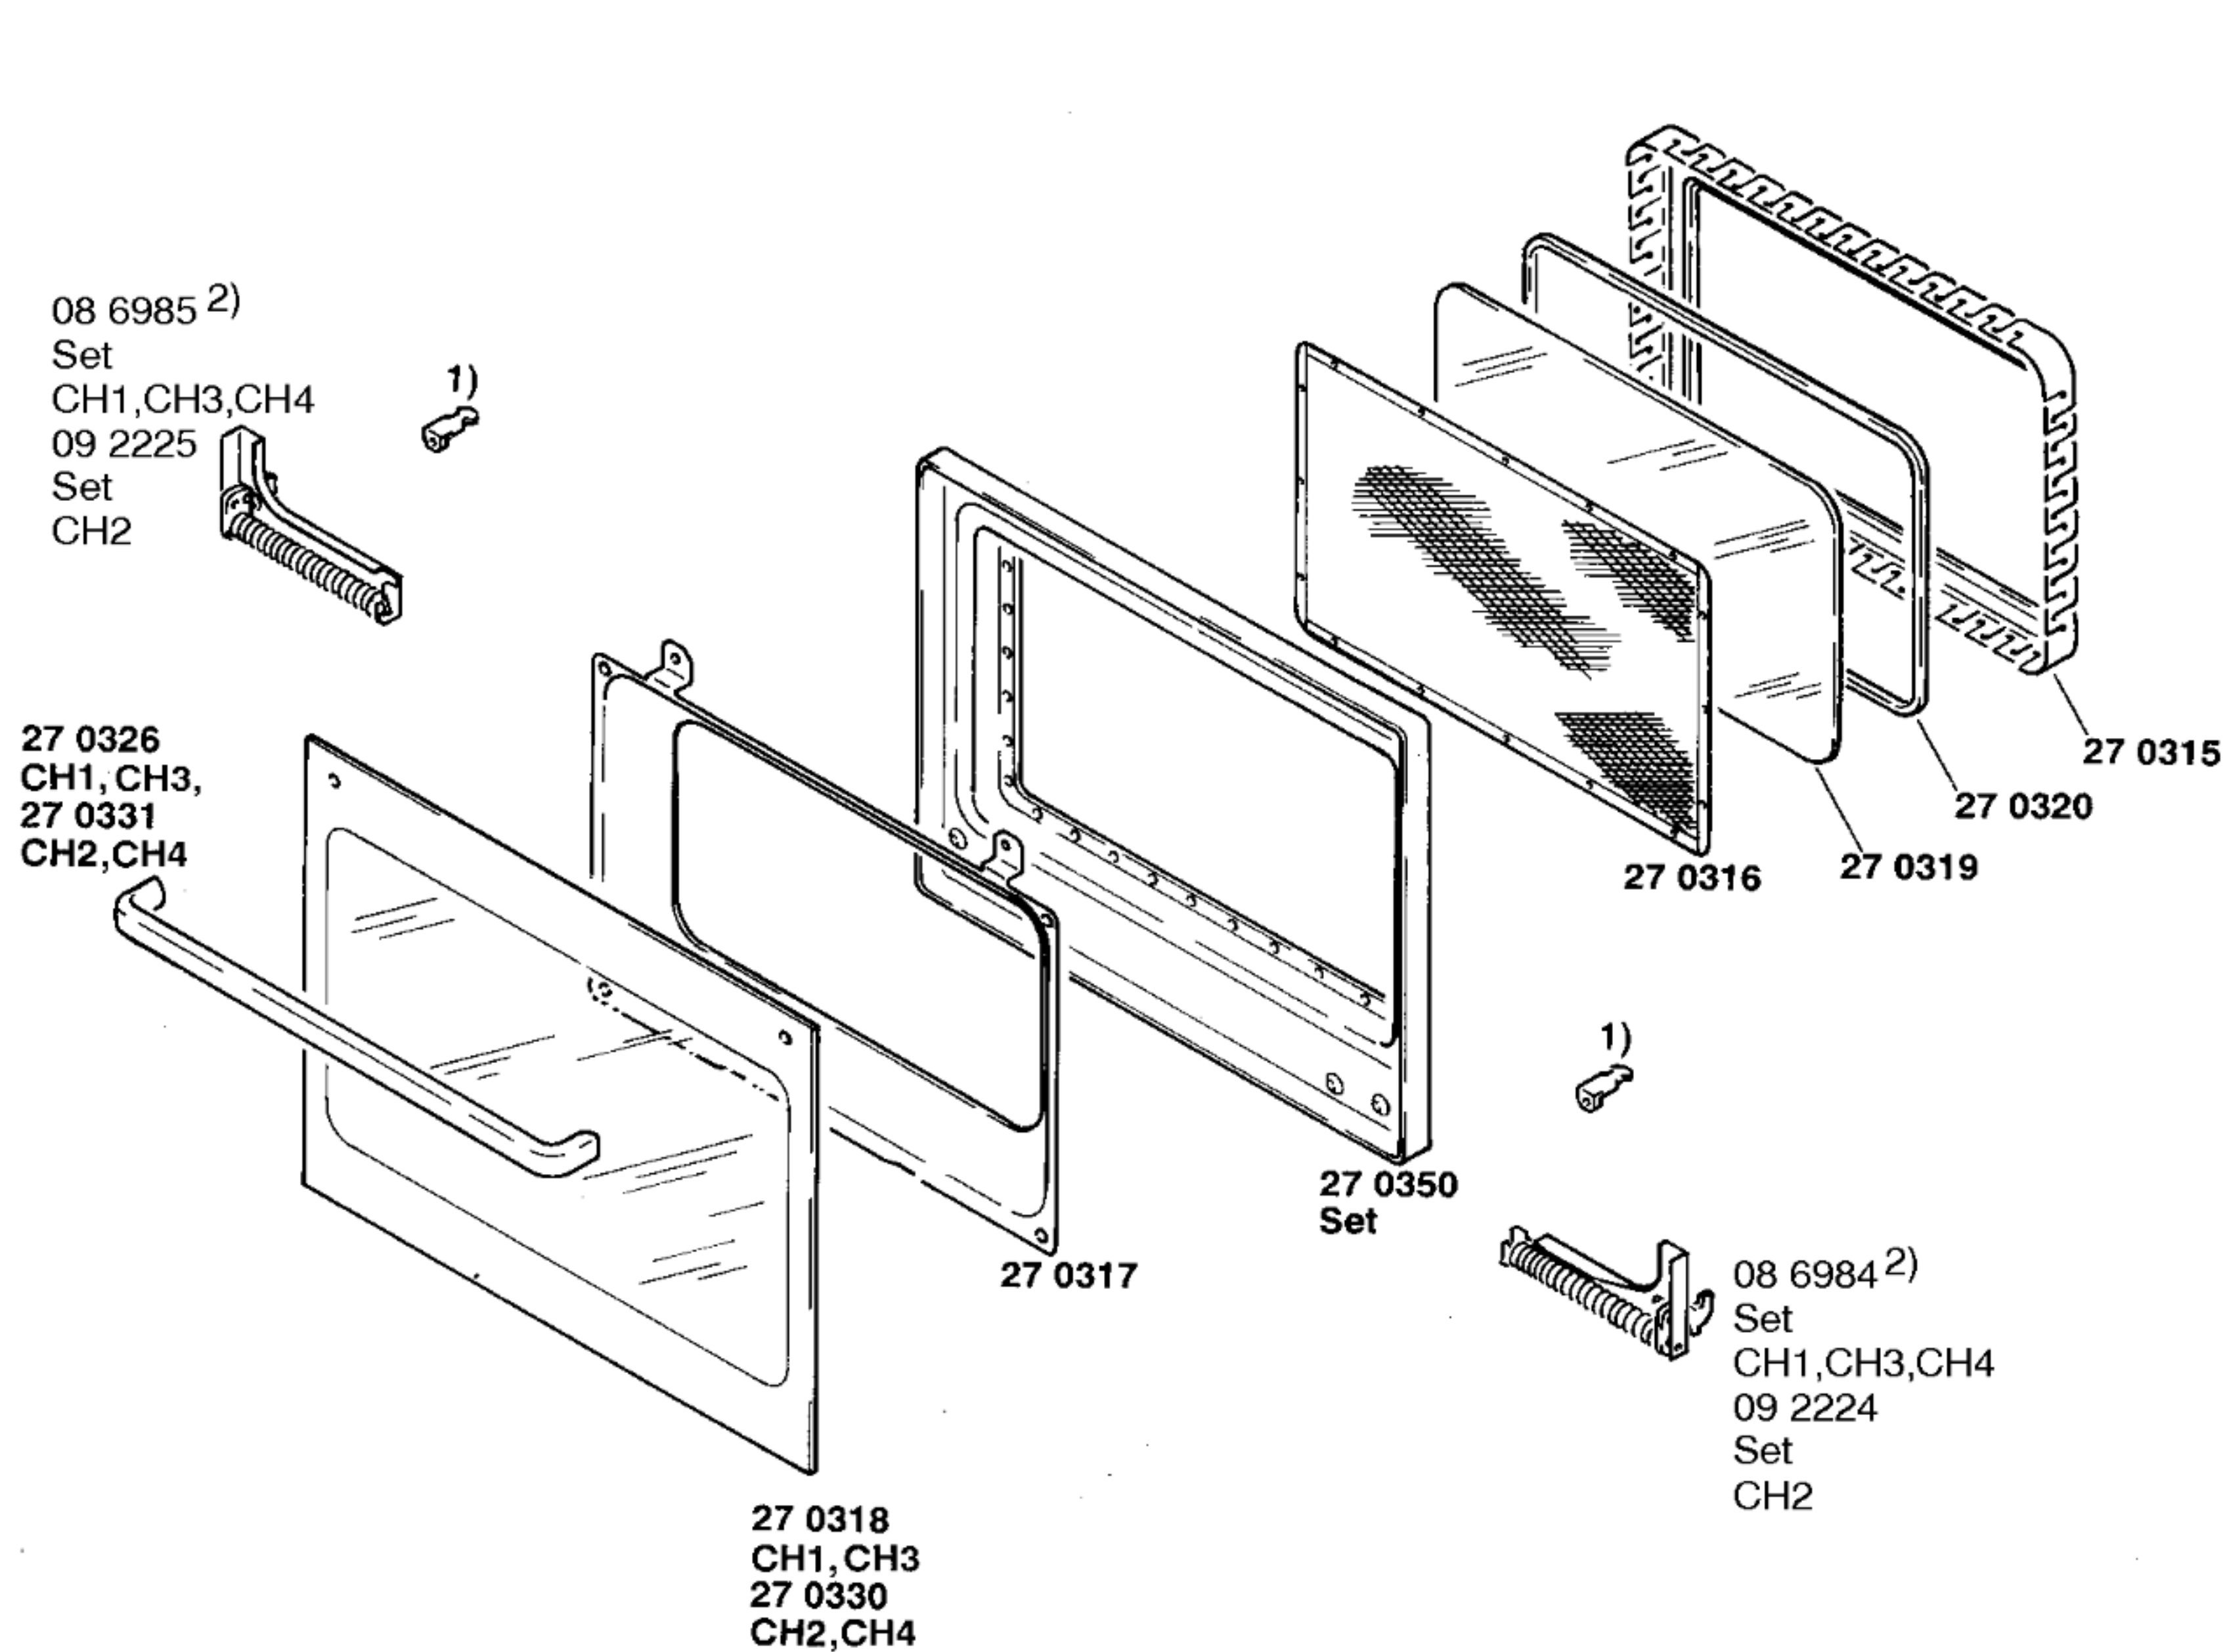

- 1) 03 0671
2) 03 0813
Arretierstift

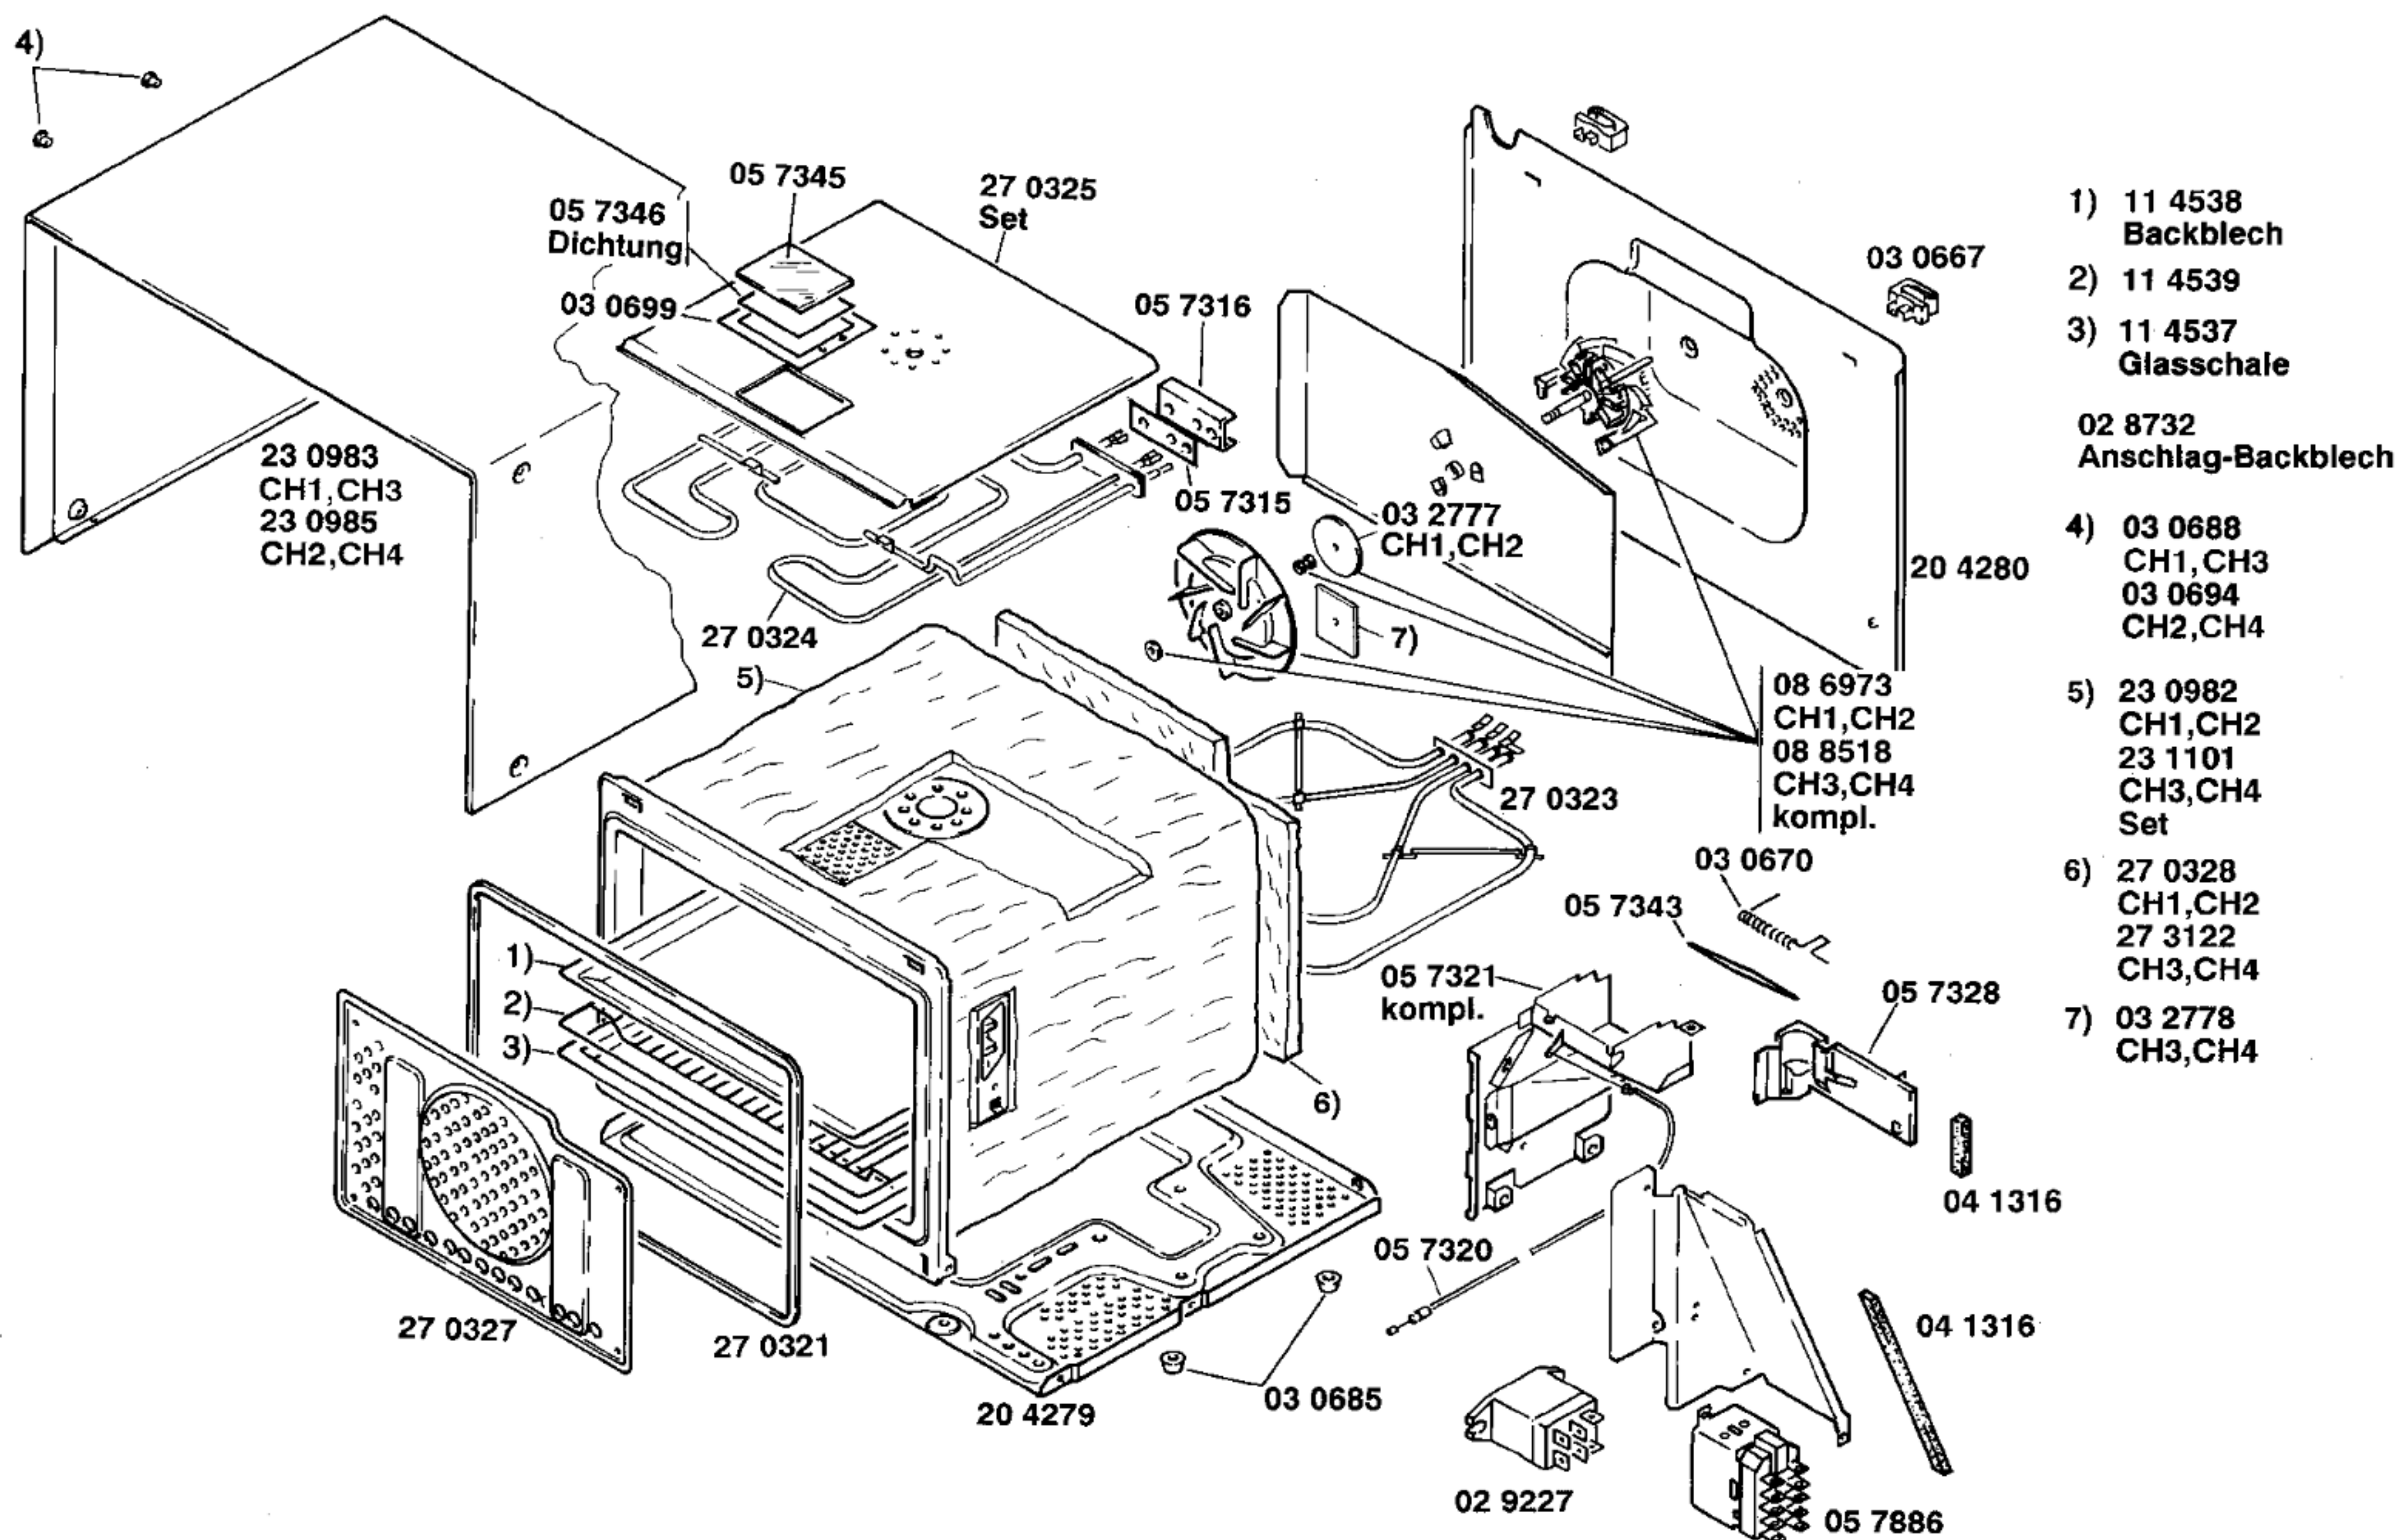

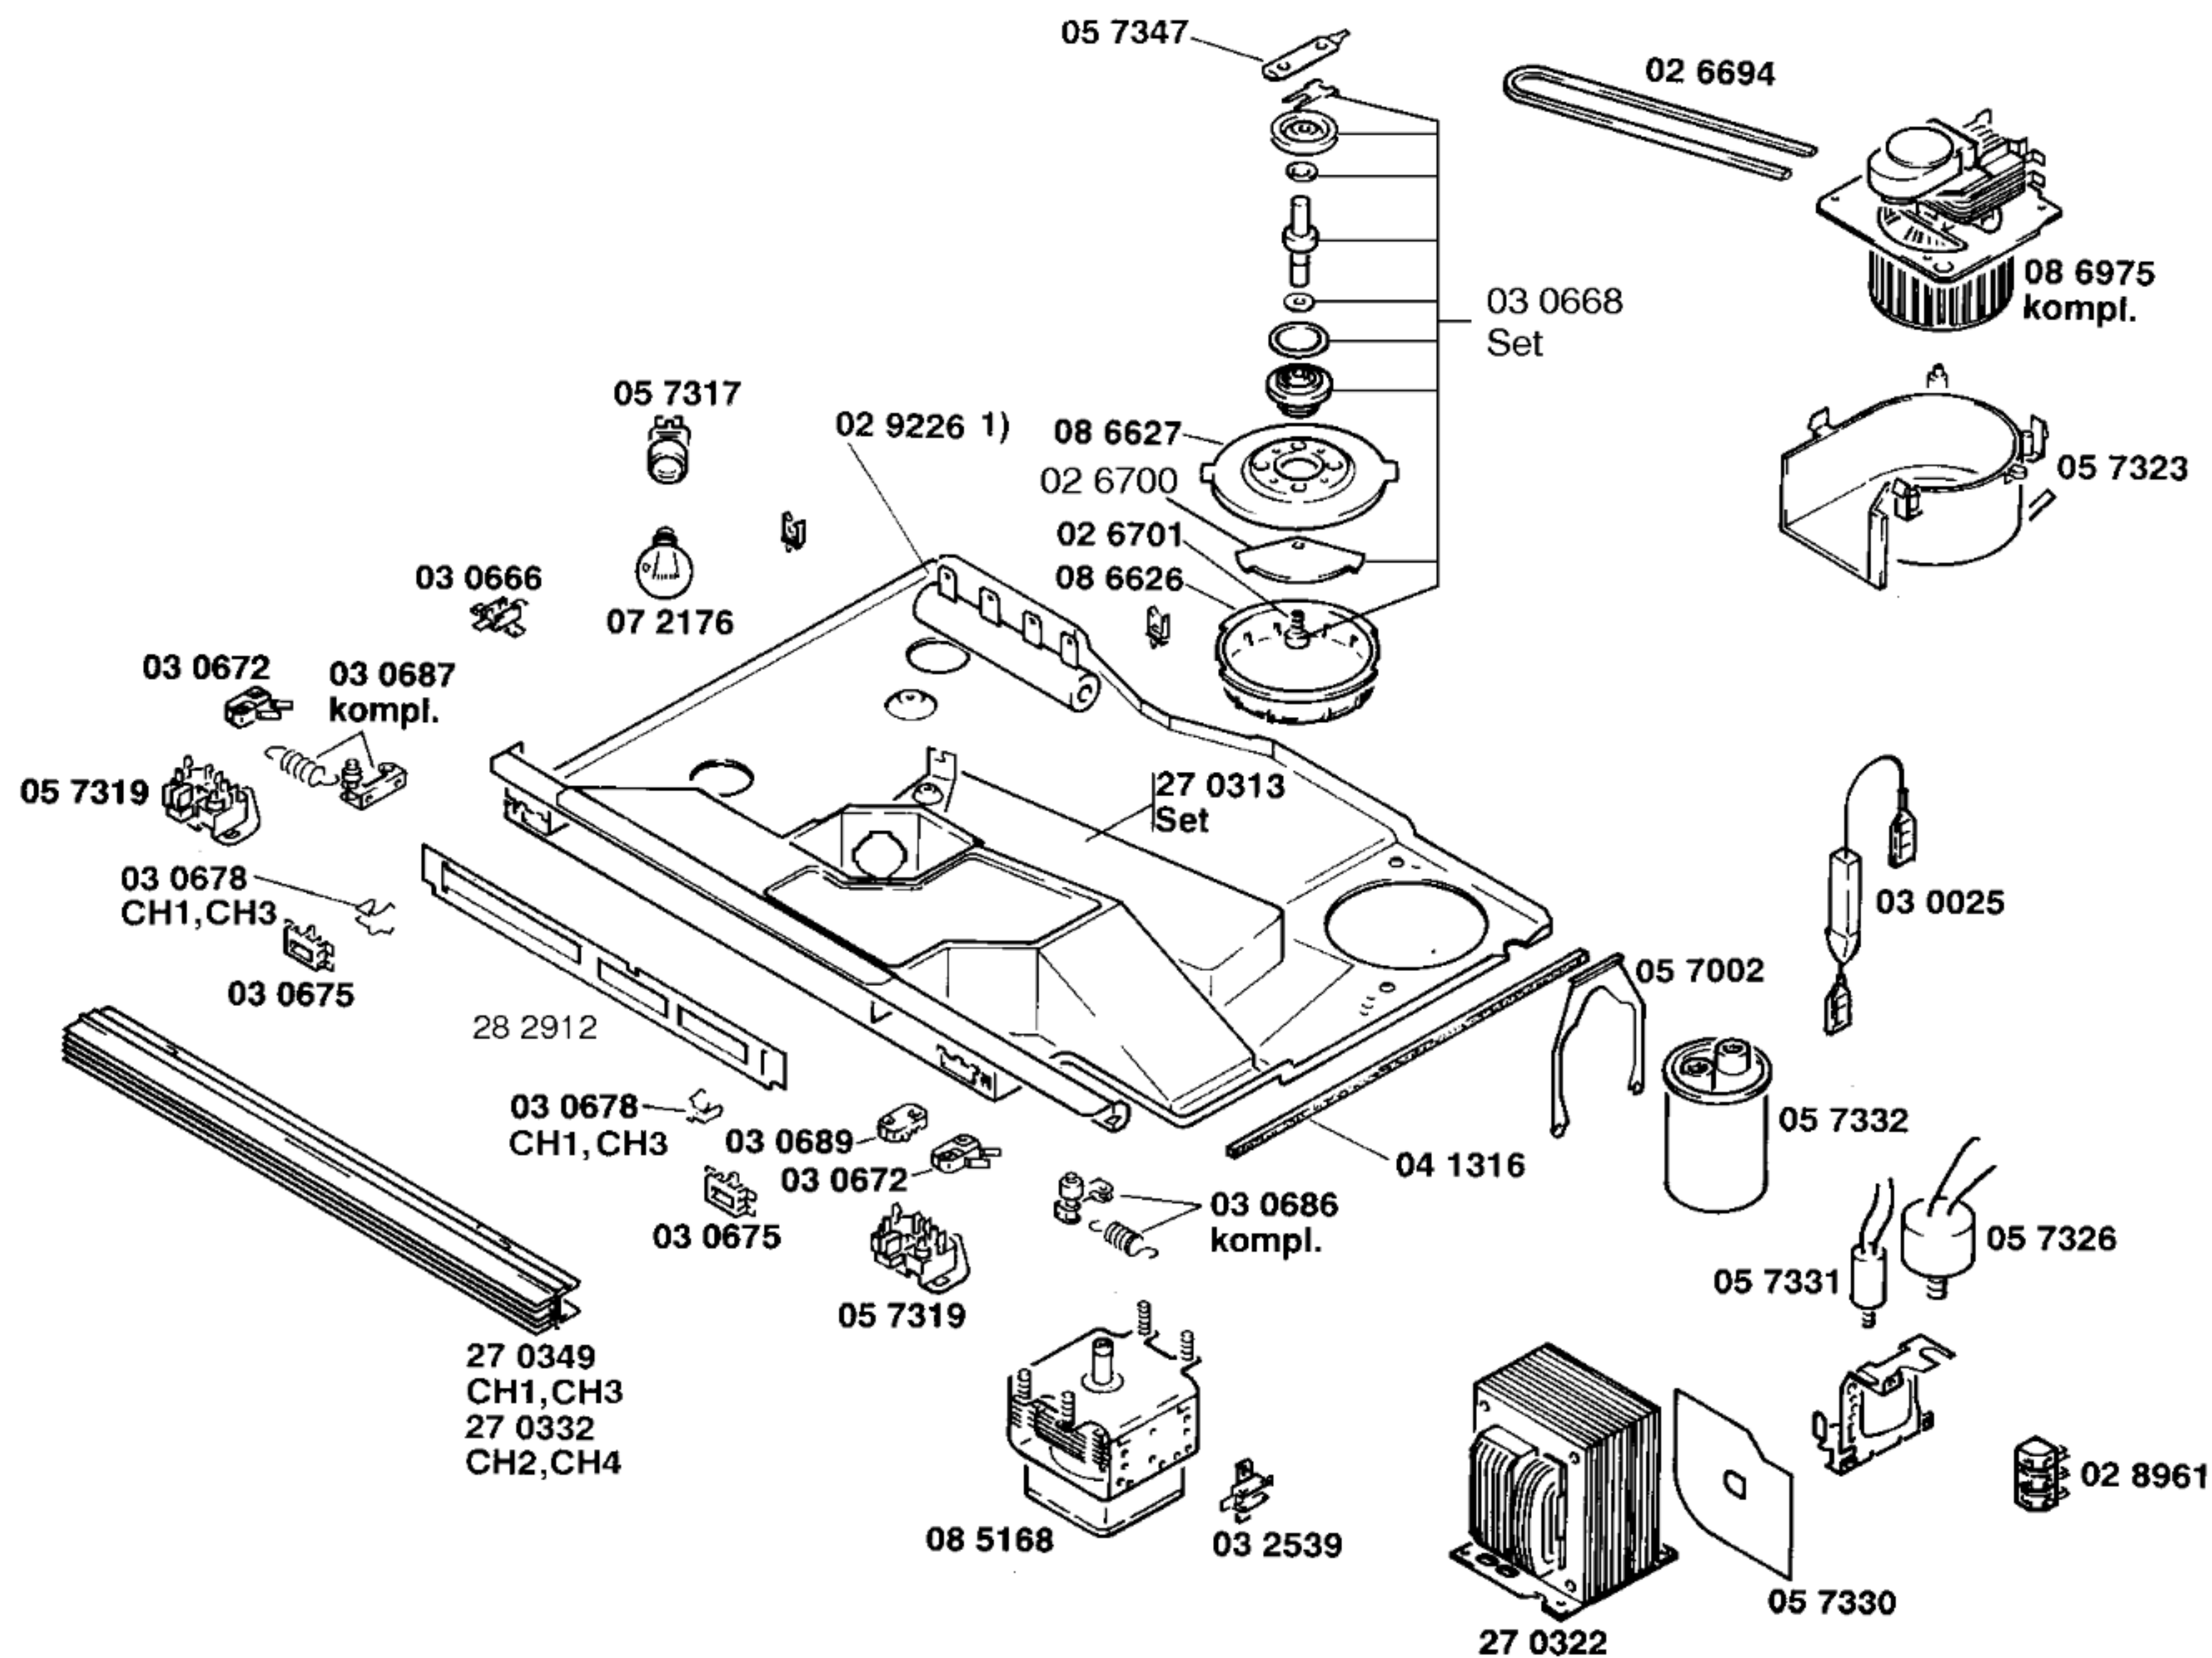

1) 08 7498
mitbestellen