


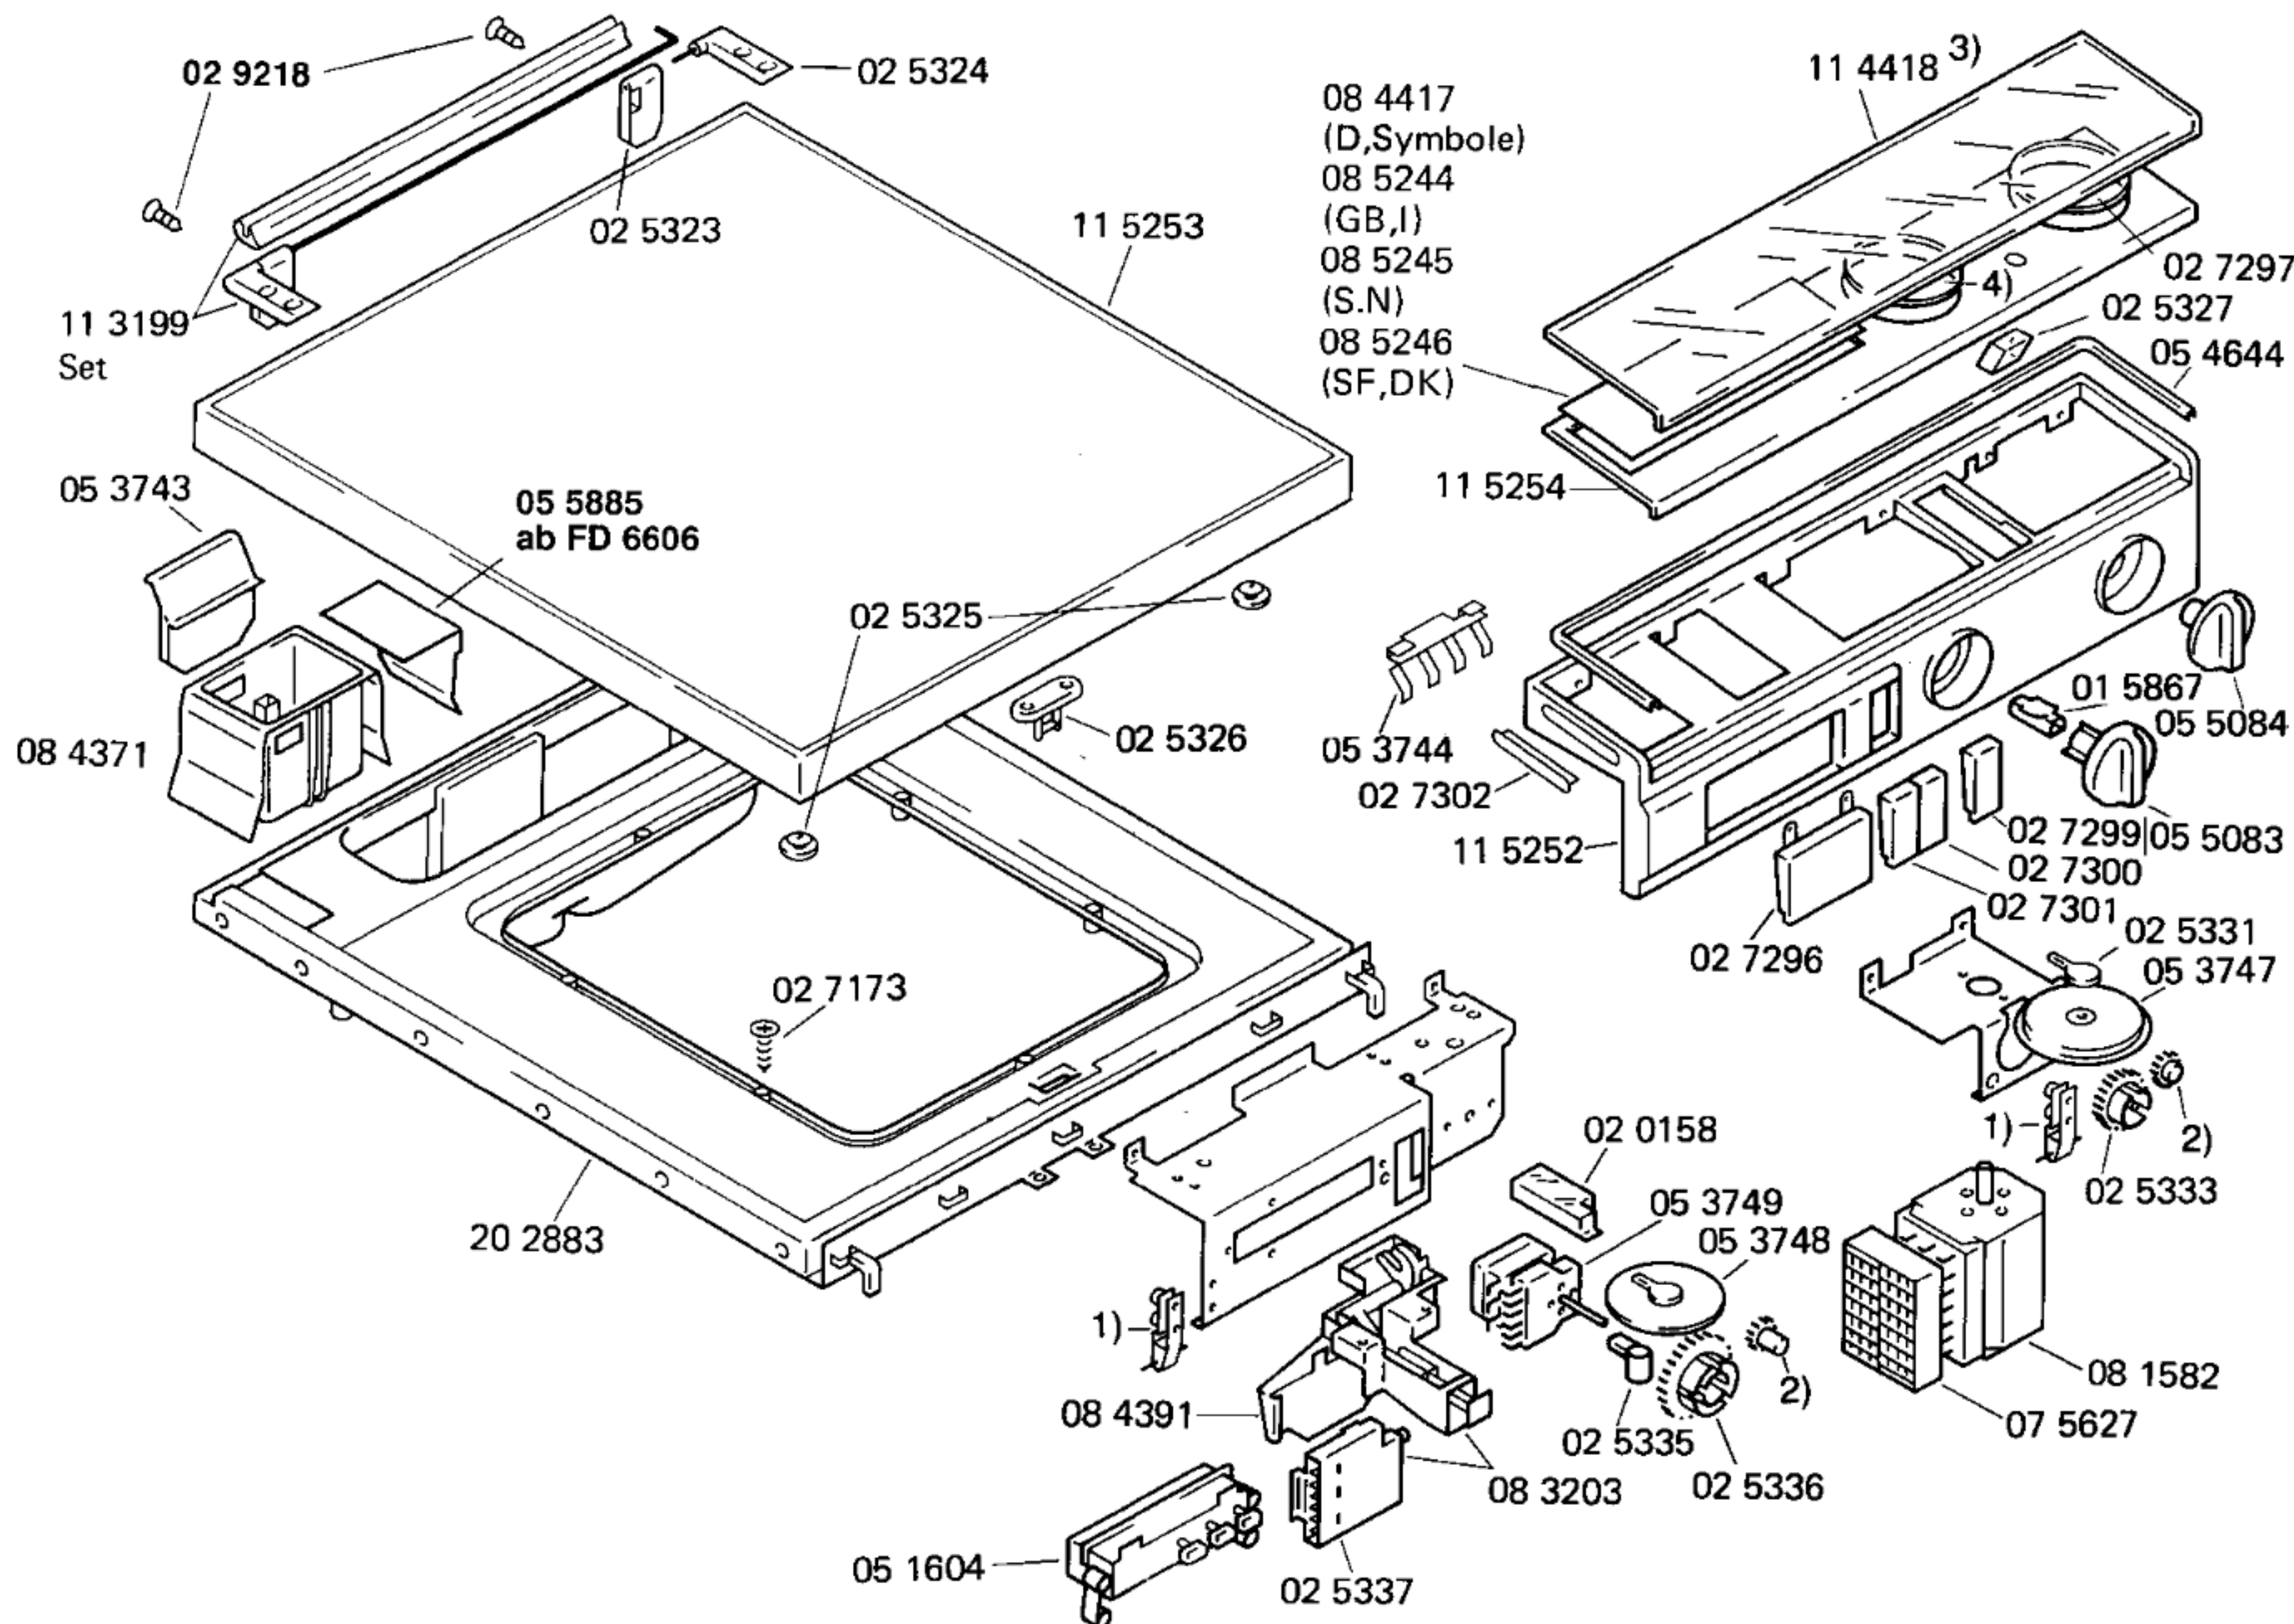


- 1) 02 5334
- 2) 02 5332
- 3) einschl. 05 4644

Aufstellanweisungen
51 1497
(D,GB,F,I,NL)
51 1674
(D,I,DK,N,SF)


Gebrauchsanweisungen
51 2228
(D)
51 2481
(D,I,S,DK,N,SF)

Programmtabellen
51 1499
(D,GB,F,I,NL)
51 1634
(D,I,S,DK,SF)

4) 02 7298
bis FD 6605
02 8435
ab FD 6606

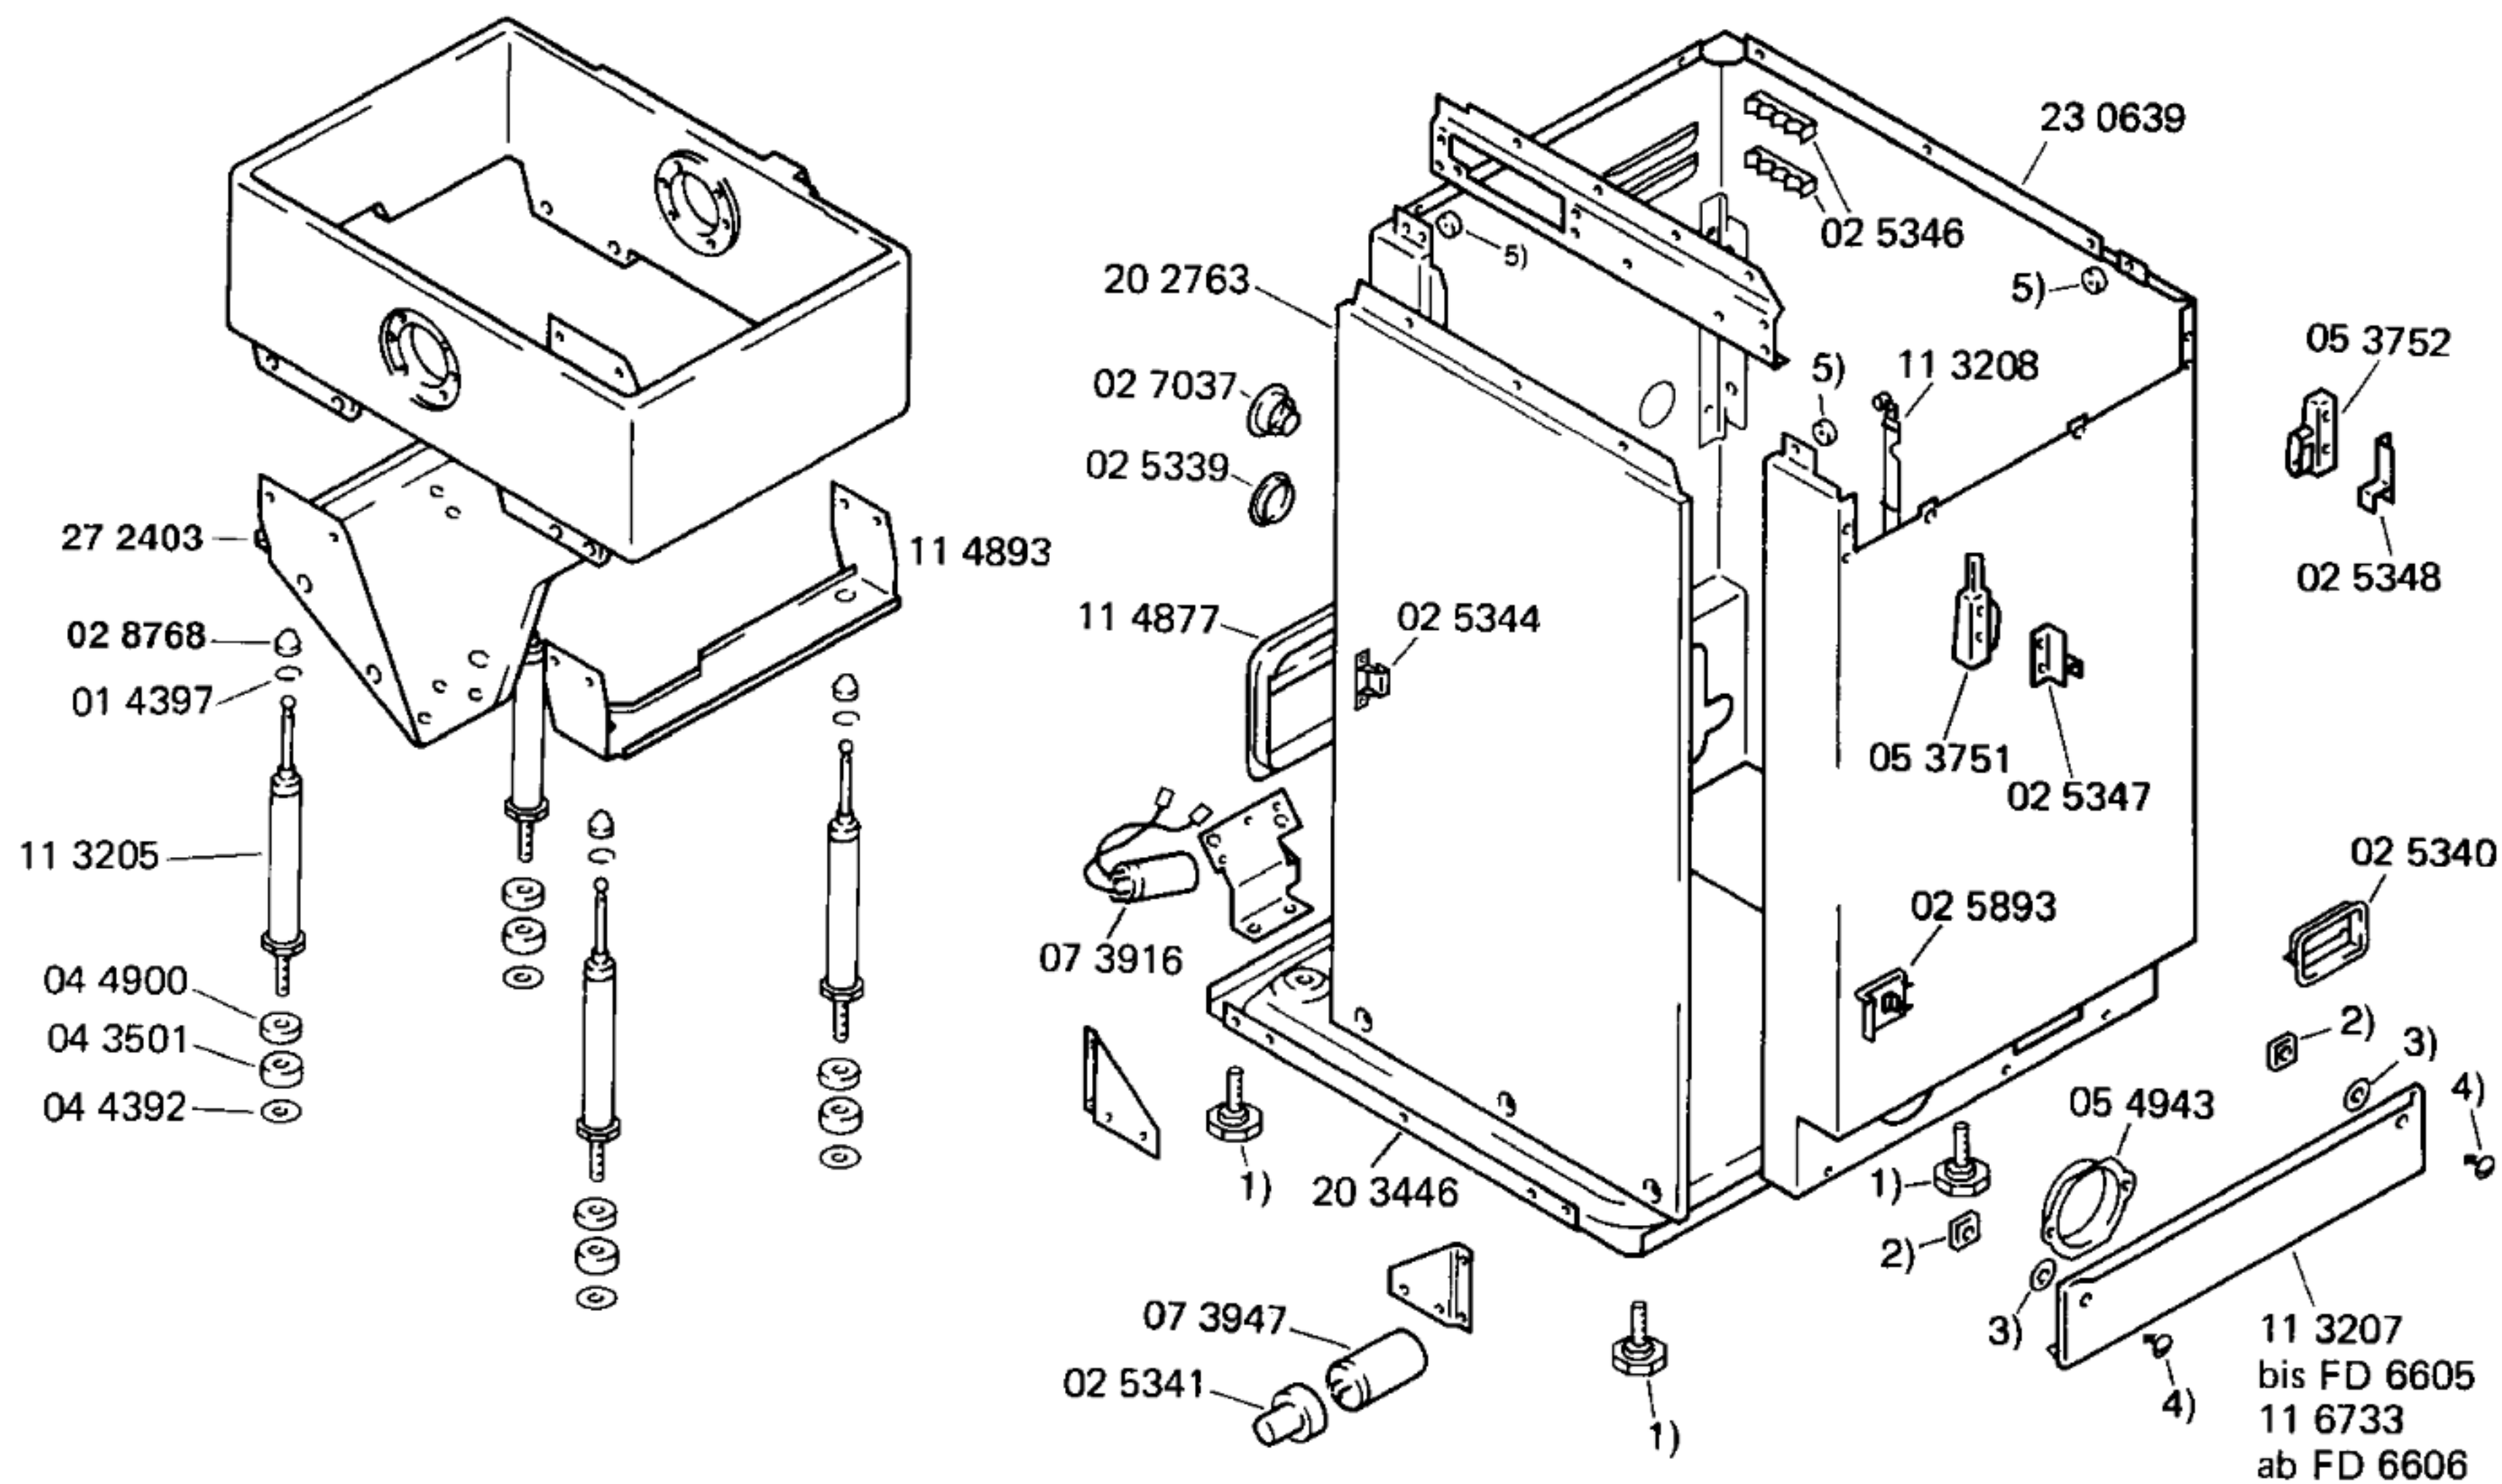

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 5343
bis FD 6605
02 8340
ab FD 6606
- 5) 02 5345

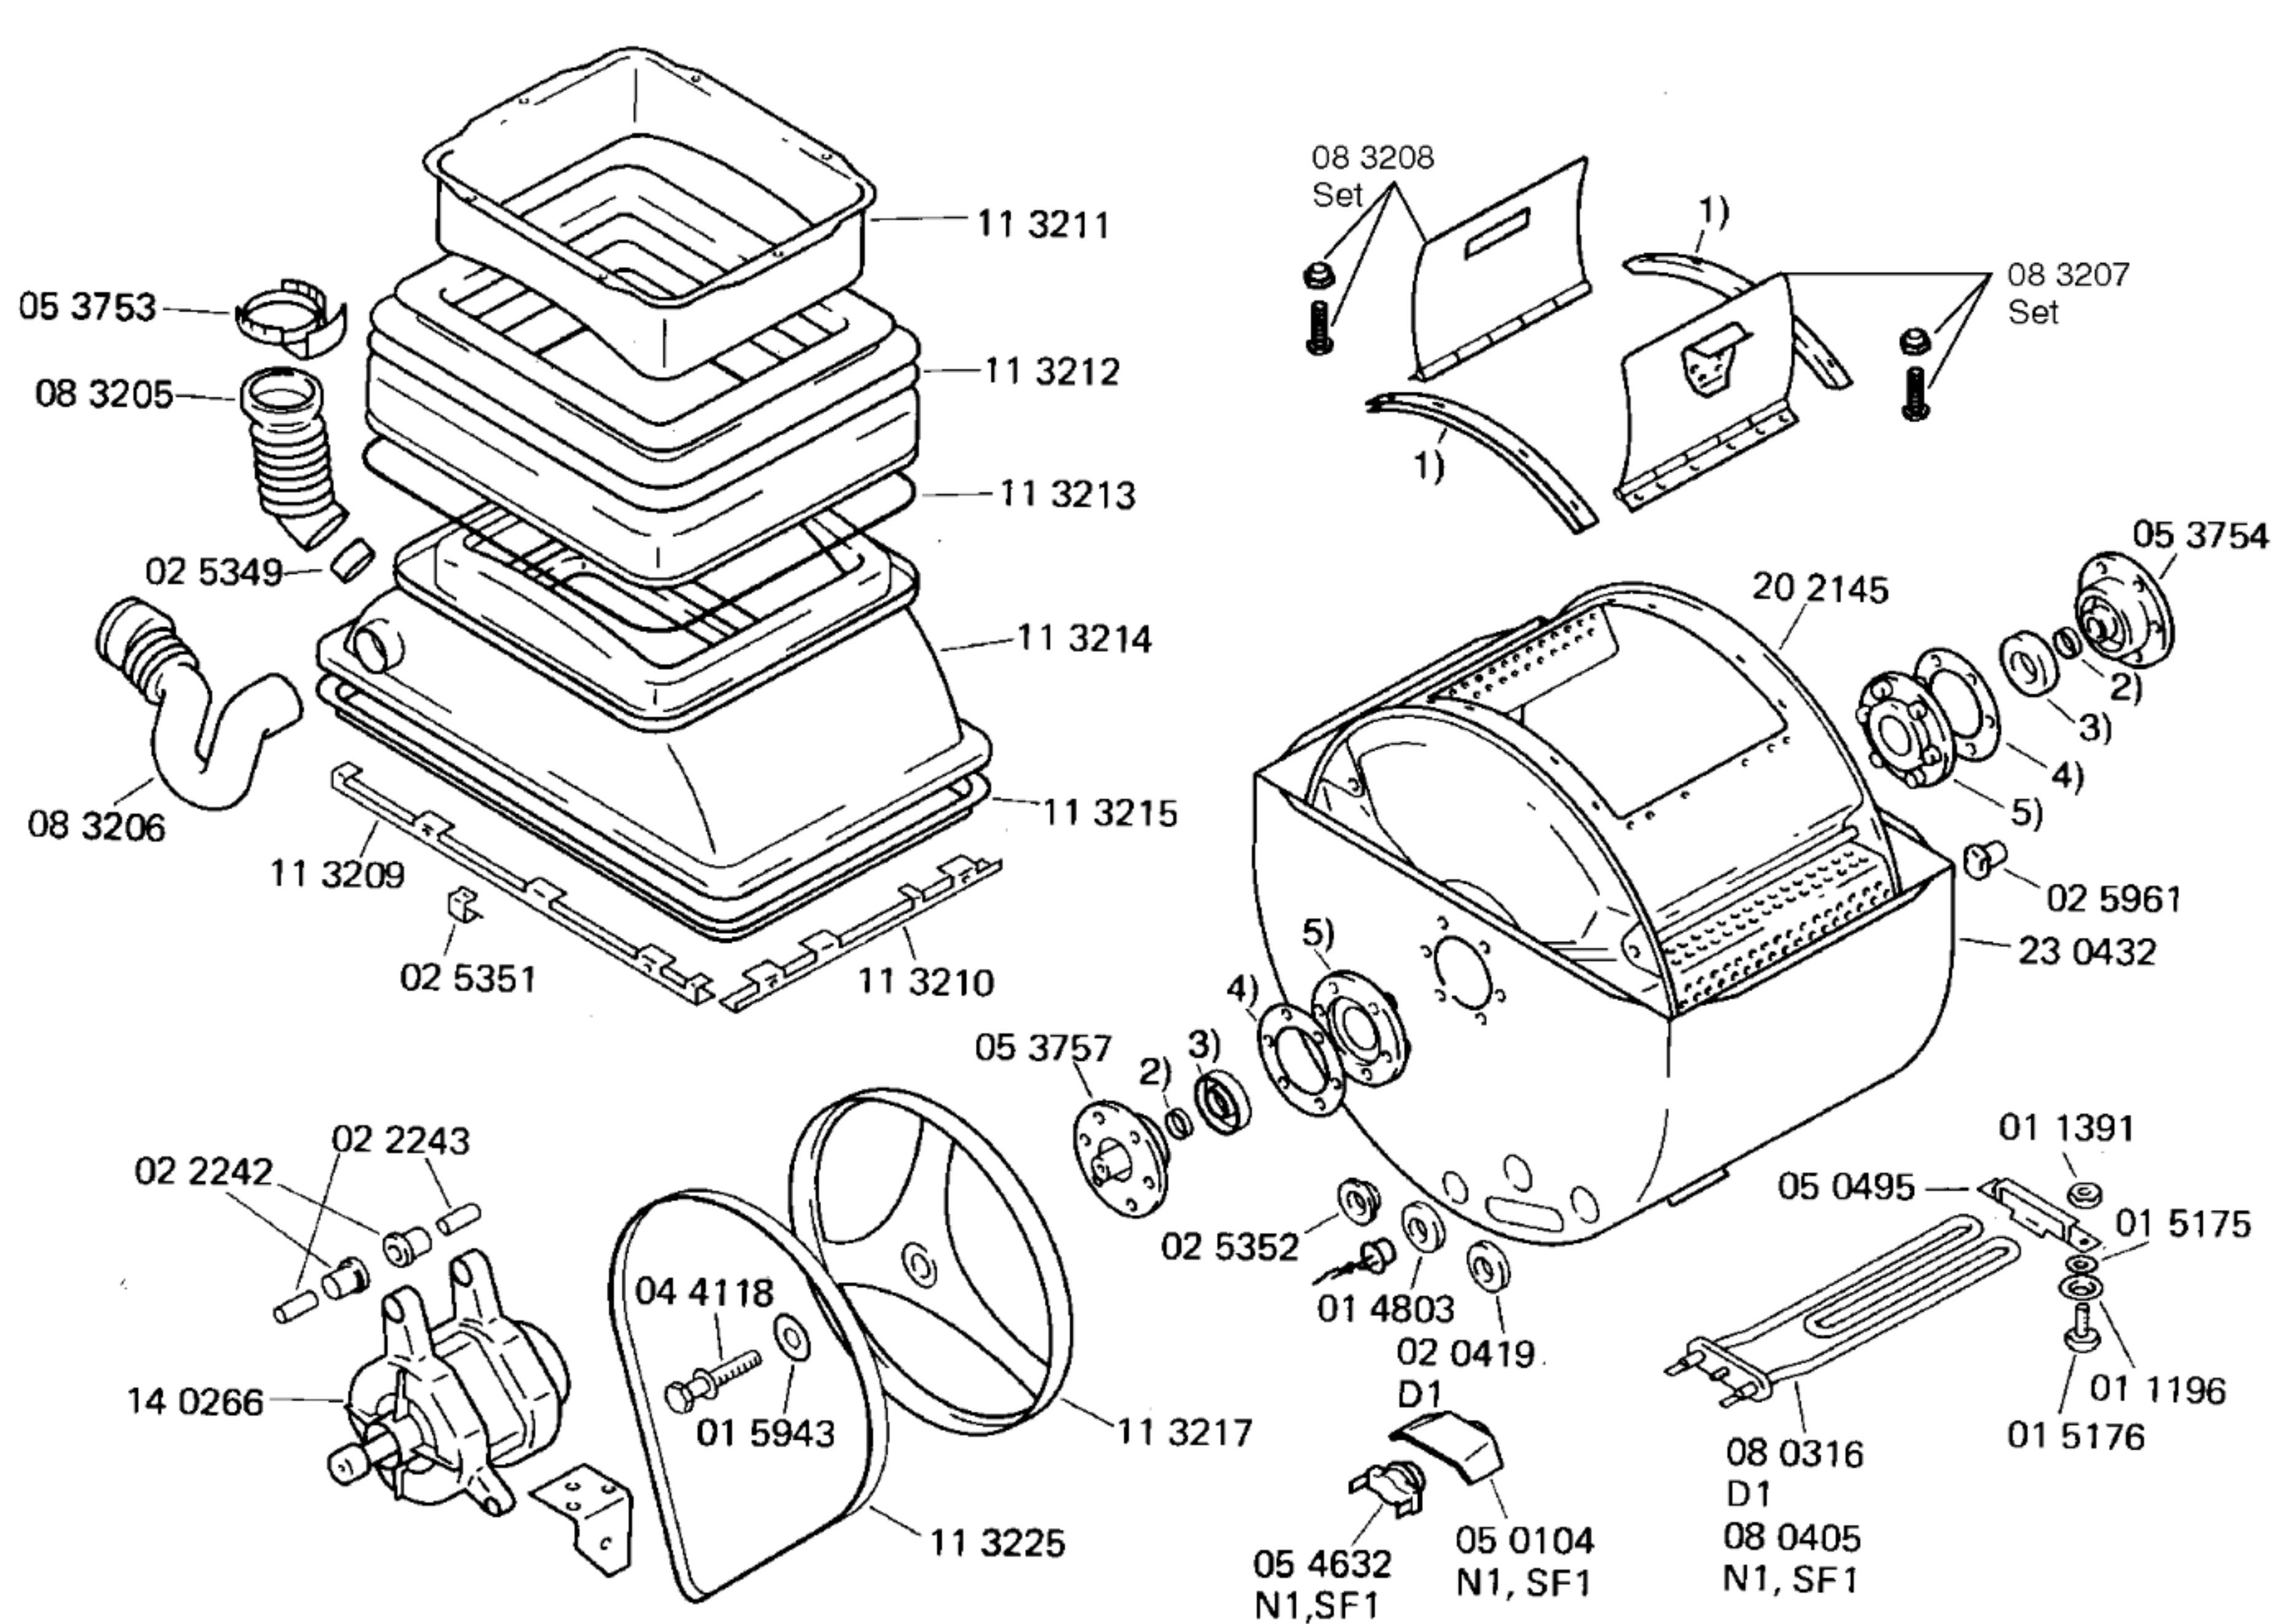

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 3755
- 5) 05 3756

