 


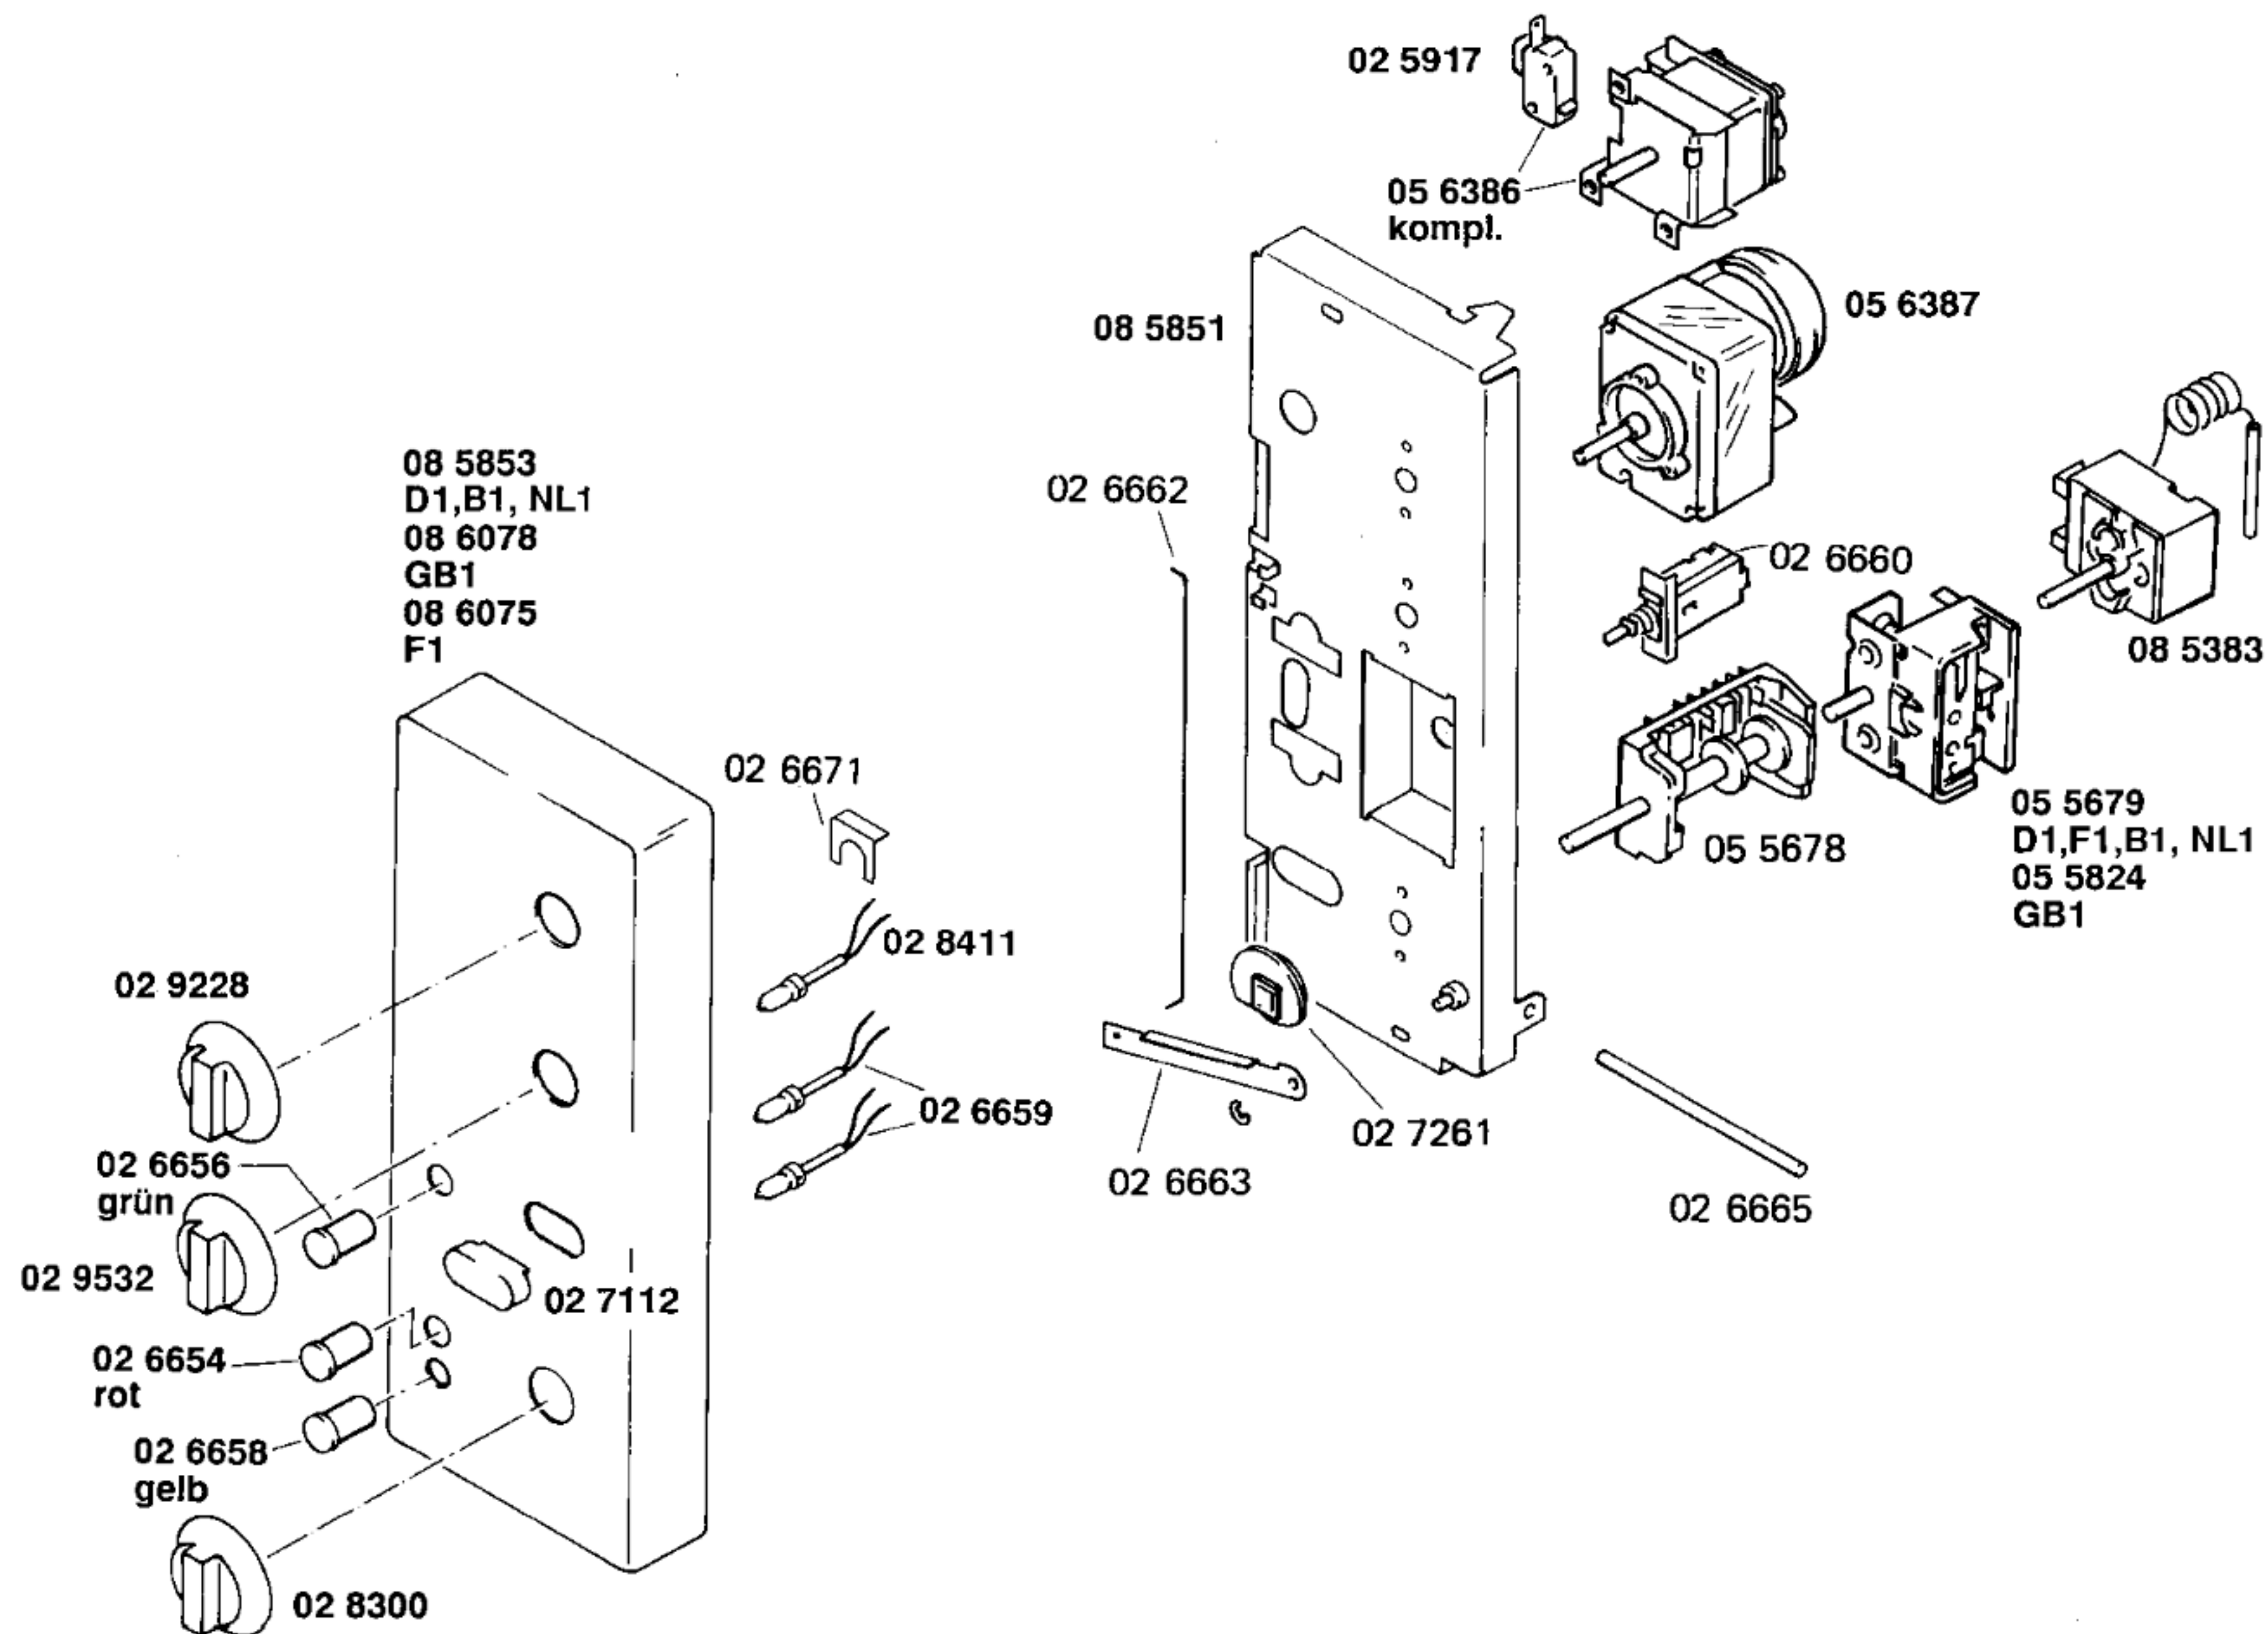

51 3311
Gebrauchsanweisung
(D, GB, F, I, NL)

Kochbuch + MW

51 2761

(D)

51 2762

(GB)

51 2763

(F)

 
51 3233

(NL)


51 3686

Kurzanleitung

(D)

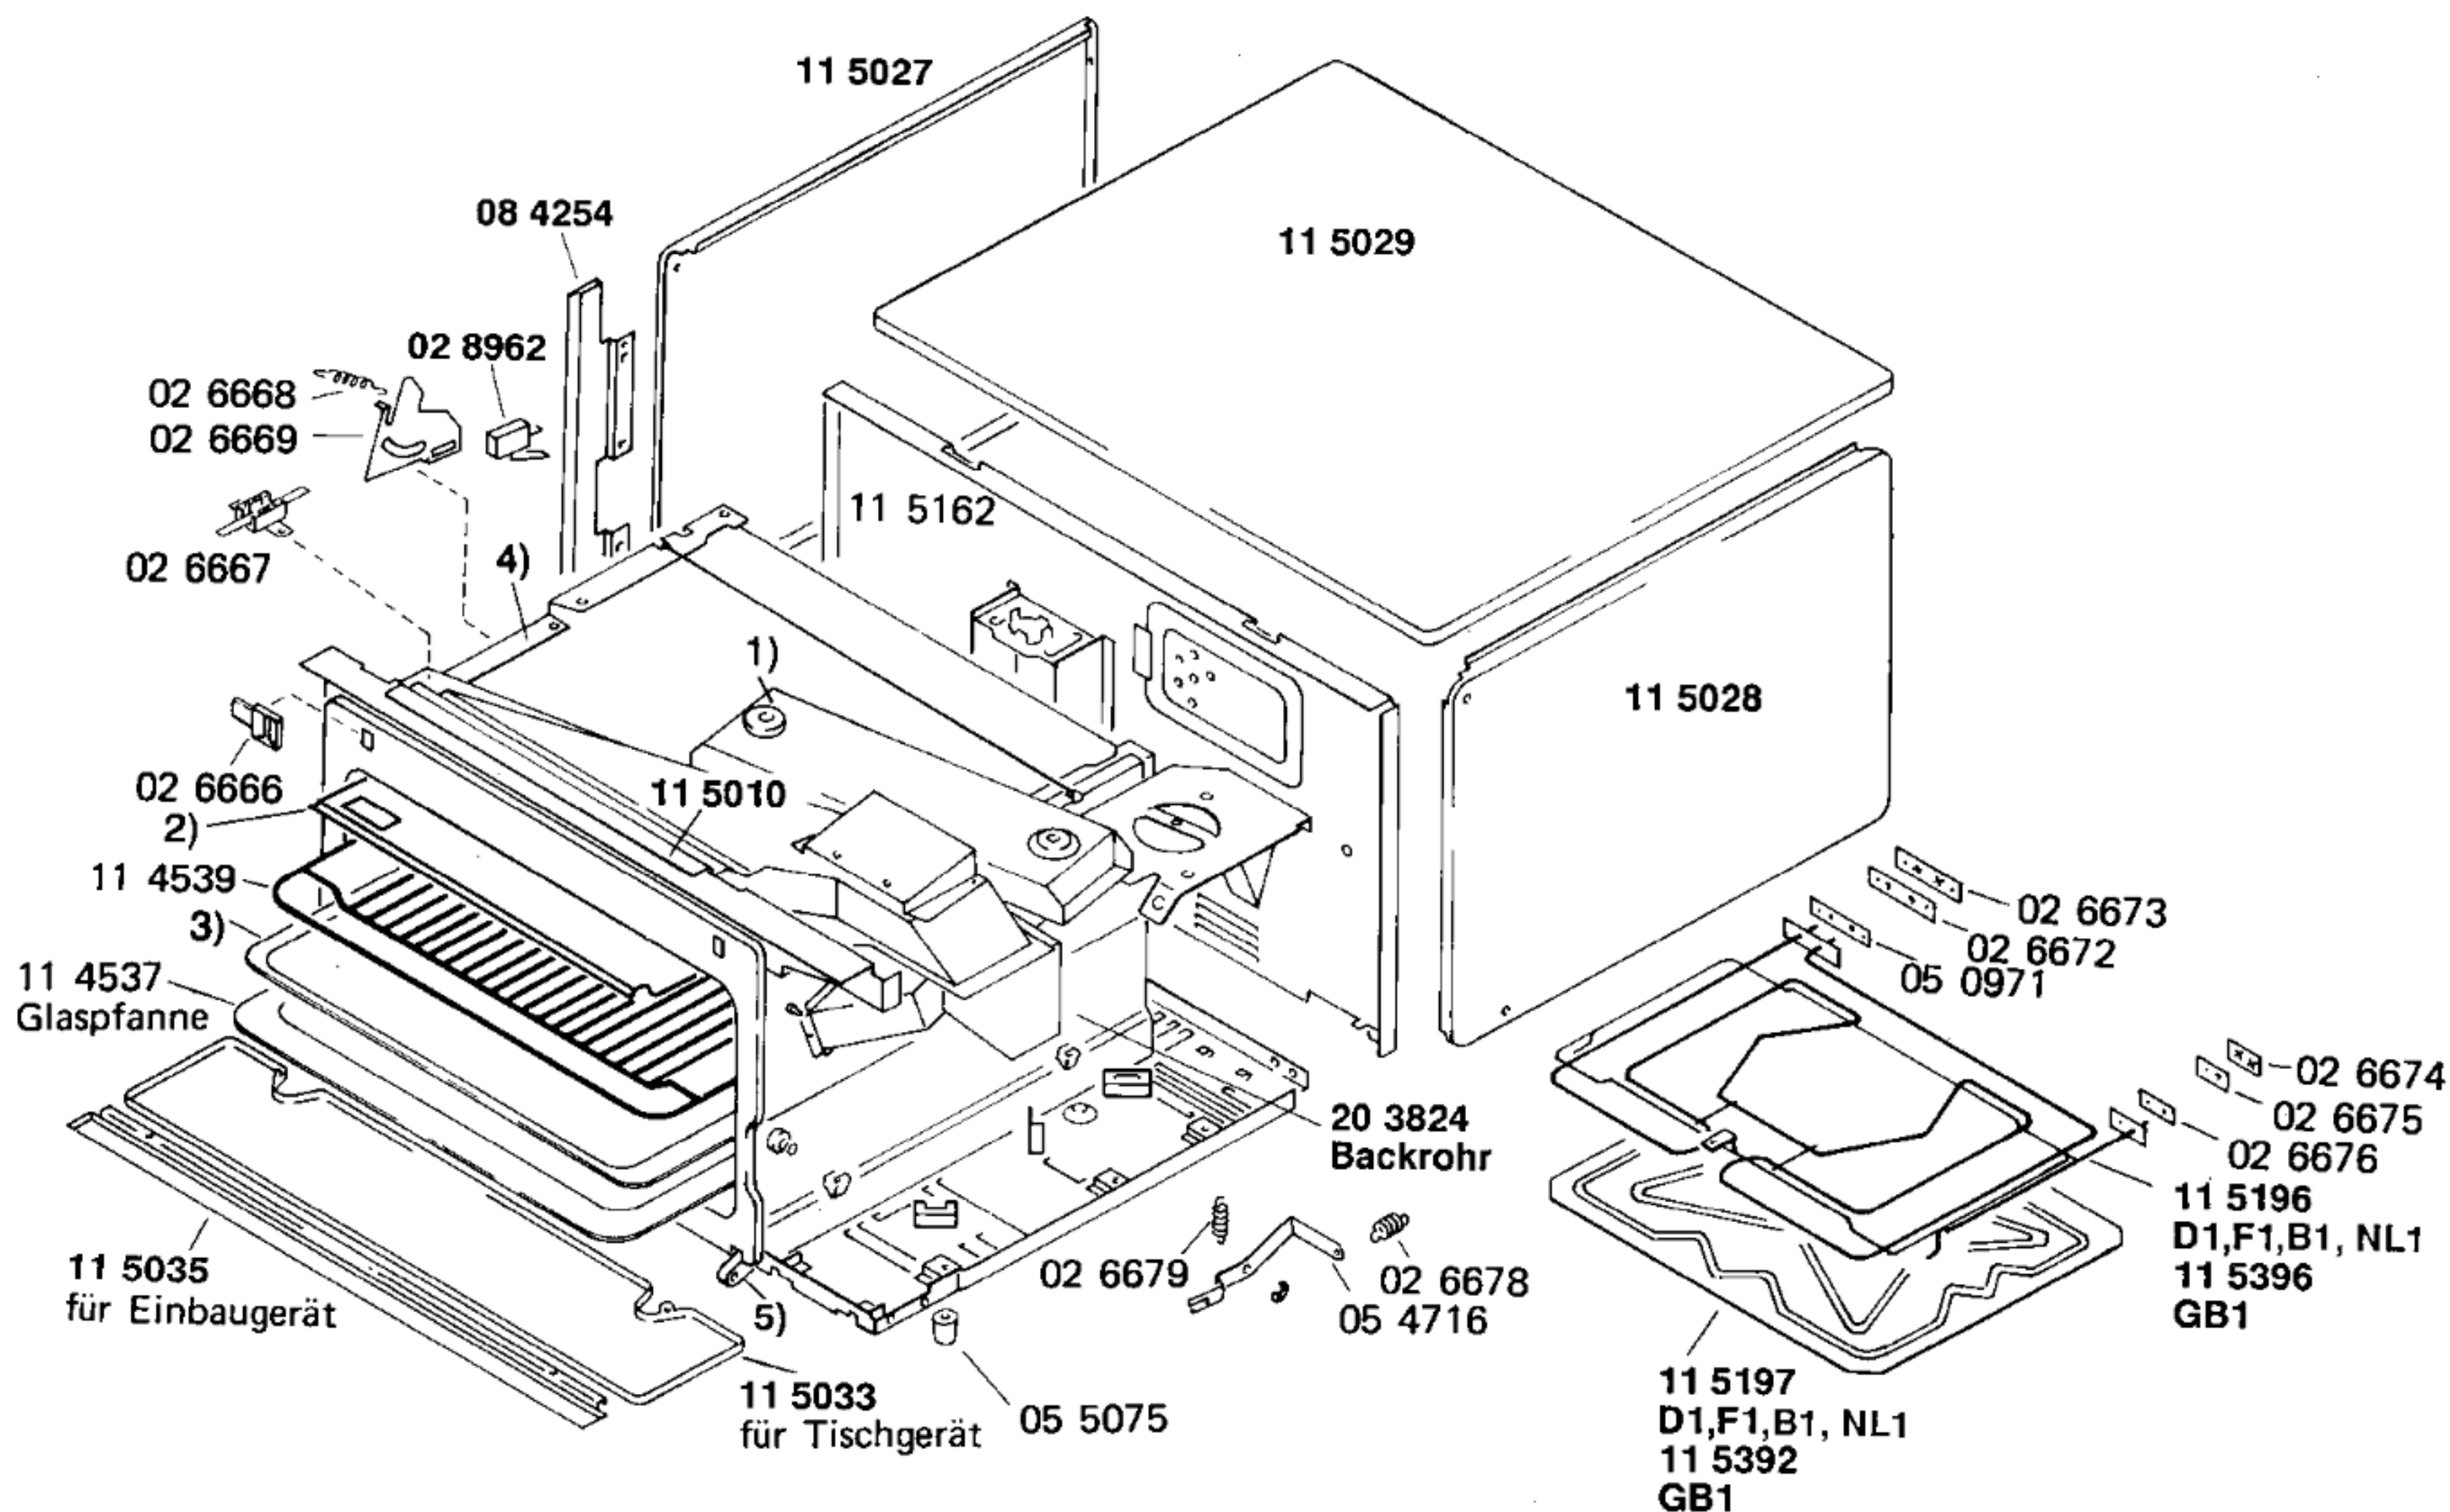

 - 1) 11 9326
- 2) 11 6684
- 3) 11 4538
Backblech
02 8732
Anschlagteil
- 4) Seitenblech
kompl.
27 0006
links
27 2084
rechts
- 5) 03 1615
rechts
03 1616
links

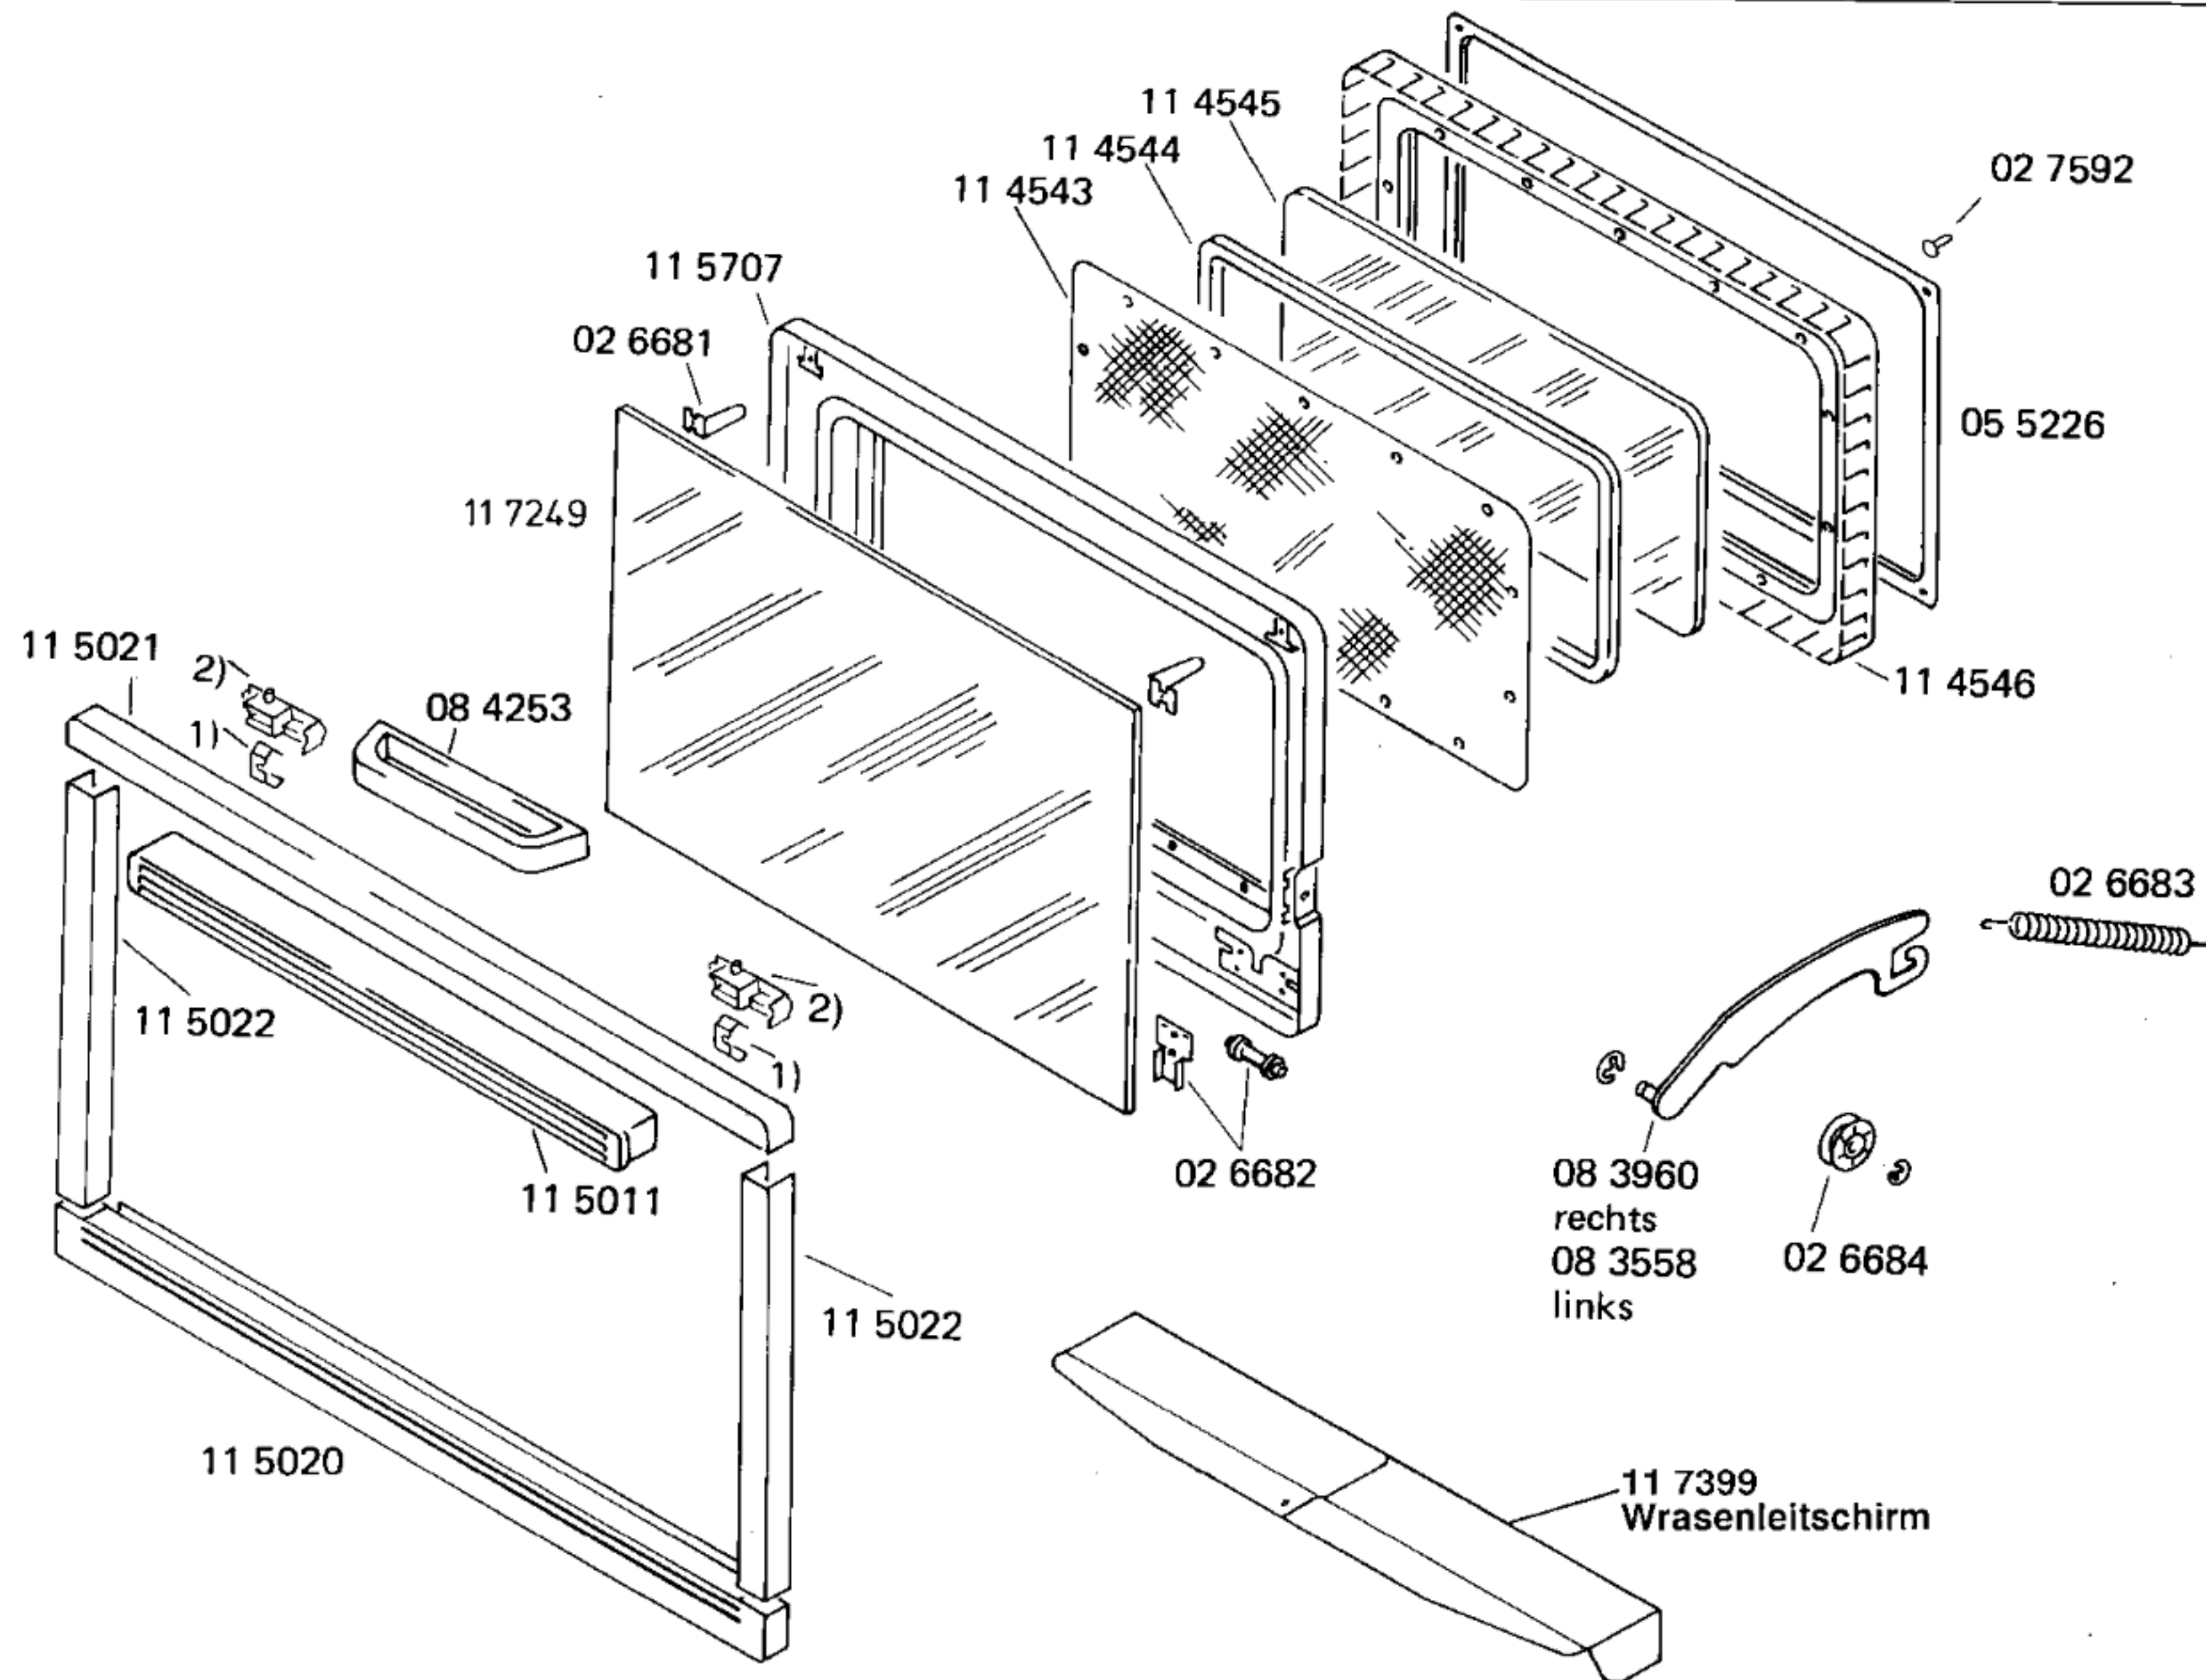

1) 02 7045
2) 02 7044

