


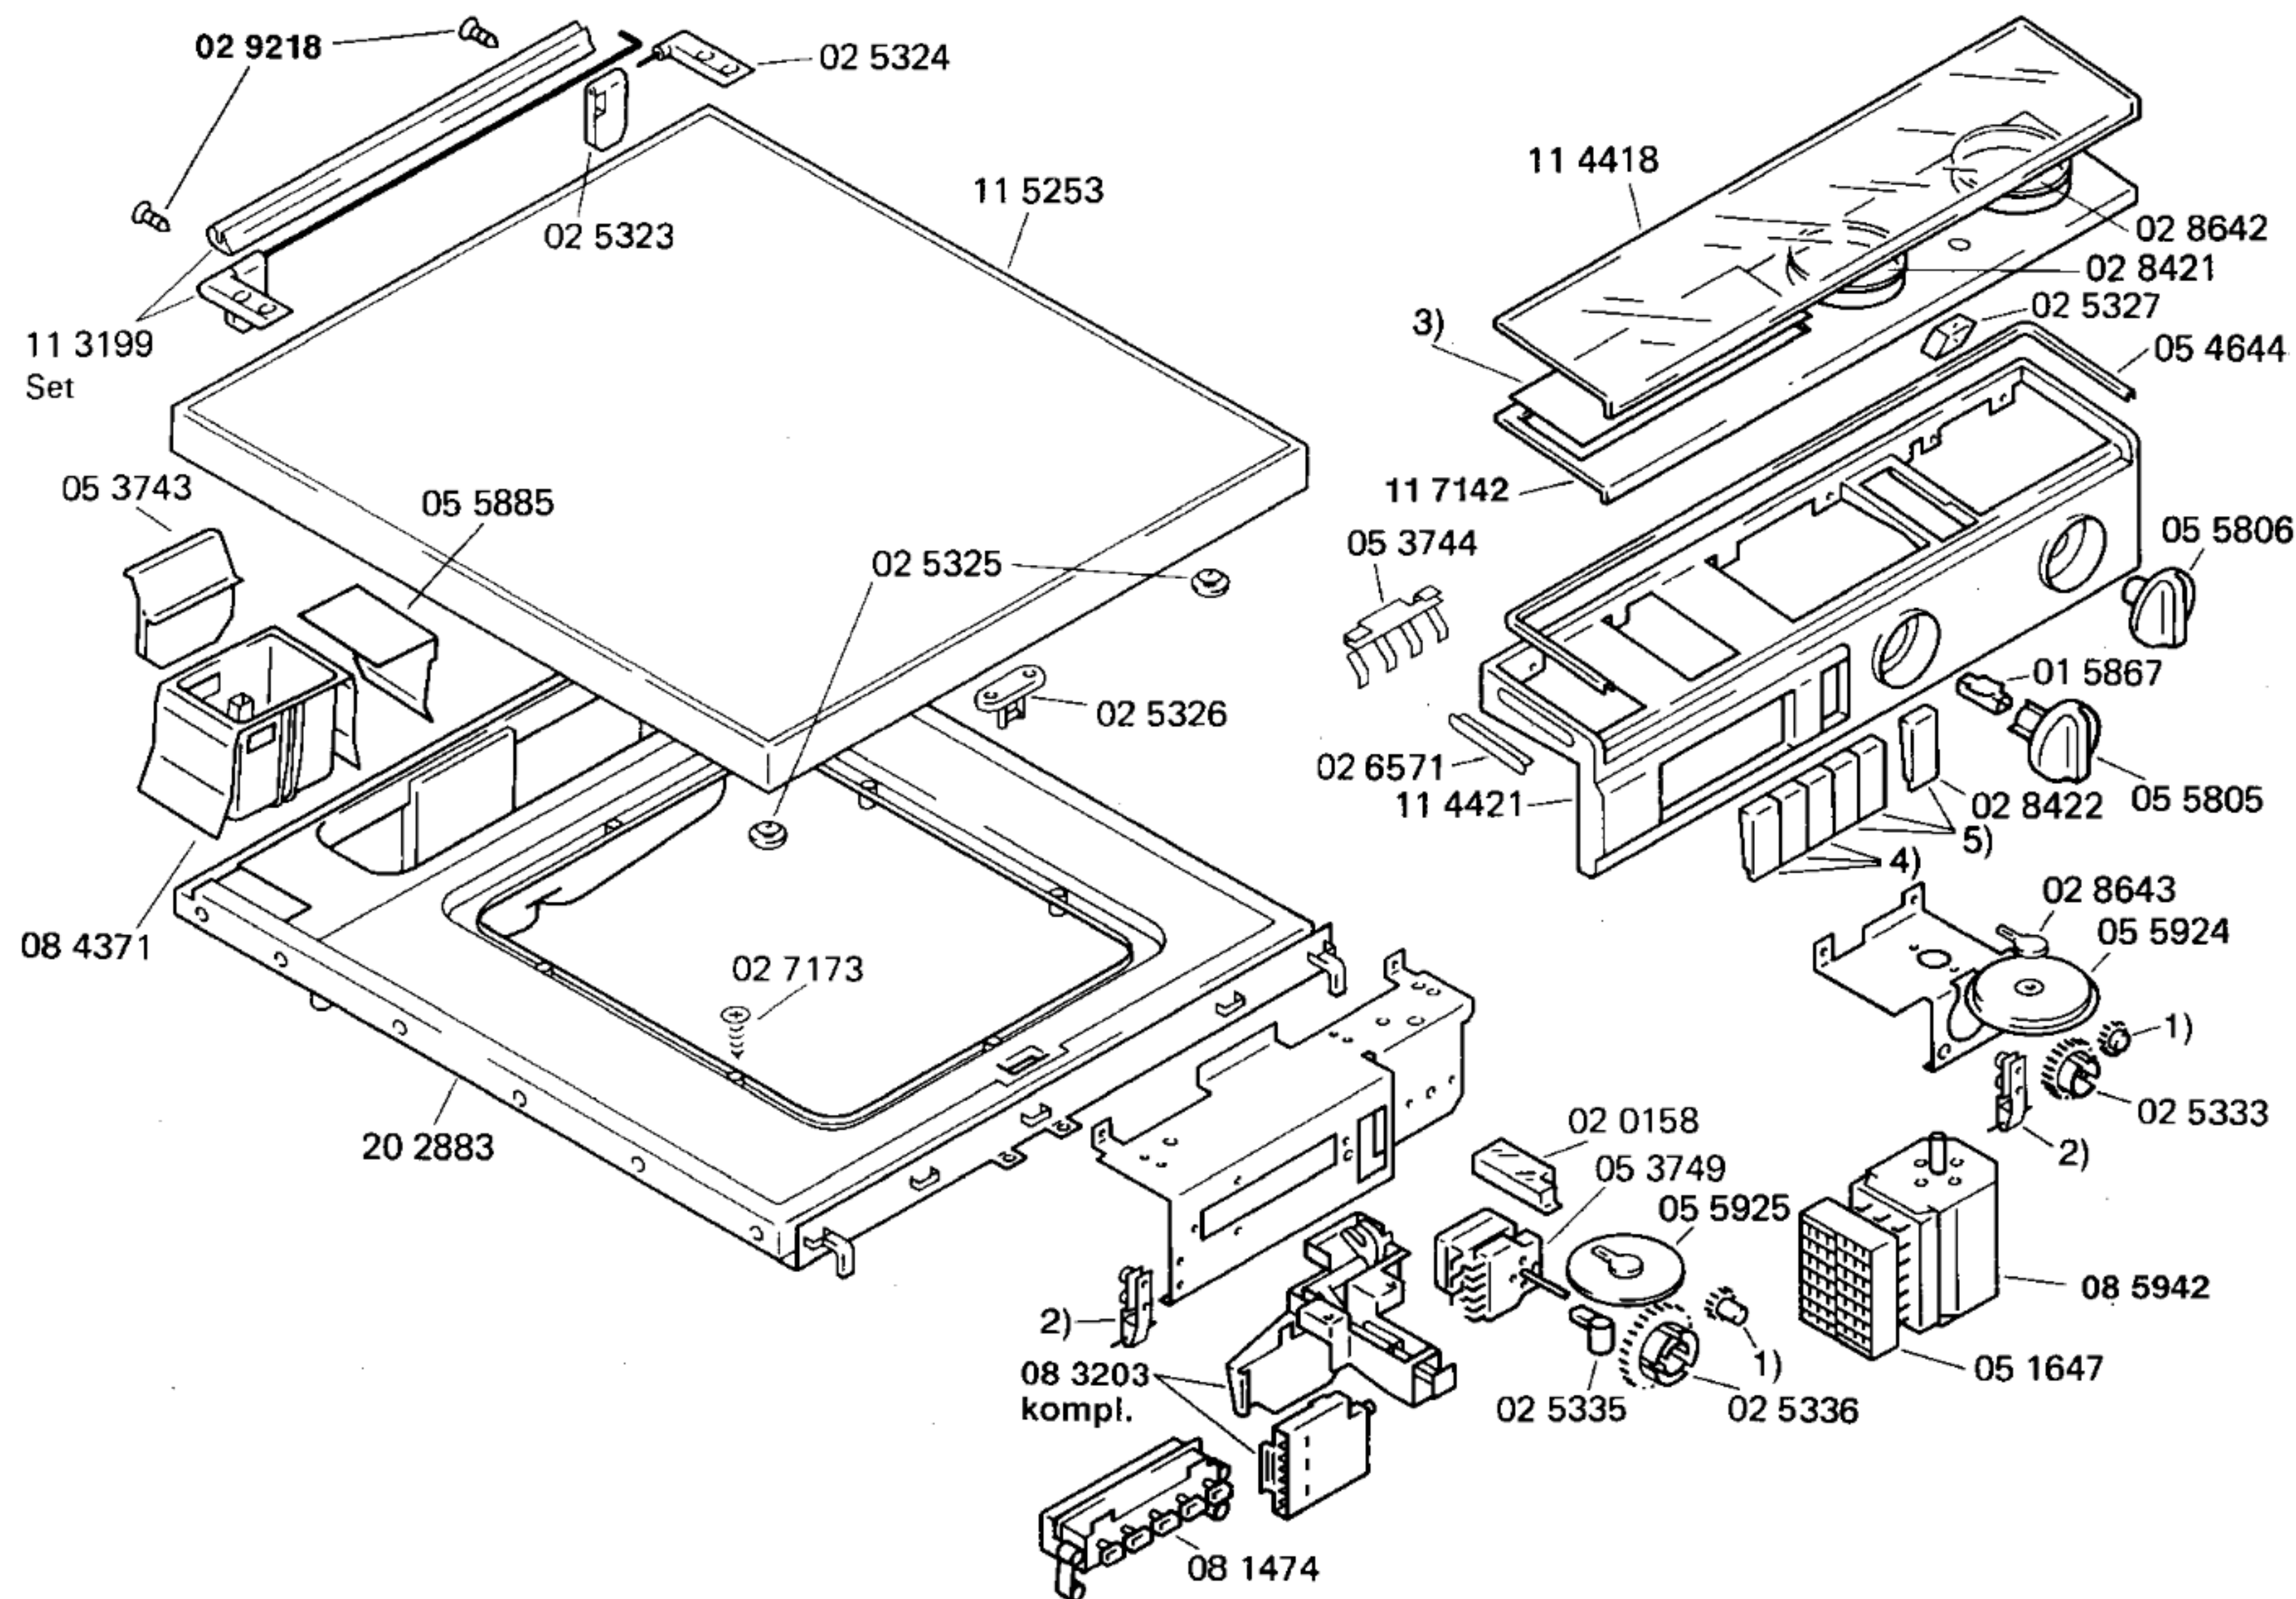

1) 02 5332

2) 02 5334

Aufstellanweisung

51 1497

(D,GB,F,I,NL)

51 1674

(D,I,S,DK,N,SF)

Gebrauchsanweisung

51 1491

(D,GB,F,I,NL)

51 1687

(D,I,S,DK,N,SF)

51 1688

(F)

Programmtabelle

51 1492

(D,GB,F,I,NL)

51 1689

(D,I,S,DK,N,SF)

3) 08 5315

(D, Symbole)

08 5311

(S,N)

08 5313

(SF,DK)

08 5314

(F,NL)

08 5312

(I,GB)

08 5317


(YU,GR,TR,E)

4) 02 8640


Set


5) 02 8639

Set

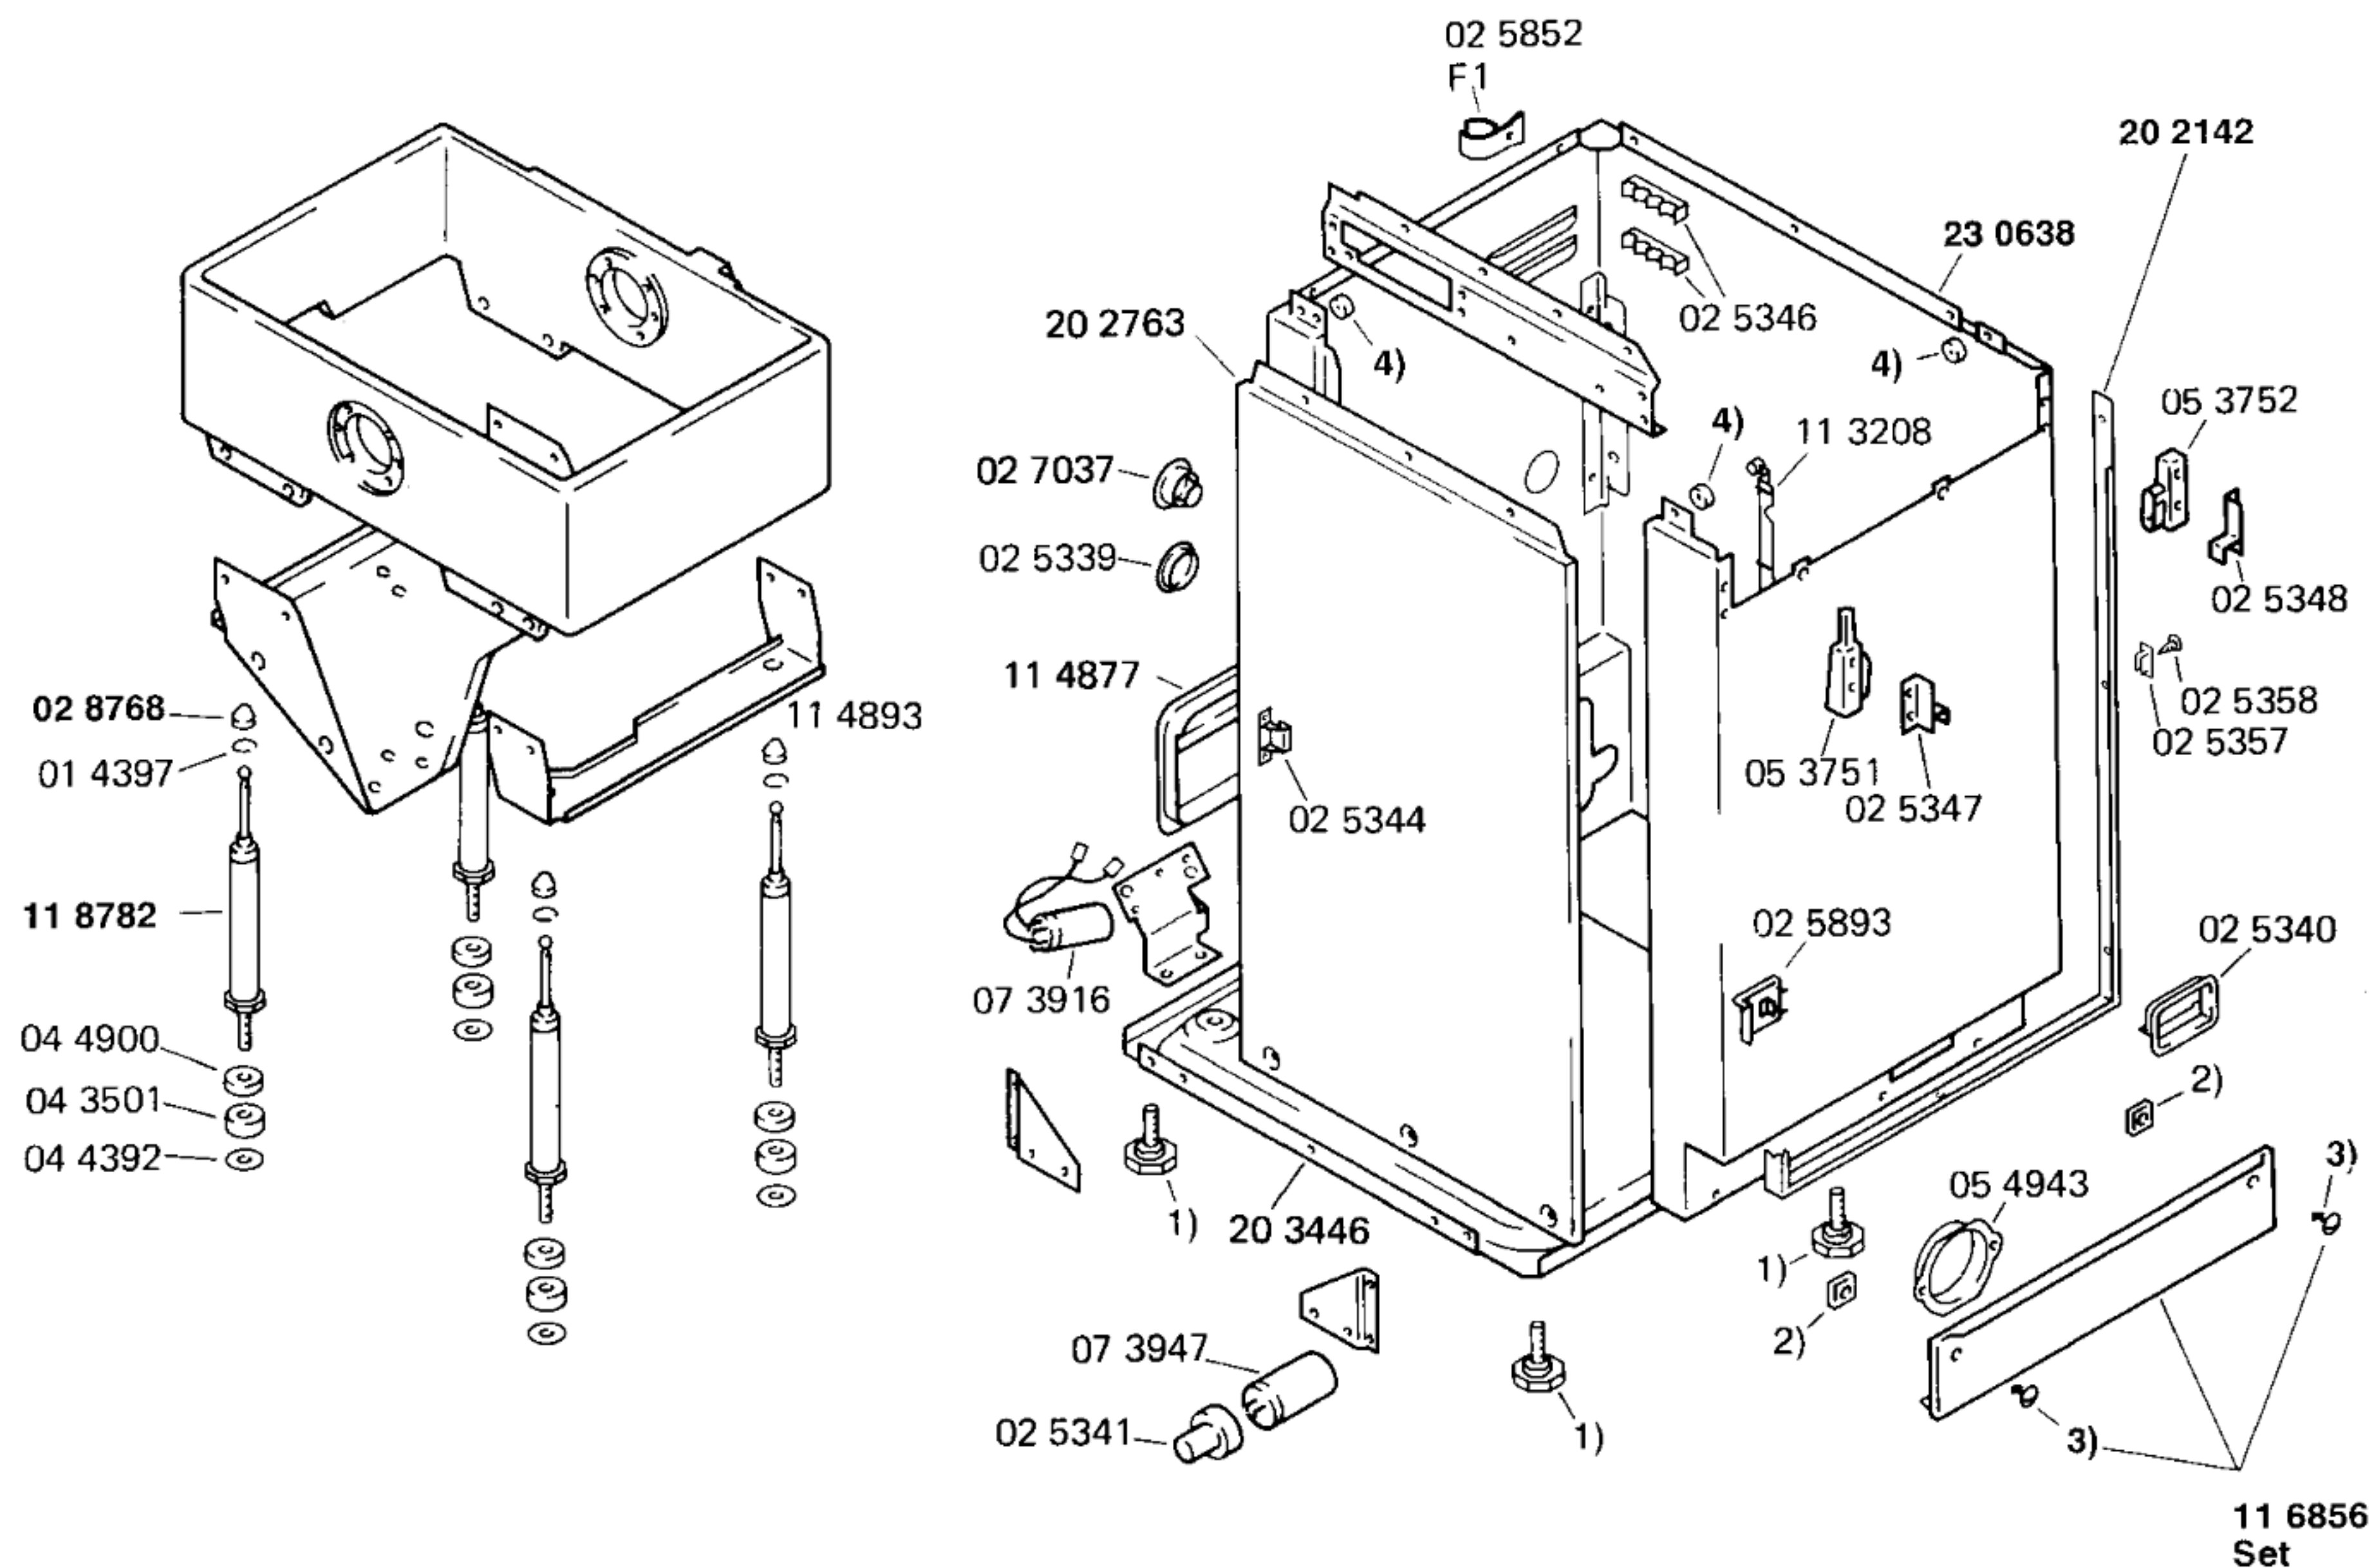

- 1) 04 5561
- 2) 01 4687
- 3) 02 8437
- 4) 02 5345

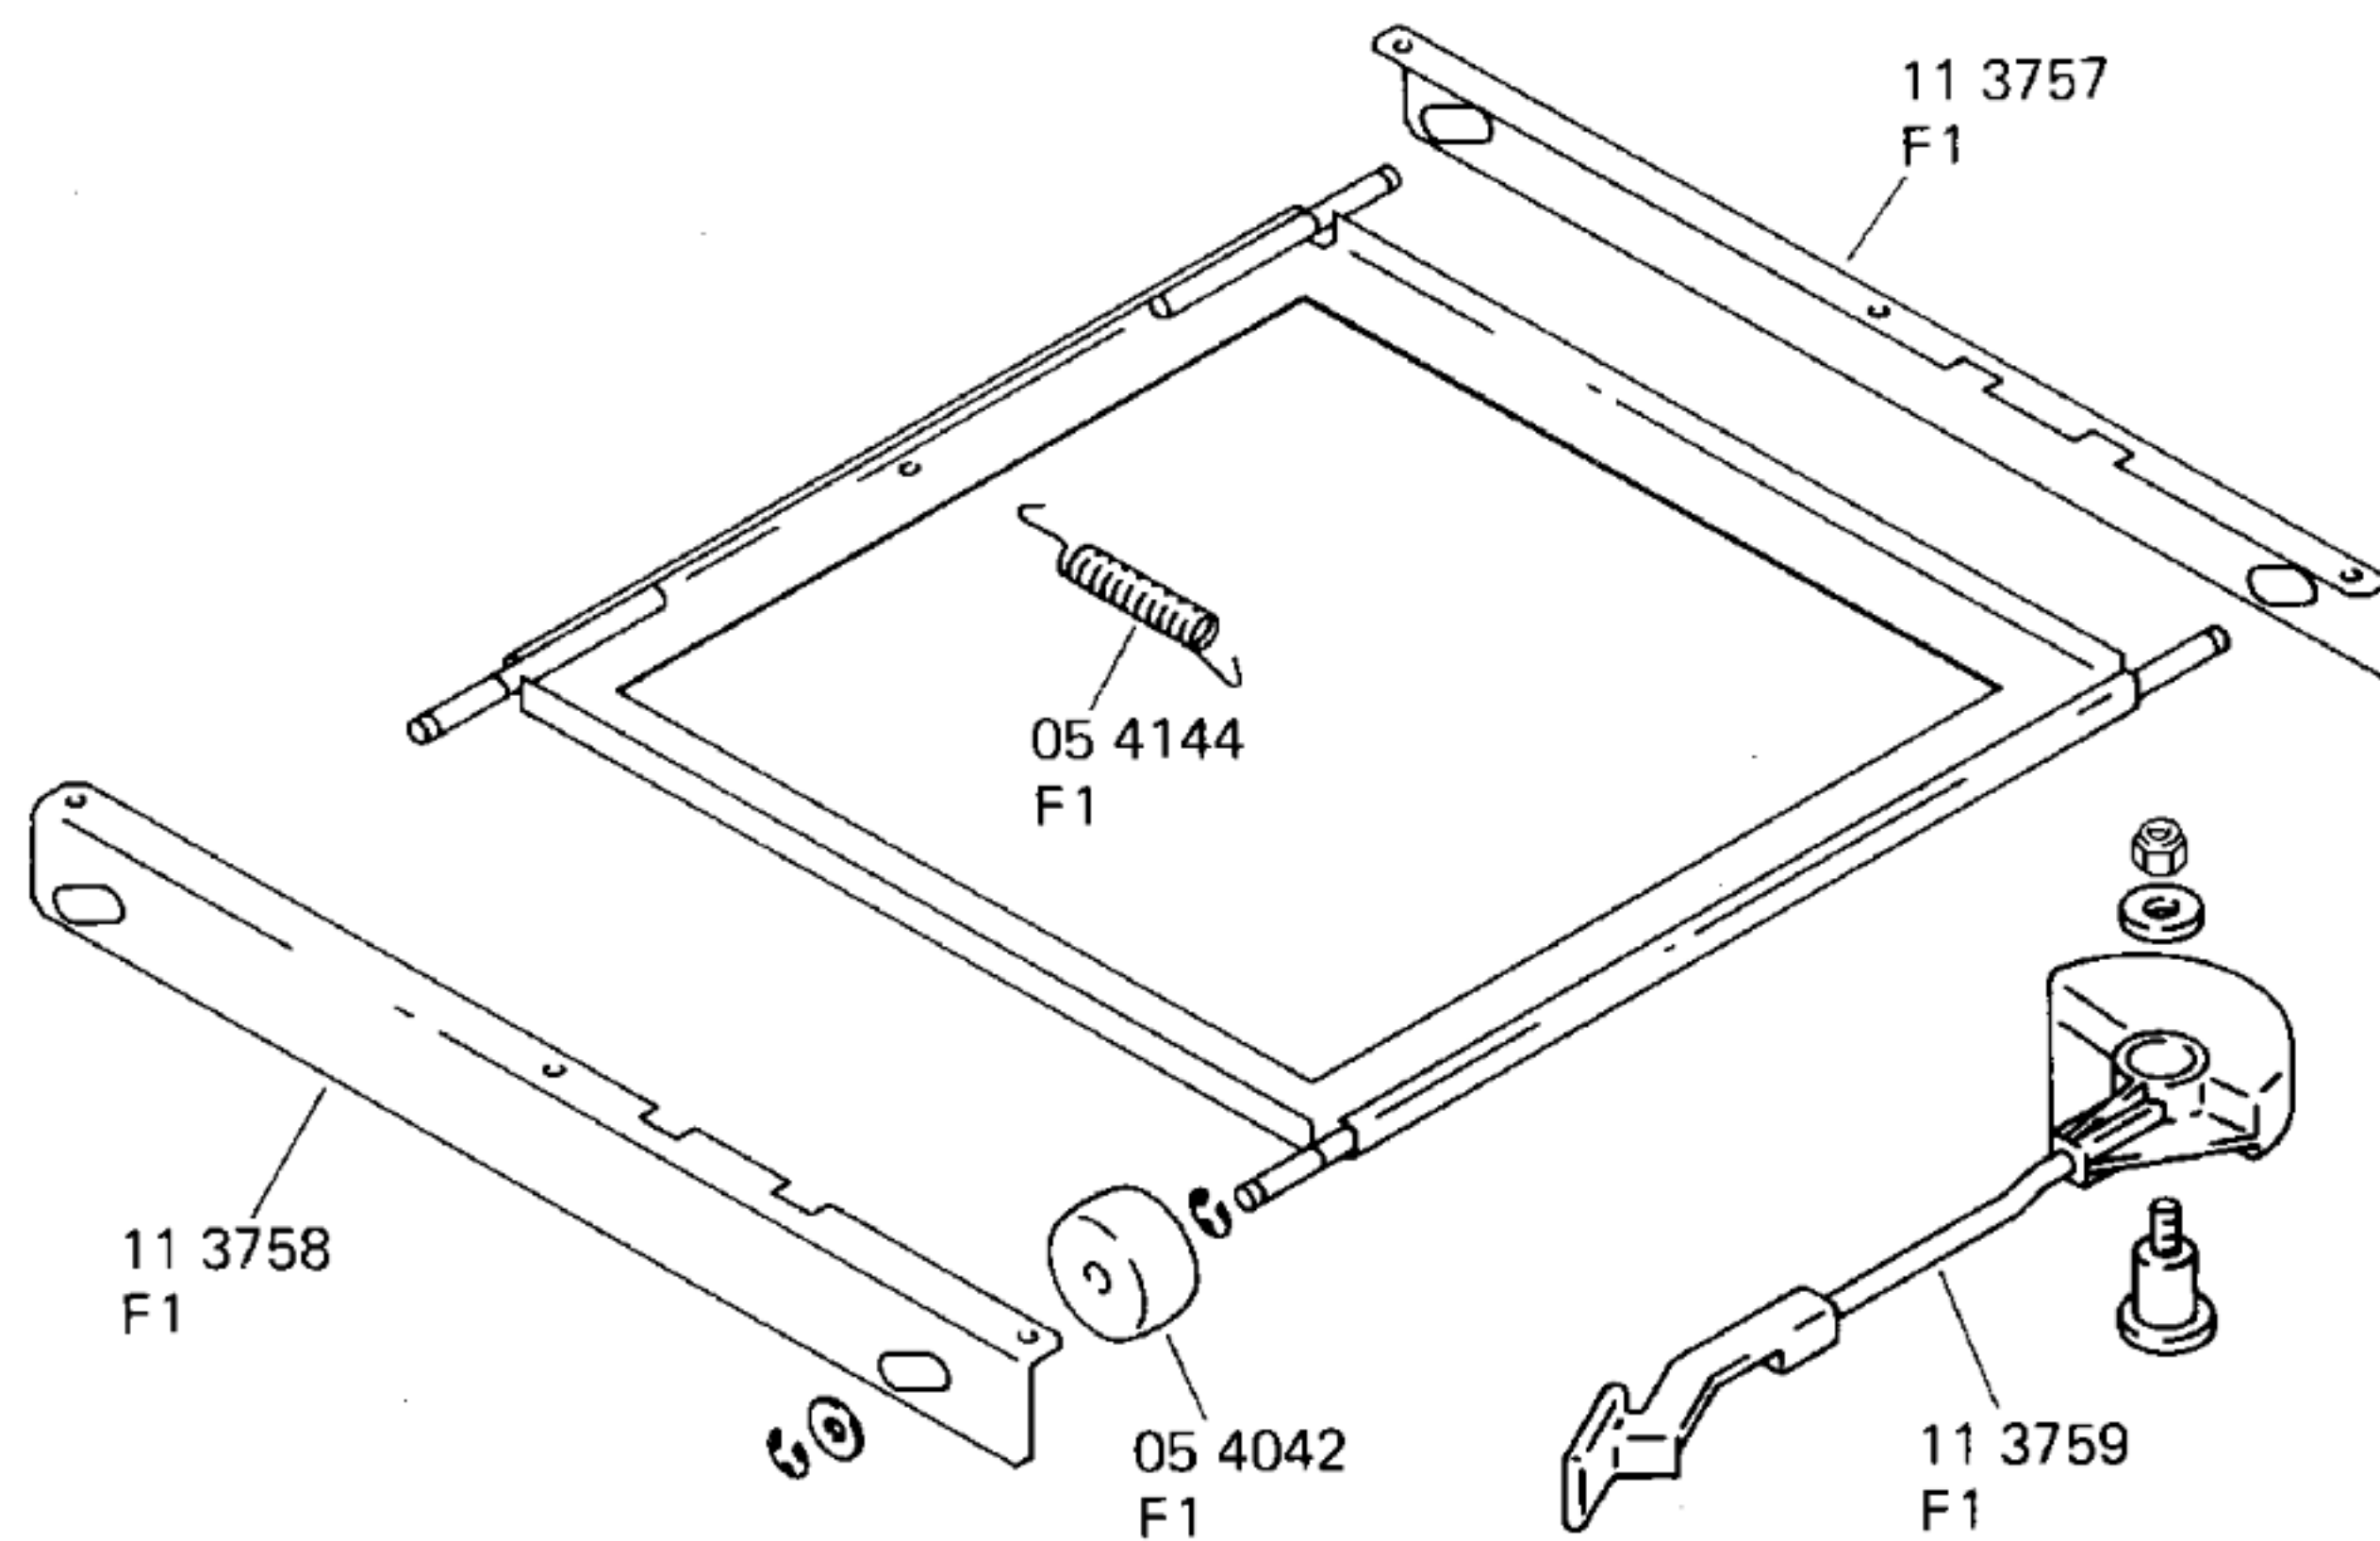

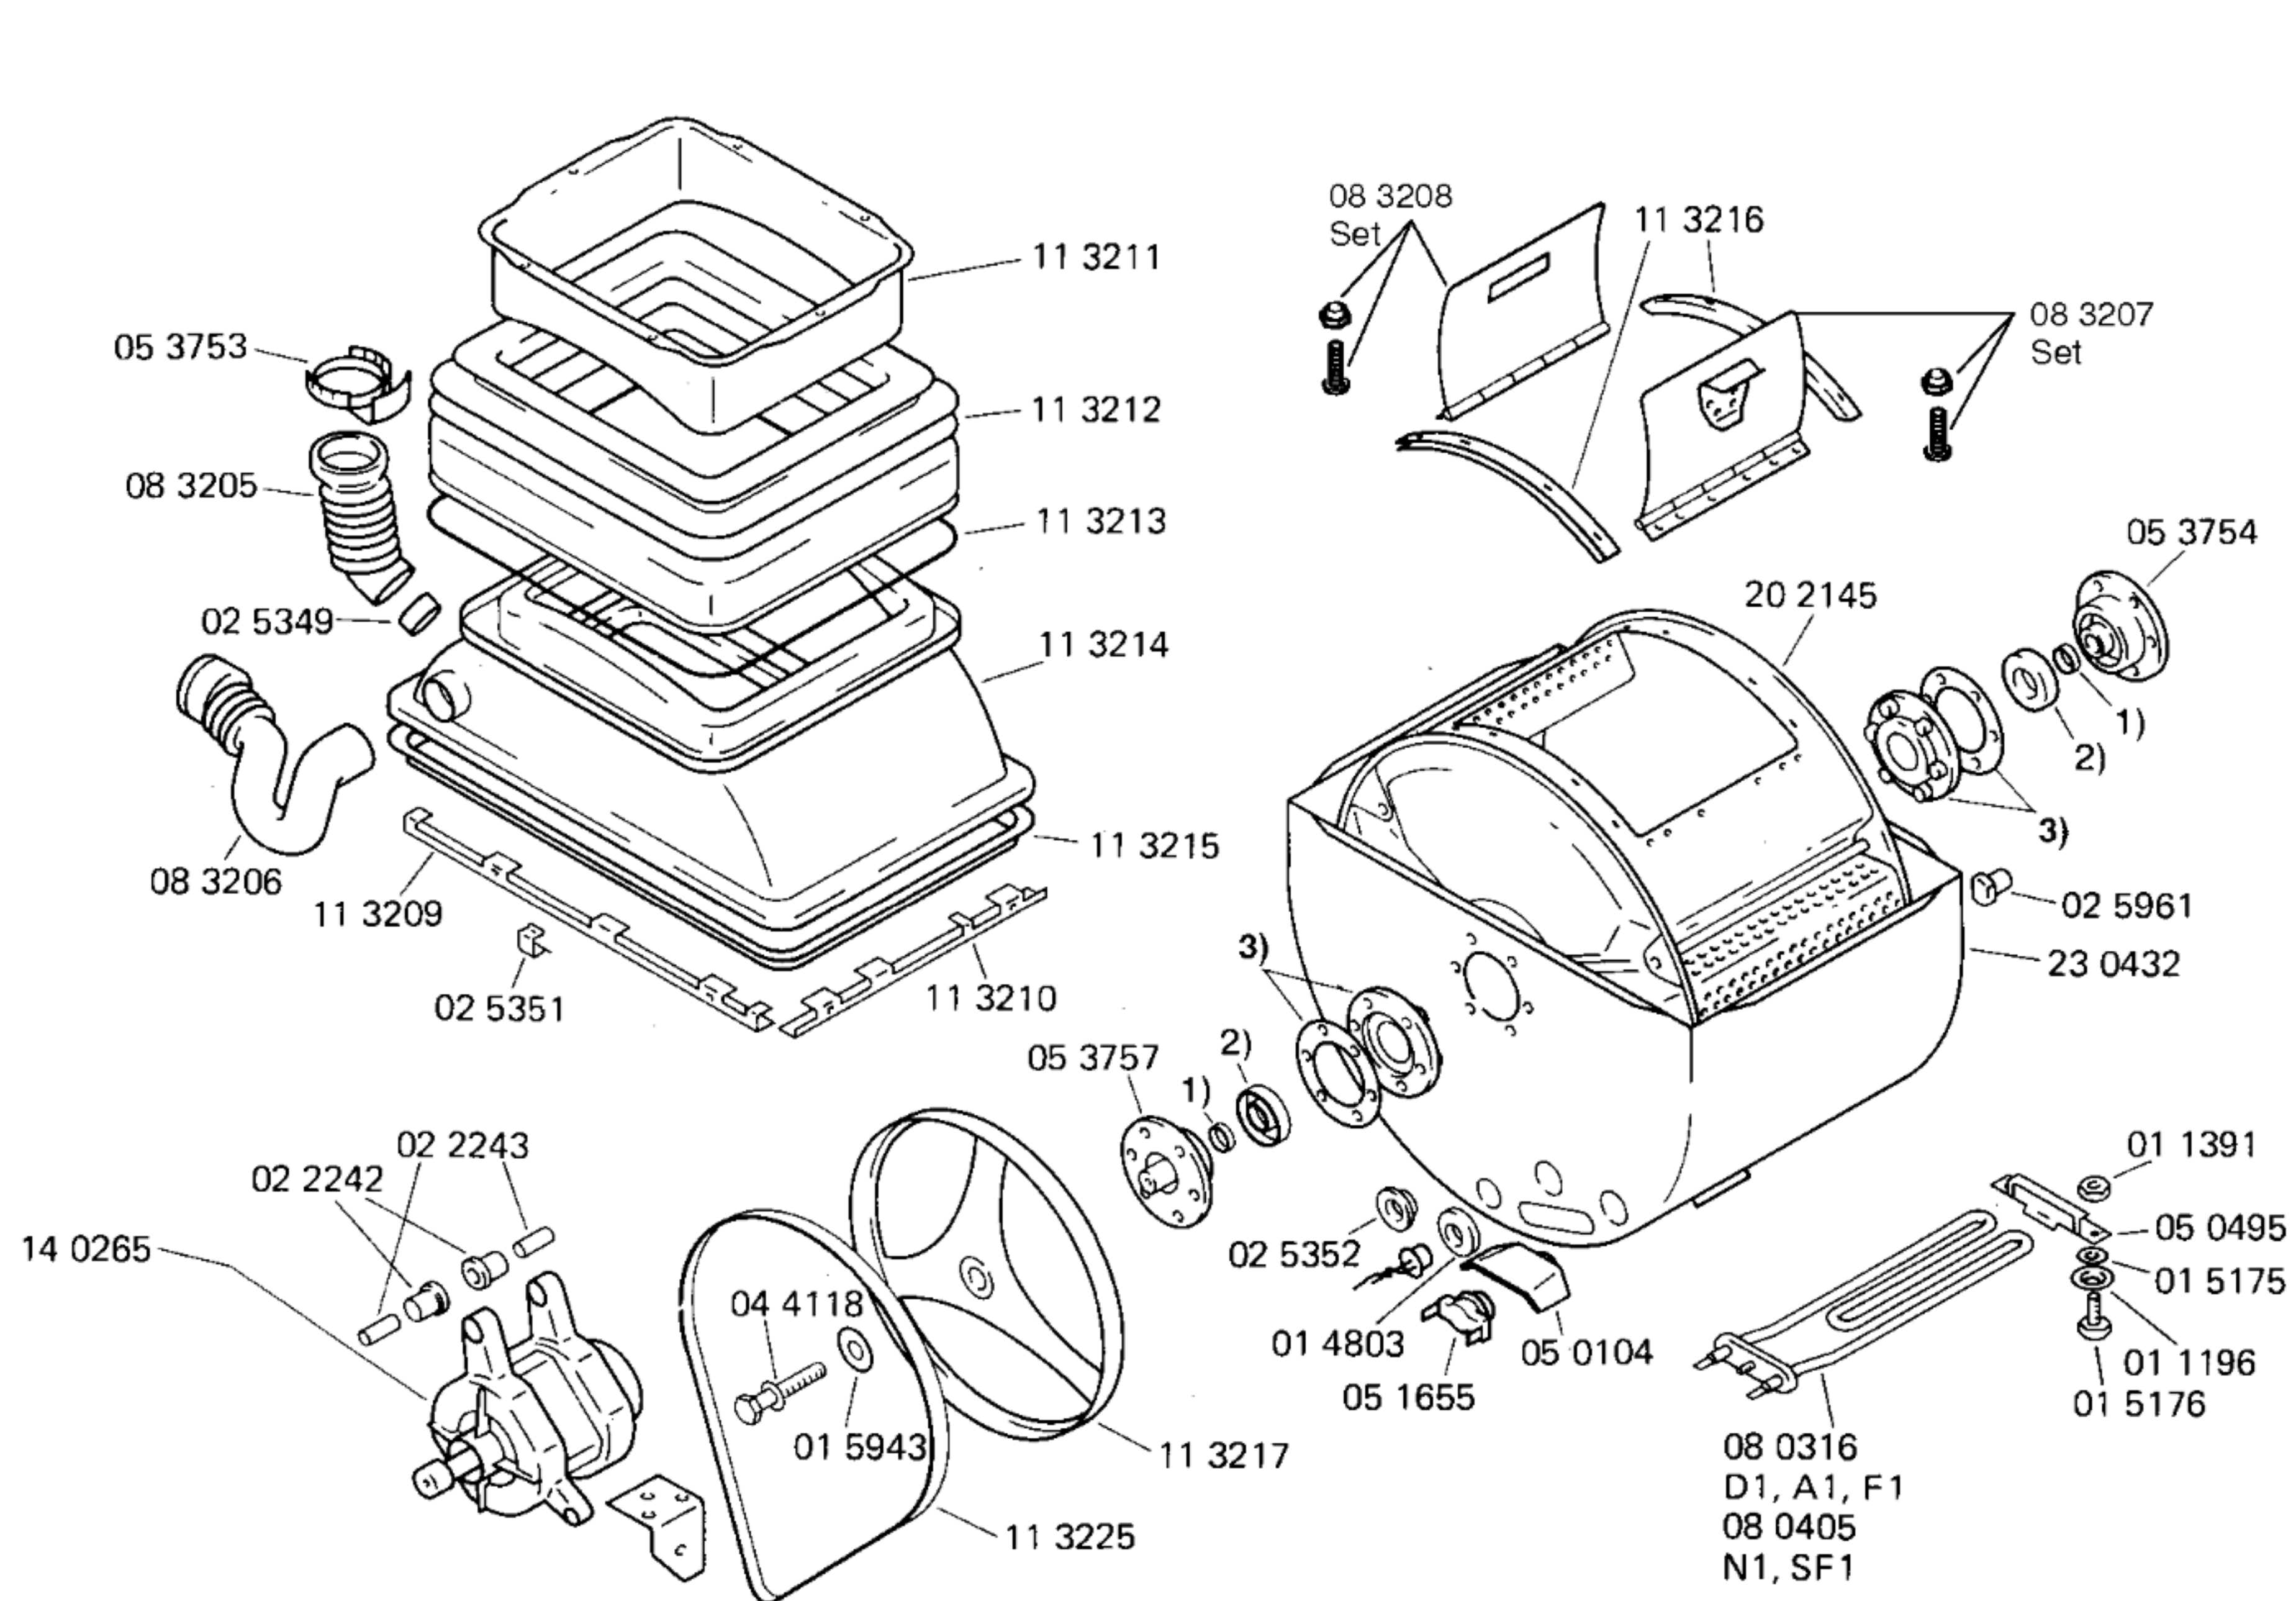

- 1) 04 2309
- 2) 02 5350
- 3) 05 7022

