 


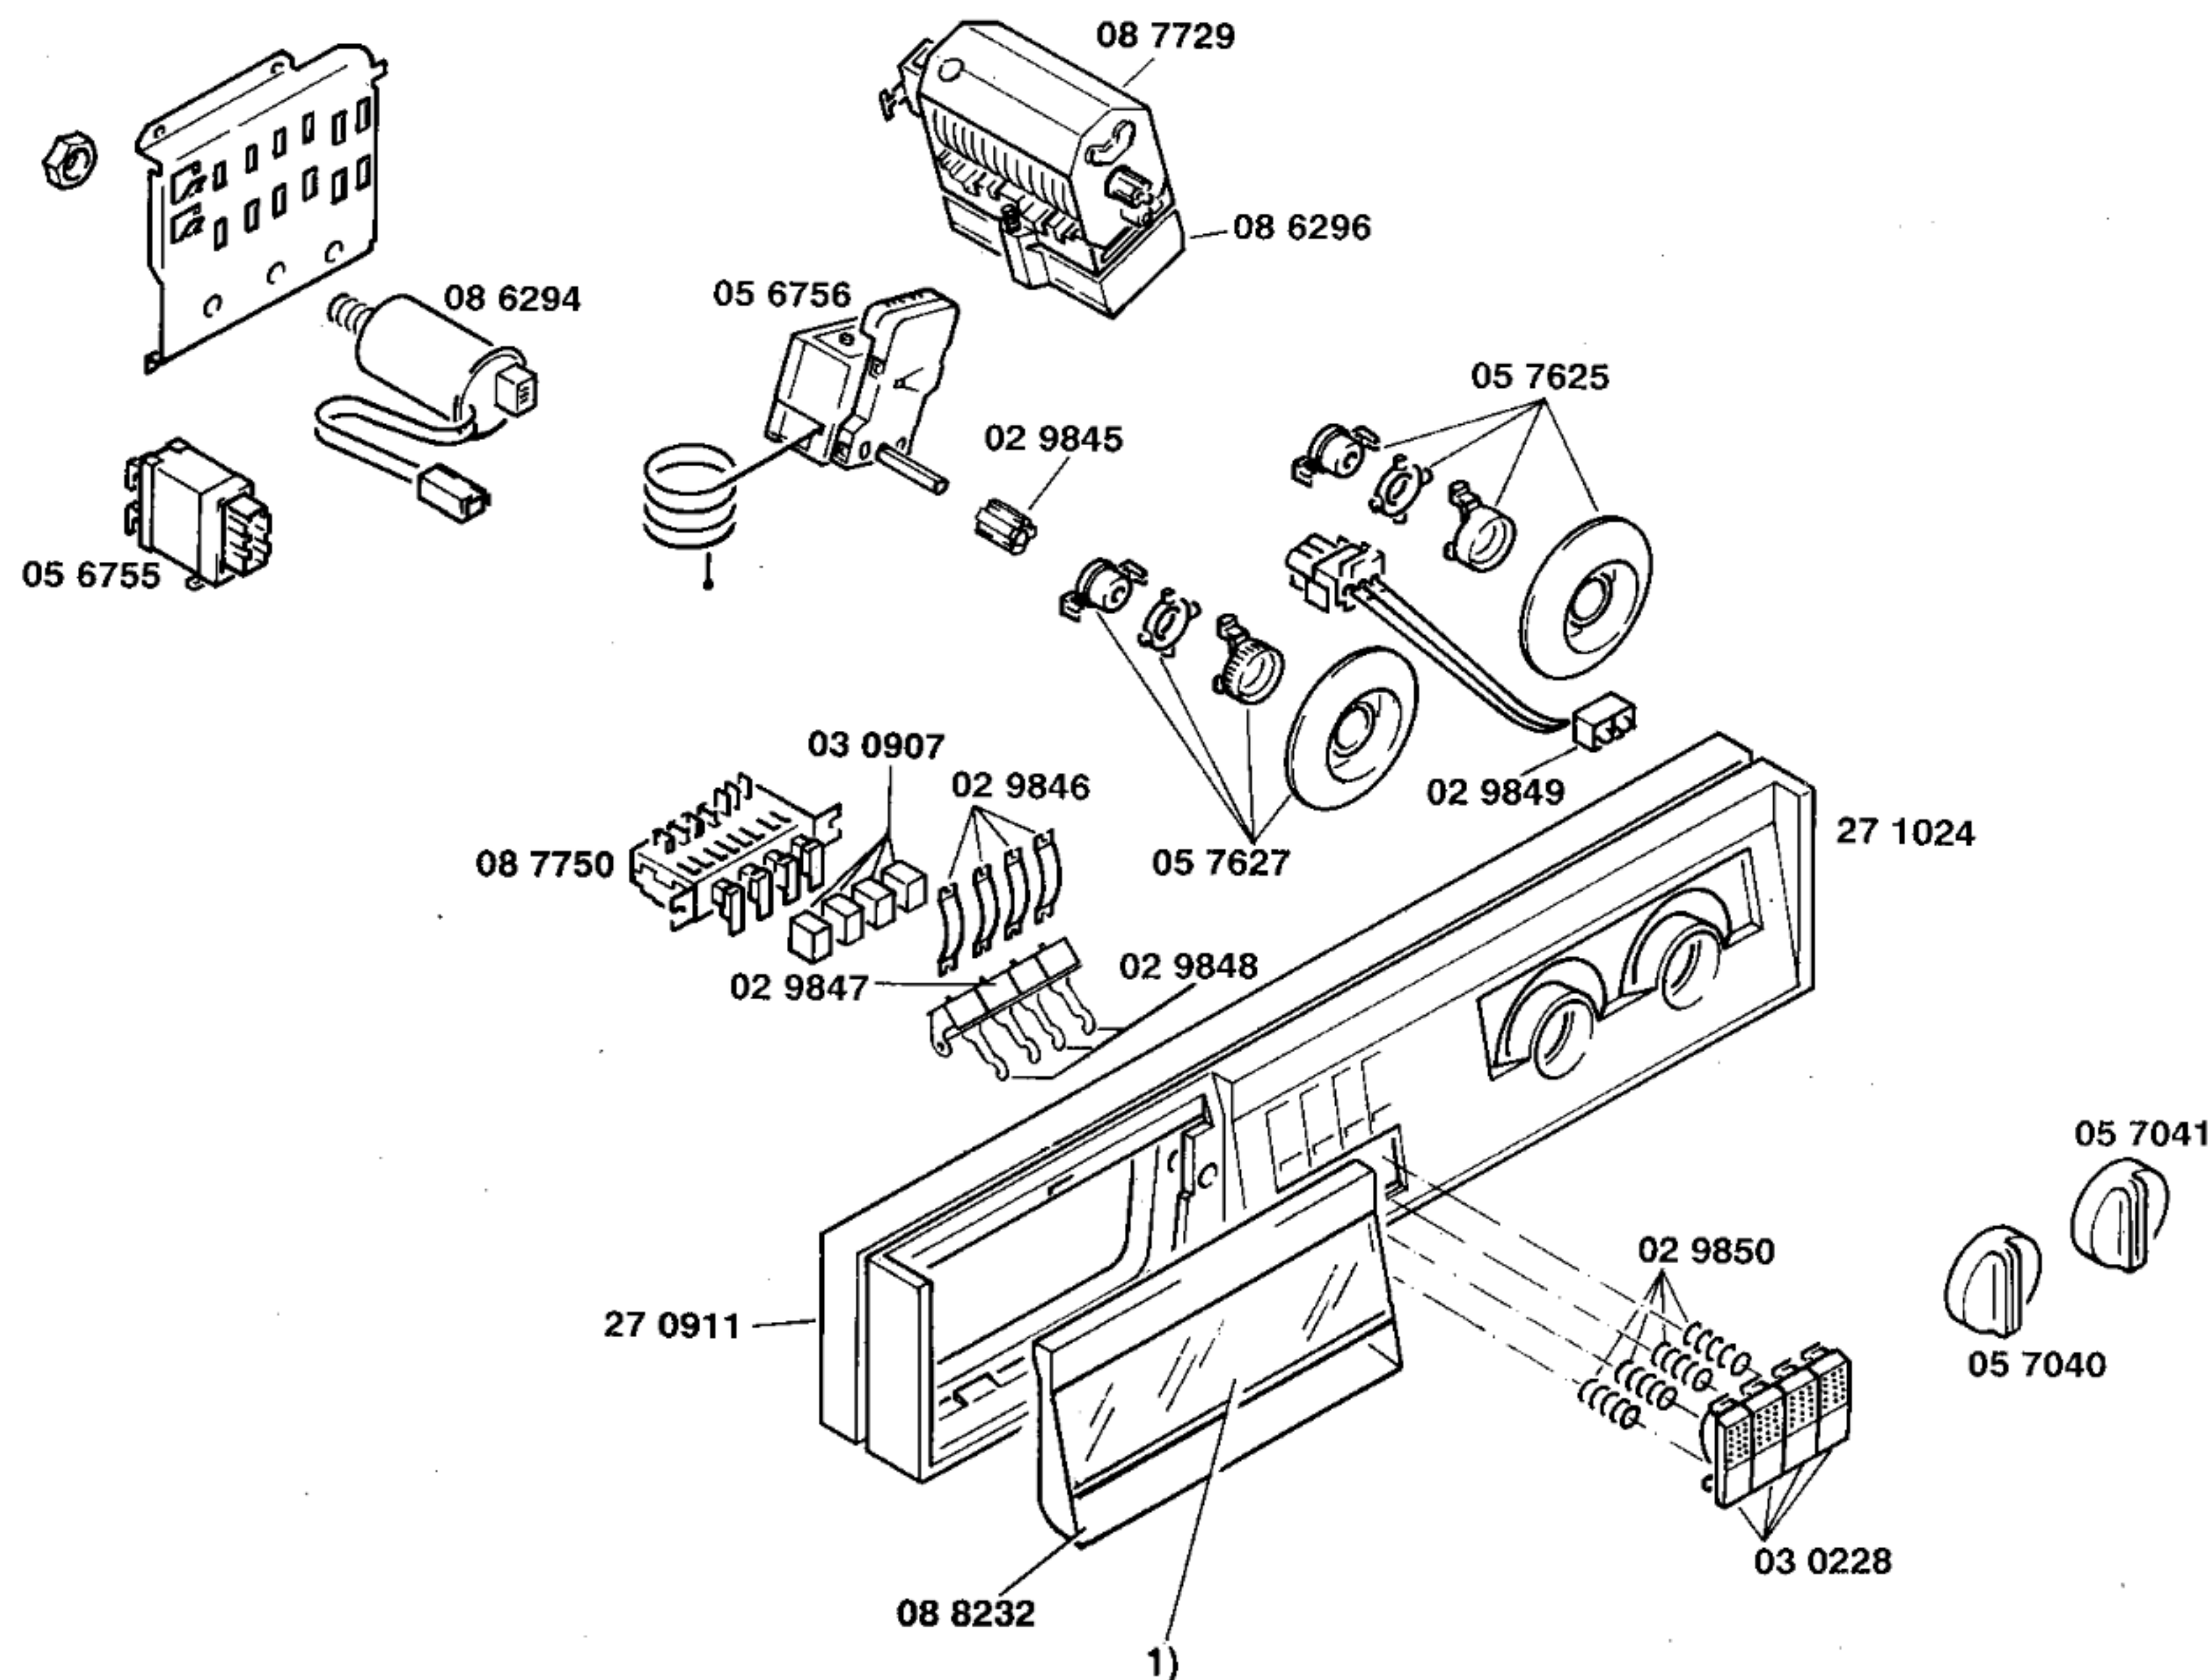

- 1) 08 8174
 (D,I)
 08 8716
 (GB)
 08 8717
 N,SF
 08 8718
 (S,DK)
 08 8719
 (NL,F)
 08 8720
 (YU,TR)
 08 8721
 (E,GR)

Gebrauchsanweisungen:

 
- 51 3549
 (D,I,S,N,SF)
 51 3550
 (S,DK)
 51 3551
 (NL,F,E,GB)

 
Programmtabellen:

- 51 3552
 (D)
 51 3553
 (I,S,N,SF)
 51 3554
 (S,DK)
 51 3555
 (NL,F,E,GB)

Aufstellanweisungen:


- 51 3556
 (D,I,S,N,SF)
 51 3557
 (S,DK)
 51 3558
 (NL,F,E,GB)

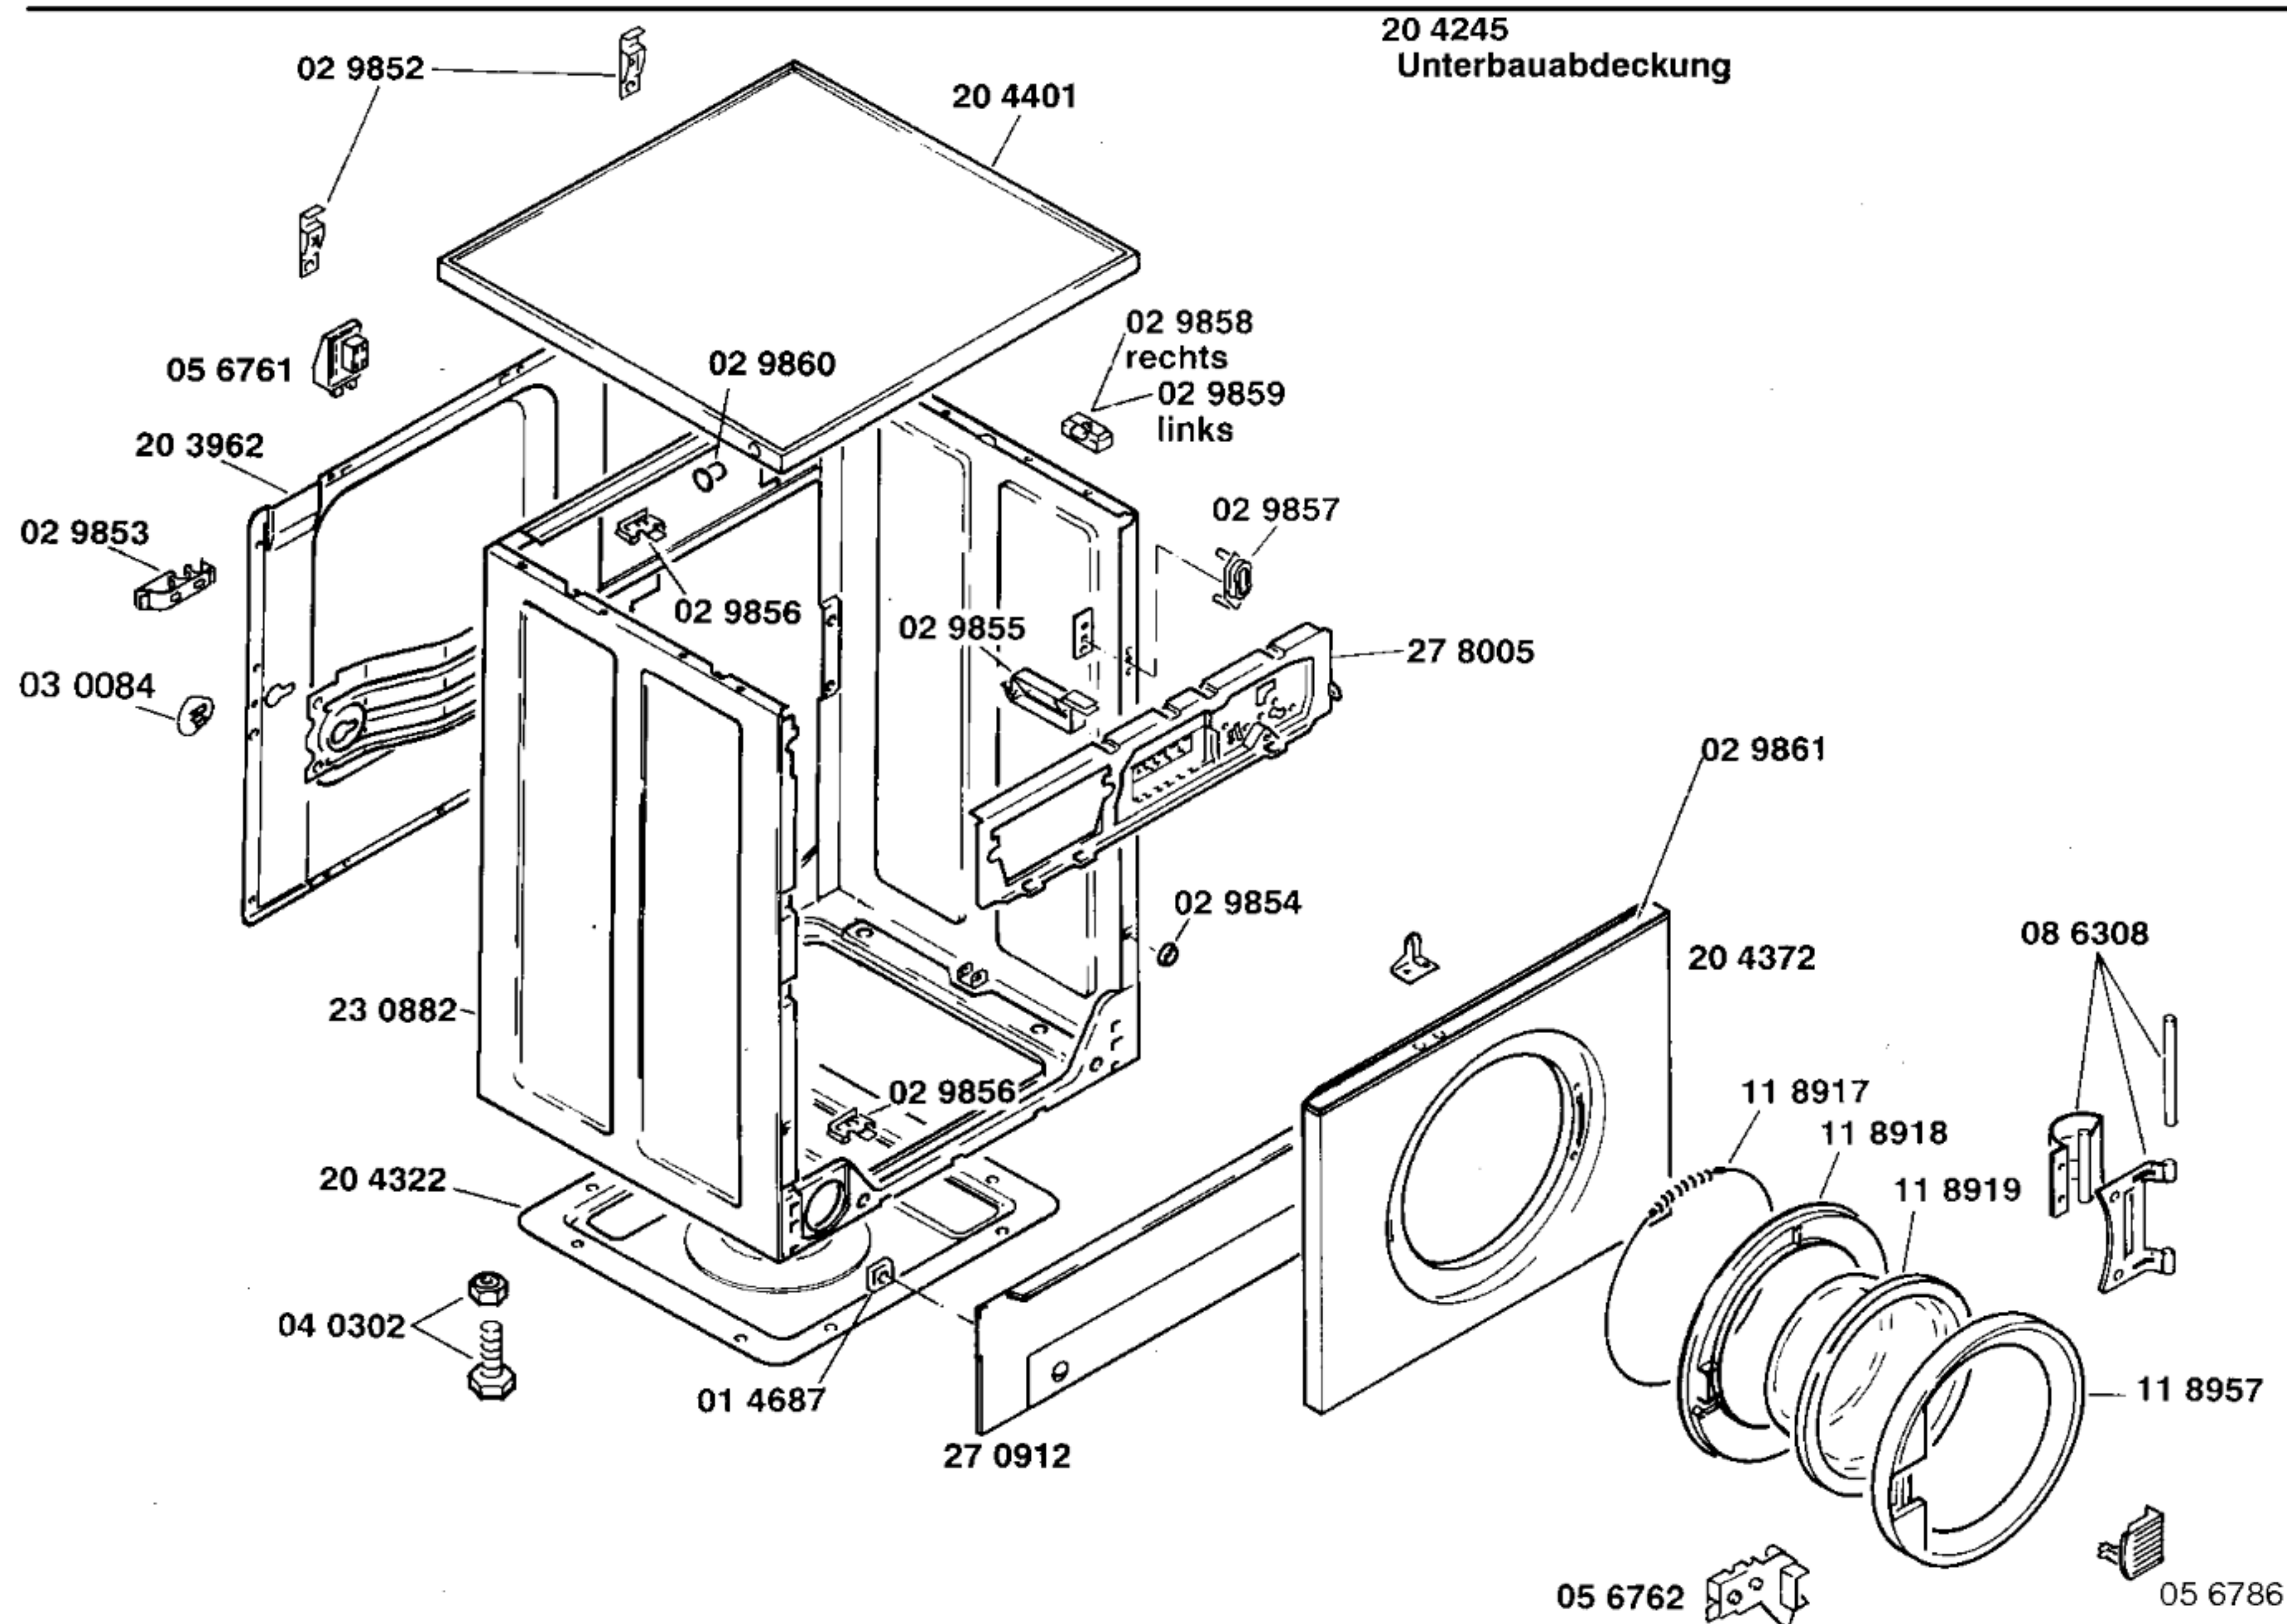

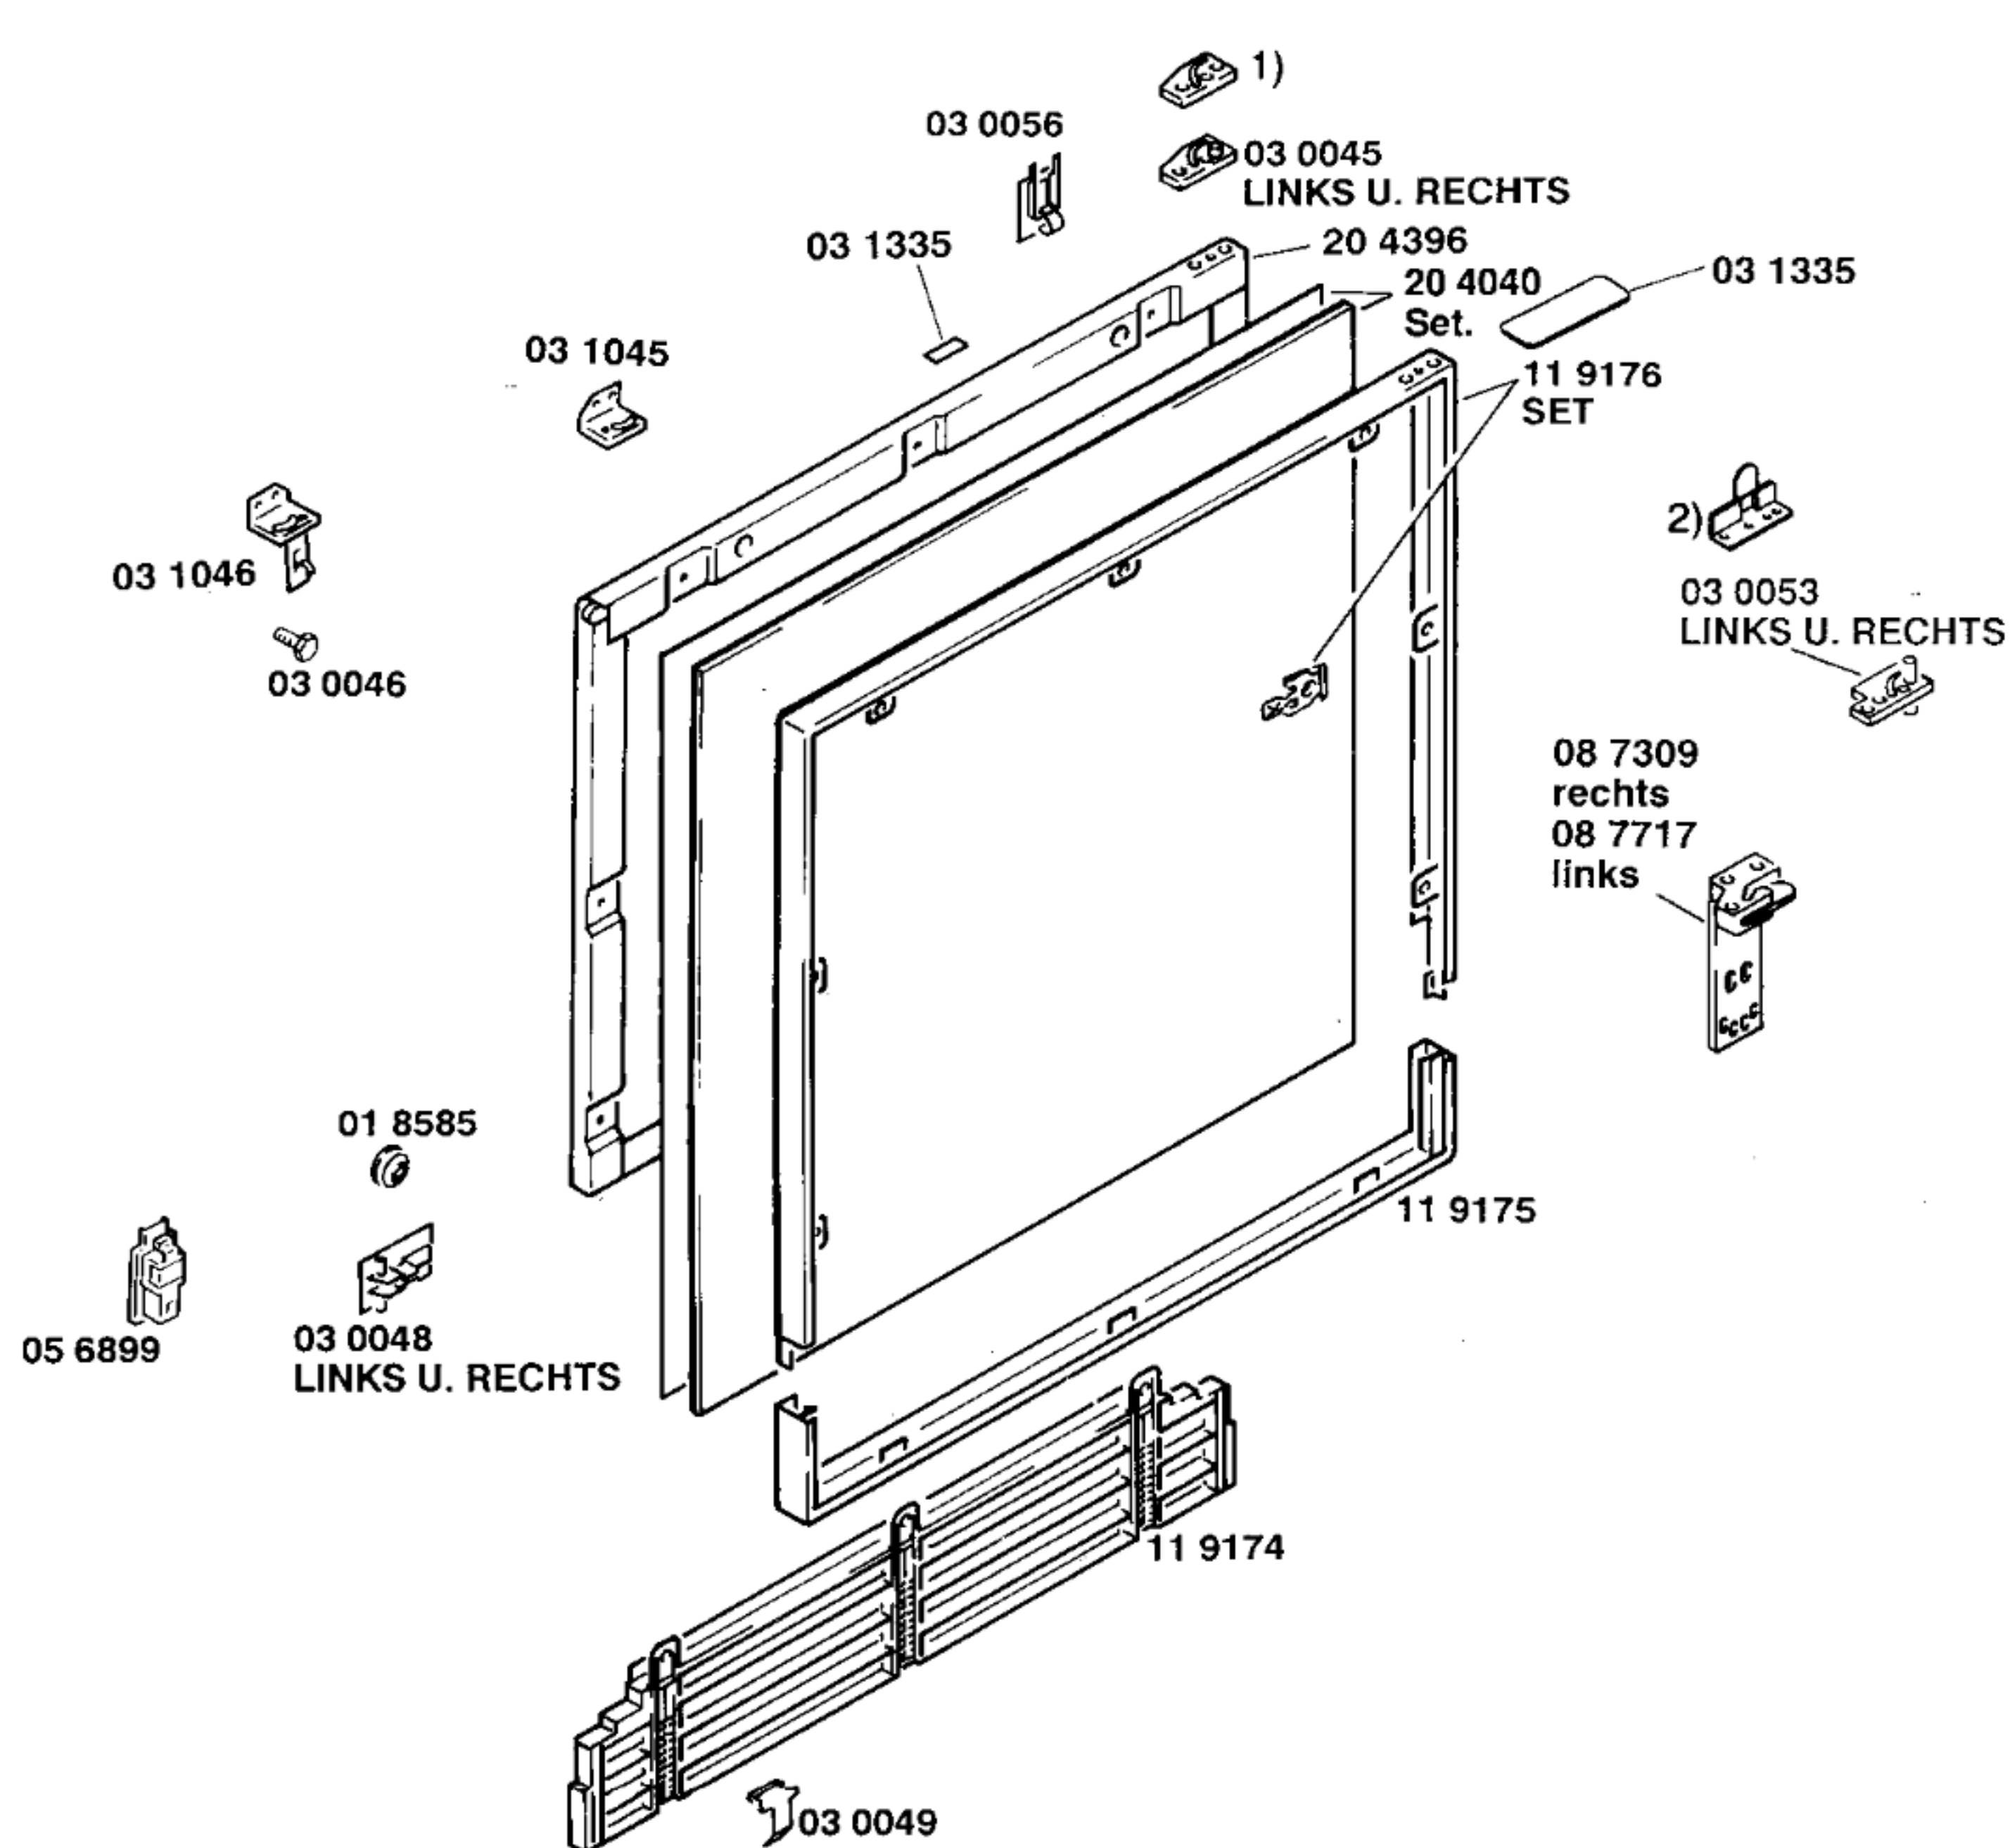

1) 03 0055
LINKS
03 0054
RECHTS

 2) 03 0052
RECHTS
03 0051
LINKS

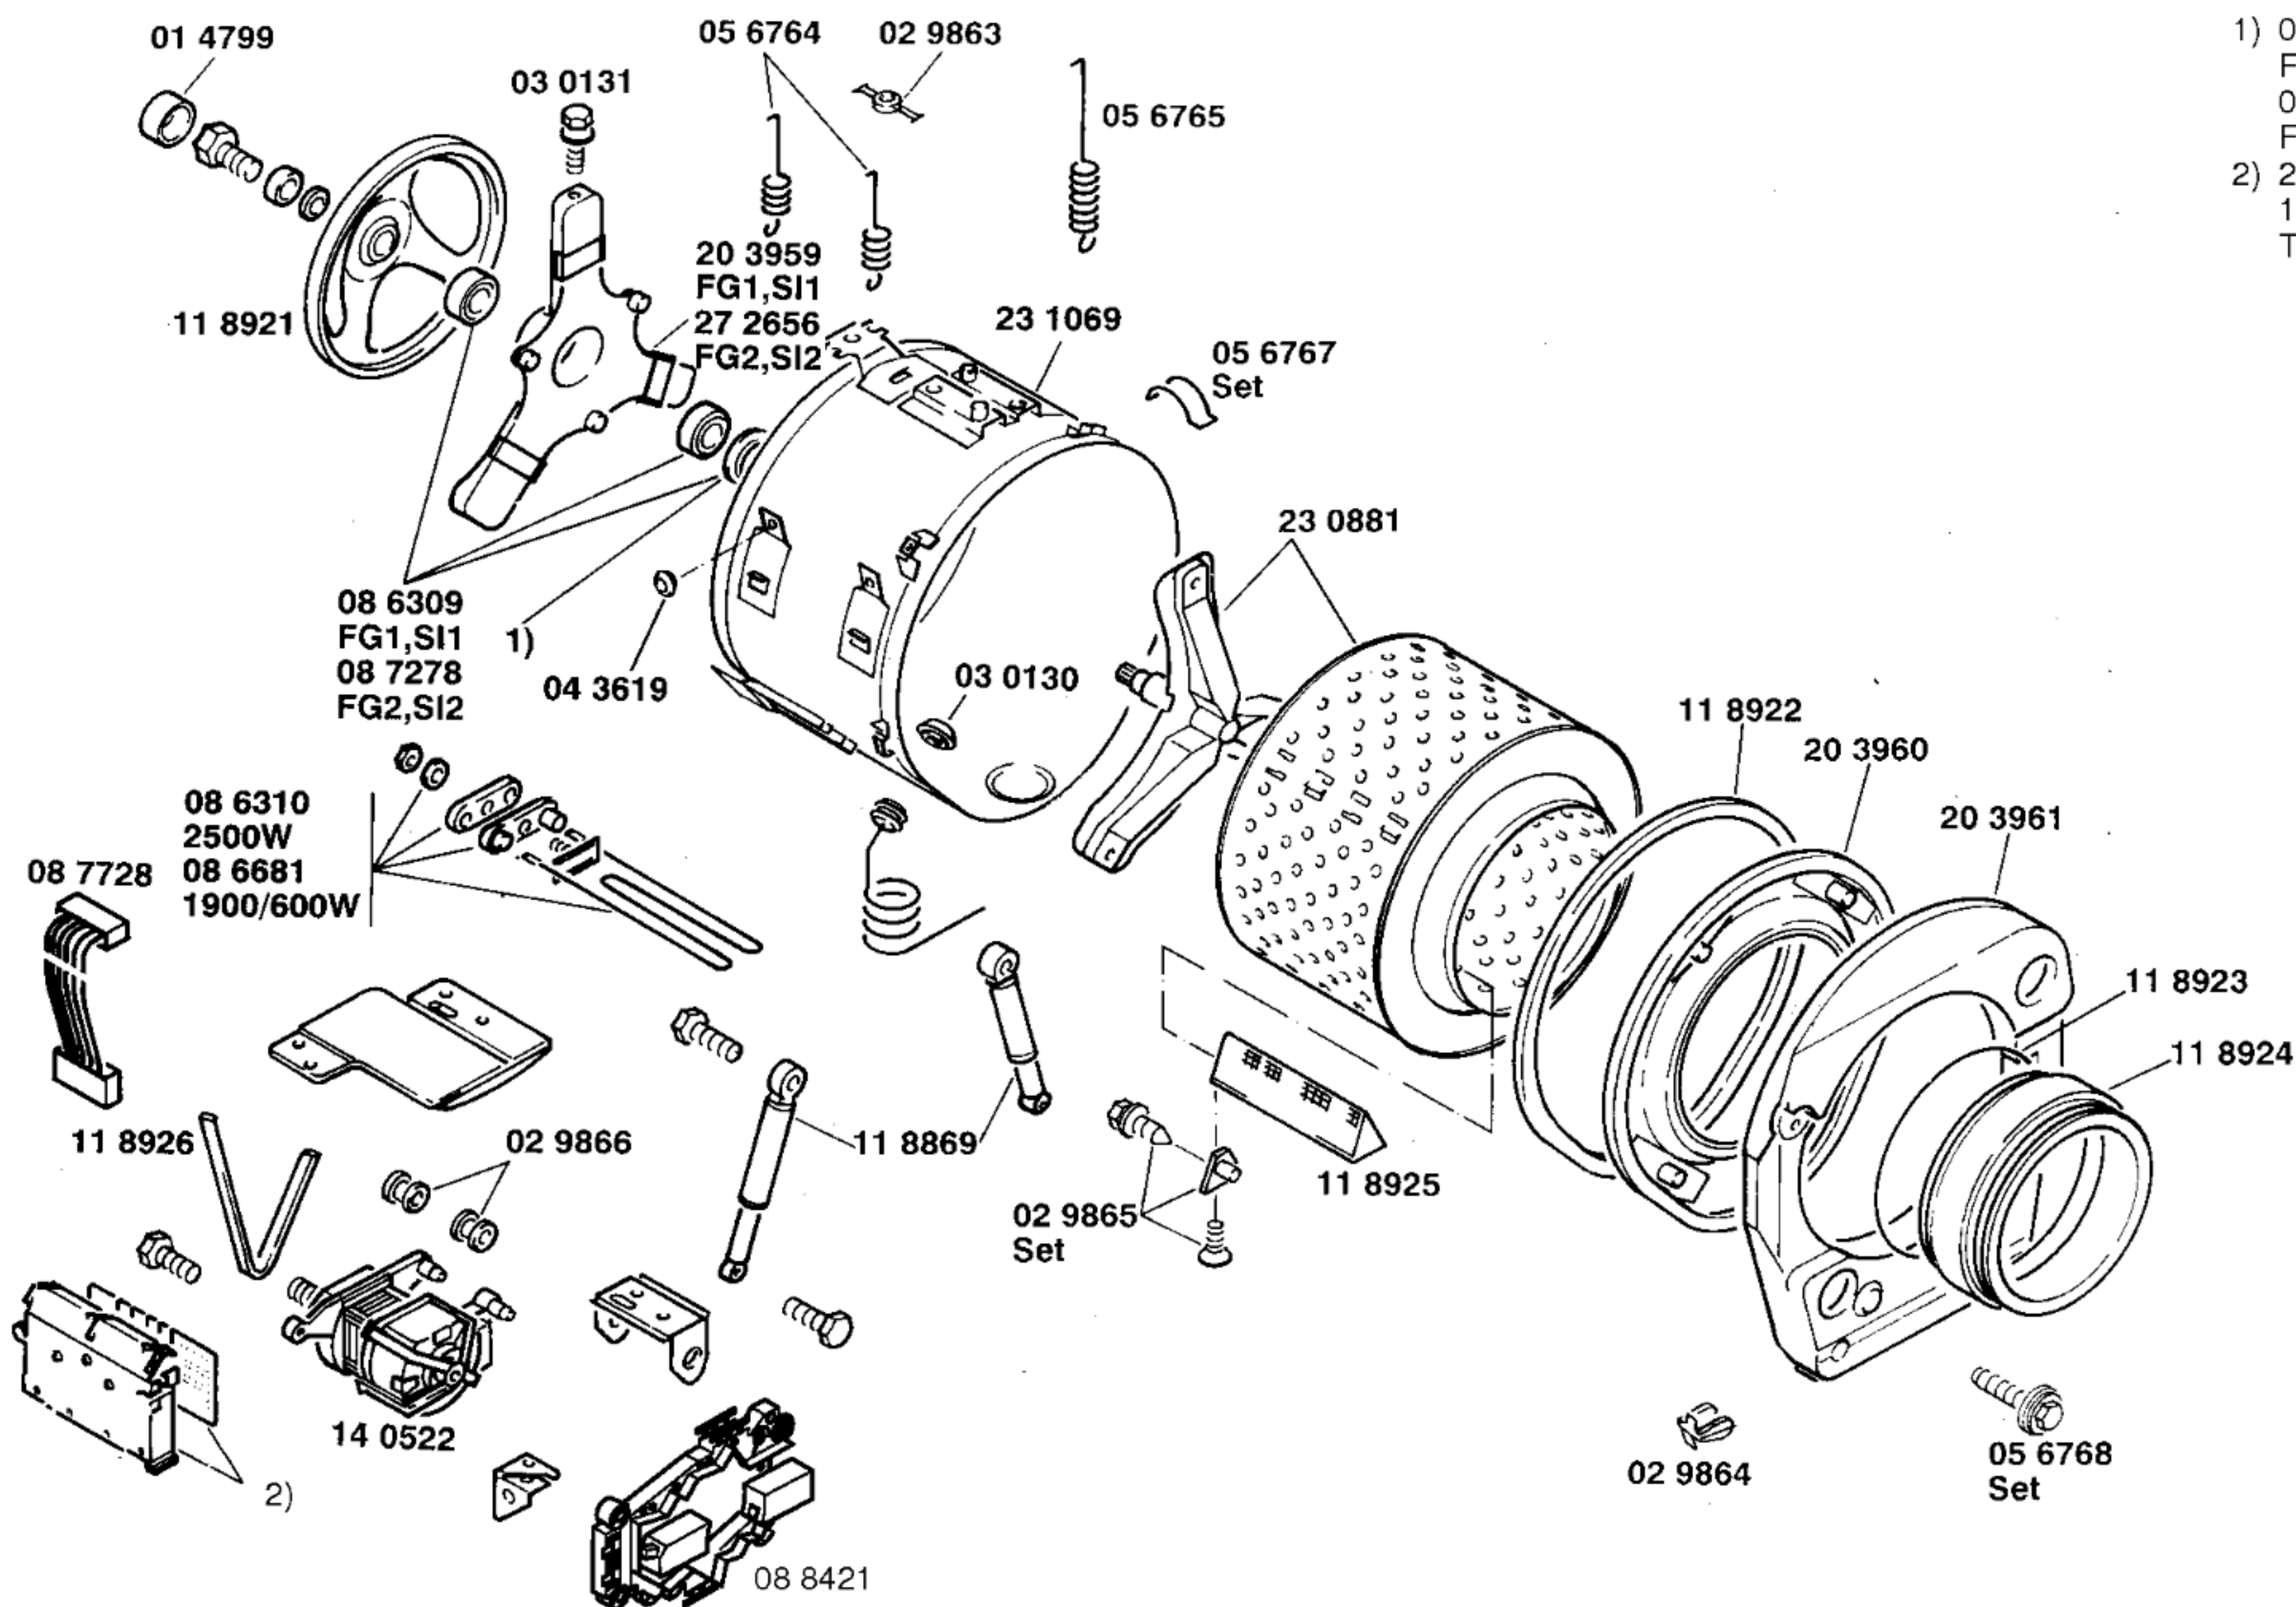

- 1) 05 6766
 FG1, SI1
 05 8436
 FG2, SI2
- 2) 27 1717
 15 5272
 Triac-Motorleistung

