



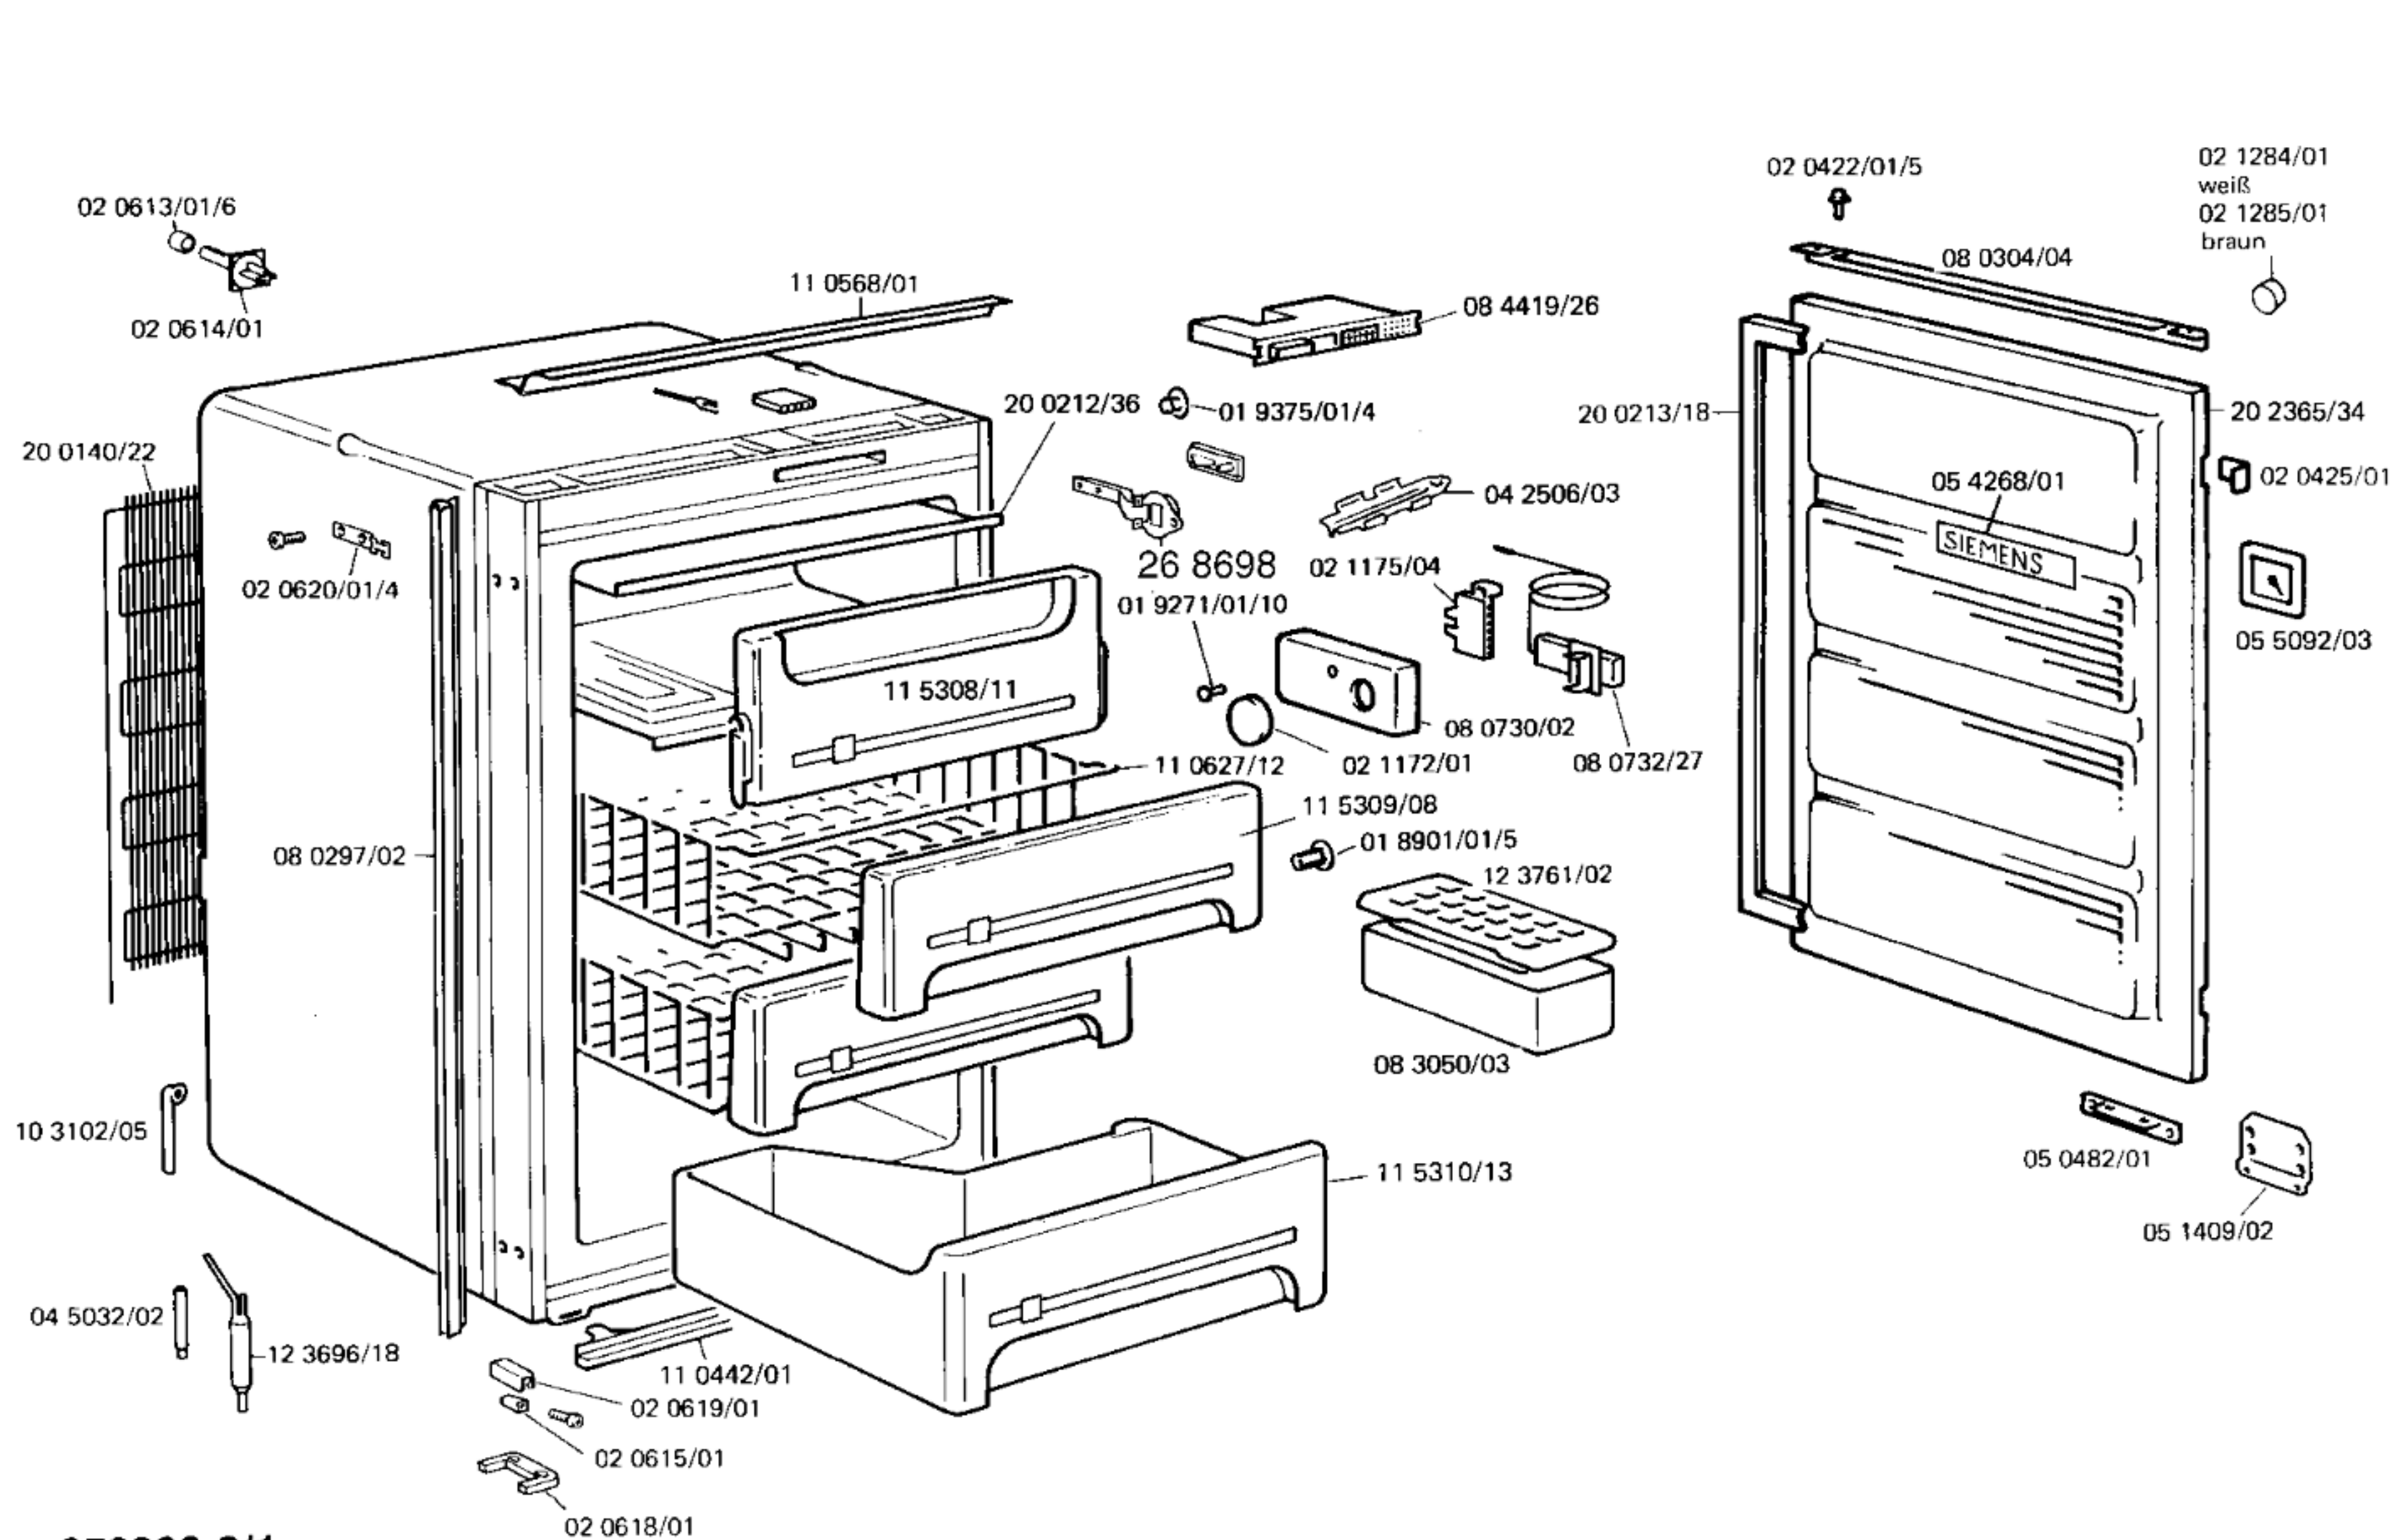

51 0384/00  
D1,CH1,F1,GB1,SF1  
Aufstellanleitung  
(D,GB,F,I,NL,DK,N,S,SF,E)

51 1079/00  
D1,CH1,F1,GB1,SF1  
Gebrauchsanweisung  
(D,GB,F,I,NL,DK,N,S,SF,E)

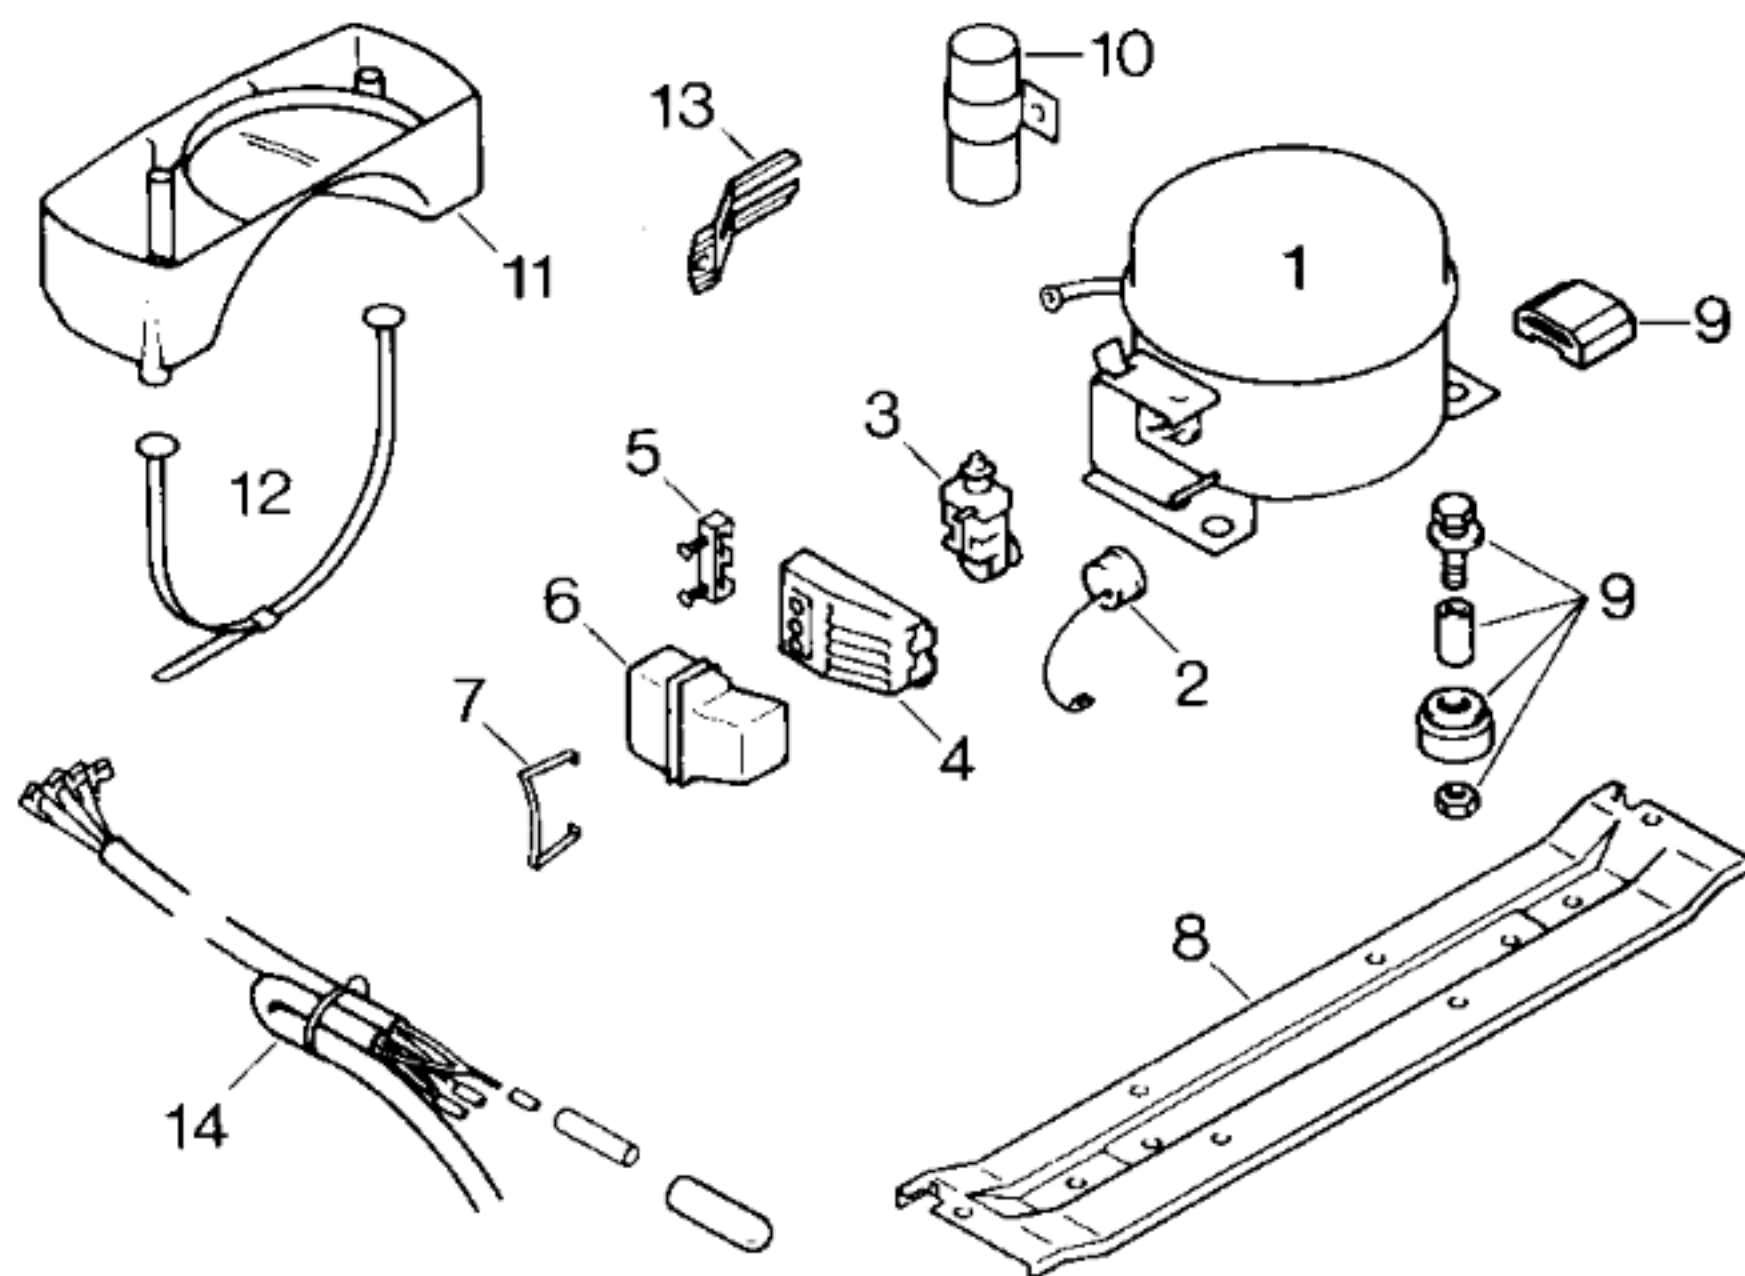

## TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

|                                                 |                          |          |      |  |  |  |
|-------------------------------------------------|--------------------------|----------|------|--|--|--|
| Verdichter/Compressor/Compresseur               |                          | Danfoss  |      |  |  |  |
| Typ/Type                                        |                          | TL 5 A   |      |  |  |  |
| Förderleistung/Delivery/Débit                   | l/h                      | V 920    |      |  |  |  |
| Anlaufstrom/Starting current/Cour. de démarrage | A                        | 9,2      |      |  |  |  |
| Widerstand/Resistance/Résistance                | Ha/main/prin. $\Omega$   | 15,7     |      |  |  |  |
|                                                 | Hi/aux $\Omega$          | 18,8     |      |  |  |  |
| Temp.-Regler/Thermostat                         |                          | M + J    |      |  |  |  |
| Typ/Type                                        |                          | TF 57 SF |      |  |  |  |
| Reglerstellung/Position                         |                          | kalt     | warm |  |  |  |
| Schaltwerte/Switching values/                   | „ein“ $^{\circ}\text{C}$ | - 28     | - 19 |  |  |  |
| Valeurs de commutation                          | „aus“                    | - 34     | - 26 |  |  |  |
| („abtauen“ od.)                                 | „alarm“                  | - 20     | - 15 |  |  |  |
| Füllmenge/Fill.quantity/Charge                  | R12                      | g        | 90   |  |  |  |
| Anschlußwert/Conn.load/Puiss. connectée         |                          | W        | 120  |  |  |  |
| Heizung/Heater/Chauffage                        |                          |          |      |  |  |  |
| Widerstand/Resistance/Résistance                | $\Omega$                 |          |      |  |  |  |
| Leistung/Power/Puissance                        | W                        |          |      |  |  |  |
| Ventilator/Blower/Ventilateur                   |                          |          |      |  |  |  |
| Widerstand/Resistance/Résistance                | $\Omega$                 |          |      |  |  |  |
| Magnetventil/Magnetic valve/Electrovanne        |                          |          |      |  |  |  |
| Widerstand/Resistance/Résistance                | $\Omega$                 |          |      |  |  |  |
| Spannung/Voltage/Tension                        | V                        |          |      |  |  |  |

| Pos. |            |  |  |  |
|------|------------|--|--|--|
|      | Danfoss    |  |  |  |
| 1    | 14 0065/45 |  |  |  |
| 2    |            |  |  |  |
| 3    | 02 0108/27 |  |  |  |
| 4    |            |  |  |  |
| 5    |            |  |  |  |
| 6    | 05 1413/05 |  |  |  |
| 7    |            |  |  |  |
| 8    | 11 0437/04 |  |  |  |
| 9    | 05 0166/05 |  |  |  |
| 10   |            |  |  |  |
| 11   |            |  |  |  |
| 12   |            |  |  |  |
| 13   |            |  |  |  |
| 14   |            |  |  |  |