 


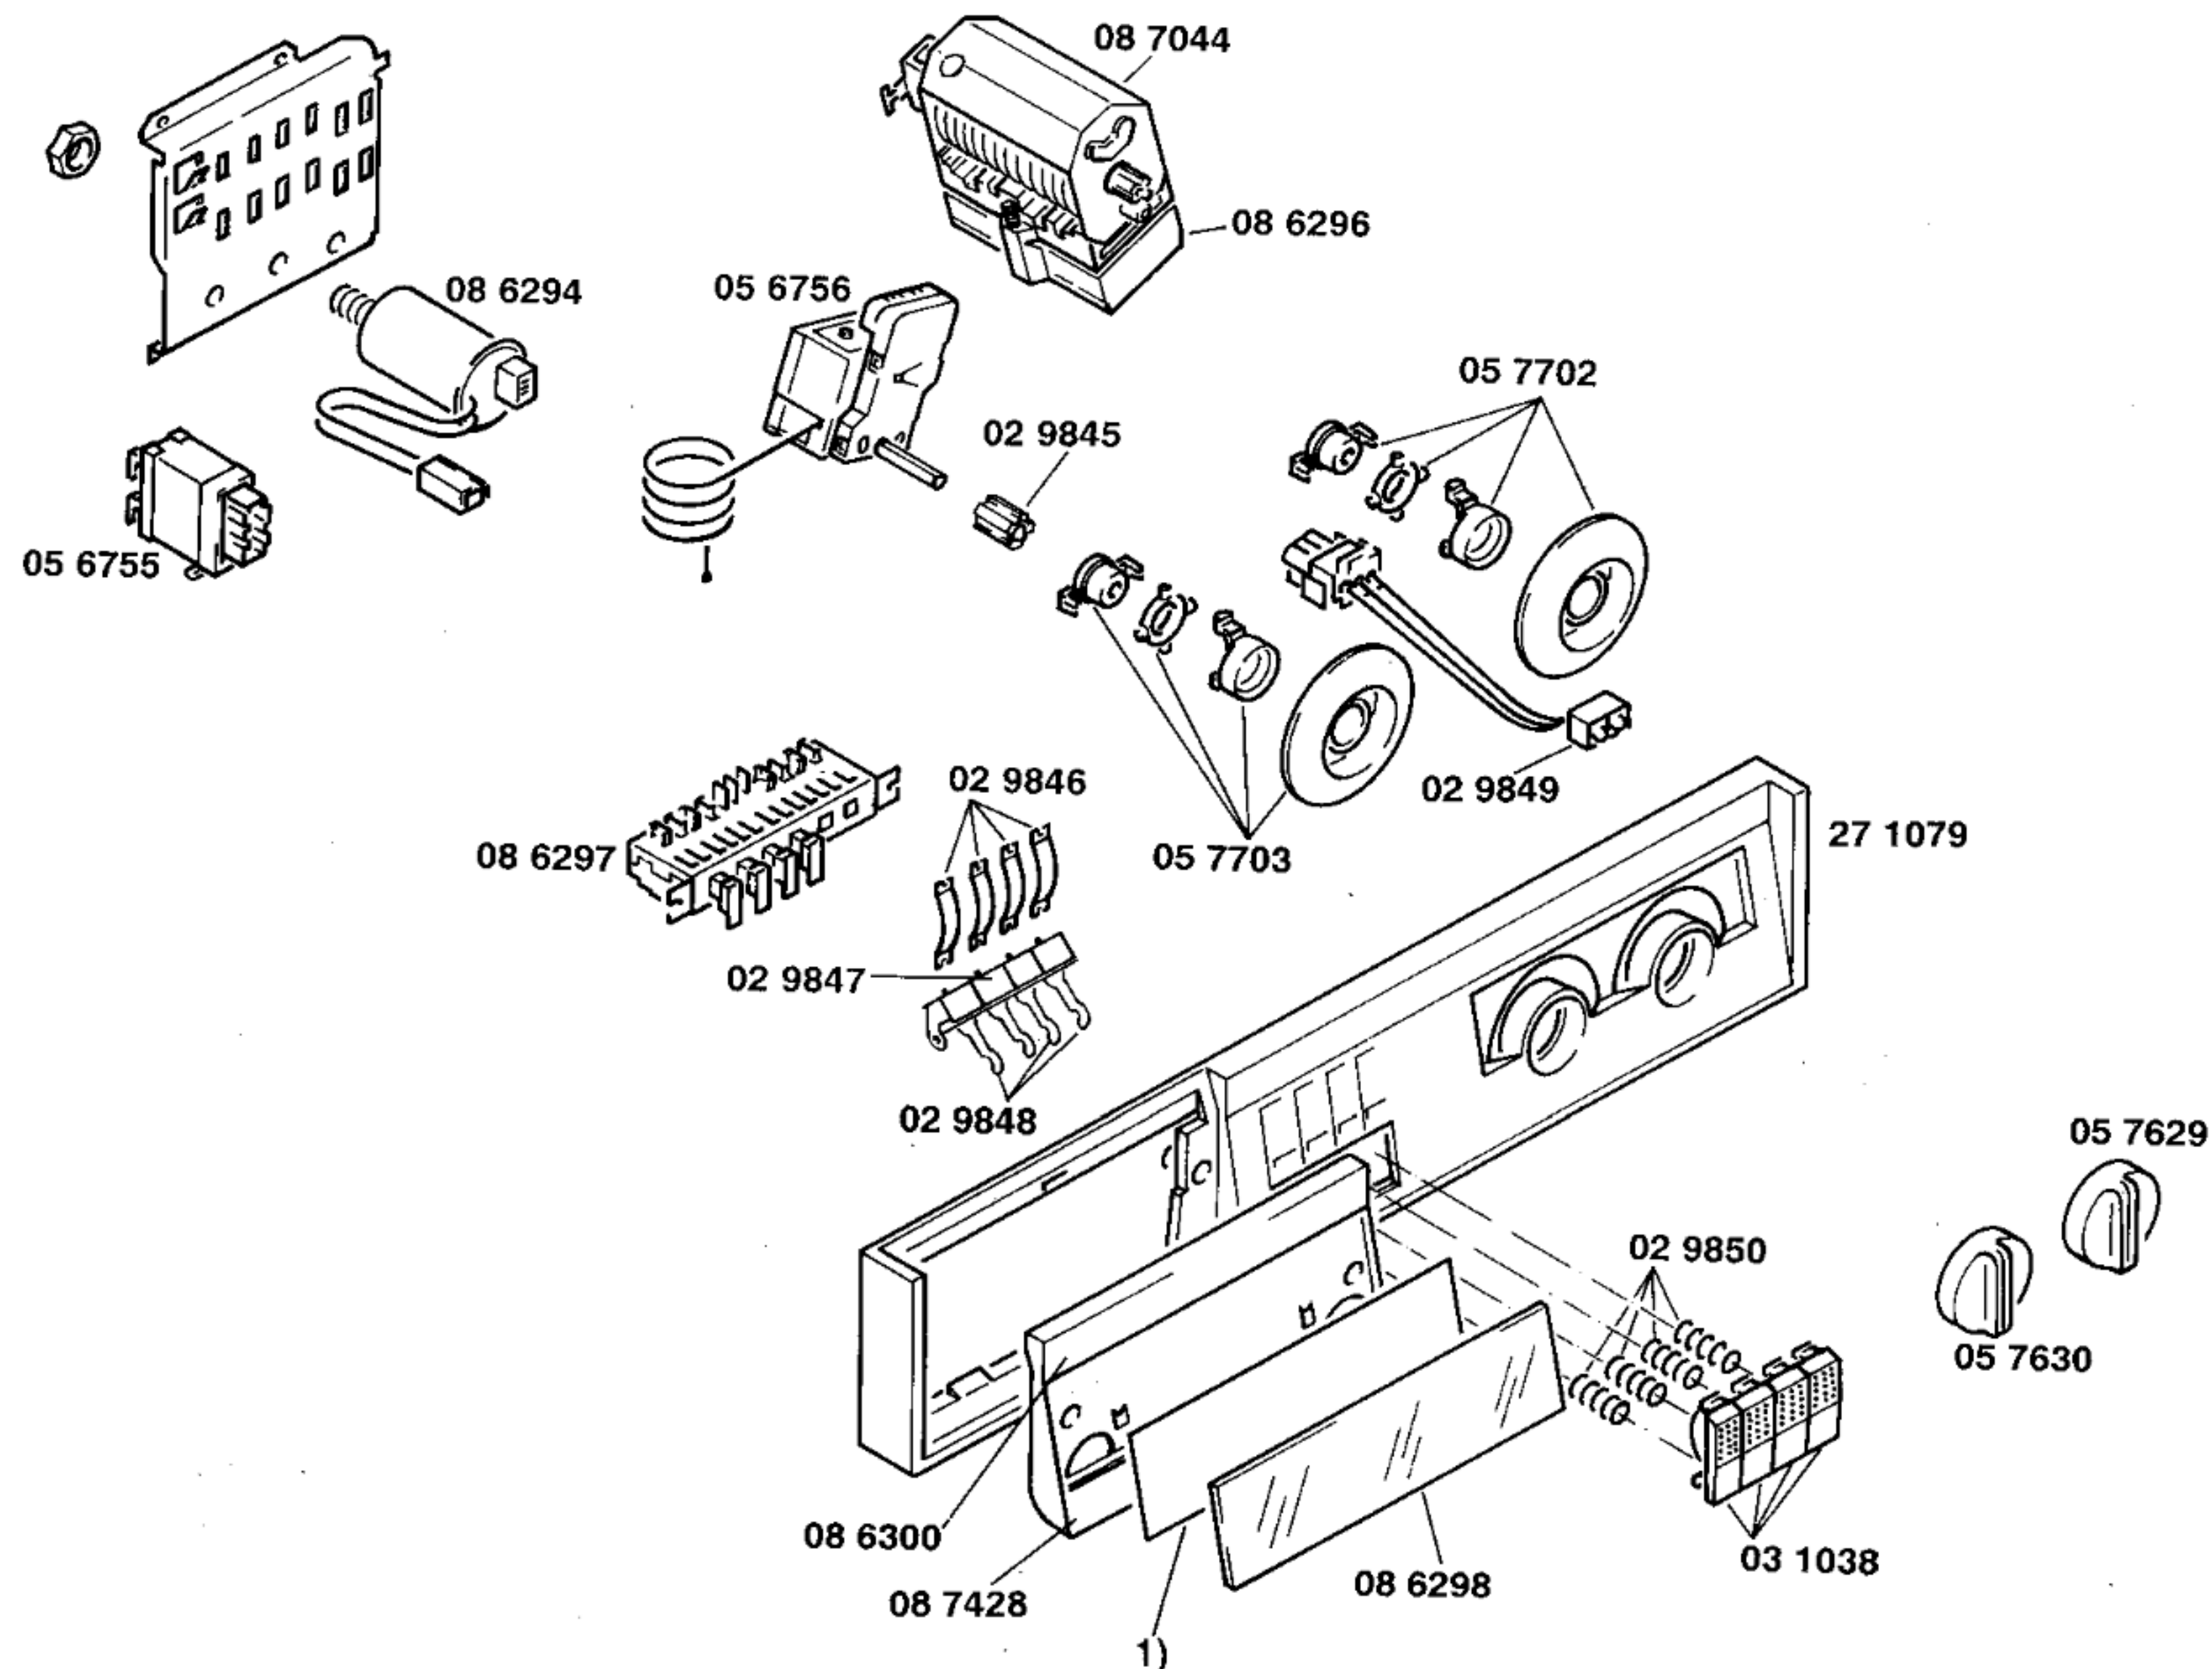

- 1) 08 7430
(D,I)
08 7429
(F,NL)
08 7431
(DK,S)
08 7433
(E,GB)
08 6685
(TR,YU,GB,E)
08 7432
(N,SF)

Gebrauchsanweisungen:

 
- 51 3549
(D,I,S,N,SF)
51 3550
(S,DK)
51 3551
(NL,F,E,GB)

 
Programmtabellen:

- 51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)

Aufstellanweisungen:

- 51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

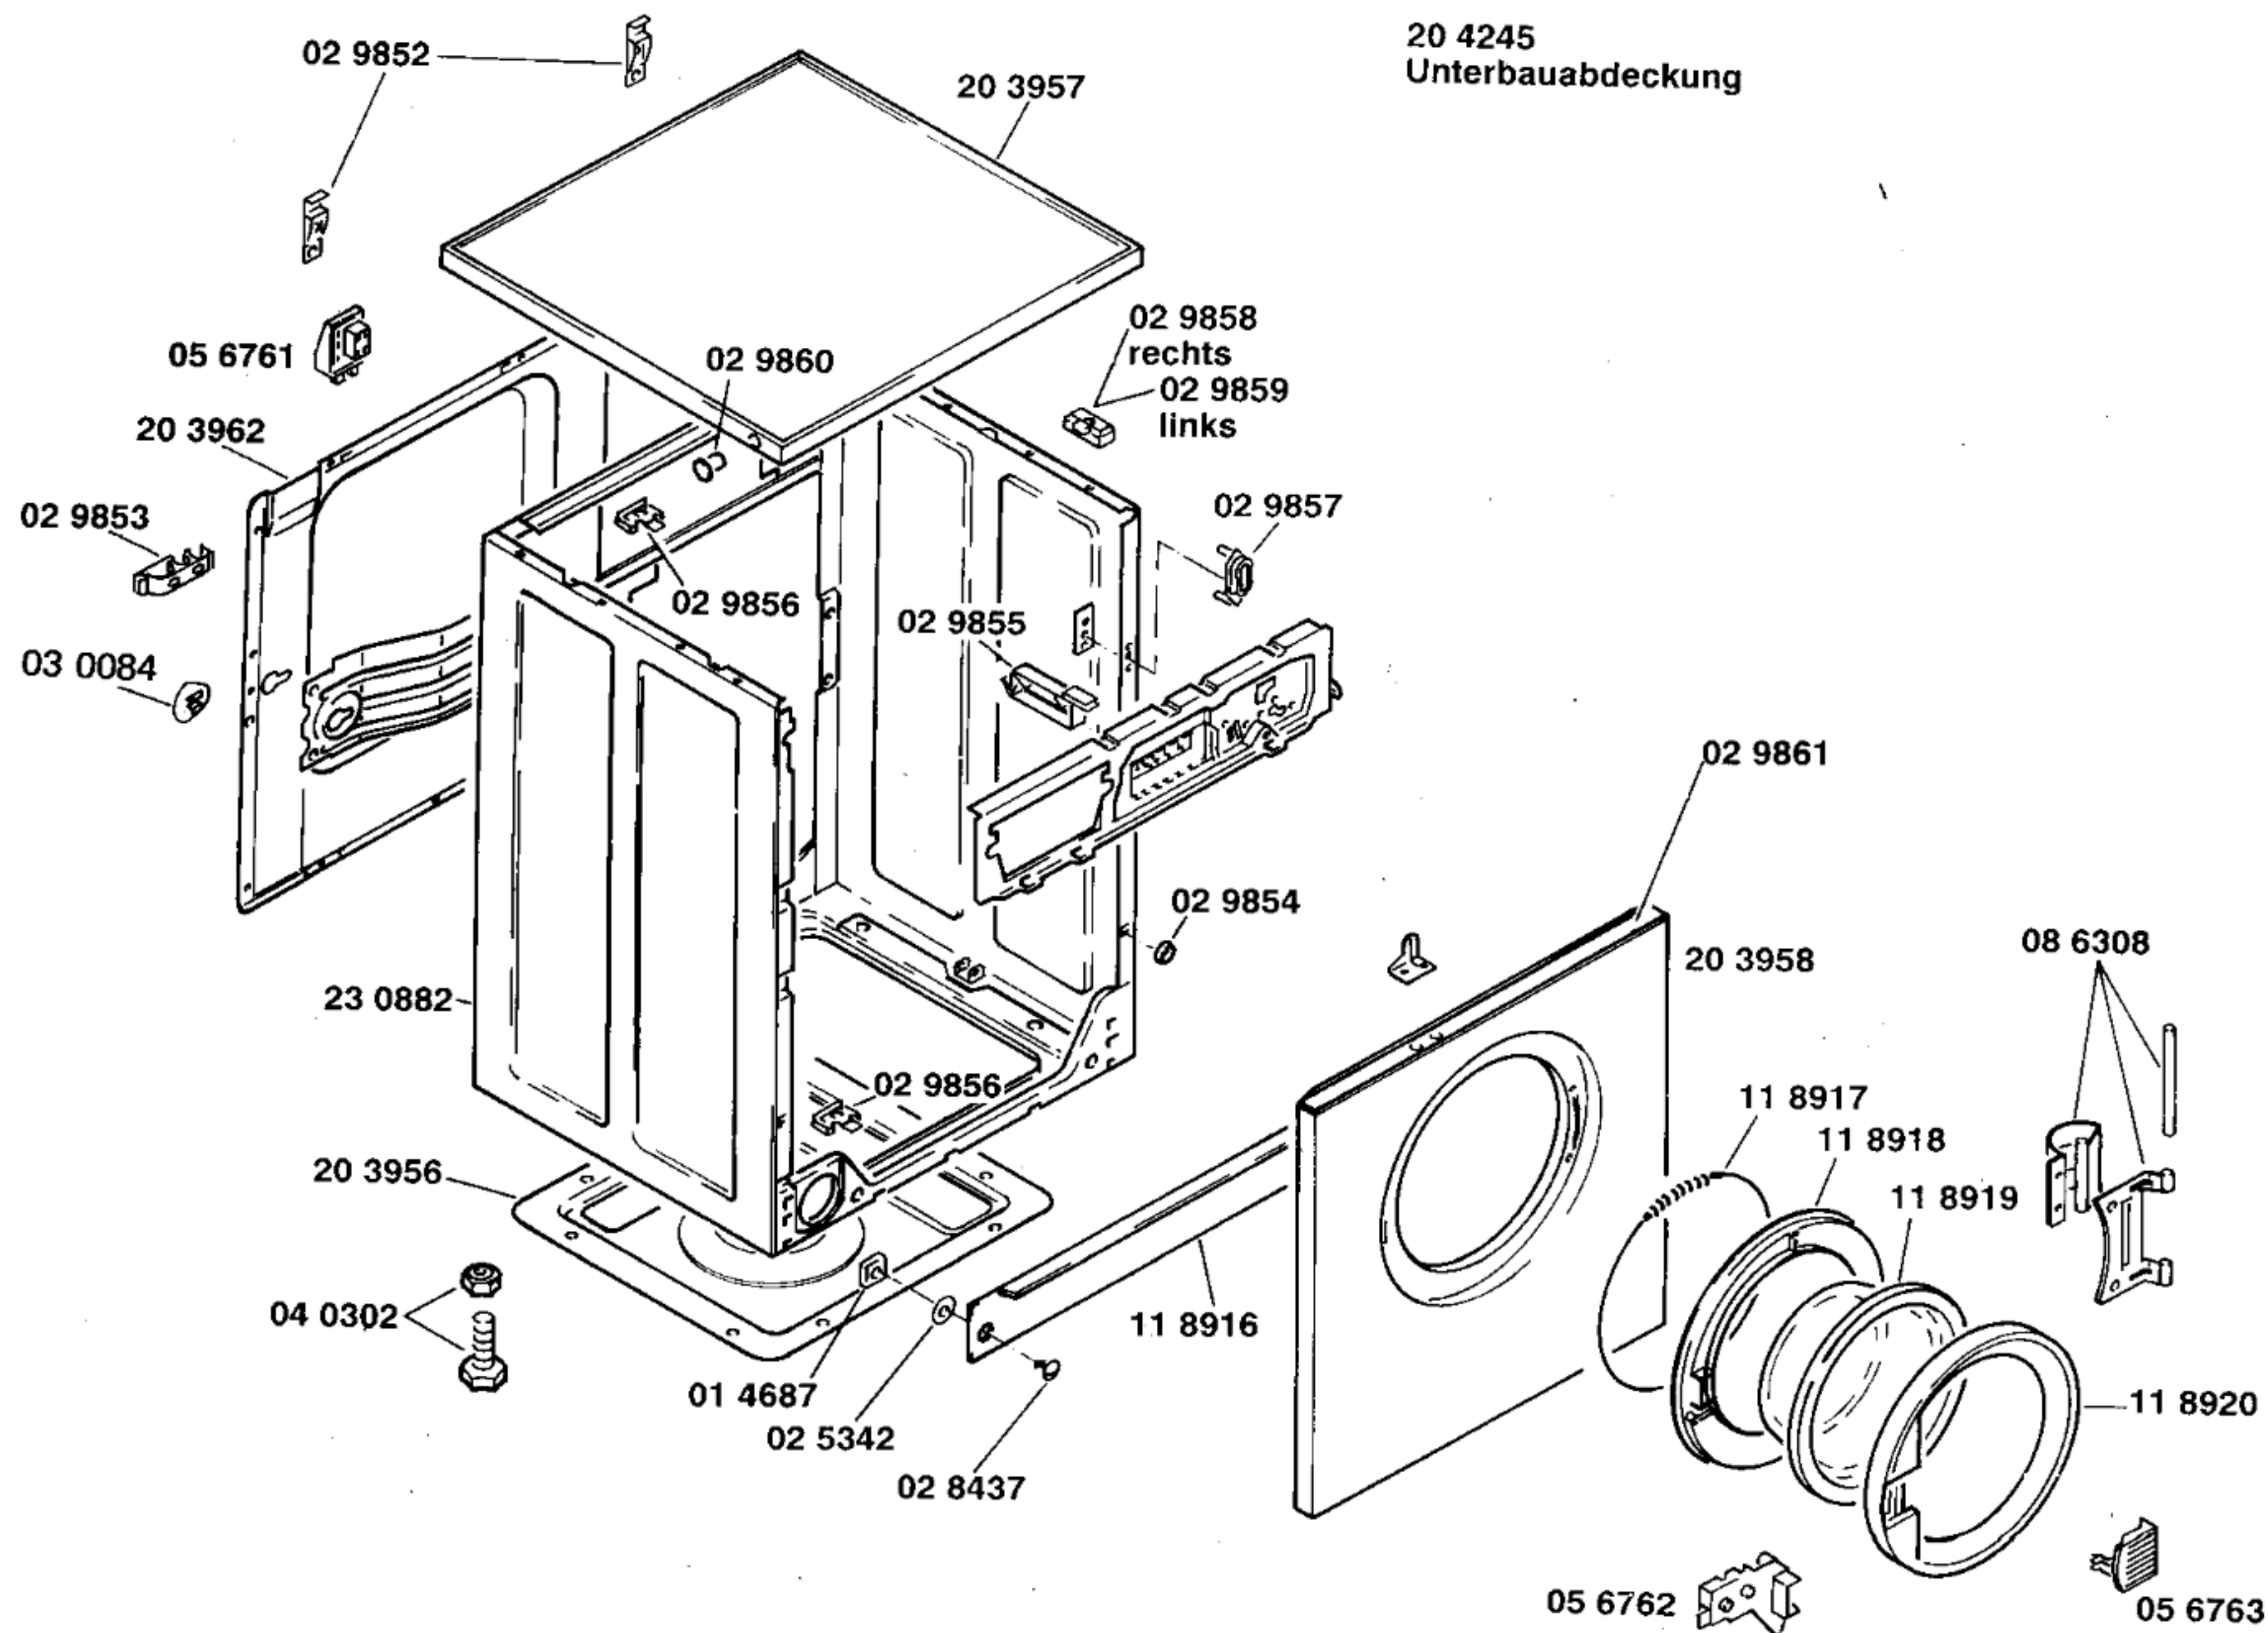

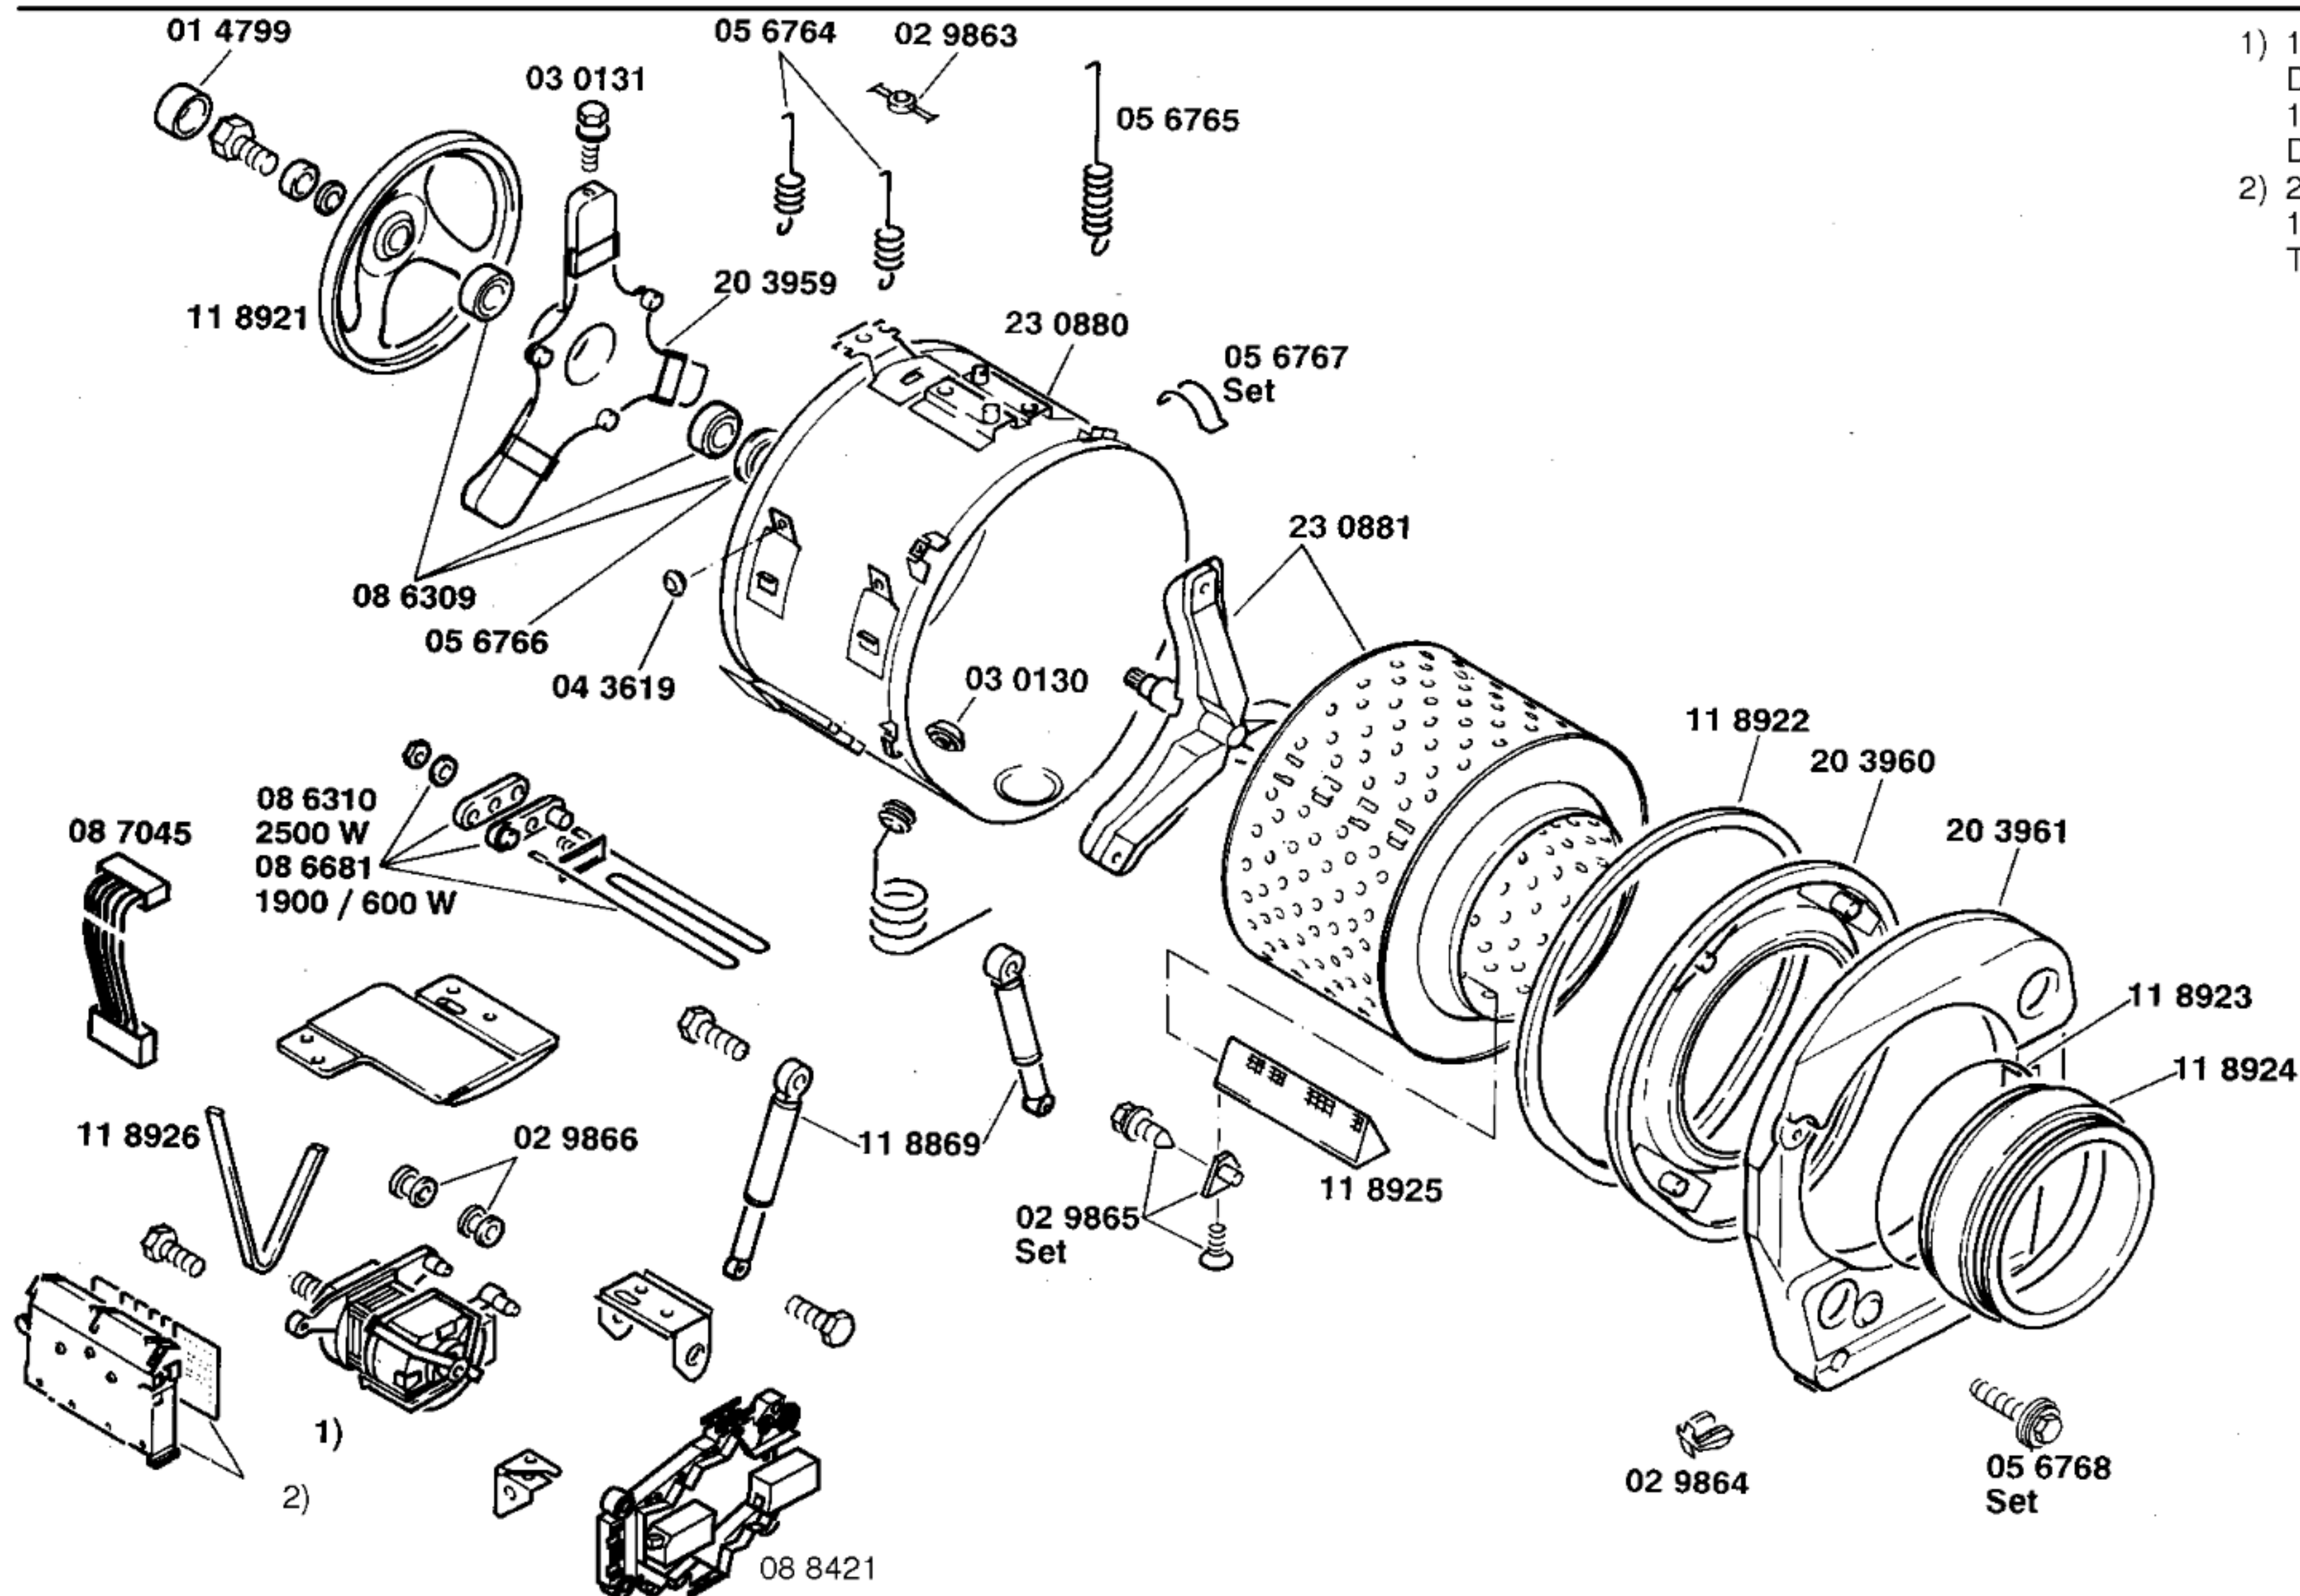

- 1) 14 0469
D1, FG1, SI1
14 0522
D2, FG2, SI2
- 2) 27 0443
15 5272
Triac-Motorleistung

