



Joker770-H6870G0/02-D1,goldbraun
 Joker770-H6870G0GB/02-GB1,goldbraun
 Joker775-H6870W0/02-D2,weiss
 Joker770-H6870W0/03-D3,weiss

Joker775-H6870G0/03-D4,goldbraun
 Joker775-H6870W0FF/02-F1,weiss
 Joker775-H6870W0/02-GB2,weiss
 Joker775-H6870W0/03-GB3,weiss


HERDE
 Mikrowellenherde

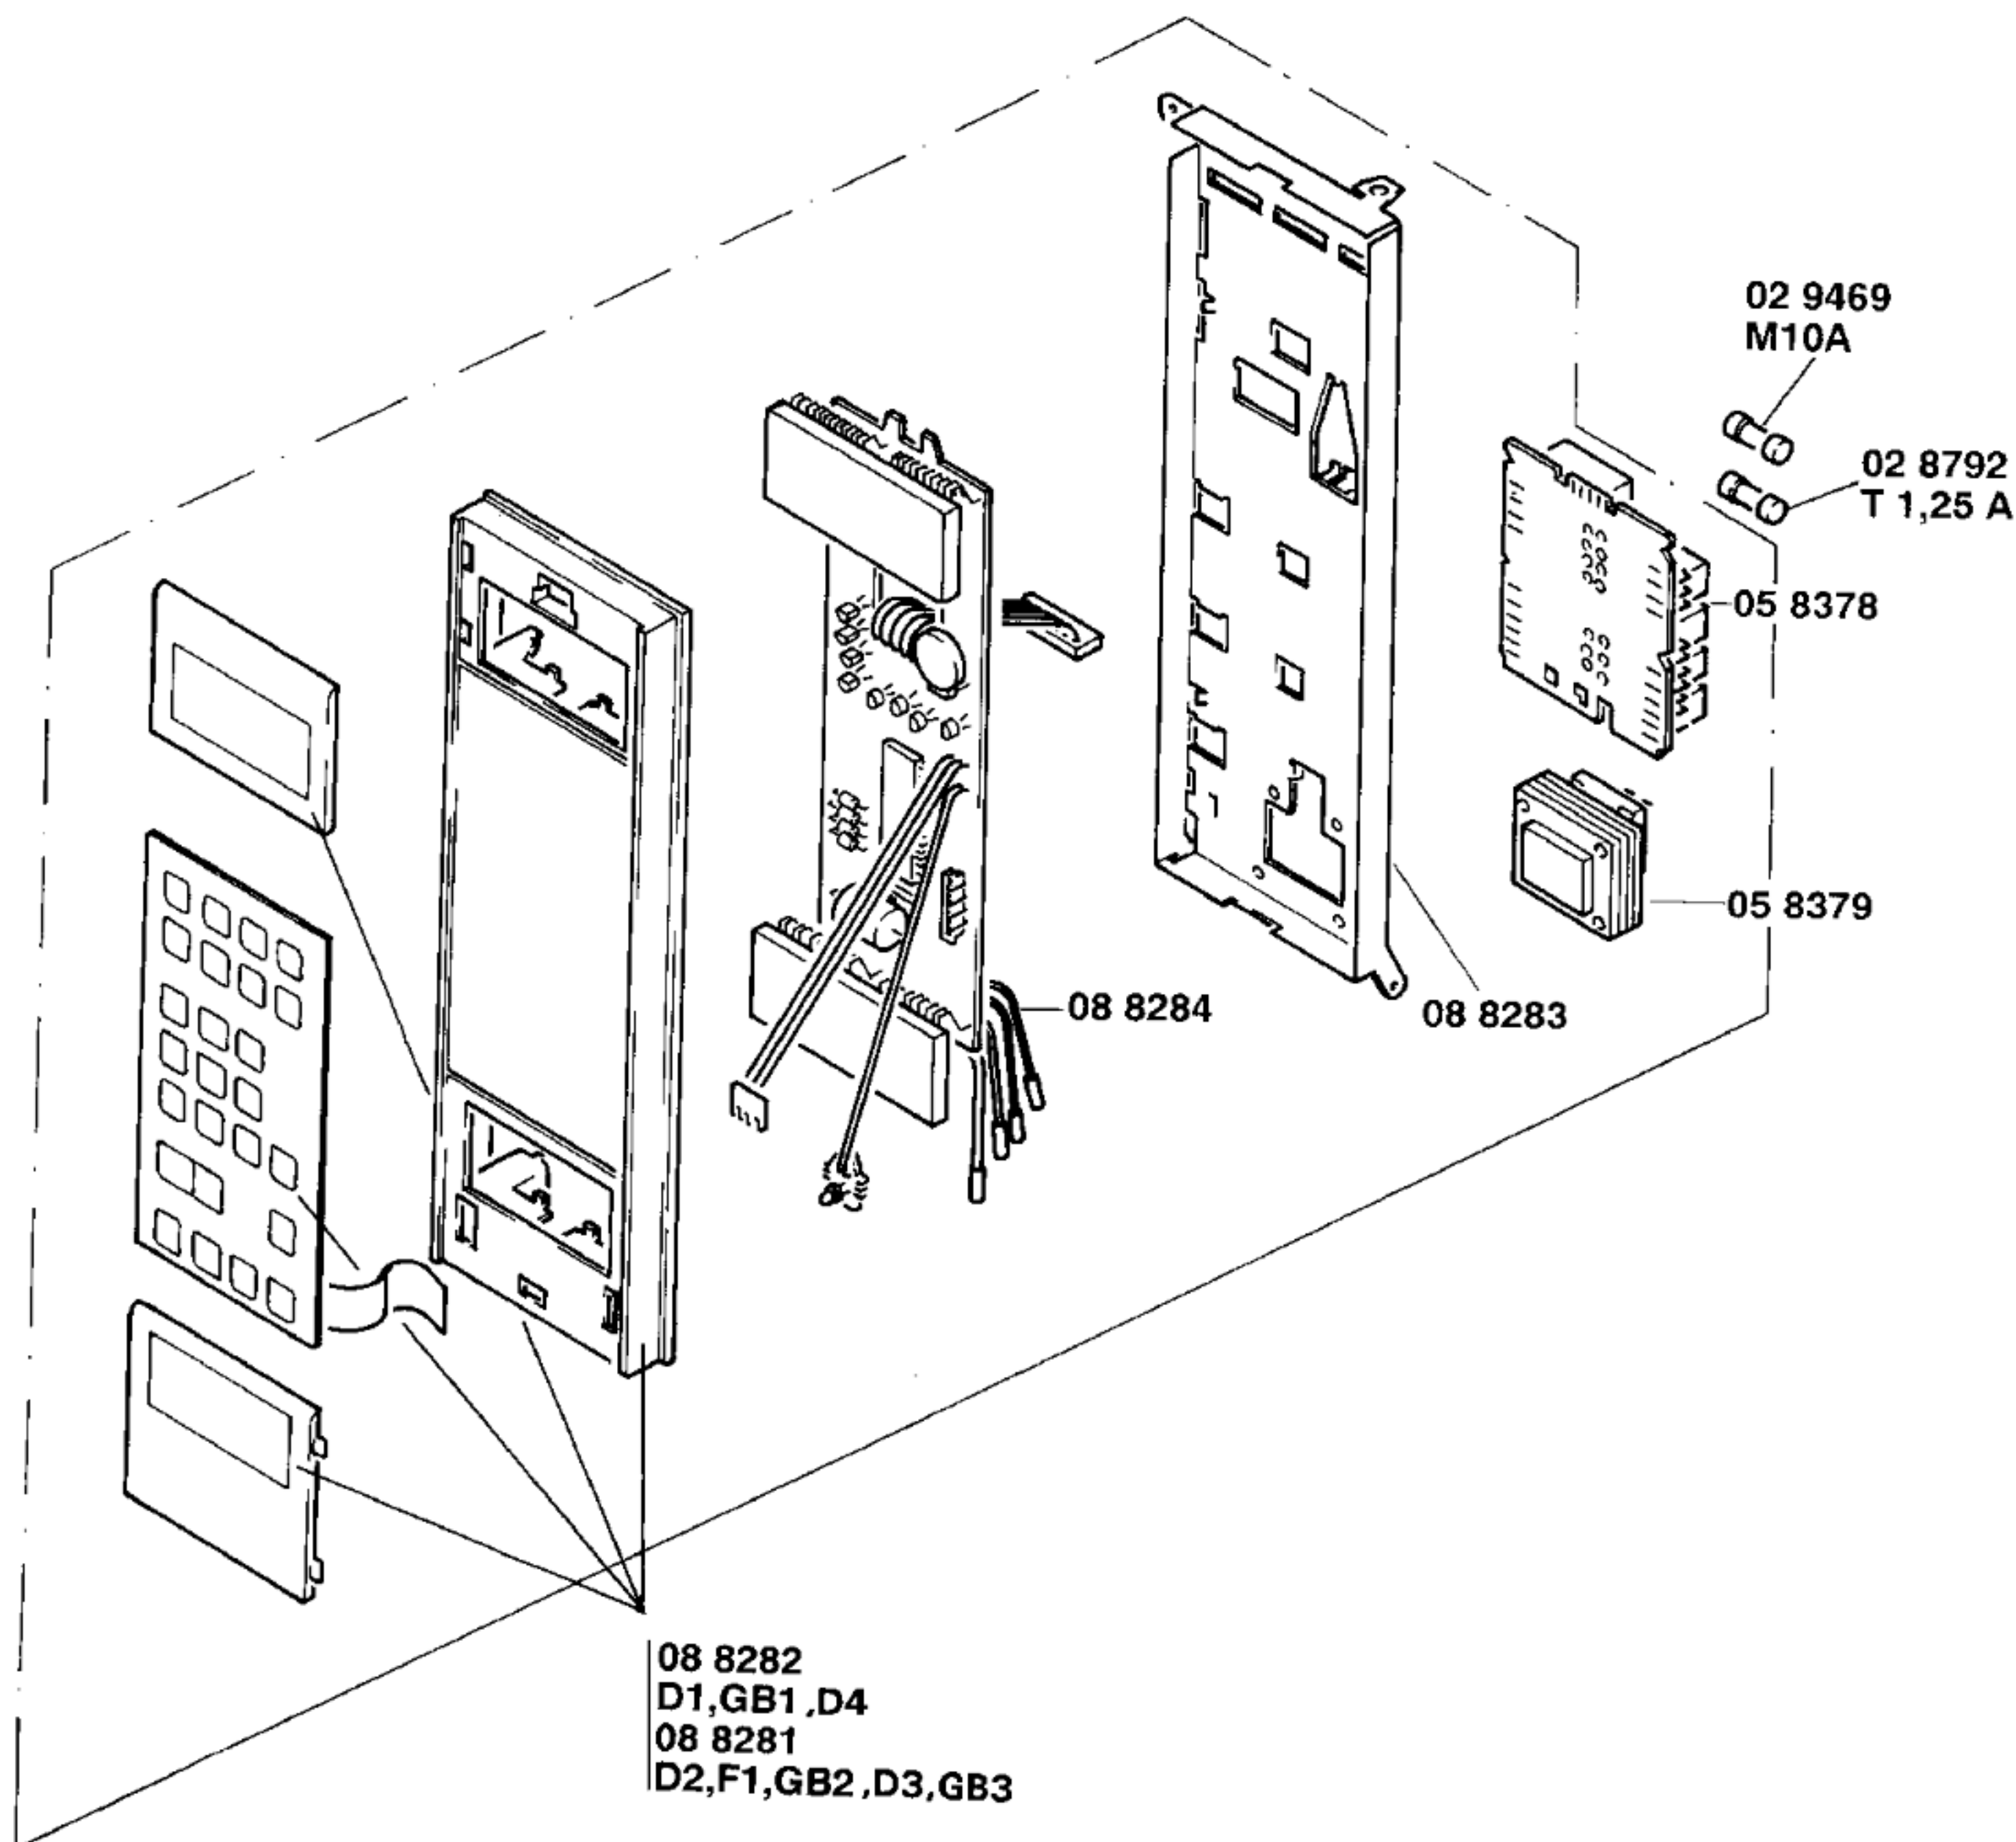

51 4365
 Gebrauchsanweisung
 (D,F,GB,I,NL)
 51 4367
 Kurzanleitung
 (D)
 Kochbuch
 51 4366
 (D)
 51 4480
 (F)
 51 4491
 (GB)
 Zubehör
 Einbaurahmen
 kompl.
 Z 6180 B1
 Z 6180 W1
 Alu-Backblech
 Z 6380 X0
 Glaspfanne
 Z 6290 X0

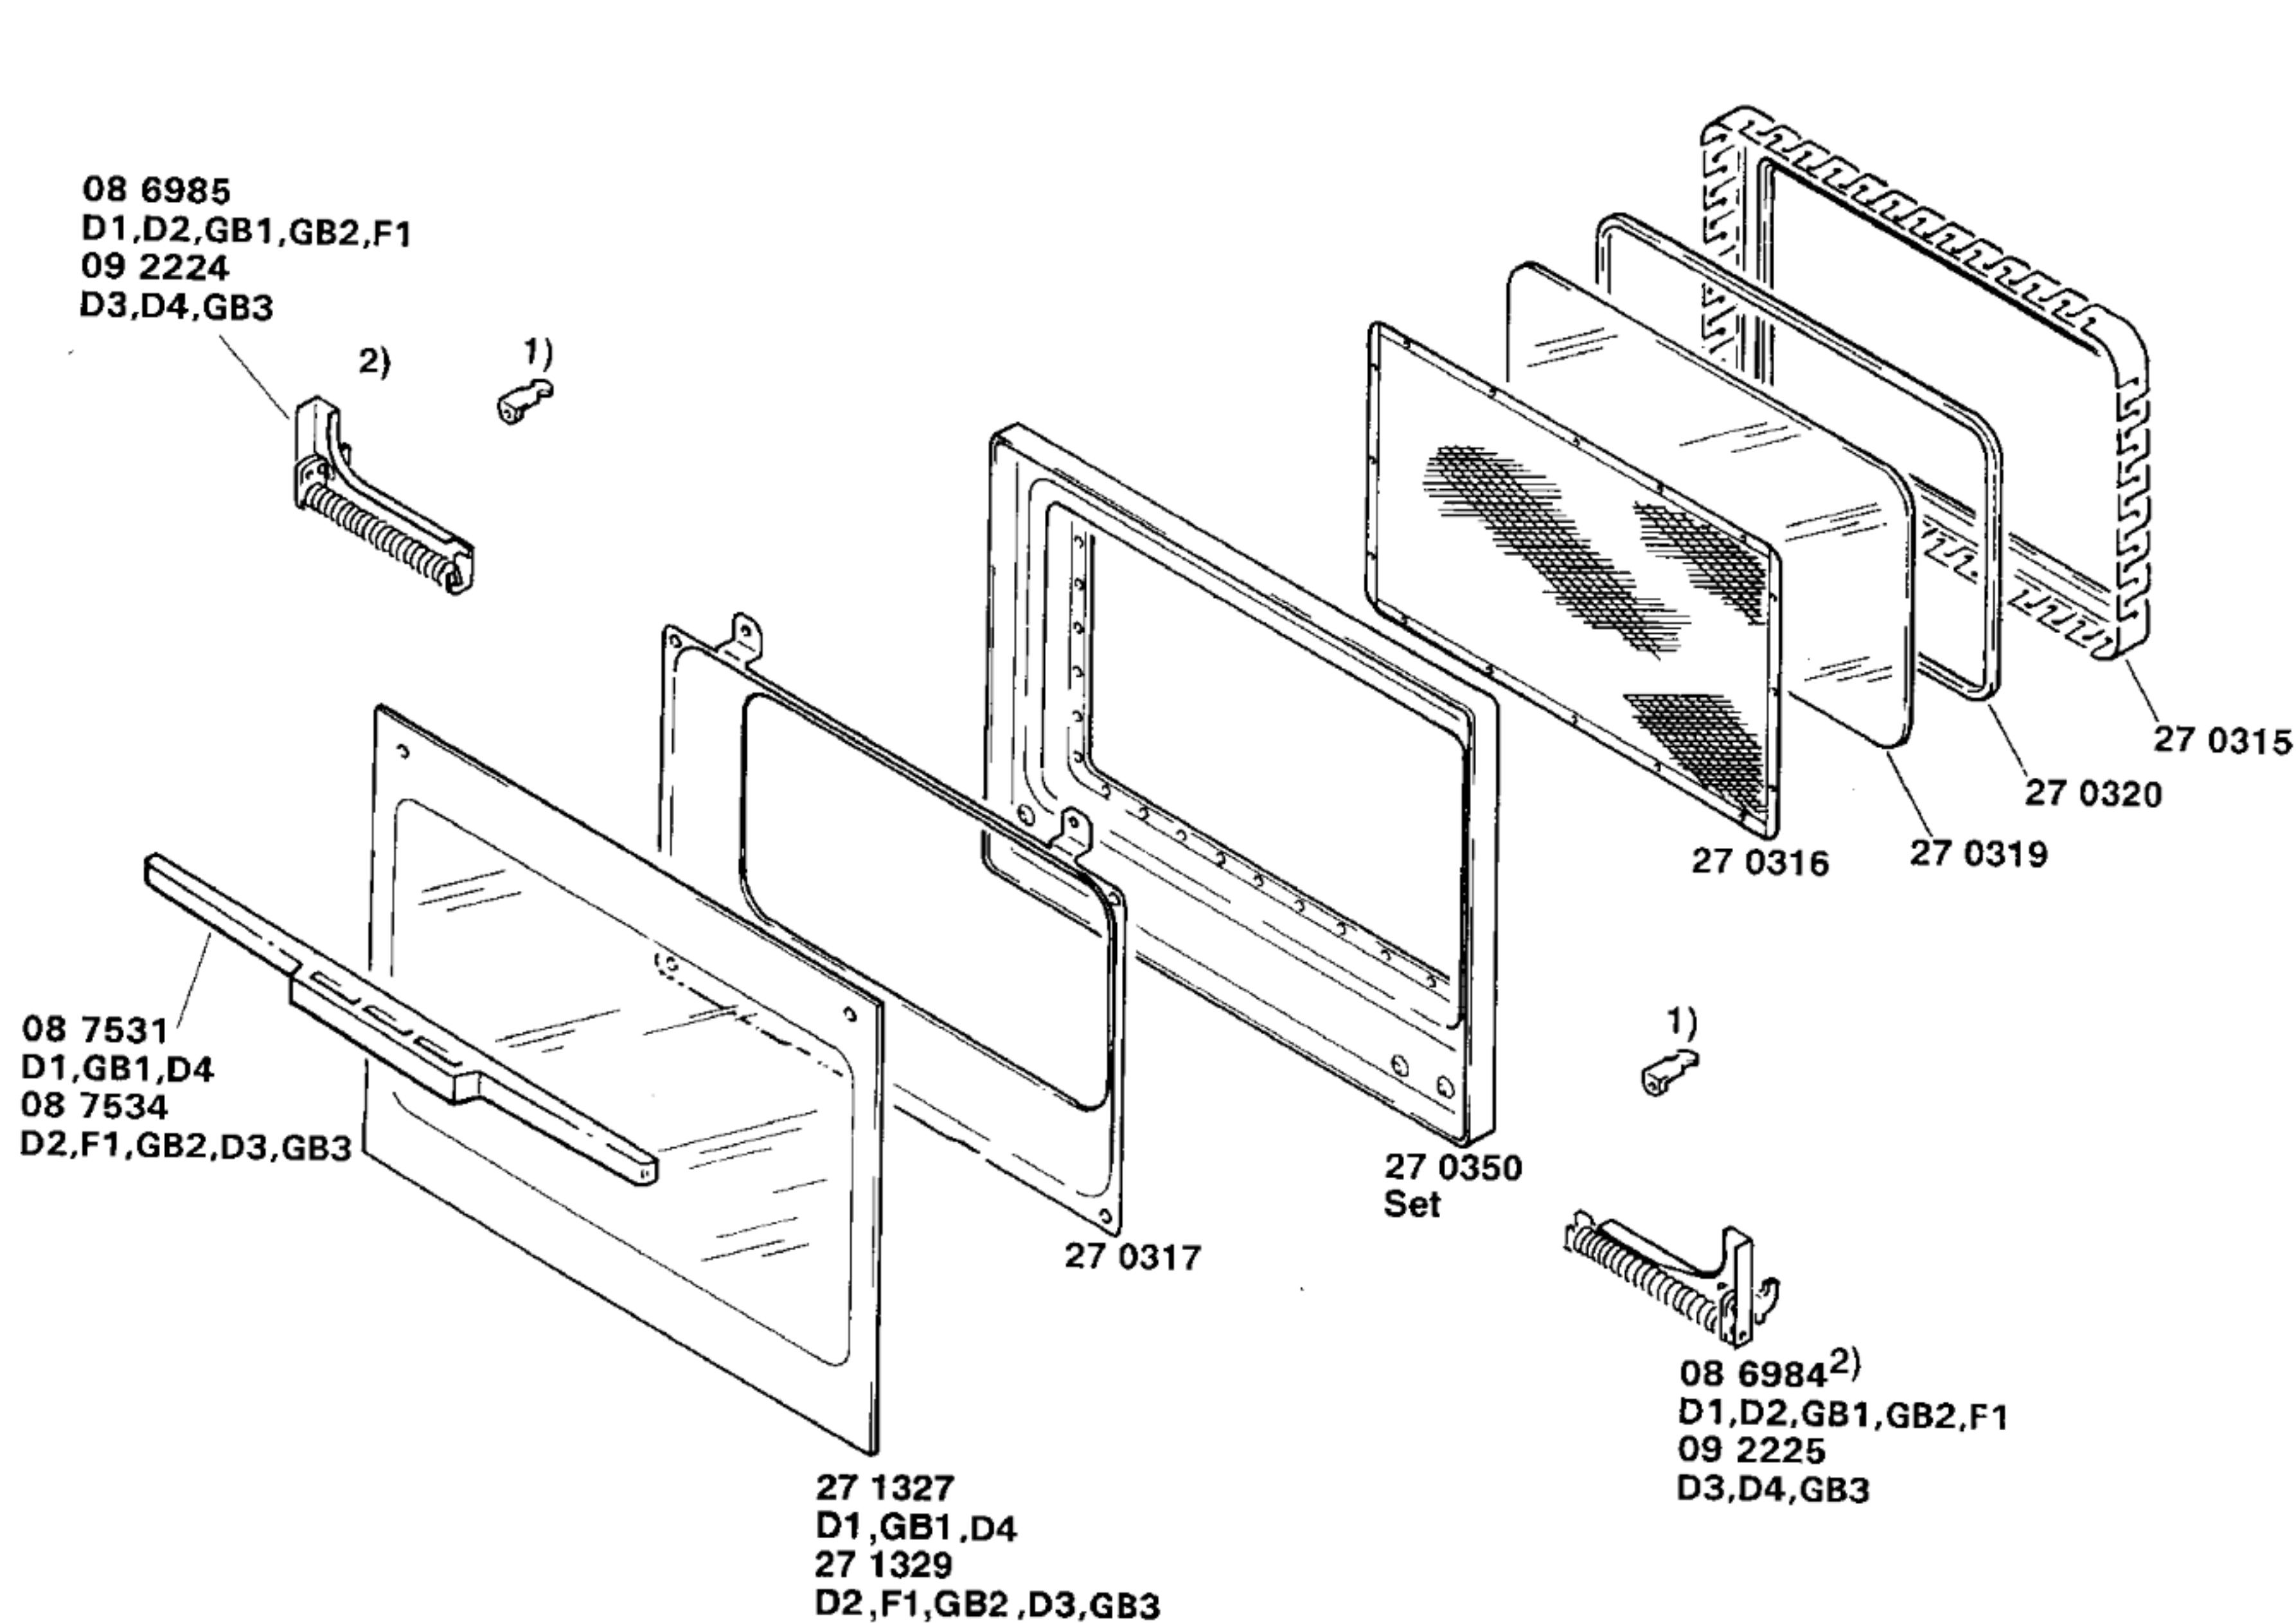

- 1) 03 0671
 2) 03 0813
 Arretierstift

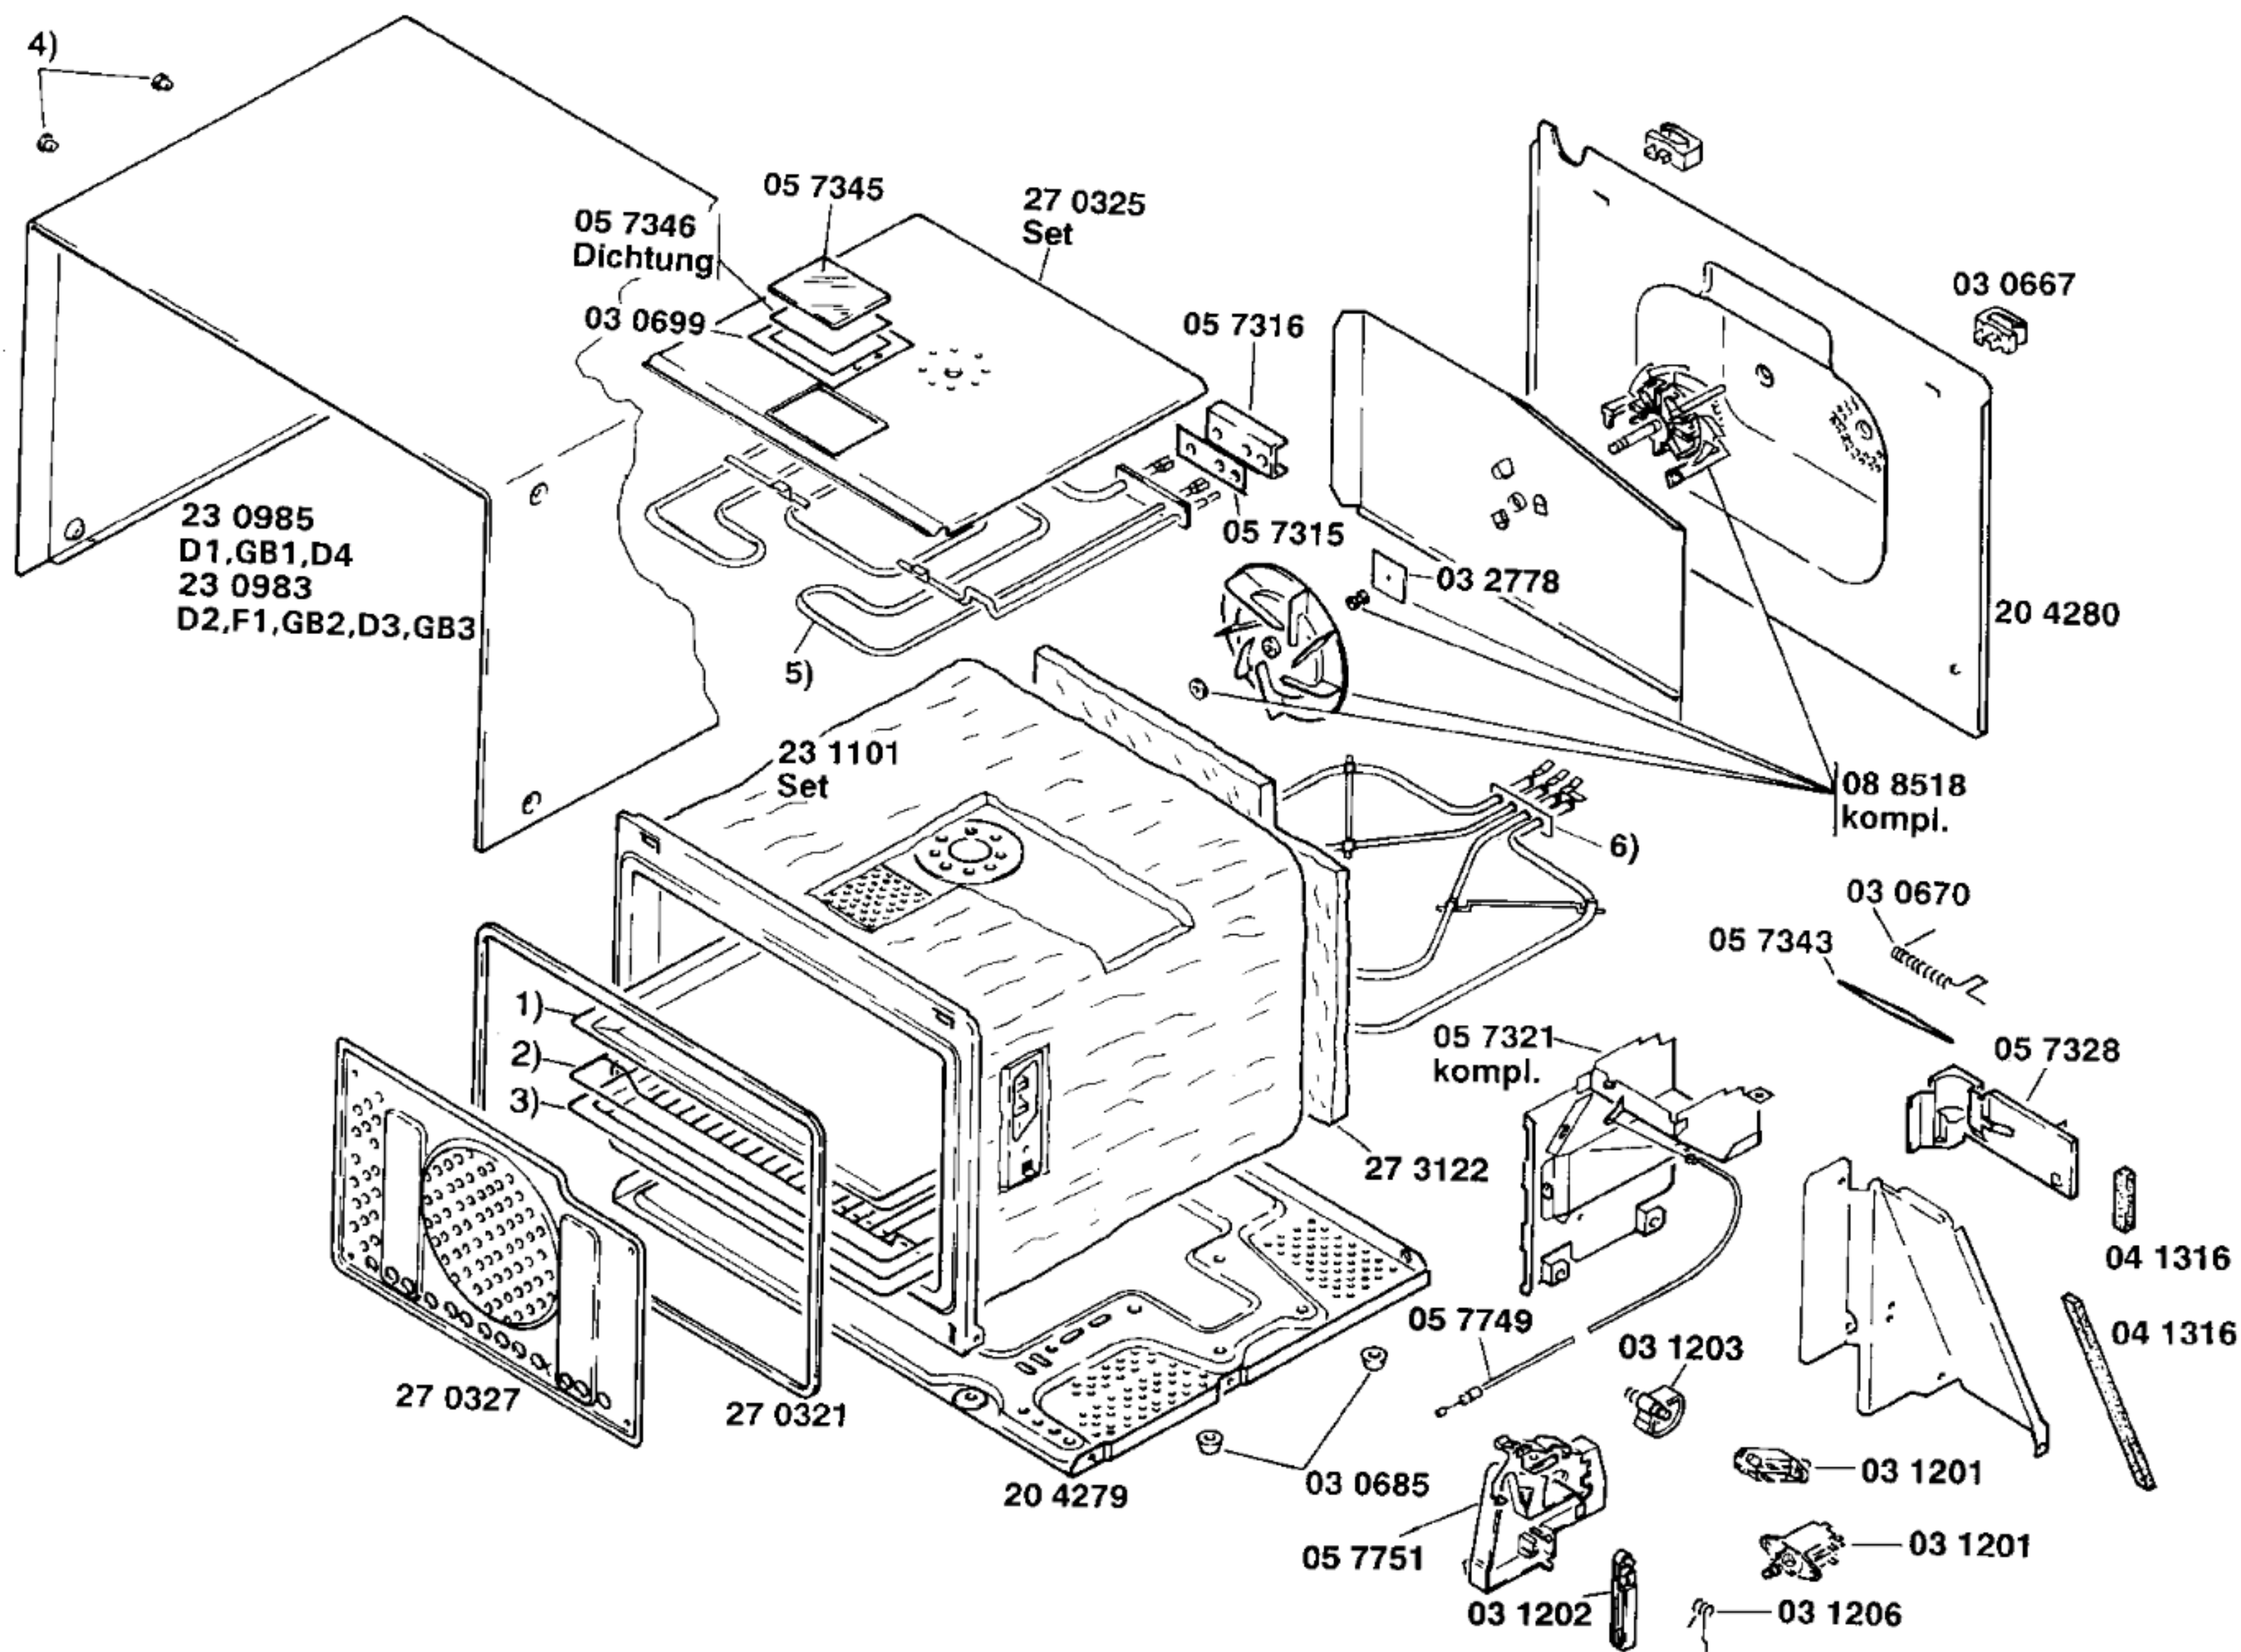

- 1) 11 4538 Backblech
- 2) 11 4539
- 3) 11 4537 Glasschale
- 4) 03 0694 D1,GB1,D4
03 0688 D2,F1,GB2,D3,GB3
- 5) 28 3236 D1,D2,F1,D3,D4
27 2229 GB1,GB2,GB3
- 6) 27 0323 D1,D2,F1,D3,D4

02 8732
 Anschlag-Backblech

