



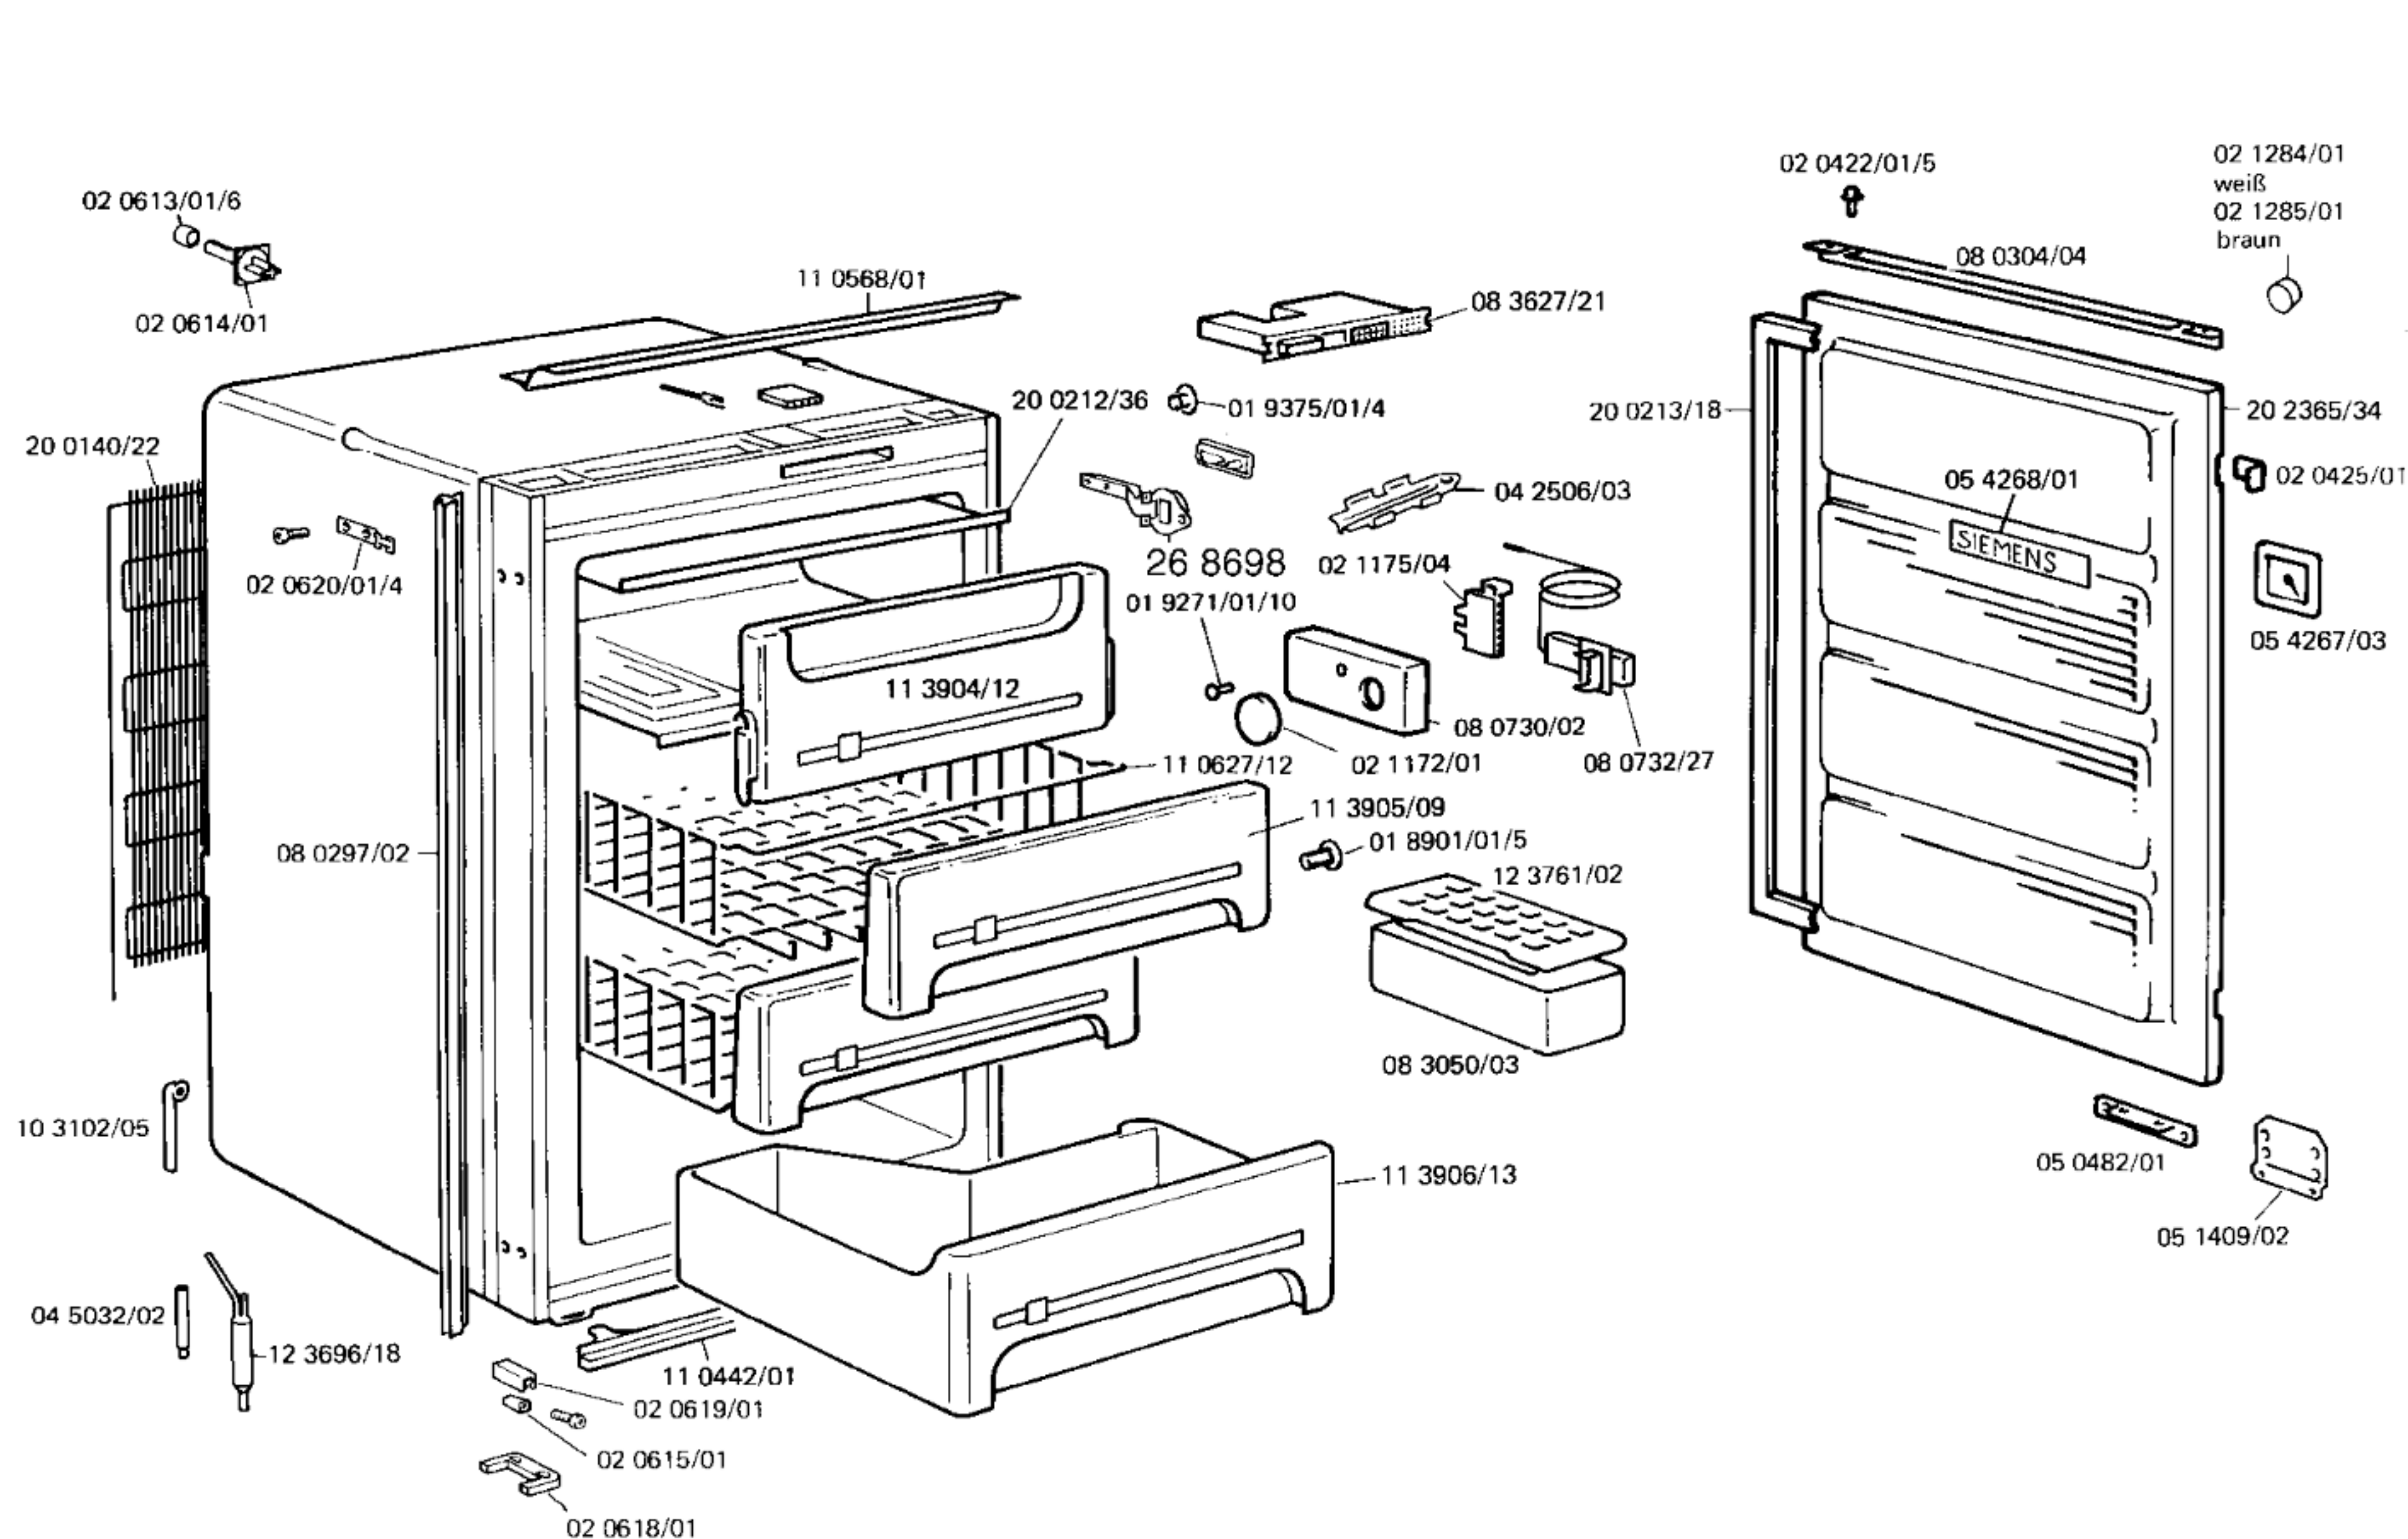

51 0384/00
D1,CH1,F1,GB1,SF1
Aufstellenanleitung
(D,GB,F,I,NL,DK,N,S,SF,E)

51 1079/00
D1,CH1,F1,GB1,SF1
Gebrauchsanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)

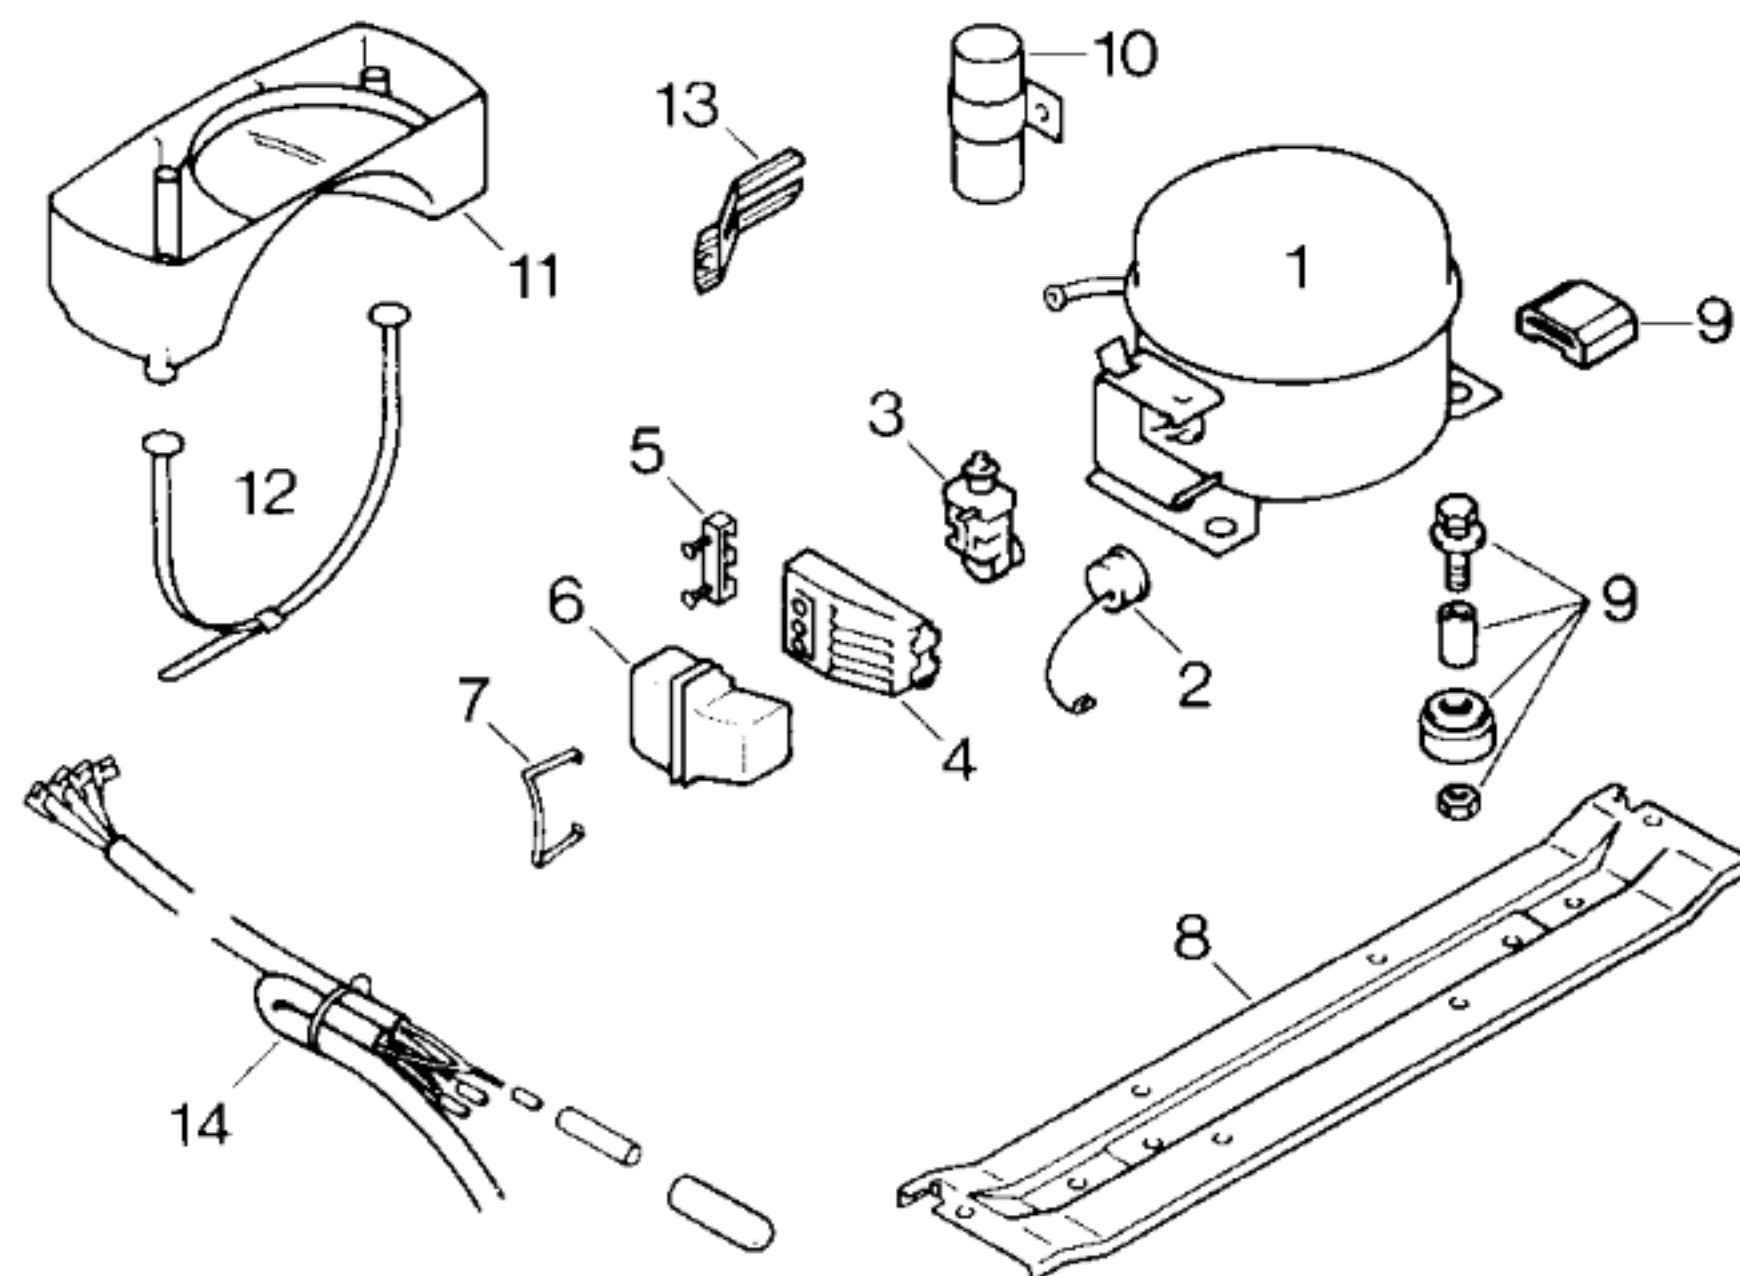

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 5 A		
Förderleistung/Delivery/Débit		V 920		
Anlaufstrom/Starting current/Cour. de démarrage		9,2		
Widerstand/Resistance/Résistance		15,7		
		18,8		
Temp.-Regler/Thermostat		M + J		
Typ/Type		TF 57 SF		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		-28 -19		
Valeurs de commutation		-34 -26		
(„abtauen“ od.)		-20 -15		
Füllmenge/Fill.quantity/Charge		R12	g	90
Anschlußwert/Conn.load/Puiss. connectée			W	120
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance			Ω	
Leistung/Power/Puissance			W	
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance			Ω	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance			Ω	
Spannung/Voltage/Tension			V	

Pos.				
	Danfoss			
1	14 0065/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				