


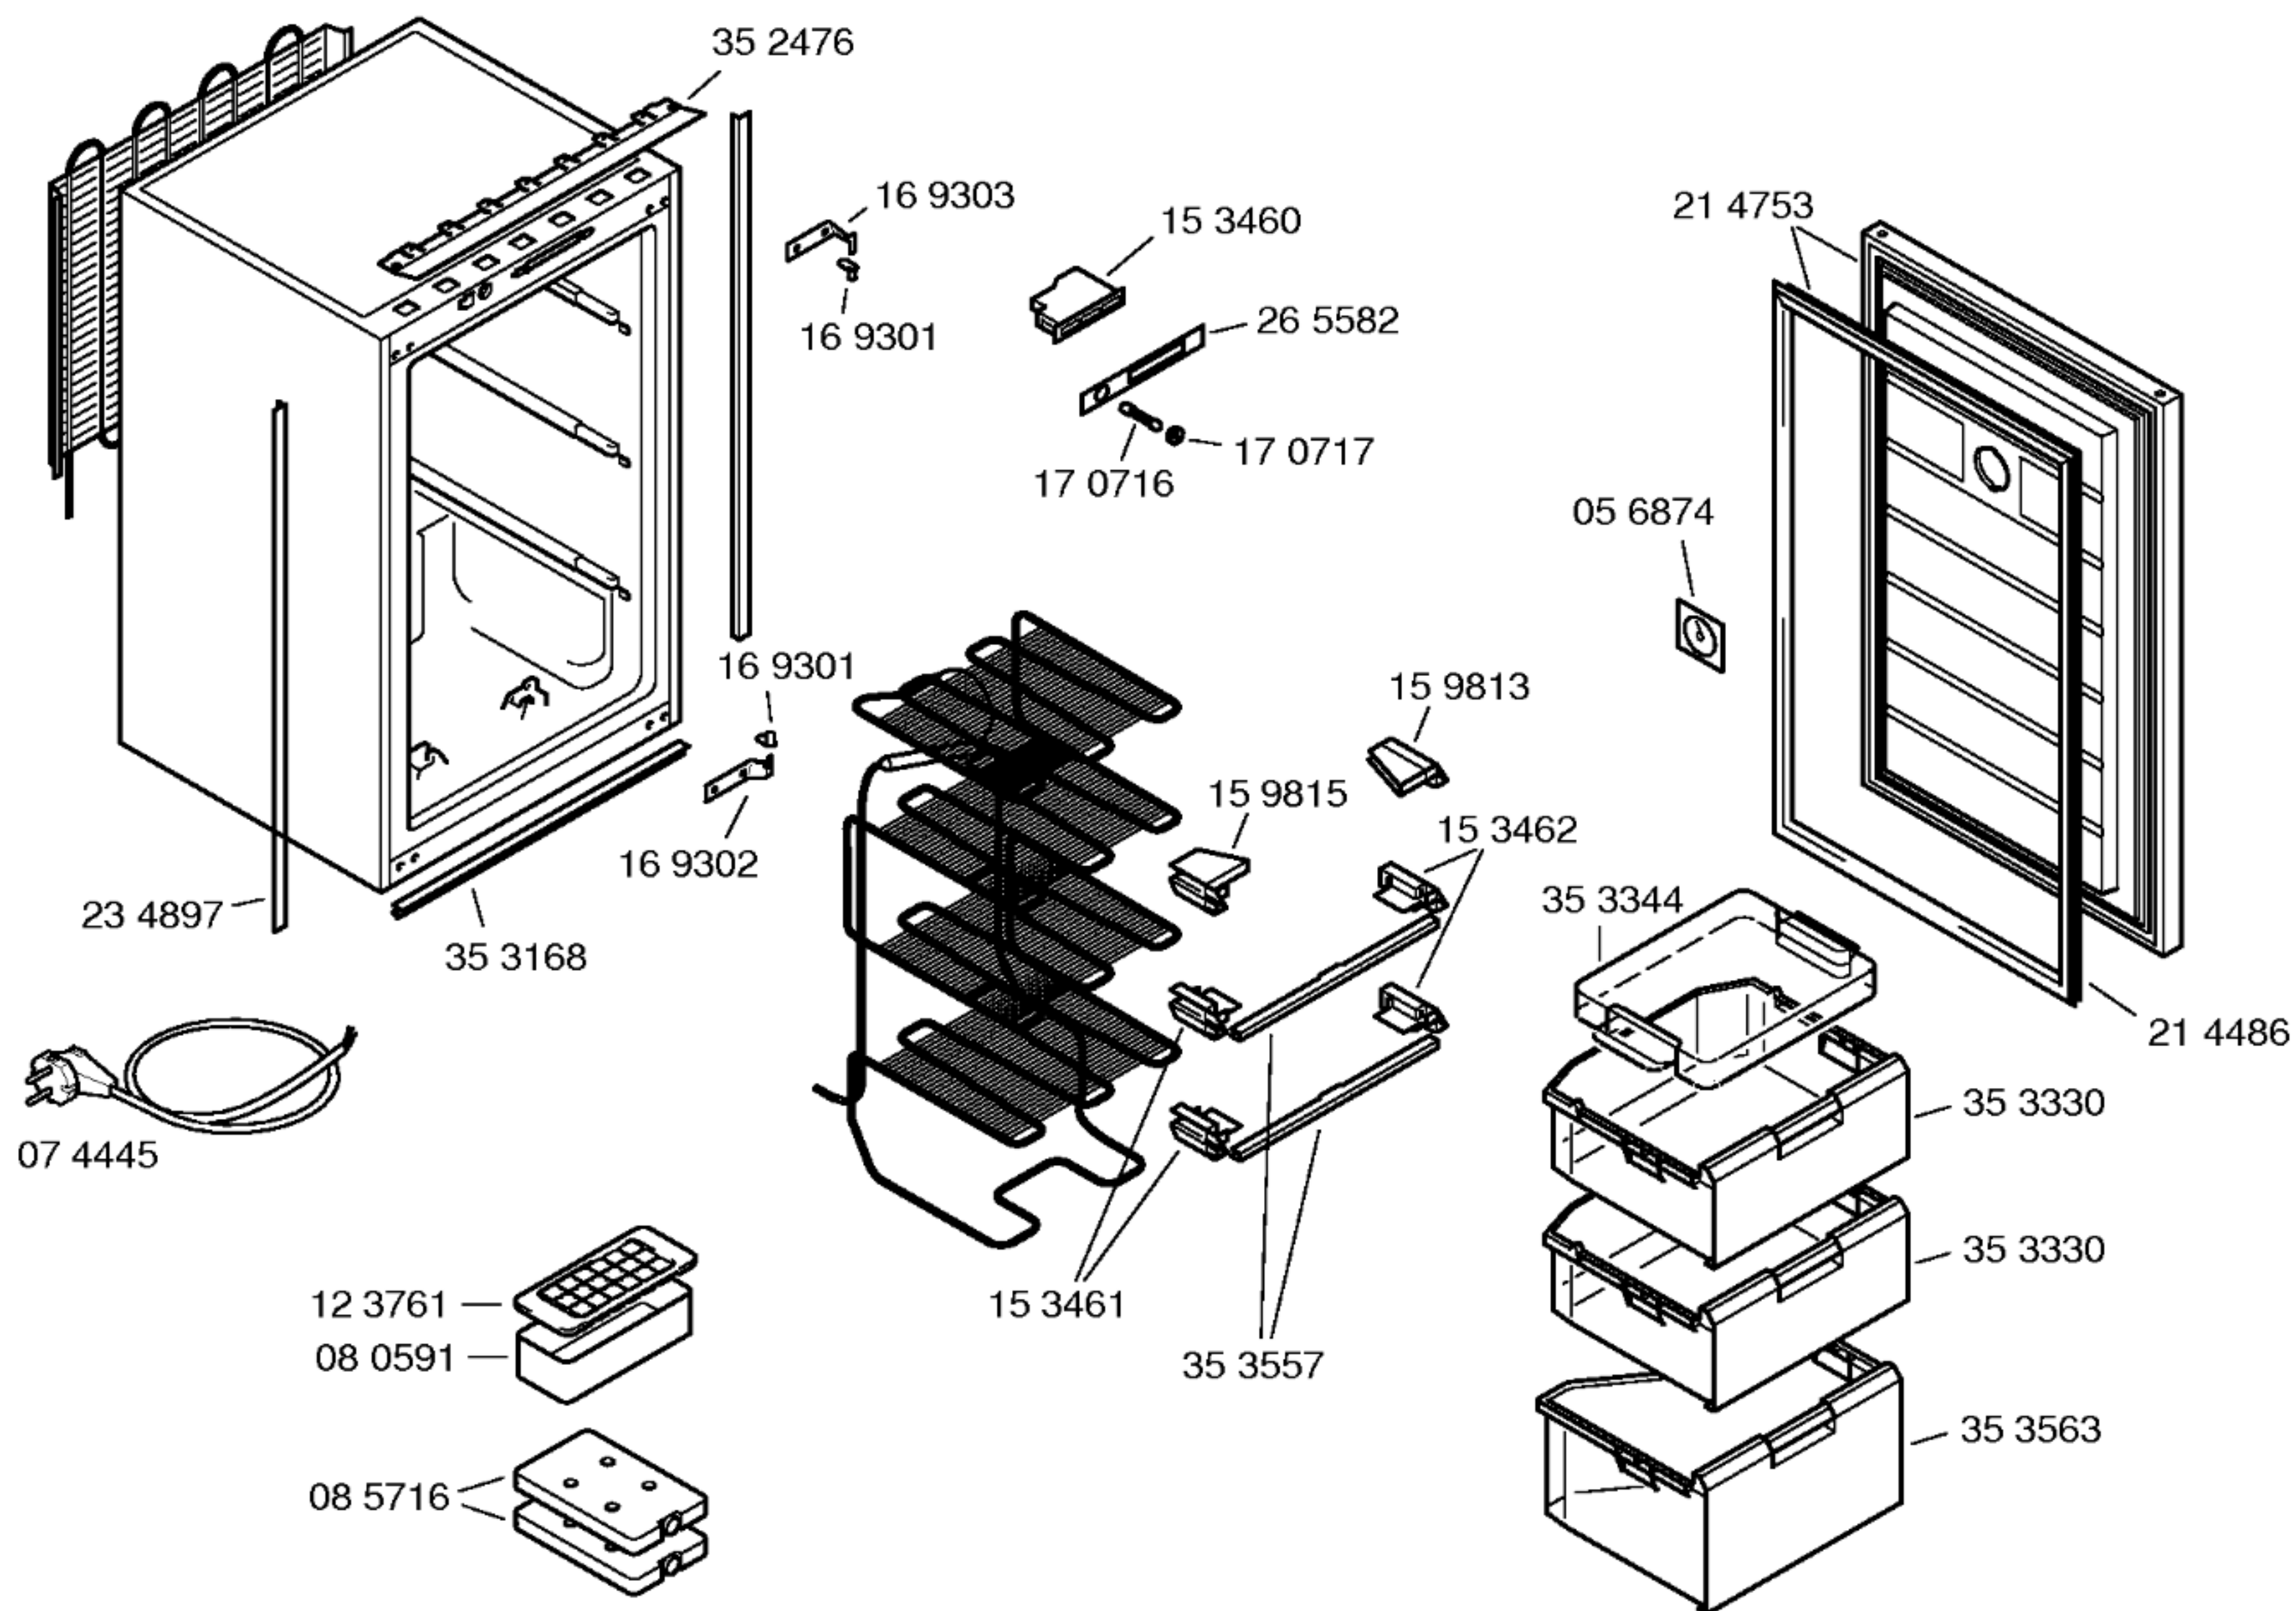


Gebrauchsanweisung
52 2708
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,P)

Beistellsatz
26 4862

Temp.-Regler
Rep.-Satz
26 5271

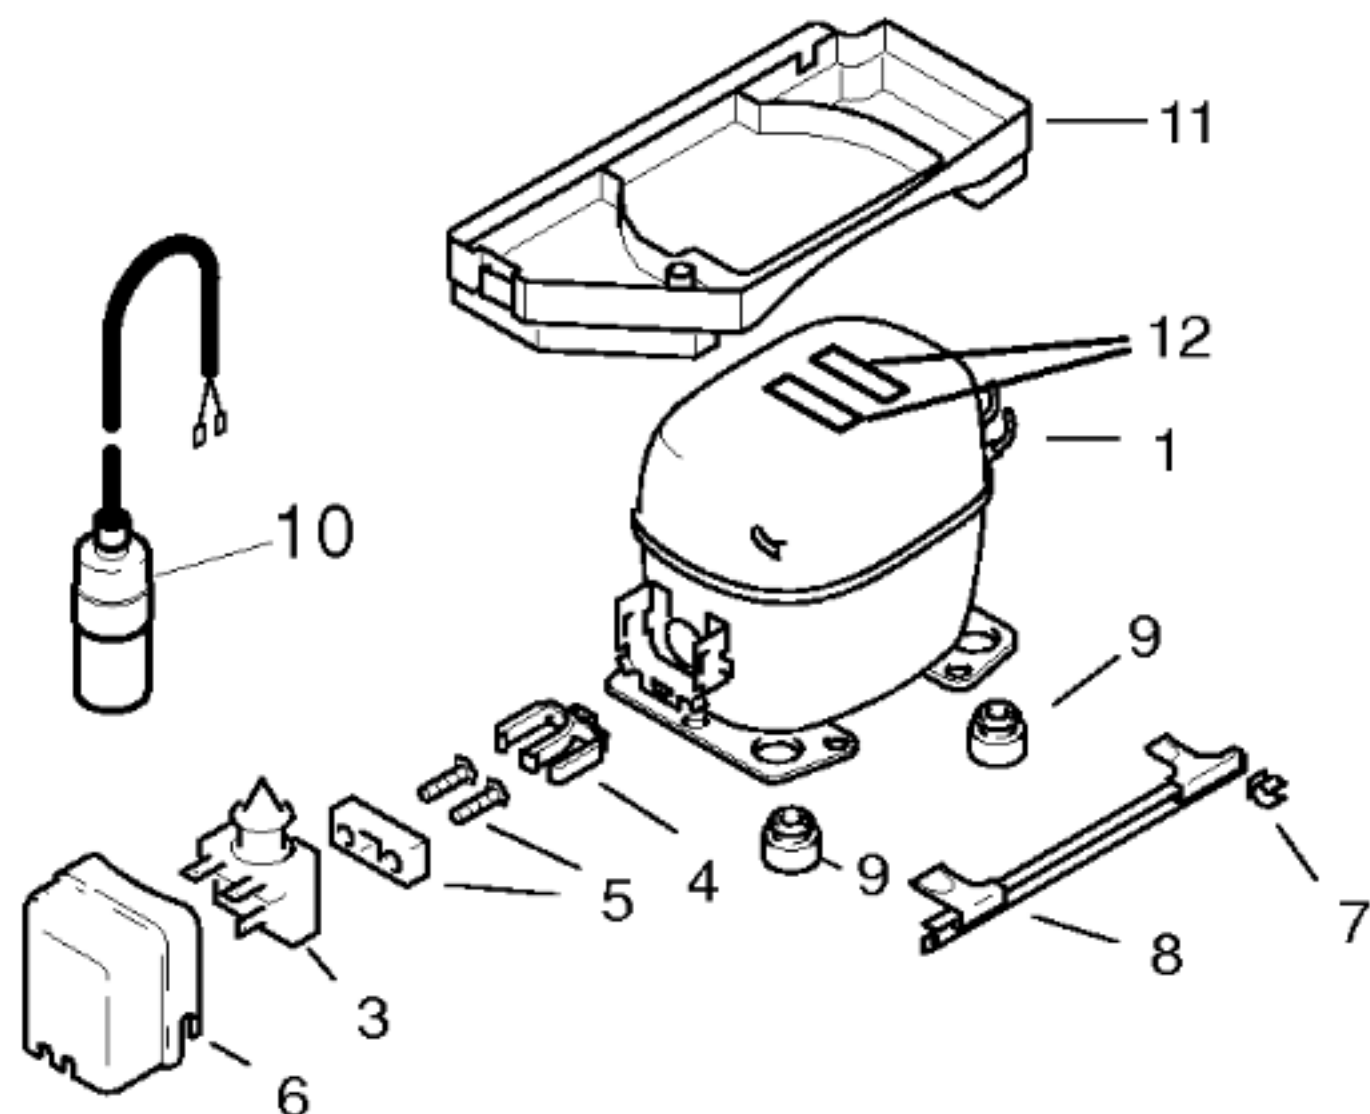

Pos.			
	Danfoss		
	TLY8K		
1	14 1657		
2			
3	15 1055		
4	15 1053		
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	26 4878		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TLY8K			
Förderleistung/Delivery/Débit		l/h	1404		
Anlaufstrom/Starting current/Cour de démarrage		A	6,4		
Widerstand/Resistance/Résistance Ha/main/prin		W	21,6		
Hi/aux		W	26,0		
Temp.-Regler/Thermostat		KER			
Typ/Type		RCO			
Regelstellung/Position		kalt	warm		
Schaltwerte/Switching values		ein"	-23,0	-15,0	
Valeurs de commutation		aus"	-31,0	-21,0	
Füllmenge/Fill.quantity/Charge		R600a	*		
Anschlußwert/Conn.load/Puiss. connectée		W	90		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		W			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		W			
Temp.-Regler/Thermostat					
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		W			
Spannung/Voltage/Tension		V			

* siehe Typenschild