



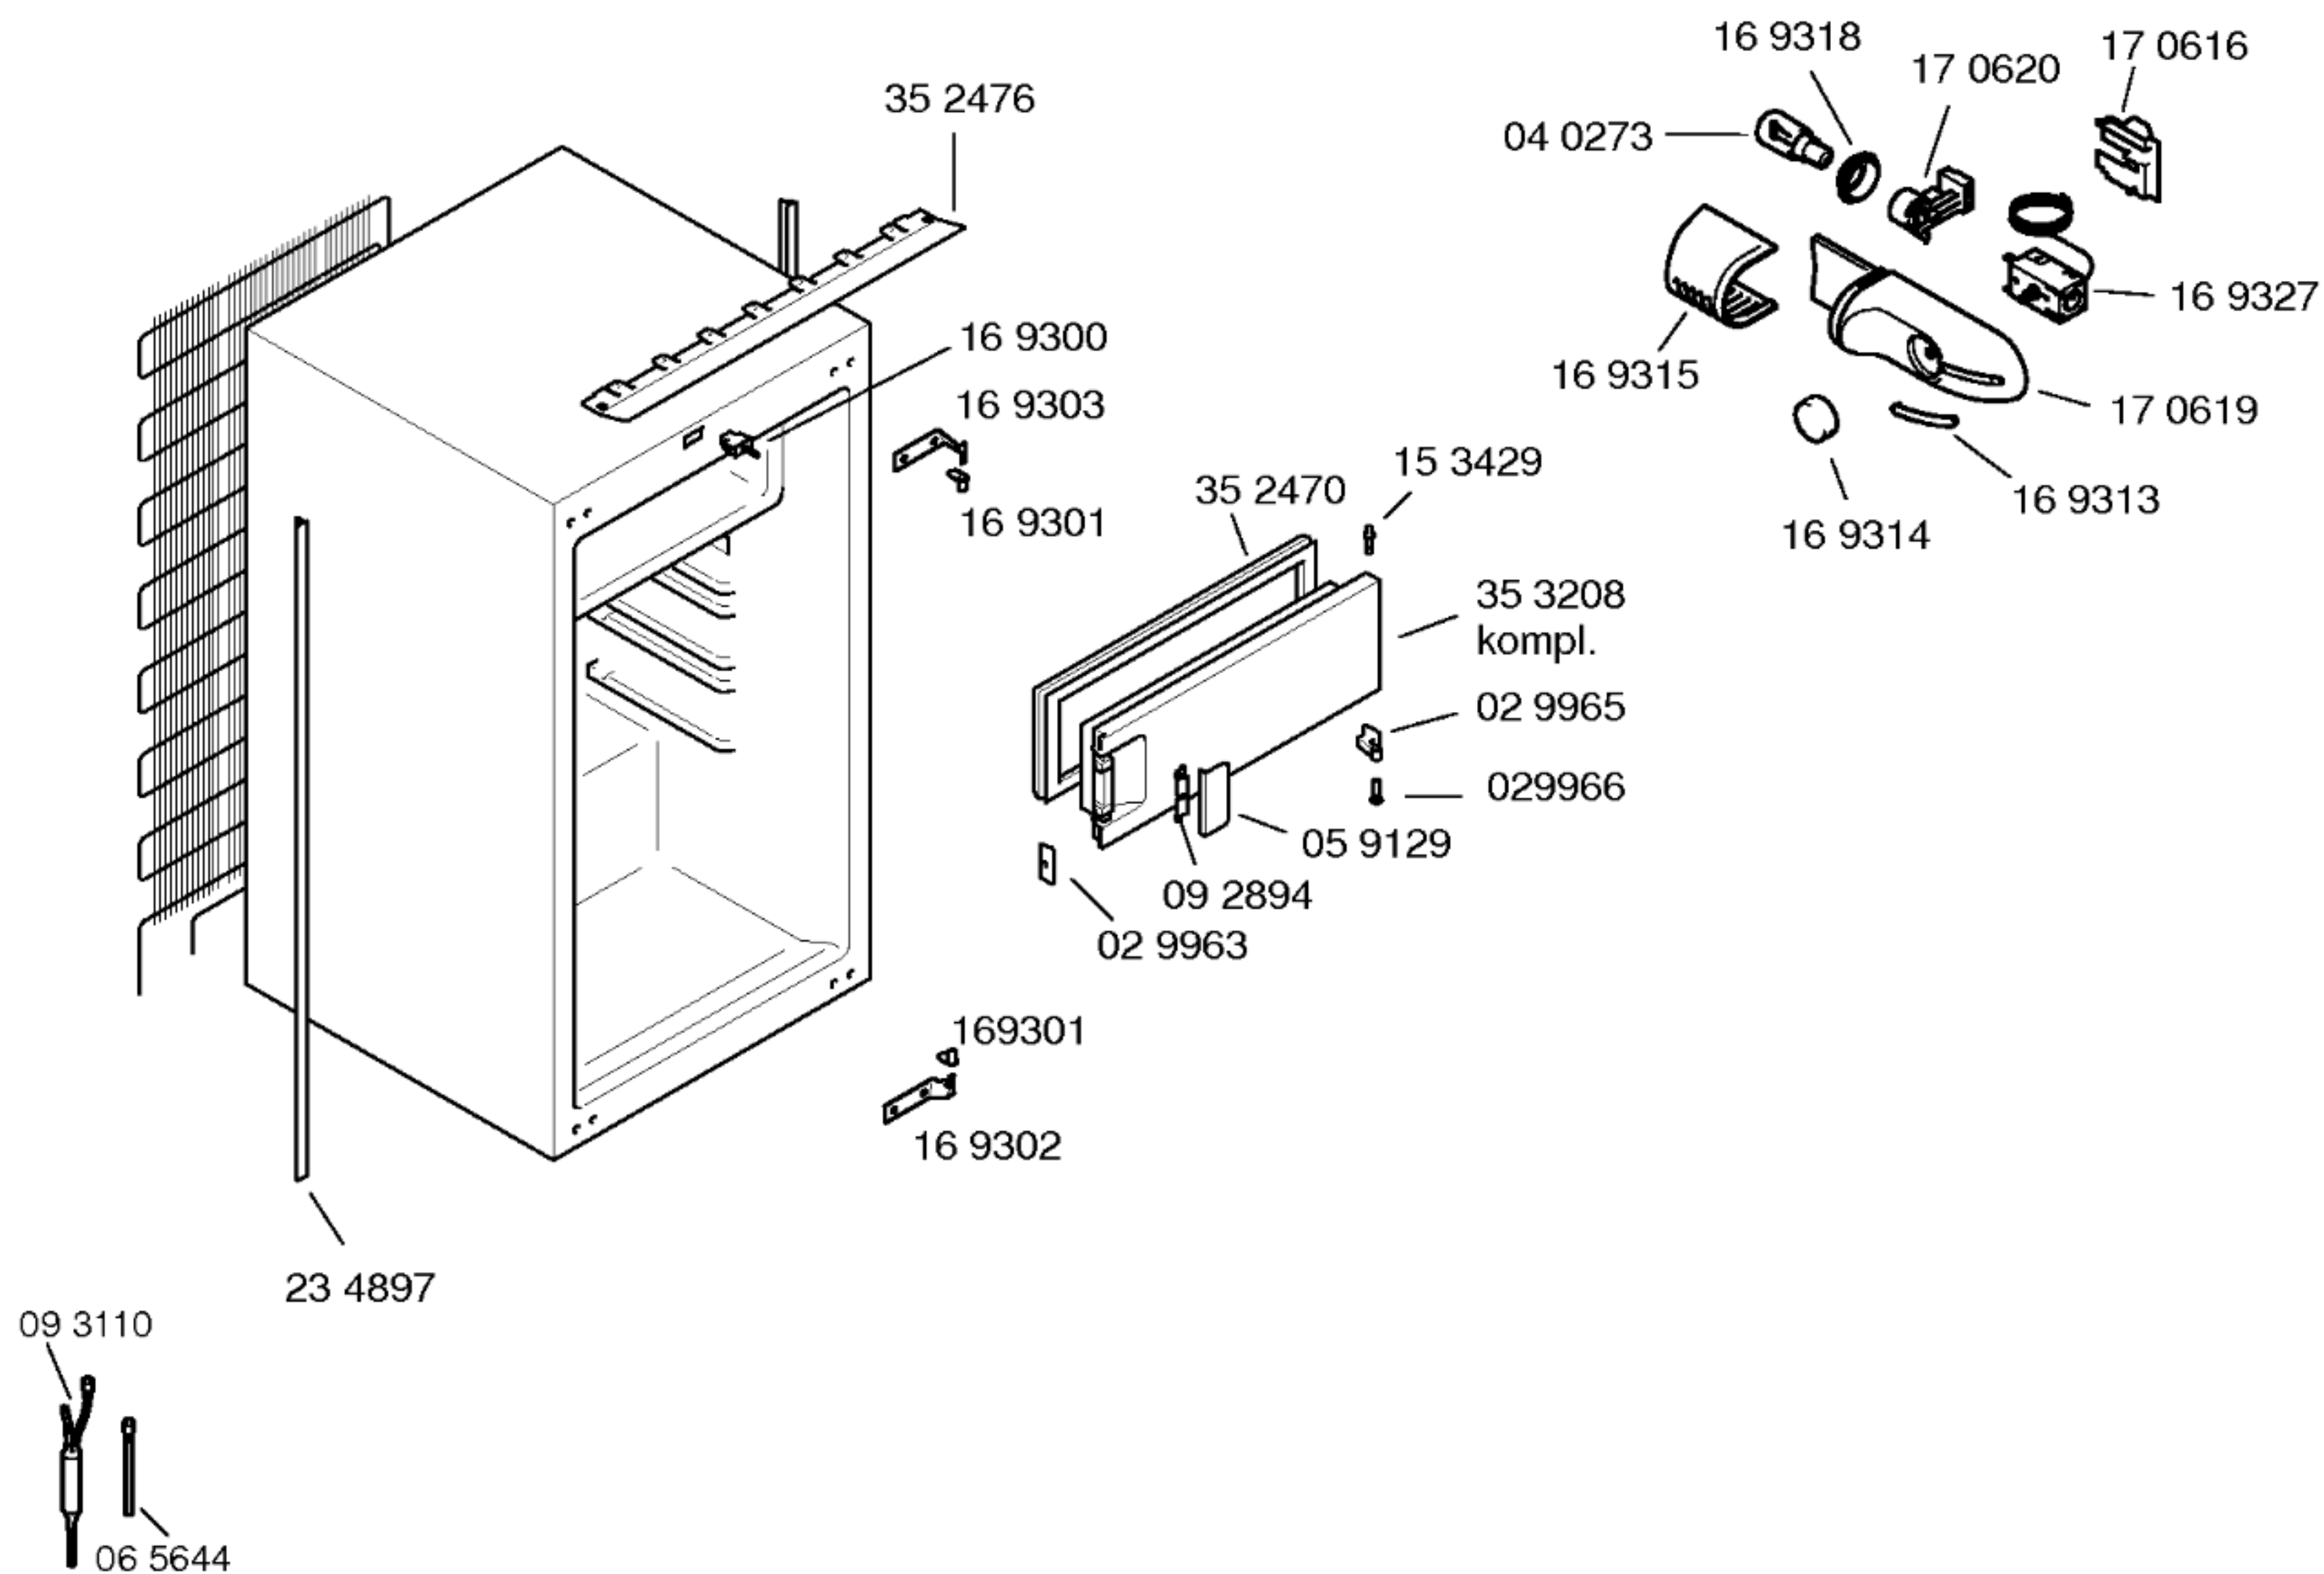


Gebrauchsanweisung
52 2511
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 4862

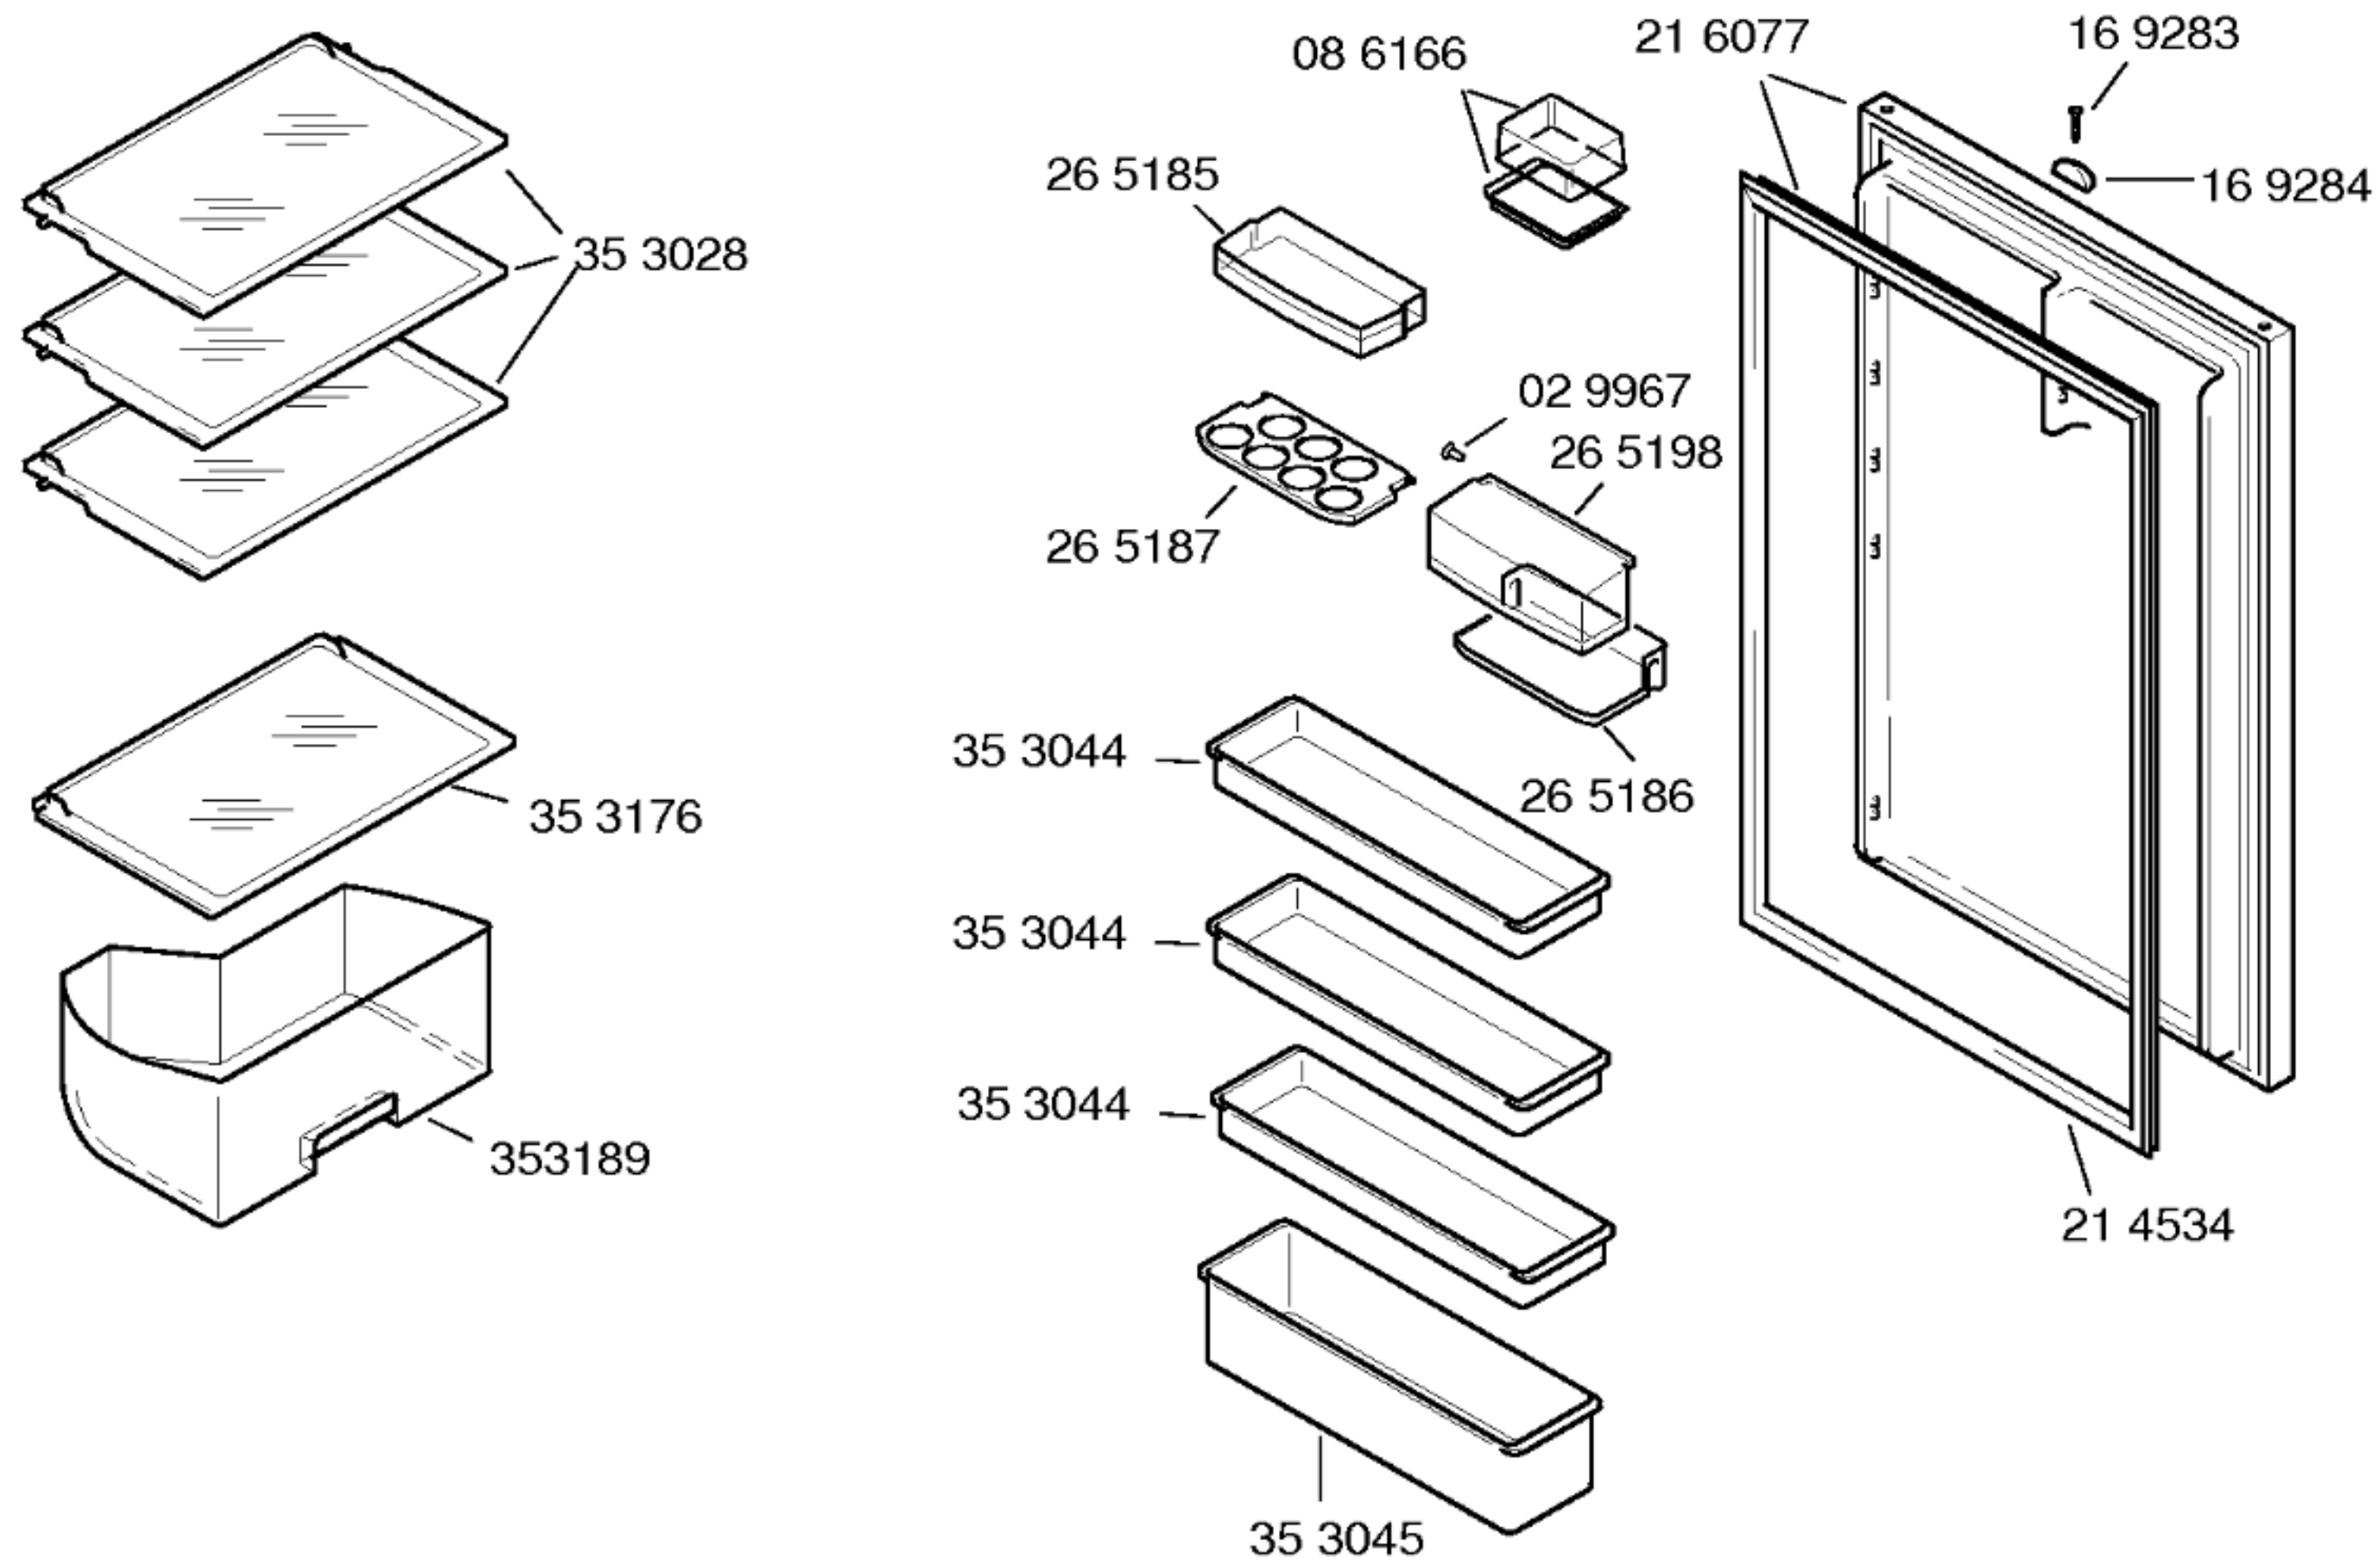

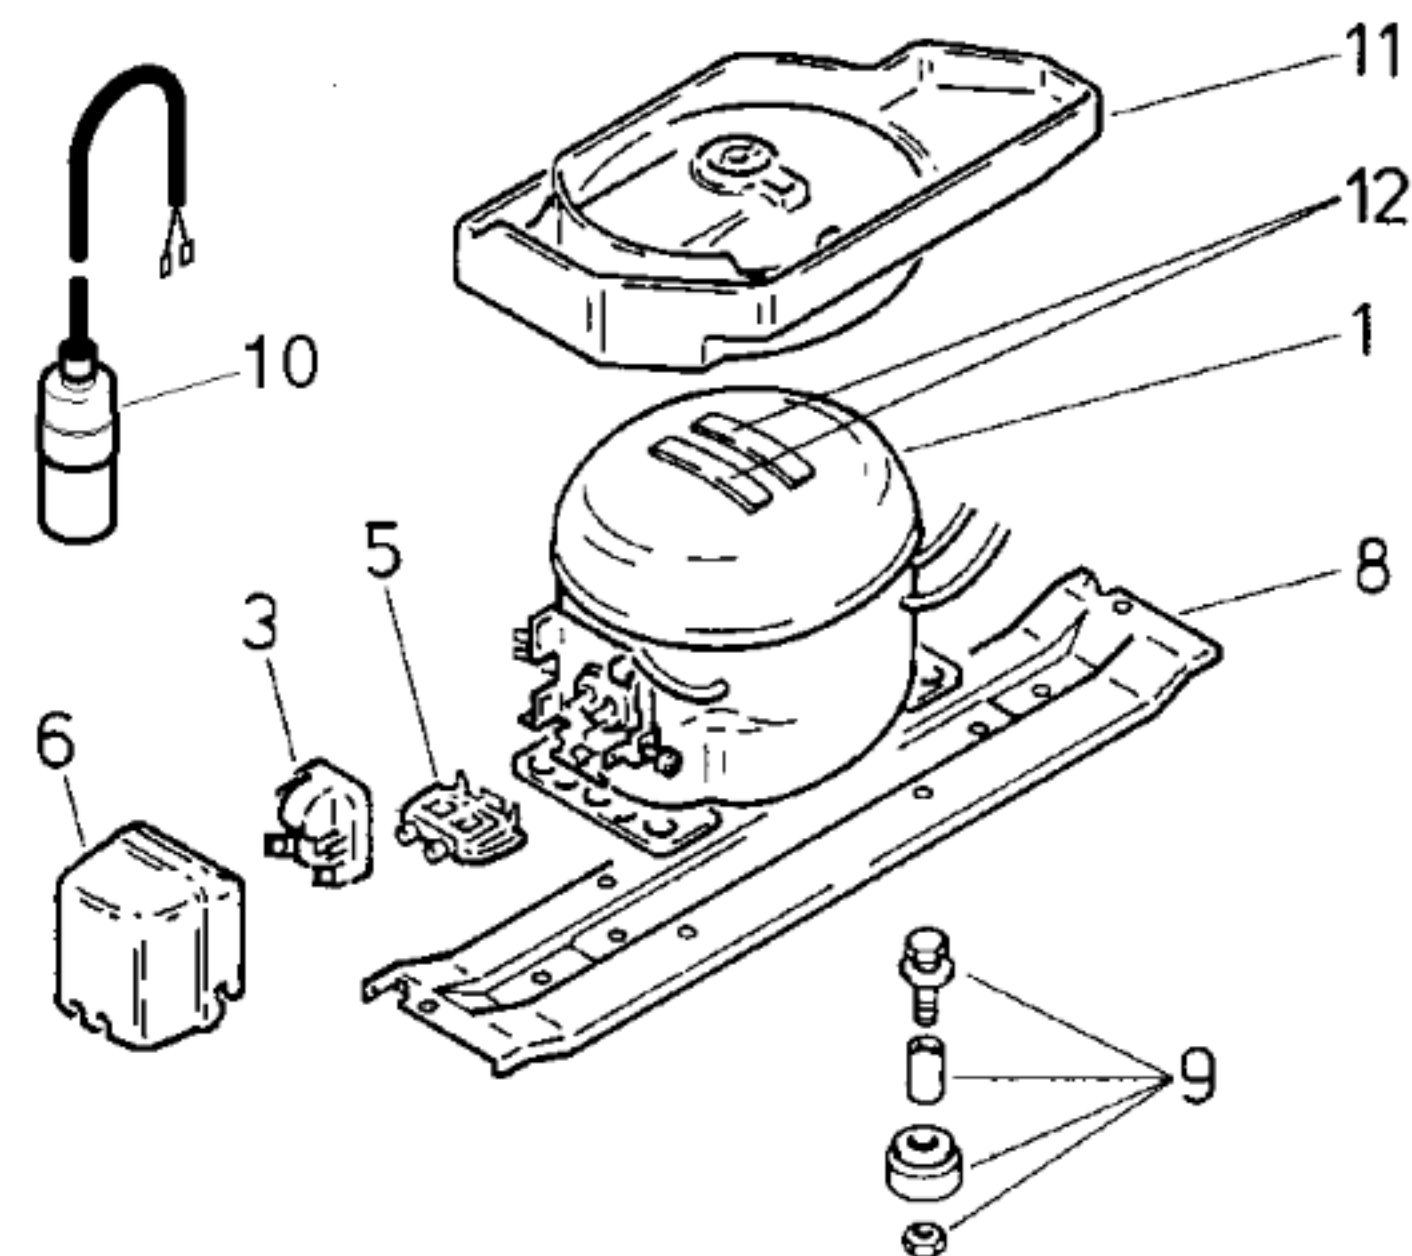

Pos.	Danfoss		
	TLES 7 K		
1	14 1585		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10			
11	26 4878		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 7 K		
Förderleistung/Delivery/Débit		i/h	1168	
Anlaufstrom/Starting current/Cour de démarrage		A	4,5	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	16,5
		Hi/aux	Ω	16,9
Temp.-Regler/Thermostat		Ranco		
Typ/Type				
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“	°C	+5,2
Valeurs de commutation		„aus“		+5,2
		(„abtauen“ od.)	„alarm“	-32,0
Füllmenge/Fill.quantity/Charge		R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée		W	78	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild