



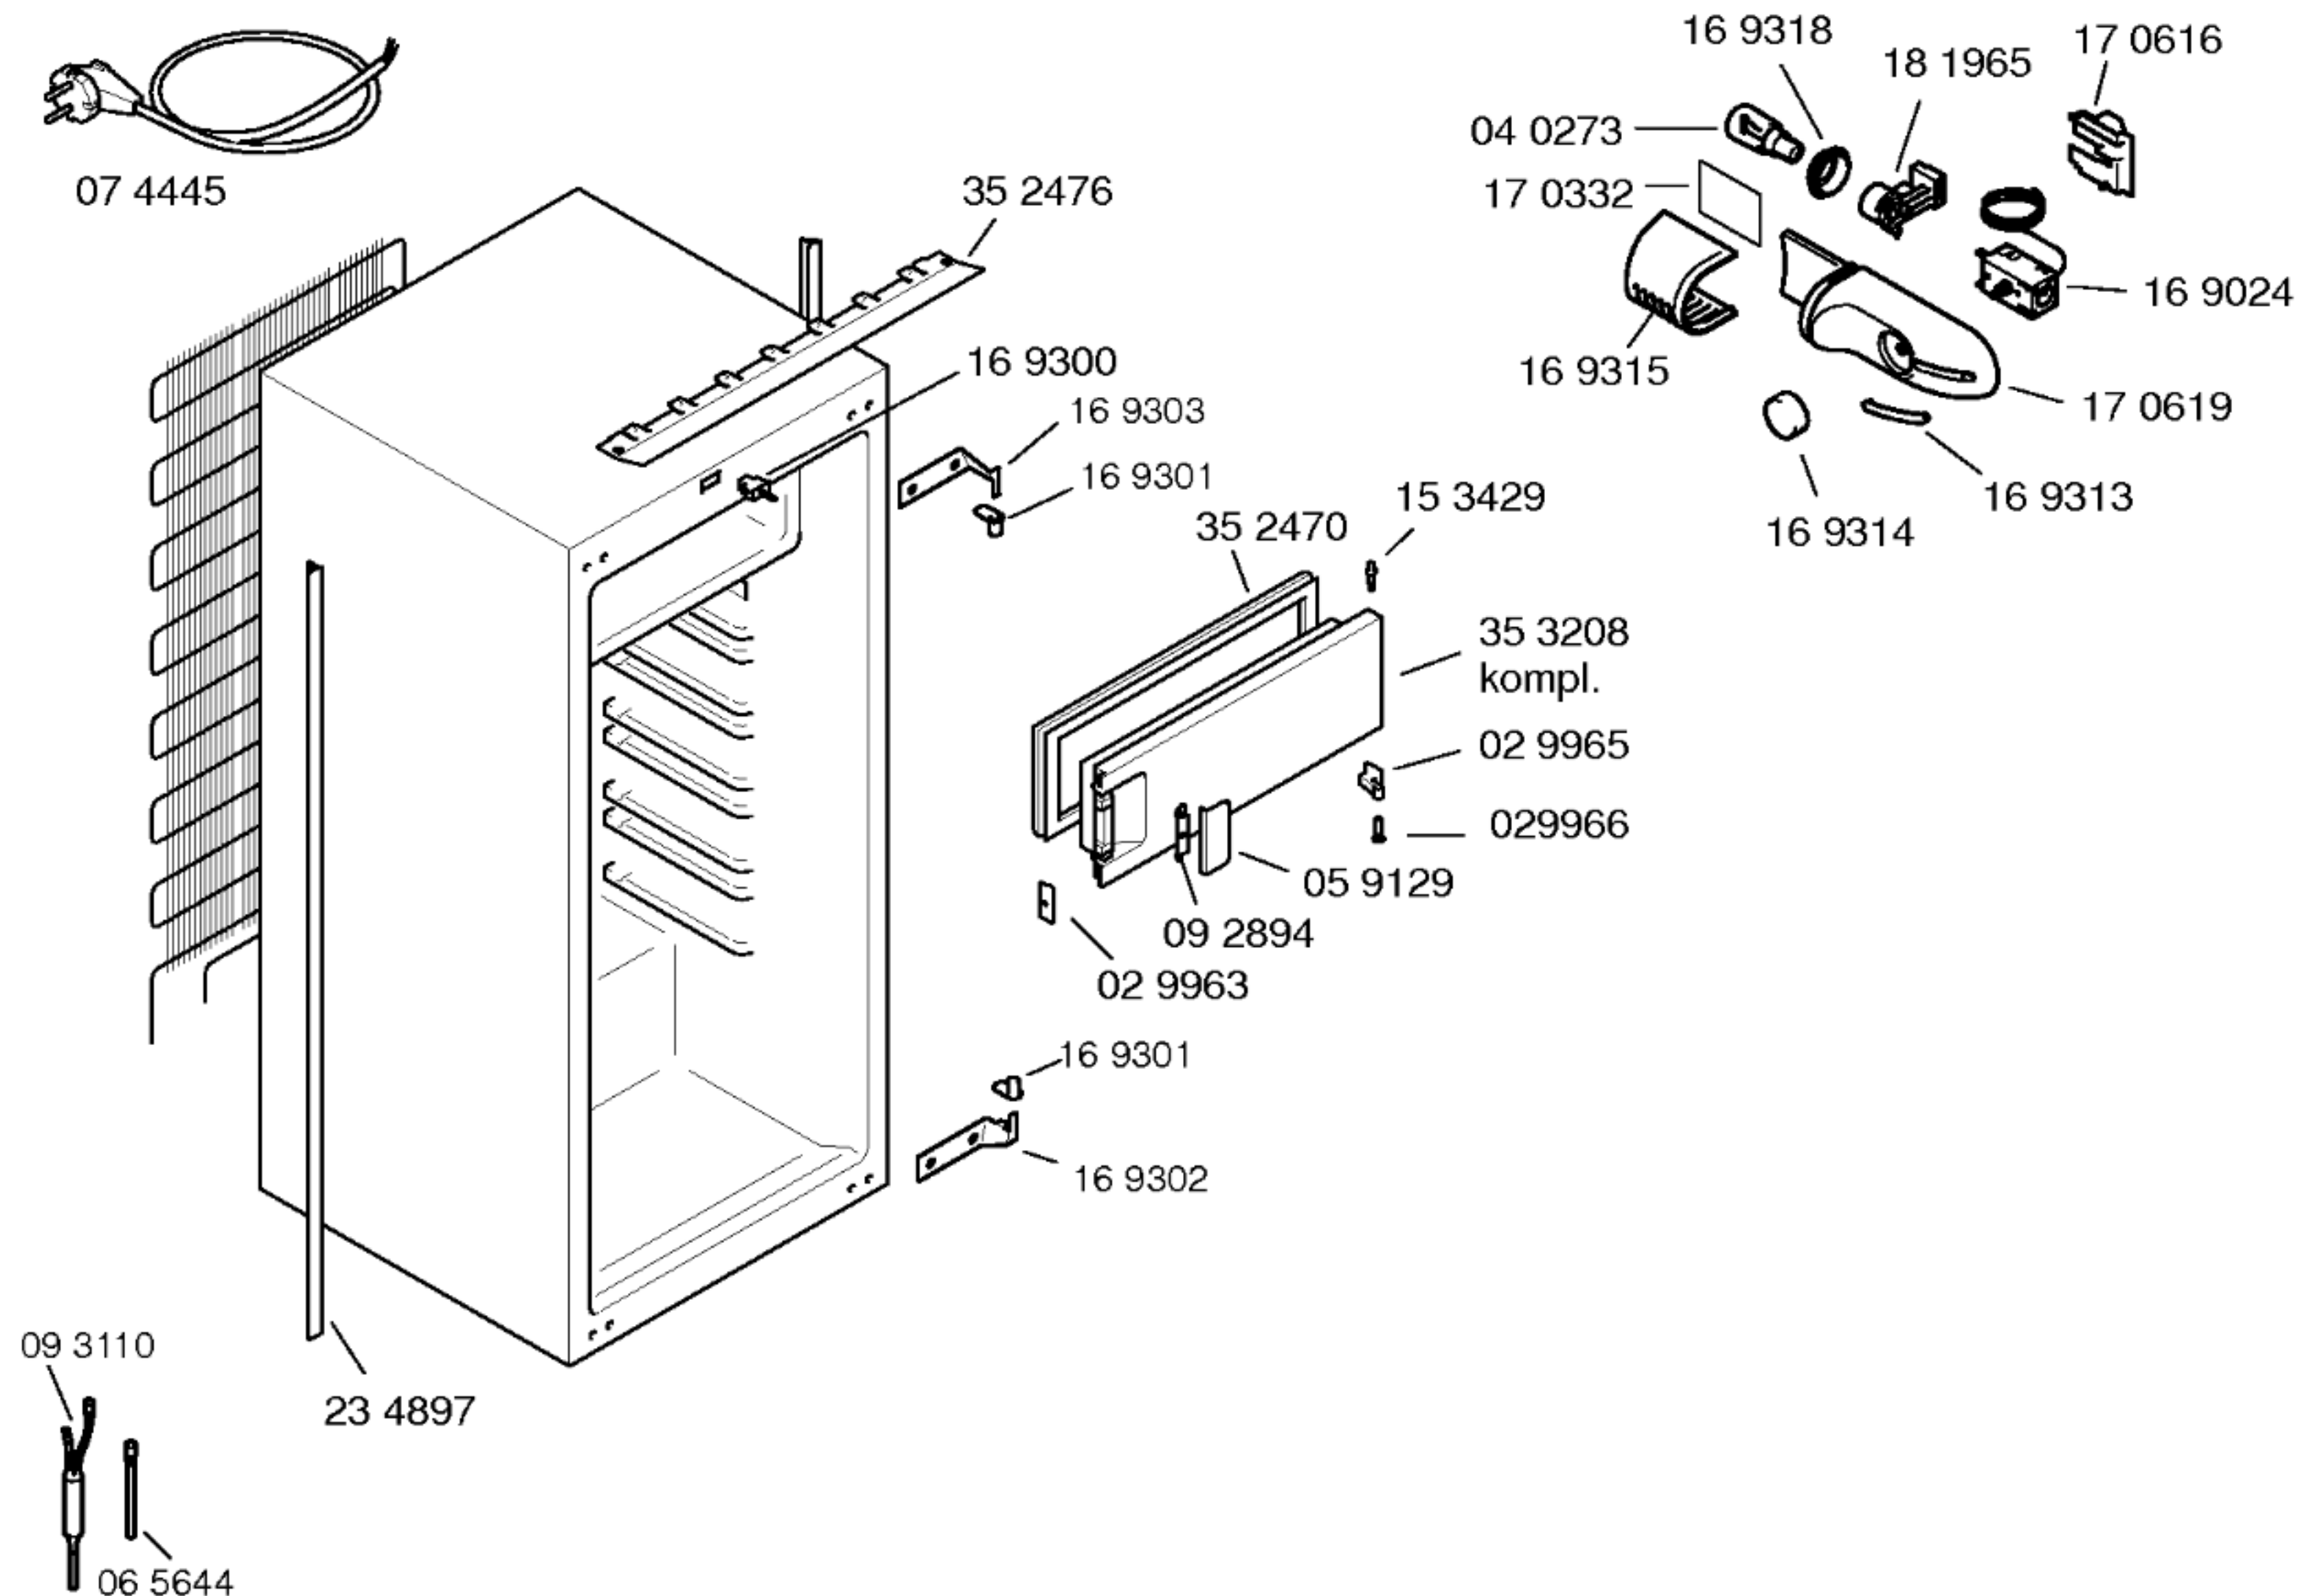


Gebrauchsanweisung
52 2536
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5161

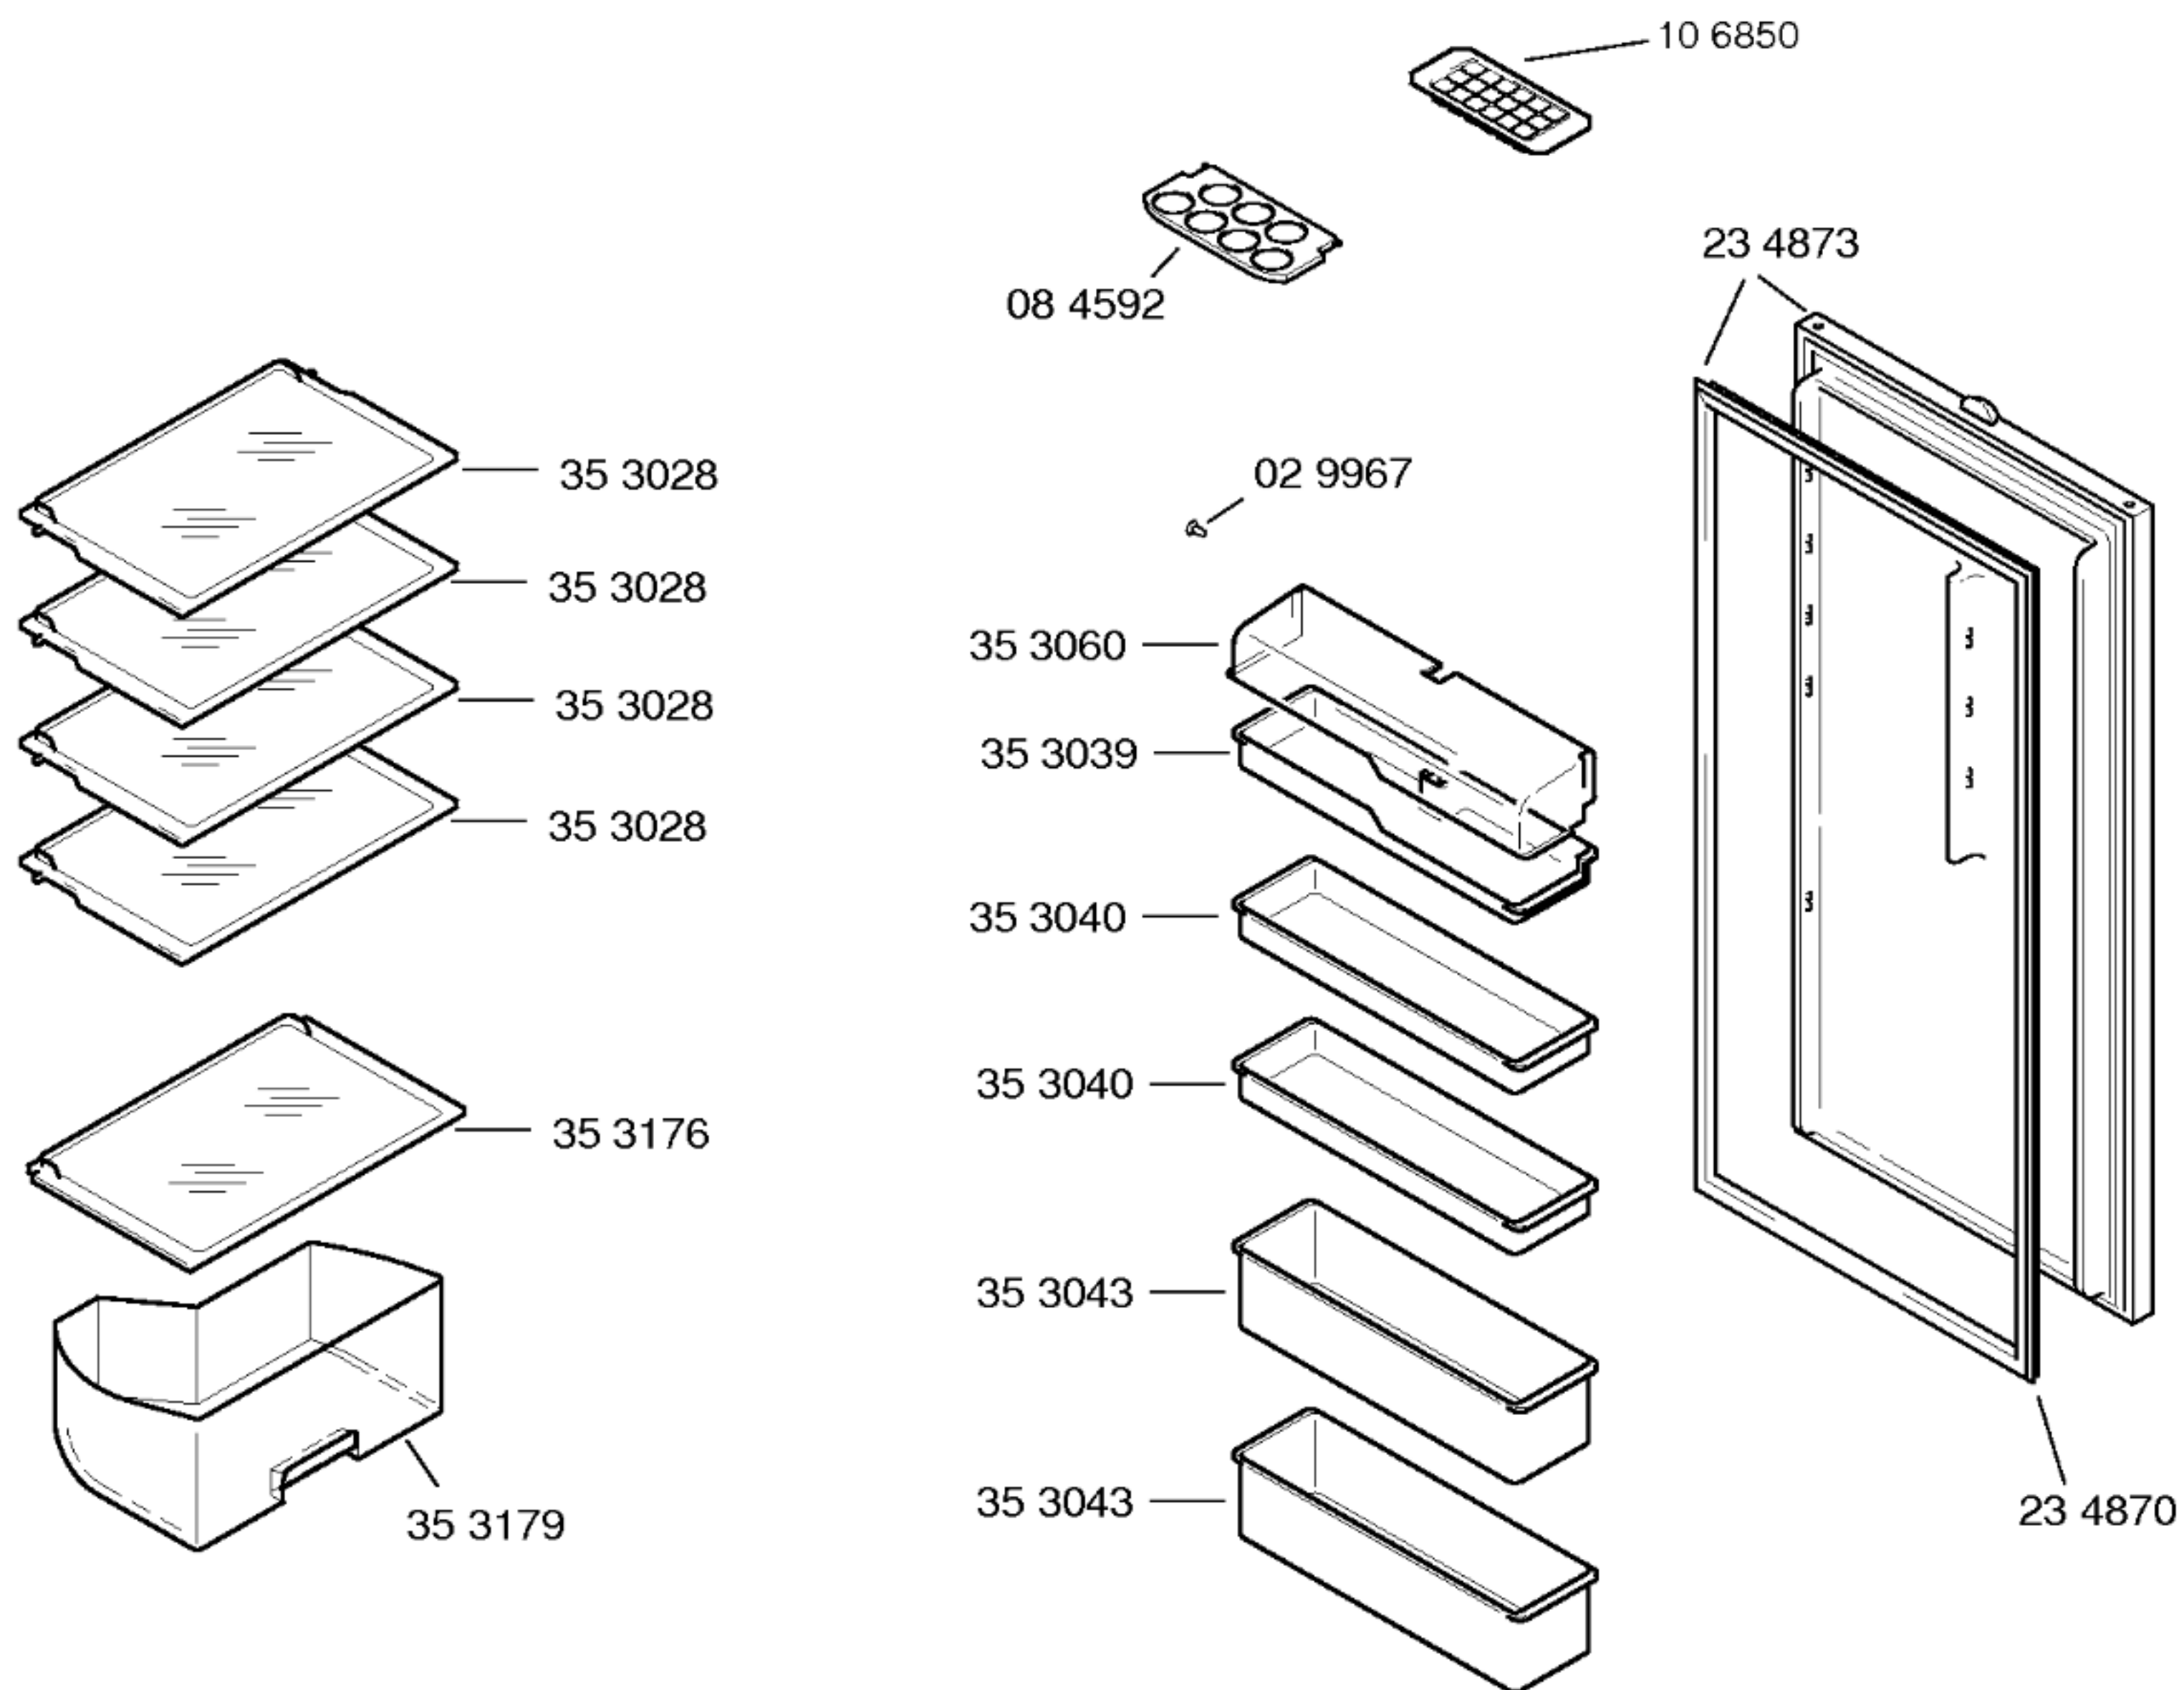

Mat. – Nr. – Konstante
3740

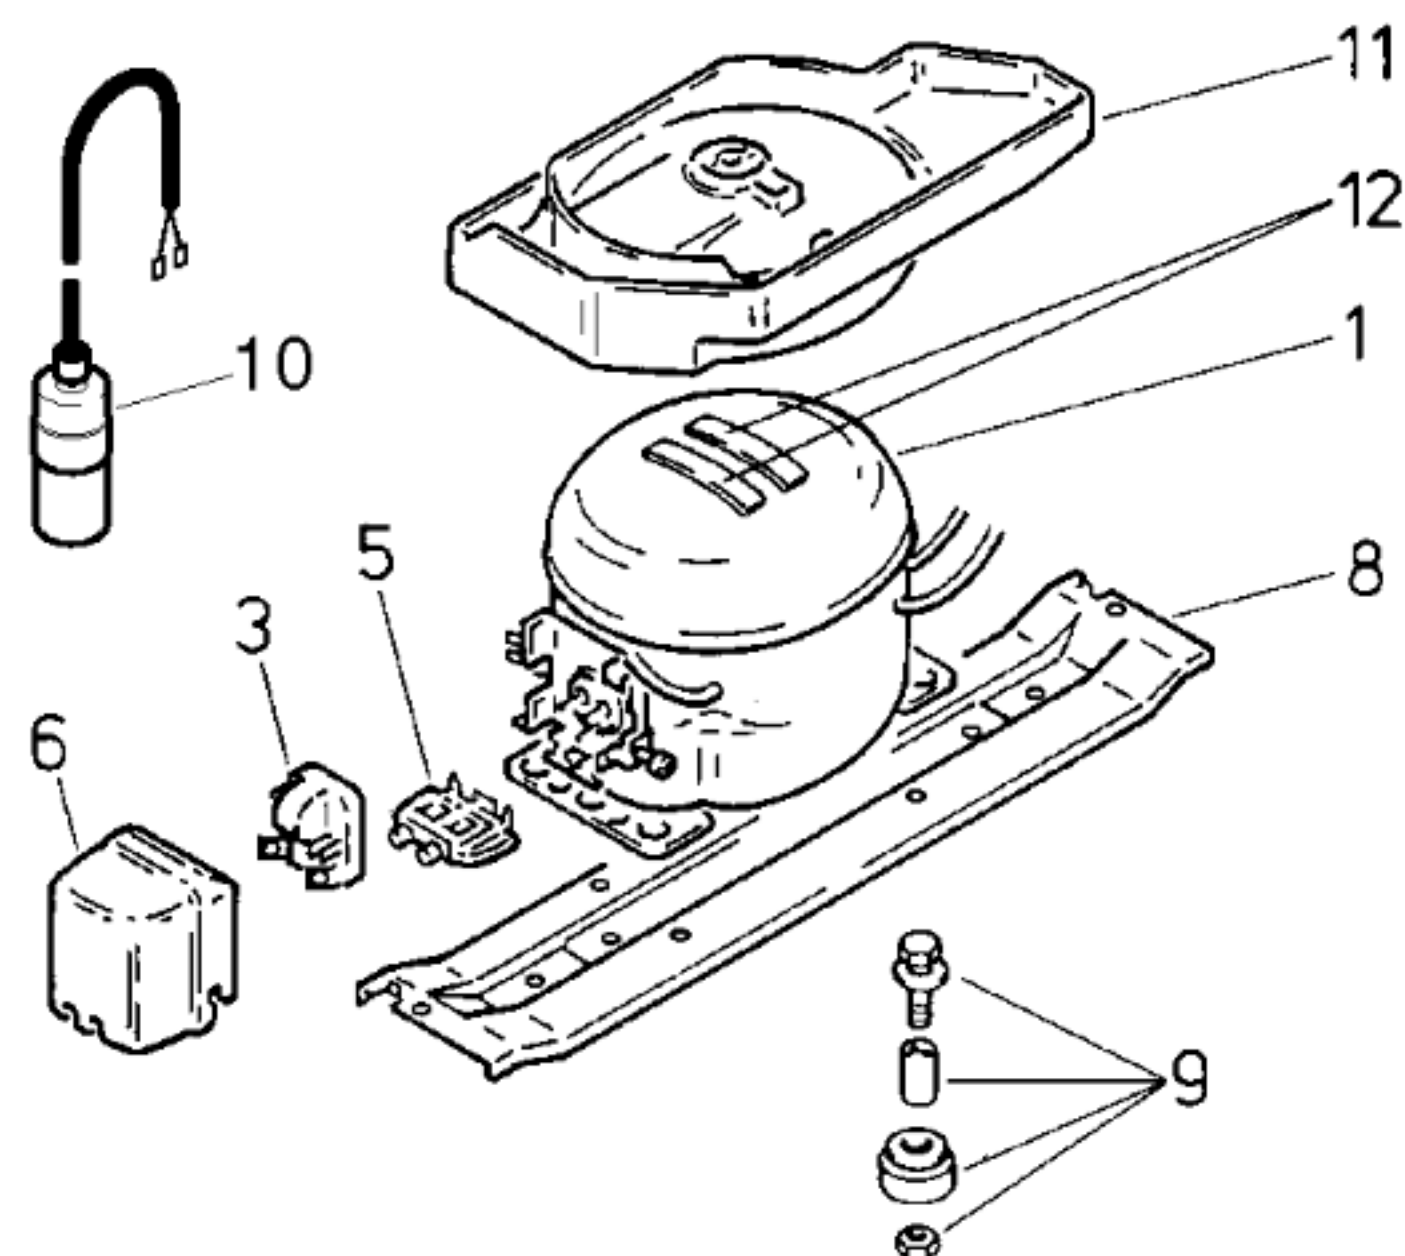

	V01	V02	
	Goldstar	Aspera	
Pos.	ND69NAEM	BPK 1084Y	
1	14 1999	14 2101	
2			
3	17 0743	18 0819	
4			
5	17 0745	17 0882	
6	17 0744	17 0881	
7	16 9319	16 9319	
8	27 1375	26 4879	
9	05 0166	05 0166	
10			
11	36 5099	36 5099	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Goldstar	Aspera	
Typ/Type	ND69NAEM	BPK 1084Y	
Förderleistung/Delivery/Débit	l/h	1242	1201
Anlaufstrom/Starting current/Cour de démarrage	A	6,9	3,6
Widerstand/Resistance/Résistance	Ω	20,3	29,6
Hi/main/prin	Ω	28,2	39,1
Hi/aux	Ω		
Temp.–Regler/Thermostat	Ranco		
Typ/Type	K59		
Regelstellung/Position	kalt	warm	
Schaltwerte/Switching values	"warm"	+4,0	+4,0
Valeurs de commutation	"kalt"	-32,0	-12,0
"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	*	
Anschlußwert/Conn.load/Puiss. connectée	W	79	79
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Temp.–Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild