




Aufstellanweisungen

51 1820
(D,GB,F,I,NL,E,P)
51 2223
(D,F,I,S,DK)
51 1868
(D,I,N,SF)
51 1934
GB1 (GB)
Gebrauchsanweisungen
51 3161
(D,GB,F,I,NL,E)
51 3190
(D,F,I,S,DK)
51 3191
(D,I,N,SF)
51 3192
GB1 (GB)
Programmtabellen
51 2889
(D,GB,F,I,NL,E)
51 2891
(D,F,I,S,DK)
51 2890
(D,I,N,SF)
51 2173
GB1 (GB)

- 1) 08 7035
(Einlage, D)
Wechseln:
08 7011
(F)
08 7012
(I)
08 7013
(GB)
08 7014
(NL)
08 7015
(N)
08 7016
(SF)
08 7017
(DK)
08 7018
(S)
08 7019
(D)

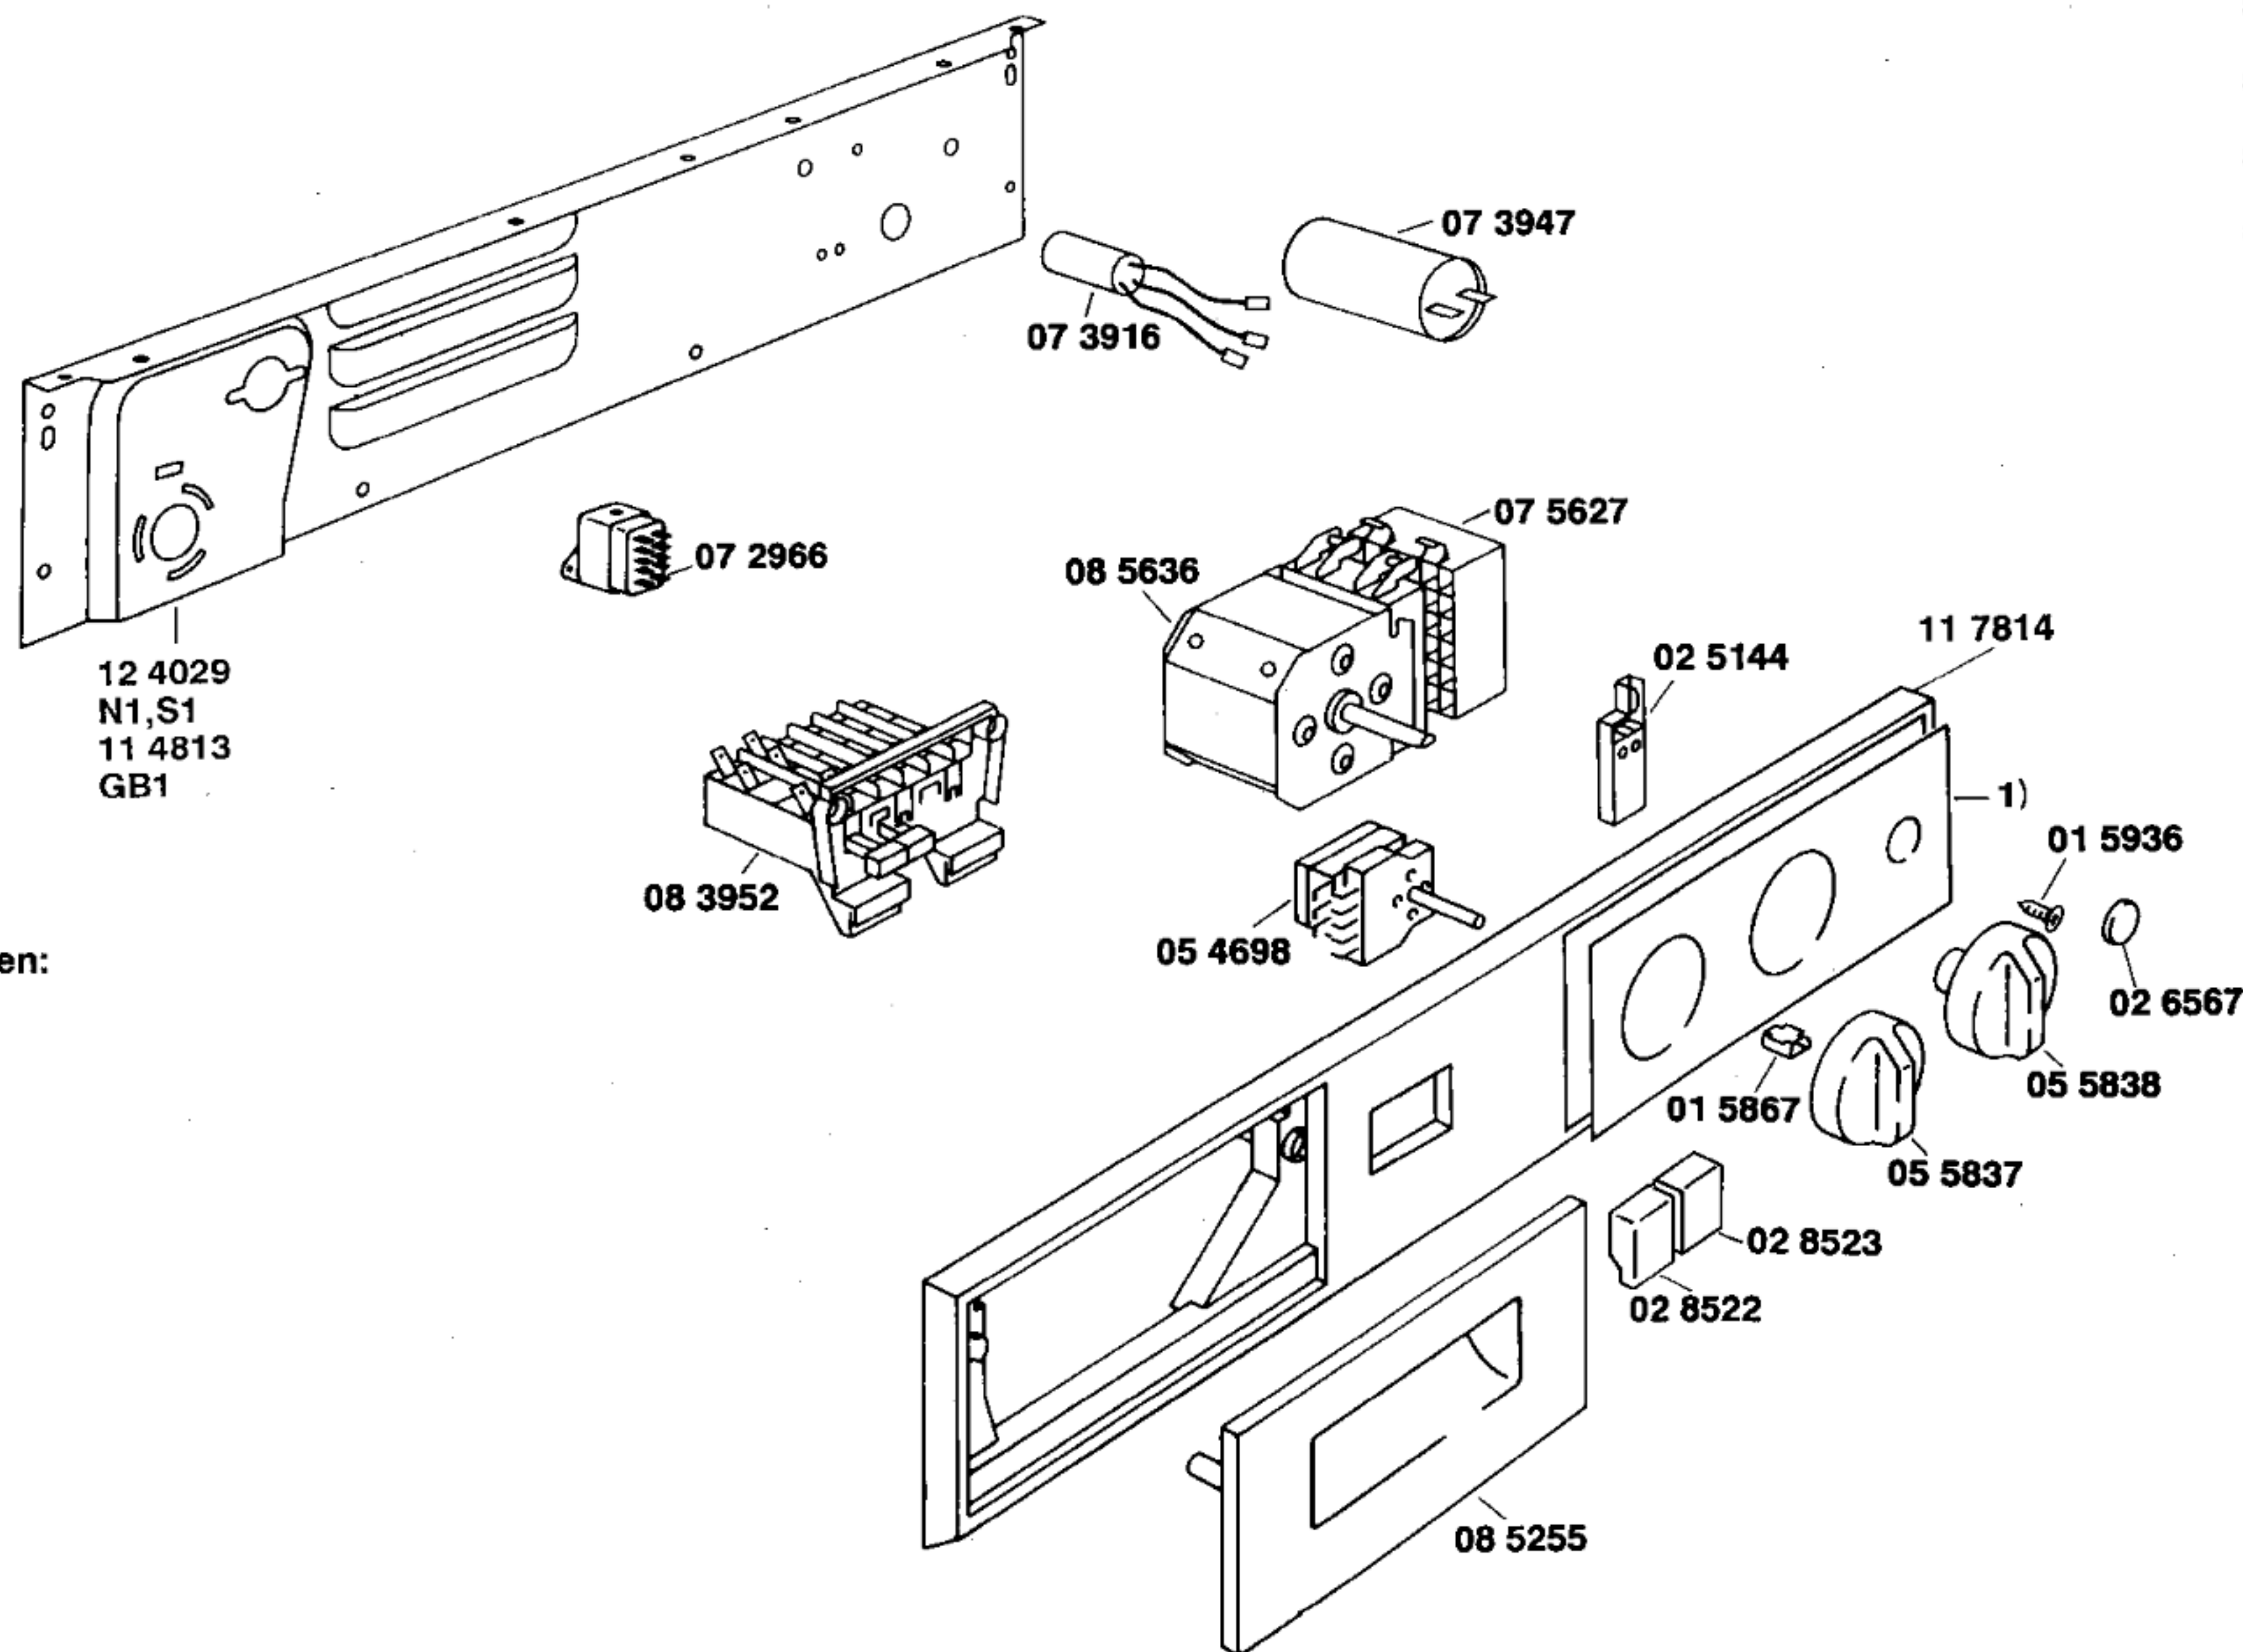

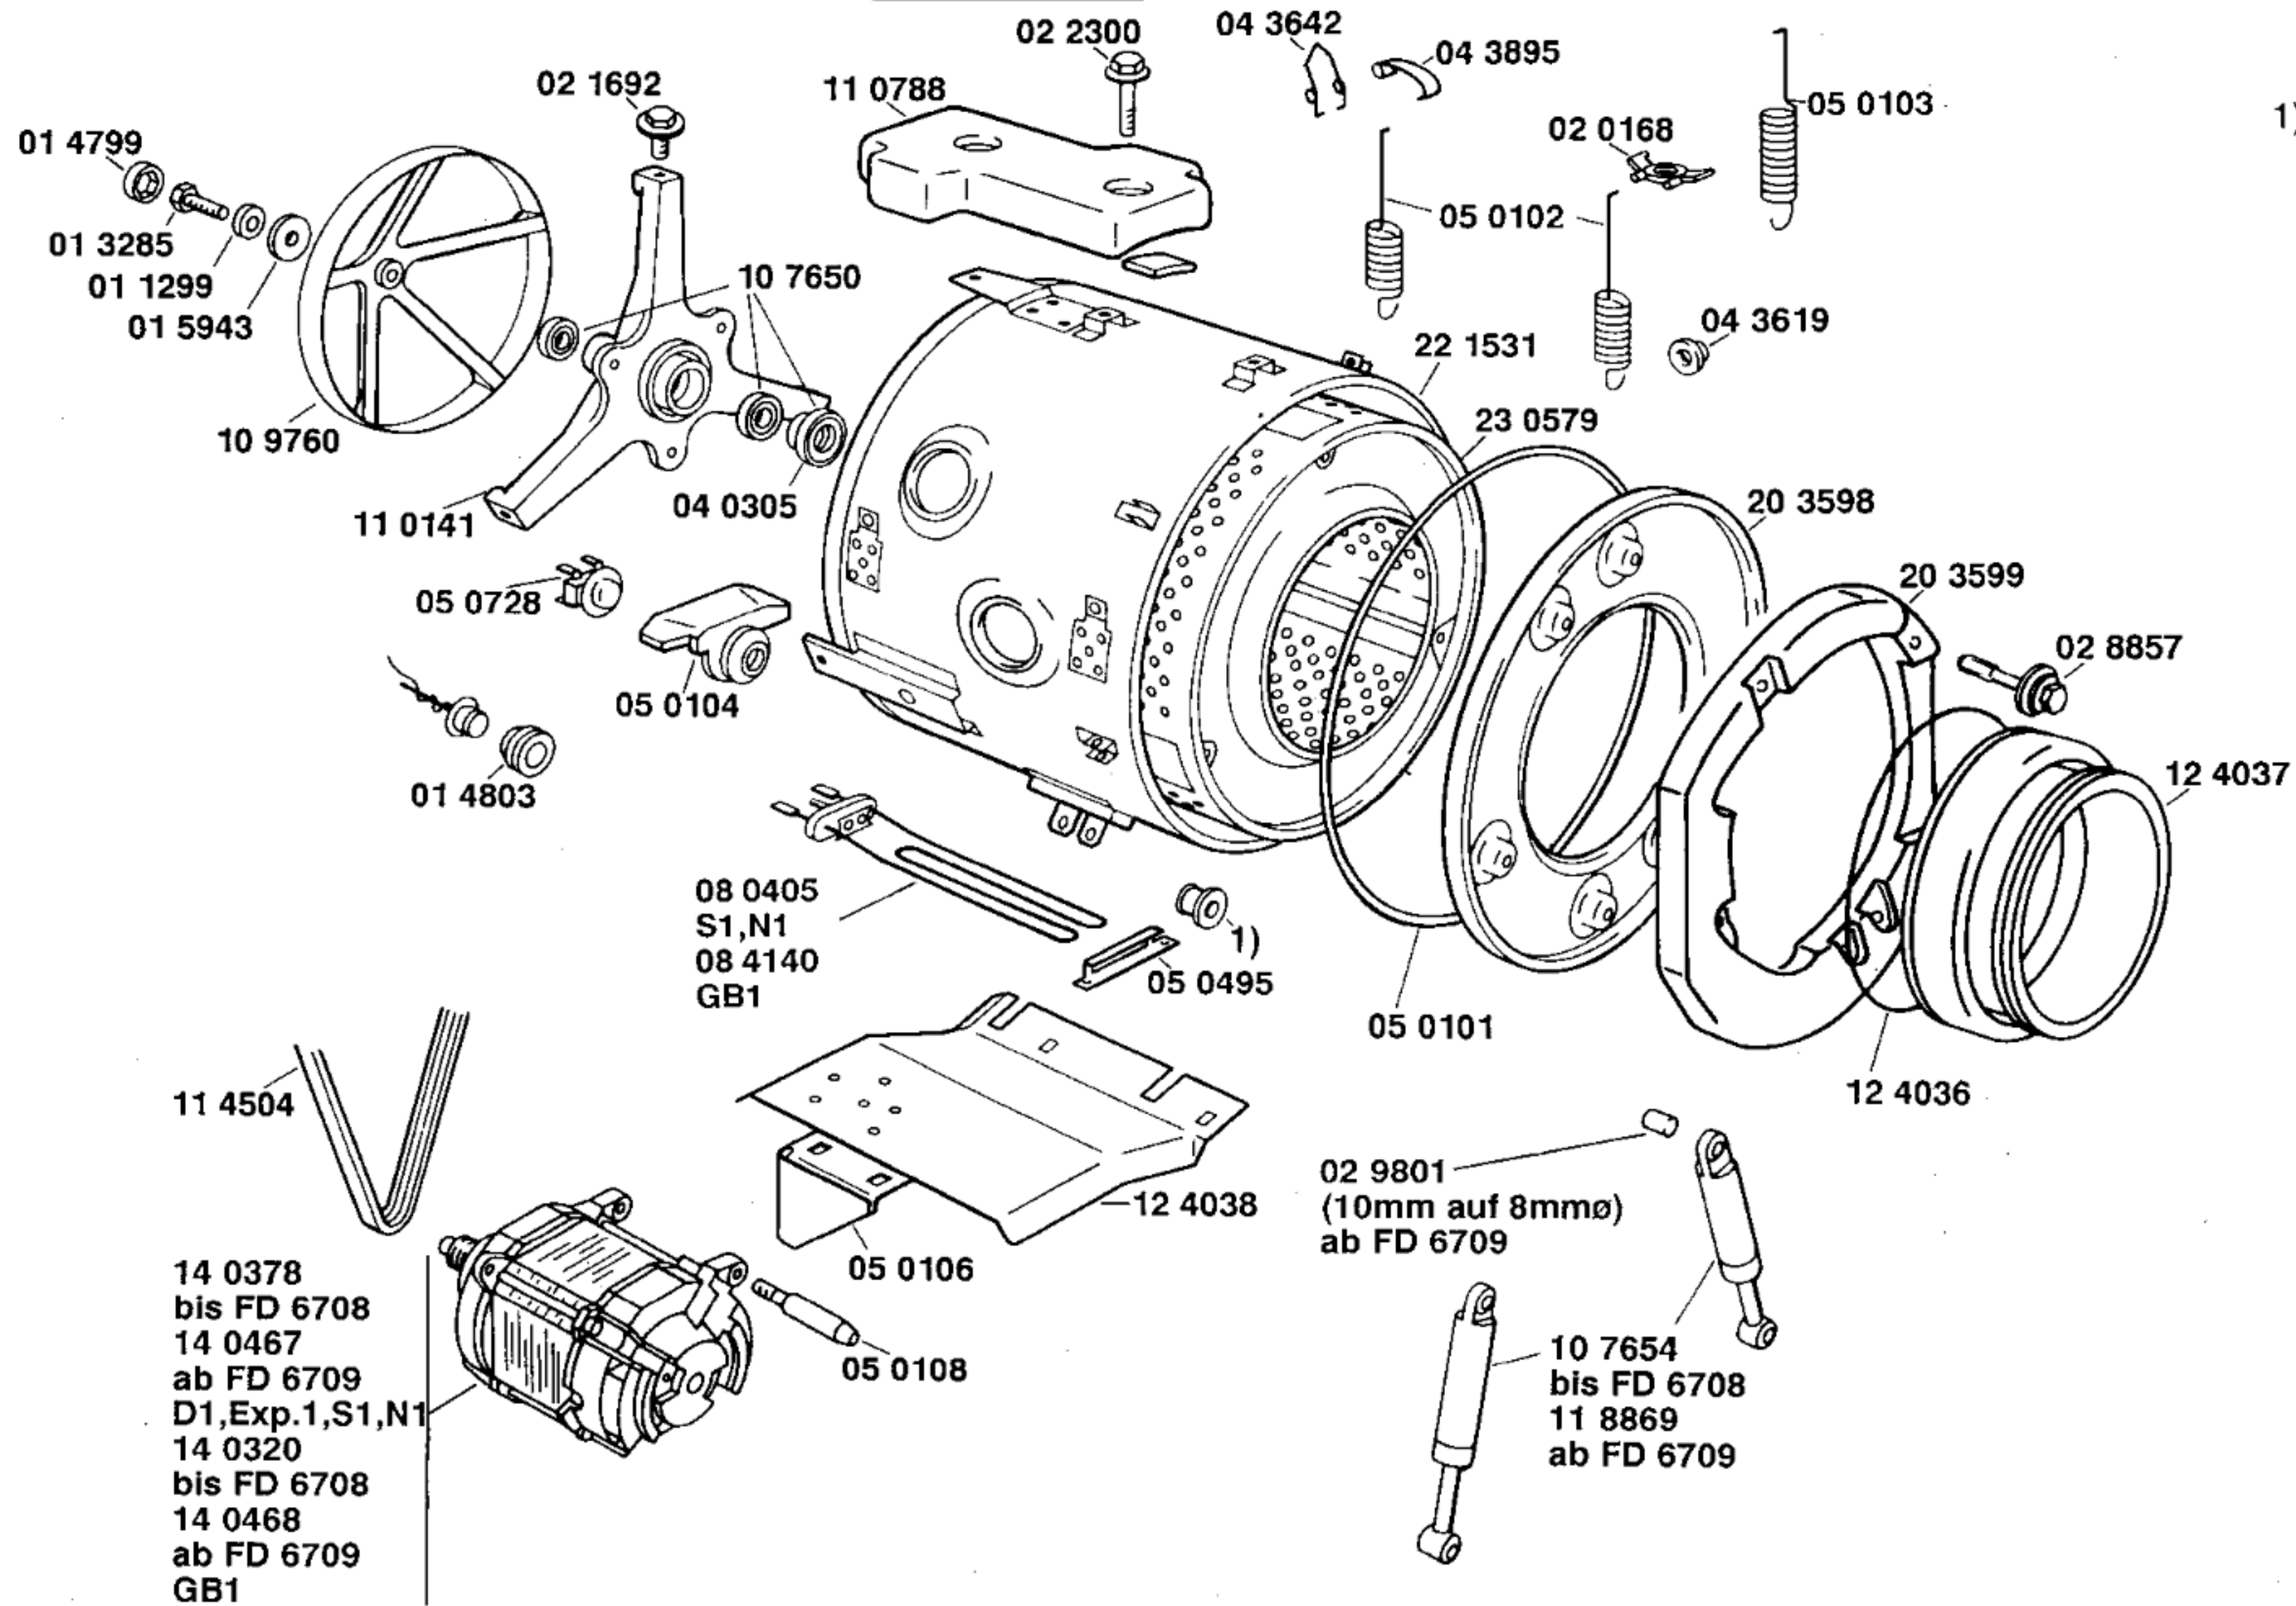

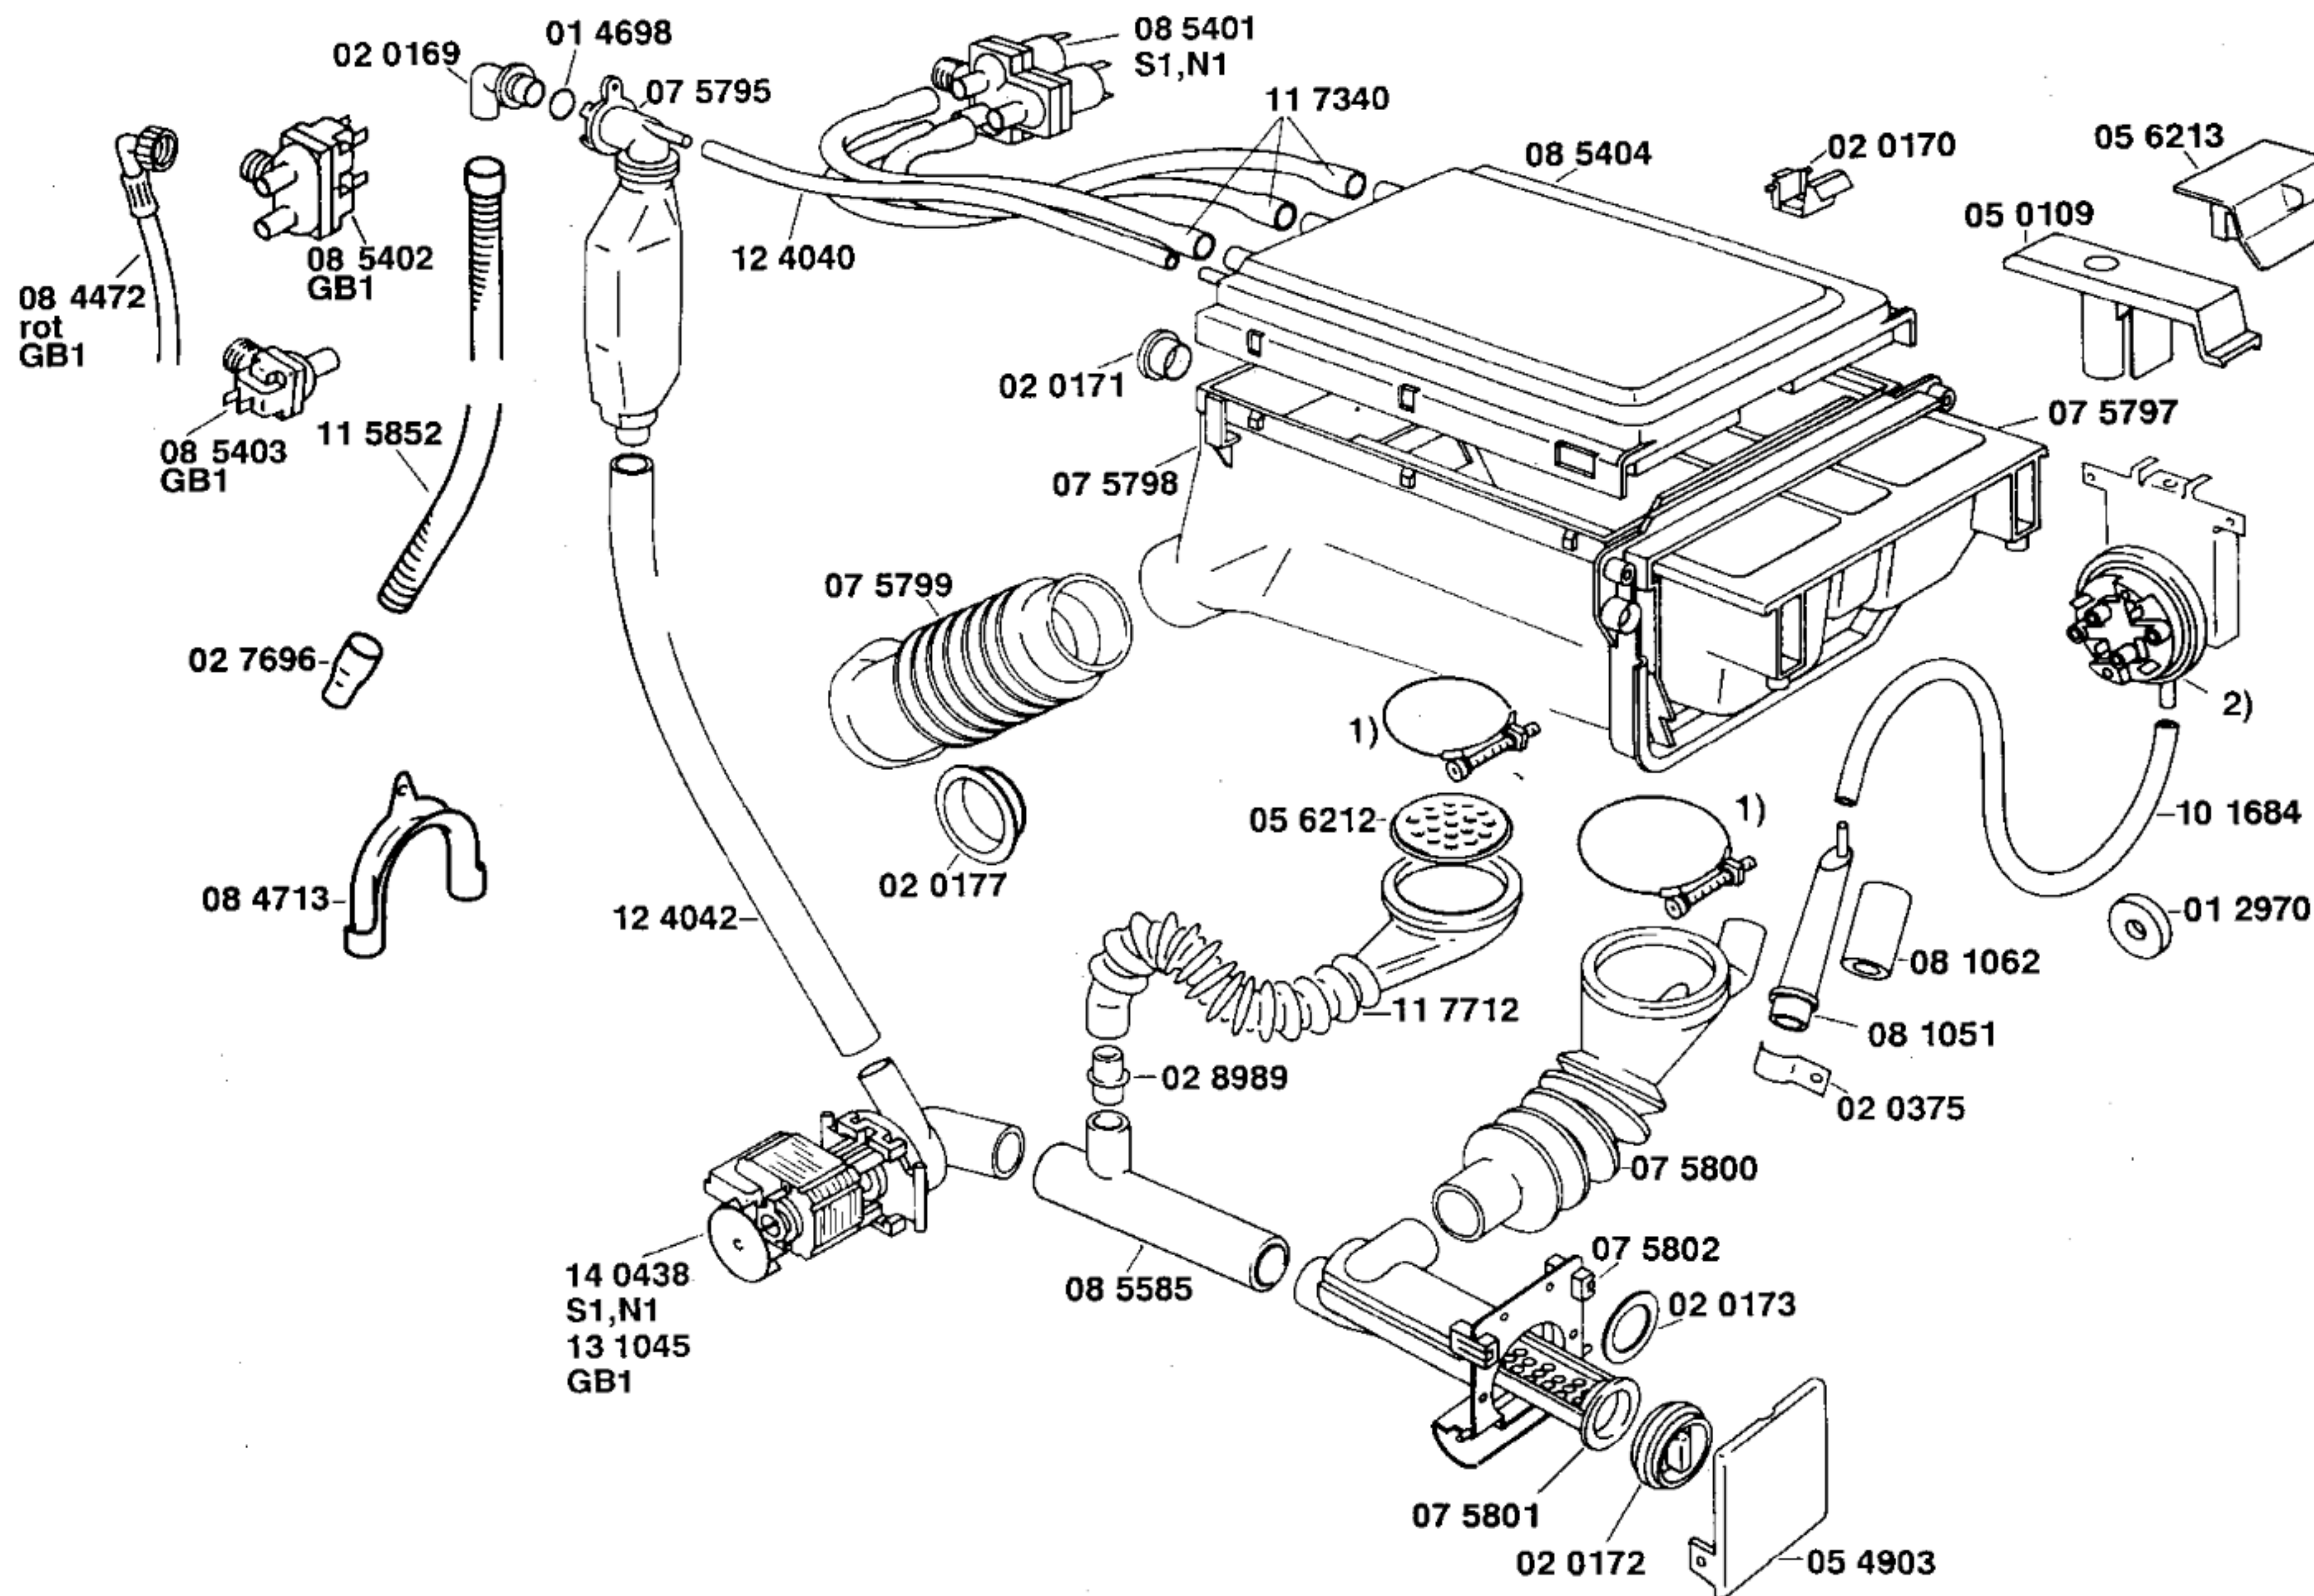

- 1) 04 5844
2) 05 4656
GB1,N1,S1