


- | | | |
|---------------|---------------|------------|
| 1) 02 8476 | 2) 03 0109 | 3) 02 8470 |
| D1,D3,DK1,DK2 | D1,D3,DK1,DK2 | 4) 02 8392 |
| 02 8696 | 03 0339 | 5) 05 6947 |
| D2,D4 | D2,D4 | |

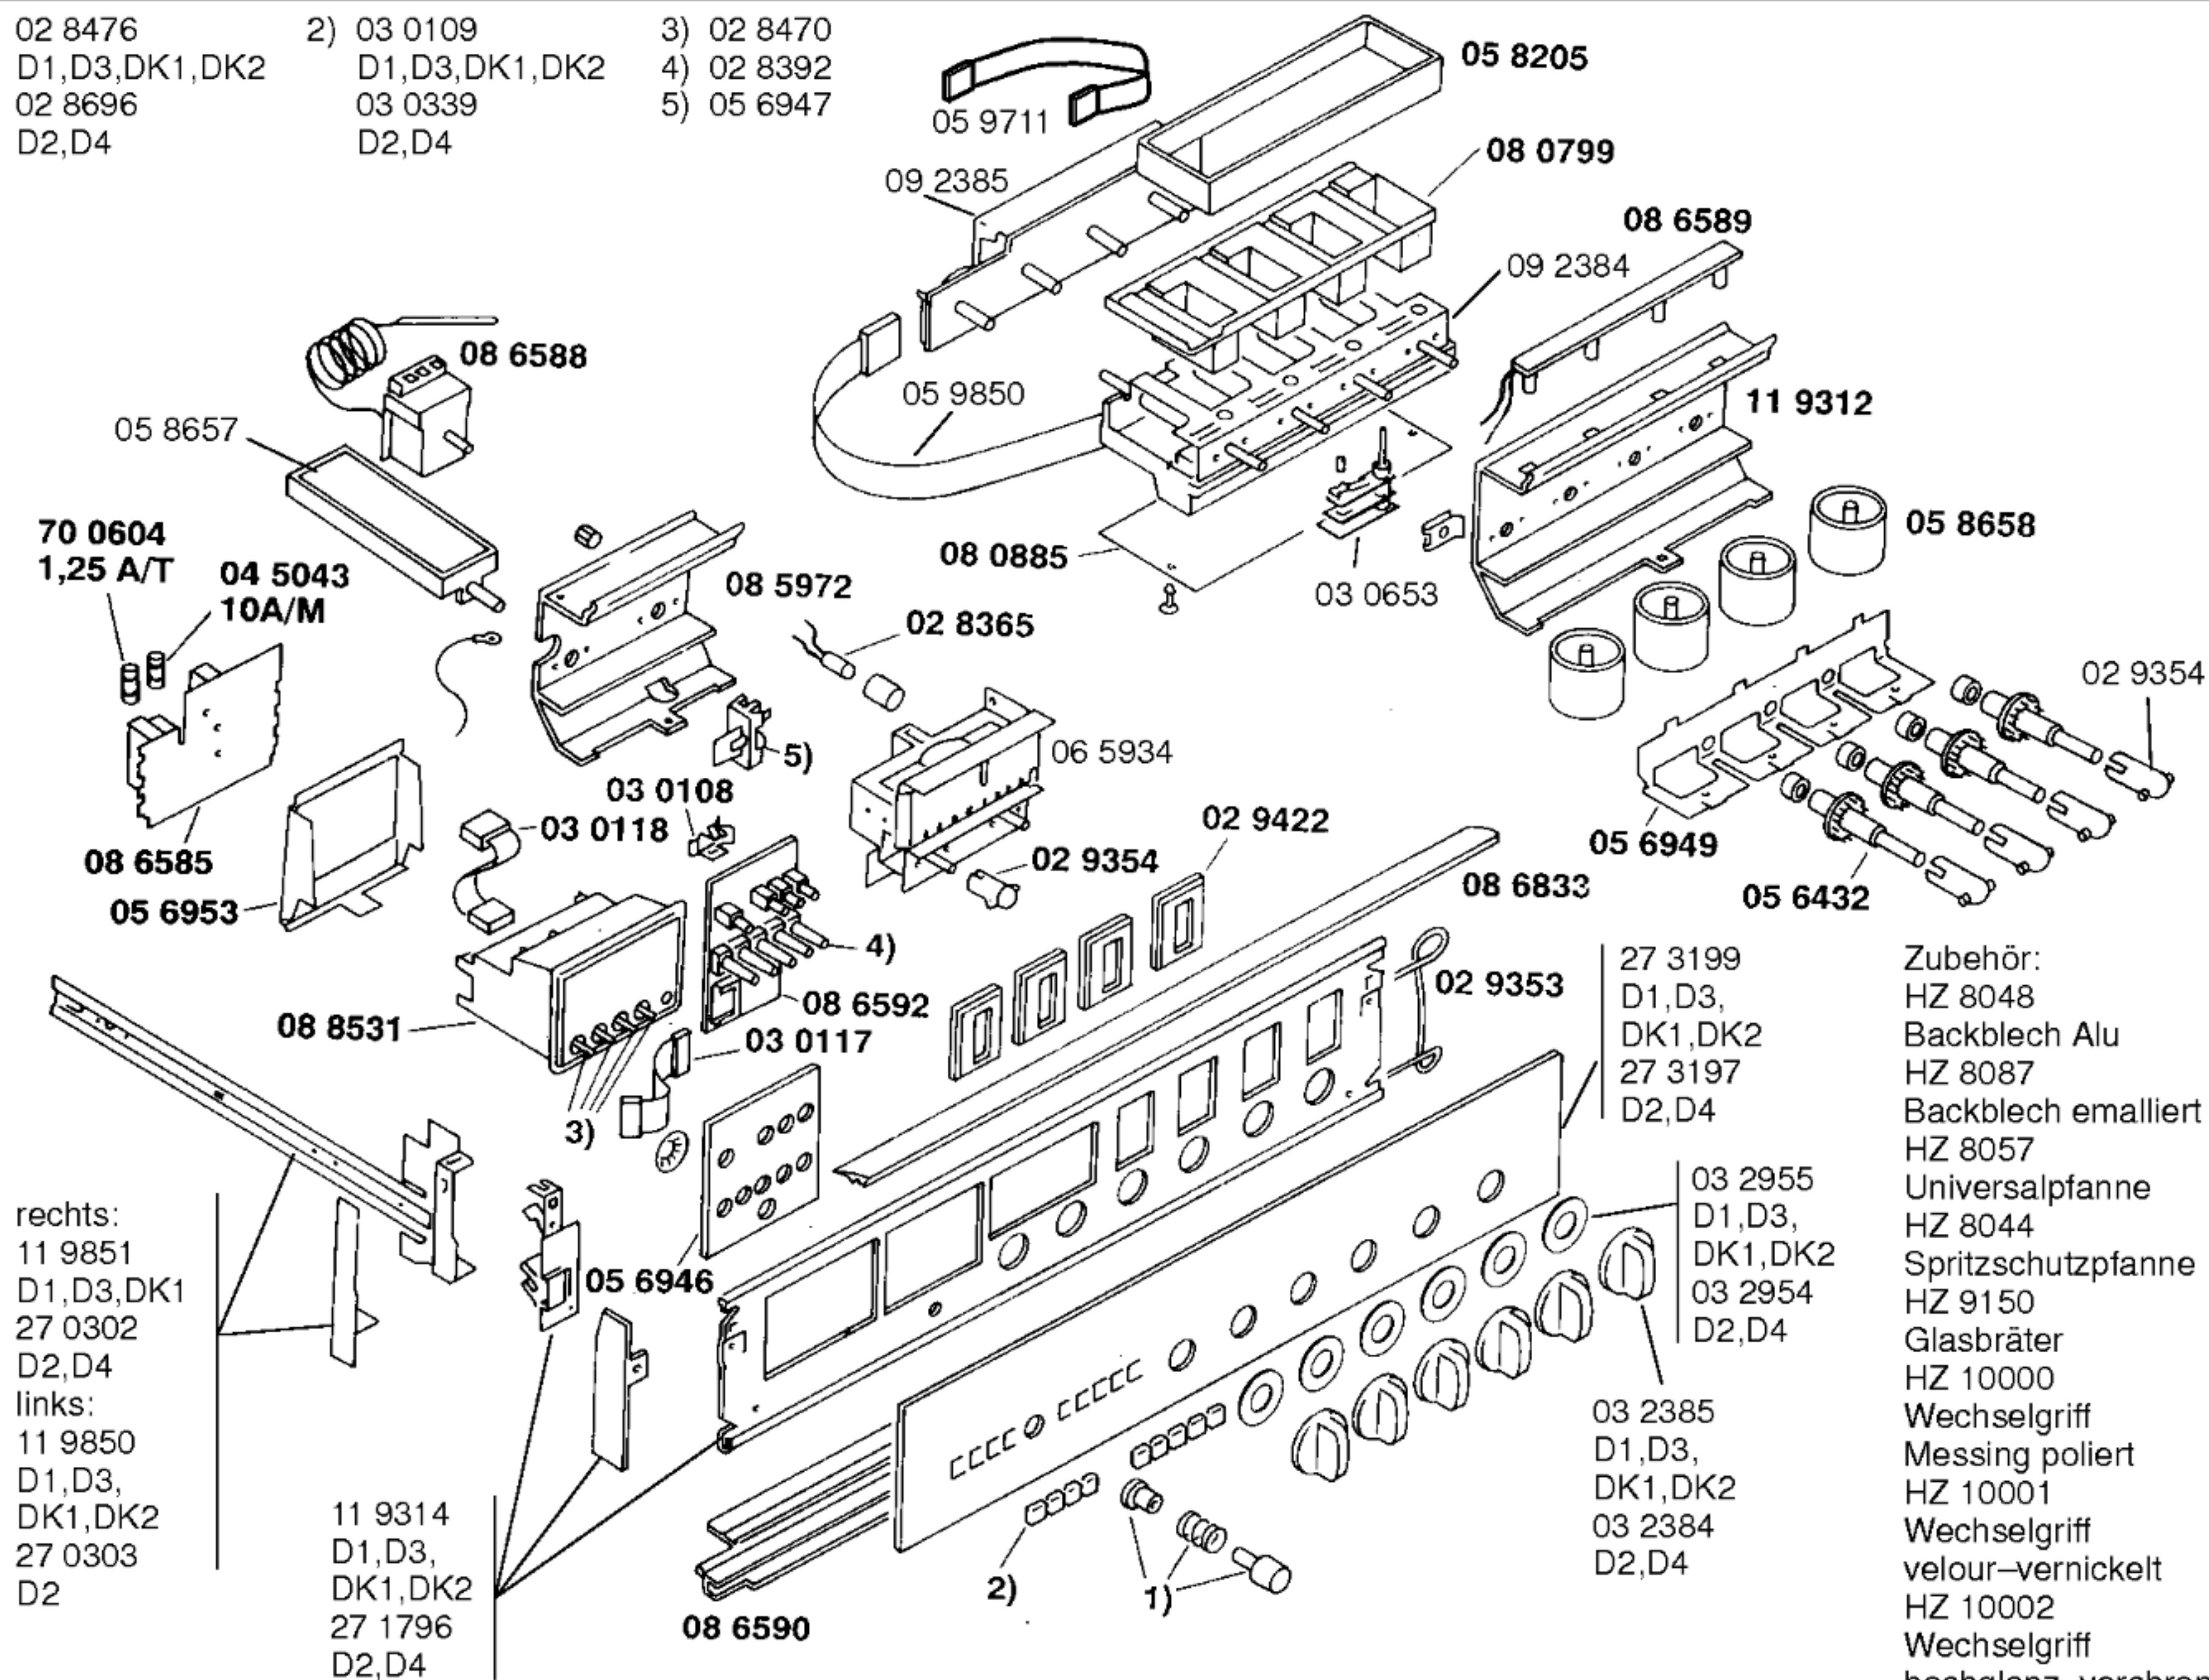

| Gebrauchsanweisung

51 5778
(D,GB,F,NL,E)
D1,D2,D3,D4
51 5868
(N,DK)
DK1,DK2

Montageanleitung

51 5519
(D,F,GB,I,NL,DK)

Bratzeit-Automatik-Wählscheibe

51 3359
(D,F,GB,I,NL)
D1,D2,D3,D4

Faltblatt

51 3533
DK

Kochbuch

51 4784

(D)

D1,D2,D3,D4

Kochbroschüre

51 4362

(DK)

DK1,DK2

Zubehör:

HZ 8048

Backblech Alu

HZ 8087

Backblech emailiert

HZ 8057

Universalpfanne

HZ 8044

Spritzschutzpfanne

HZ 9150

Glasbräter

HZ 10000

Wechselgriff

Messing poliert

HZ 10001

Wechselgriff

velour—vernicket

HZ 10002

Wechselgriff
hochglanz-verchromt

