



Electrolux

SPARE PARTS LIST

Fabric Care

3485


Item	PNC	ELC	Brand	Model	Market
A	900943157	00	Electrolux	E5GS1-89BM	THE
B	900943265	00	Electrolux	E5GS1-89BM	VNE
C	900943158	00	Electrolux	E5GS1-89BM	MYH
D	900943159	00	Electrolux	E5GS1-89BM	TW

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.


When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.

		Fabric Care	
BA Technical documentation COE 1910 Electrolux Building New Petchburi Rd. Bangkapi Huaykwang Bangkok , 10310 Tel : +662 725 9000			
Publication-No. 599841106 Publication-date 2020 10 07			

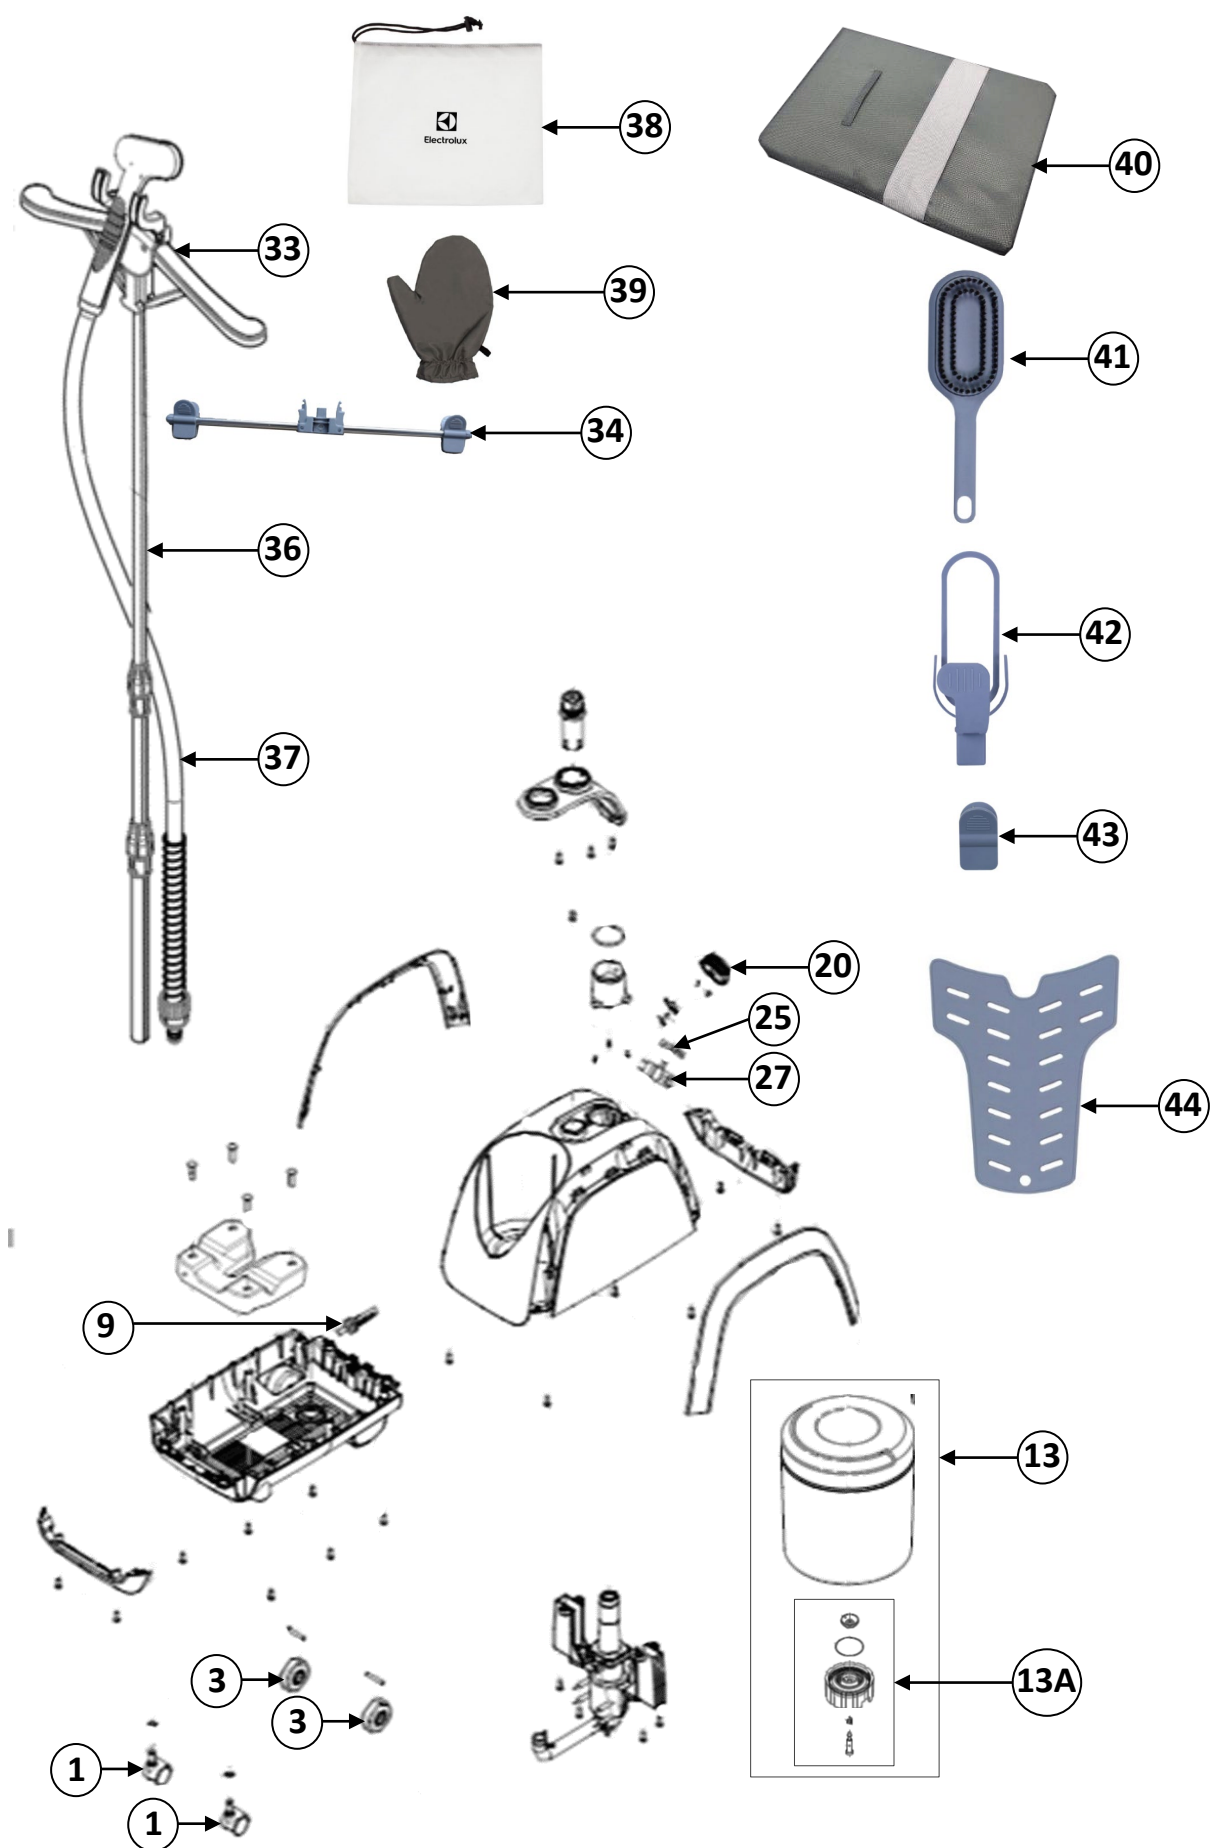

Item	PNC	ELC	Brand	Model	Market
A	900943157	00	Electrolux	E5GS1-89BM	THE
B	900943265	00	Electrolux	E5GS1-89BM	VNE
C	900943158	00	Electrolux	E5GS1-89BM	MYH
D	900943159	00	Electrolux	E5GS1-89BM	TW

Pos.	Part No.	Matrix				Description
1	B9540130001R	A	B	C	D	Universal wheels
3	B9643520001R	A	B	C	D	Directional wheels
9	B9561360003R	A				Power Cord TISI
	B9561360004R		B			Power Cord EU
	B9561360005R			C		Power Cord UK
	B9561360002R				D	Power Cord
13	B9562960002R	A	B	C	D	water tank assy
13A	B9566070001R	A	B	C	D	Non-returning valve
20	B9562280001R	A	B	C		Knob
25	B9564110001R	A	B	C		Switch fixer
27	B9562030001R	A	B	C		Swtich
33	B9546010001R	A	B	C		Cloth rack assy
34	B9545990001R	A	B	C		Trousers rack
36	B9546020001R	A	B	C		Knighthead assy
37	B9540020002R	A	B	C		Hose assy with graphics
38	B9560890001R	A	B	C		Accessory bag
39	B9545960001R	A	B	C		Scald proof glove
40	B950089Q701R	A	B	C		Auxiliary ironing board
41	B9545970001R	A	B	C		Static/Lint combined brush
42	B9546000001R	A	B	C		Line clamp
43	B9544110001R	A	B	C		Fixing clamp
44	B9566120001R	A	B	C		Ironing board for collar and sleeve
45	B9564860001R	A	B	C		Drain valve knob with seal ring

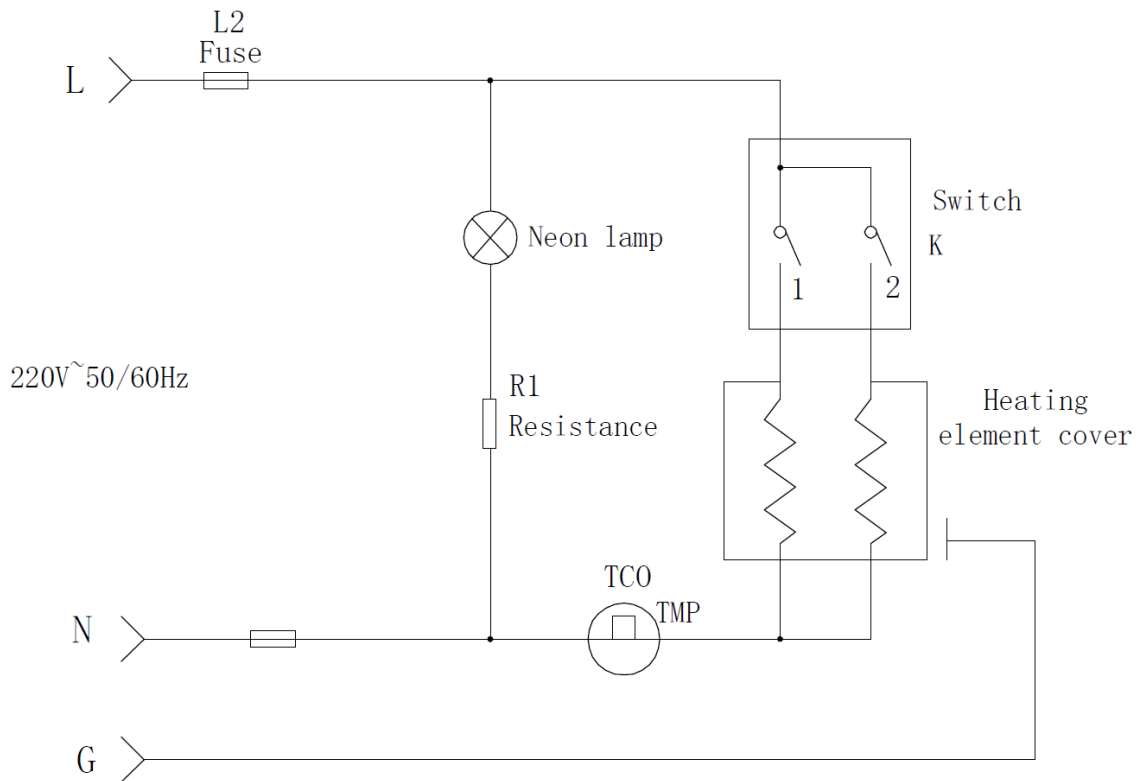**SAFETY WARNING**

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove ANY detachable parts while the machine is powered. The reason is internal faults may cause shorts to components that are normally at low voltage presenting a shock hazard.