



Item	PNC	ELC	Brand	Model	Market
A	900275943	00	Electrolux	EMB3005	THE
A	900275945	00	Electrolux	EMB3005	KRH
A	900276114	00	Electrolux	EMB3025	MYH
A	900276112	00	Electrolux	EMB3005	CHN

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.



Electrolux SEA Pte.,Ltd. APAC		Publication-No. 151217	Small Appliance Food Preparation Sportblender
----------------------------------	--	---------------------------	---

Model

PNC

Ex. View Drawing
Internal Parts and
Accessories

EMB3005	900275943
EMB3005	900275945
EMB3025	900276114
EMB3005	900276112

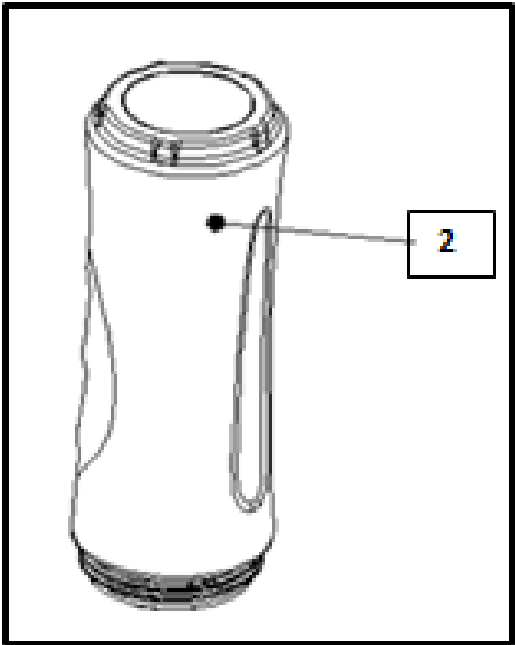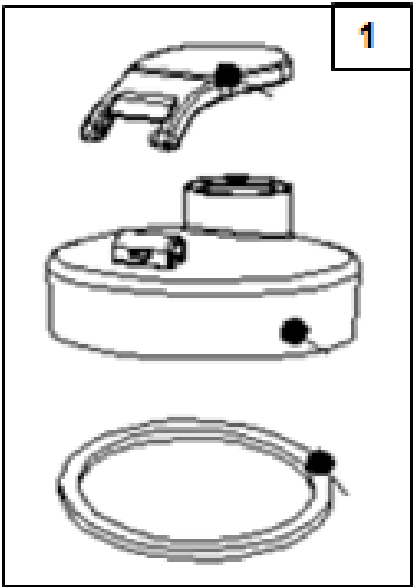

PNC	ELC	Brand	Model	Market
900275943	00	Electrolux	EMB3005	THE
900275945	00	Electrolux	EMB3005	KRH
900276114	00	Electrolux	EMB3025	MYH
900276112	00	Electrolux	EMB3005	CHN

Pos.	Part Code	Description	900275943	900275945	900276114	900276112
------	-----------	-------------	-----------	-----------	-----------	-----------

1	999404561	Lid Assembly	•	•	•	•
---	-----------	--------------	---	---	---	---

2	999404571	Bottle	•	•	•	•
---	-----------	--------	---	---	---	---