



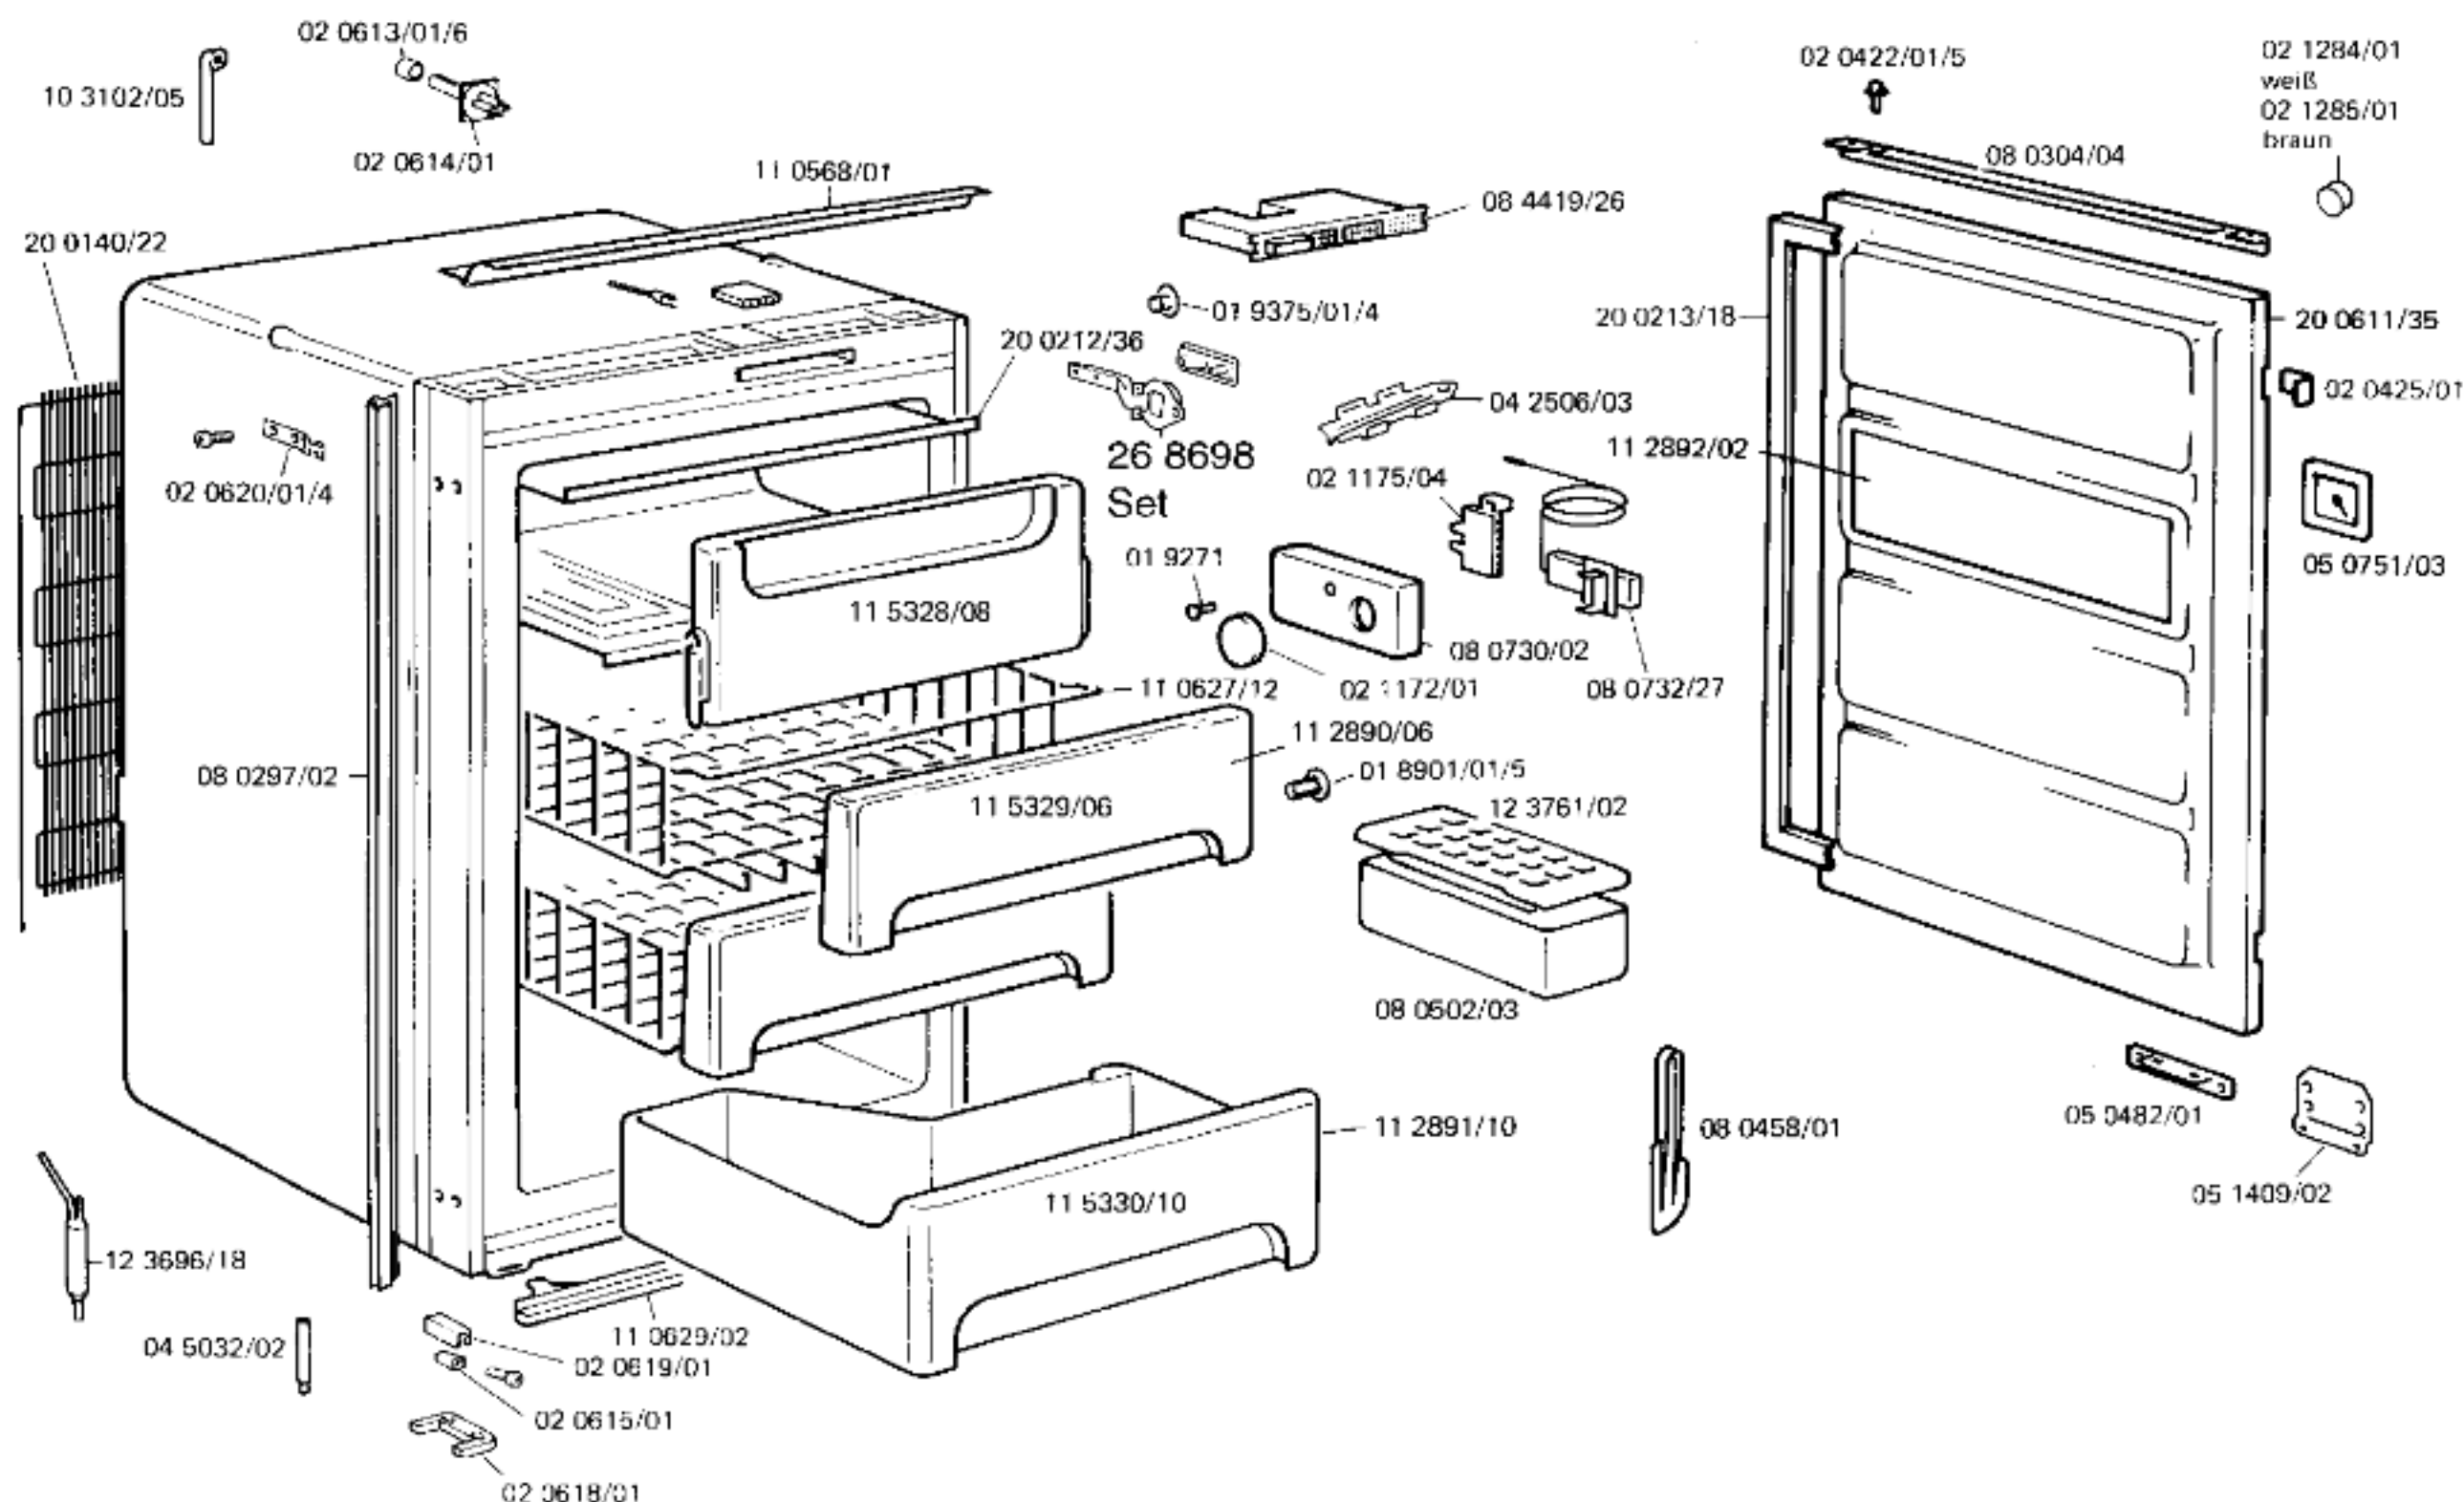

51 0384/00
 D1, D2, GB1, GB2, F1, F2
 Montageanleitung
 (D, GB, F, I, NL, DK,
 N, S, SF, E)

51 1409/00
 D1, D2, GB1, GB2, F1, F2
 Gebrauchsanweisung
 (D, GB, F, I, NL, DK,
 N, S, SF, E)

1) 05 0481/05
 D1, F1, GB1
 05 5099/05
 D2, F2, GB2

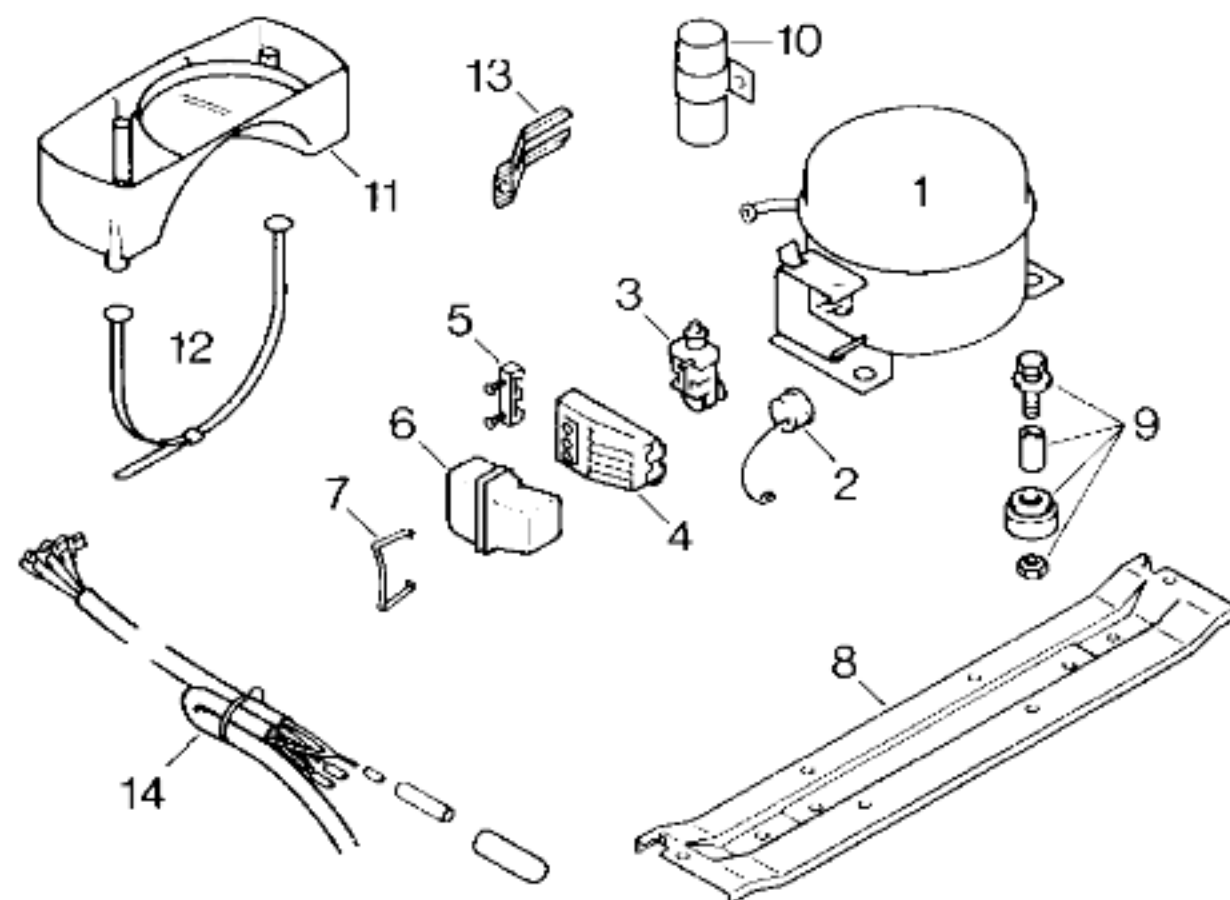

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss				
Typ/Type		TL 5 A				
Förderleistung/Delivery/Débit	l/h	V 920				
Anlaufstrom/Starting current/Cour. de démarrage	A	9,2				
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω 15,7				
	Hi/aux	Ω 18,8				
Temp.-Regler/Thermostat		M + J				
Typ/Type		TF 57 SF				
Reg.erstellung/Position		kalt	warm			
Schaltwerte/Switching values/	„ein“	-28	-19			
Valeurs de commutation	„aus“	-34	-26			
(„abtauen“ od.)	„alarm“	-20	-15			
Füllmenge/Fill.quantity/Charge	R12	g	90			
Anschlußwert/Conn.load/Puiss. connectée		W	120			
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance	Ω					
Leistung/Power/Puissance	W					
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance	Ω					
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance	Ω					
Spannung/Voltage/Tension	V					

Pos.	Danfoss			
1	14 0065/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				