



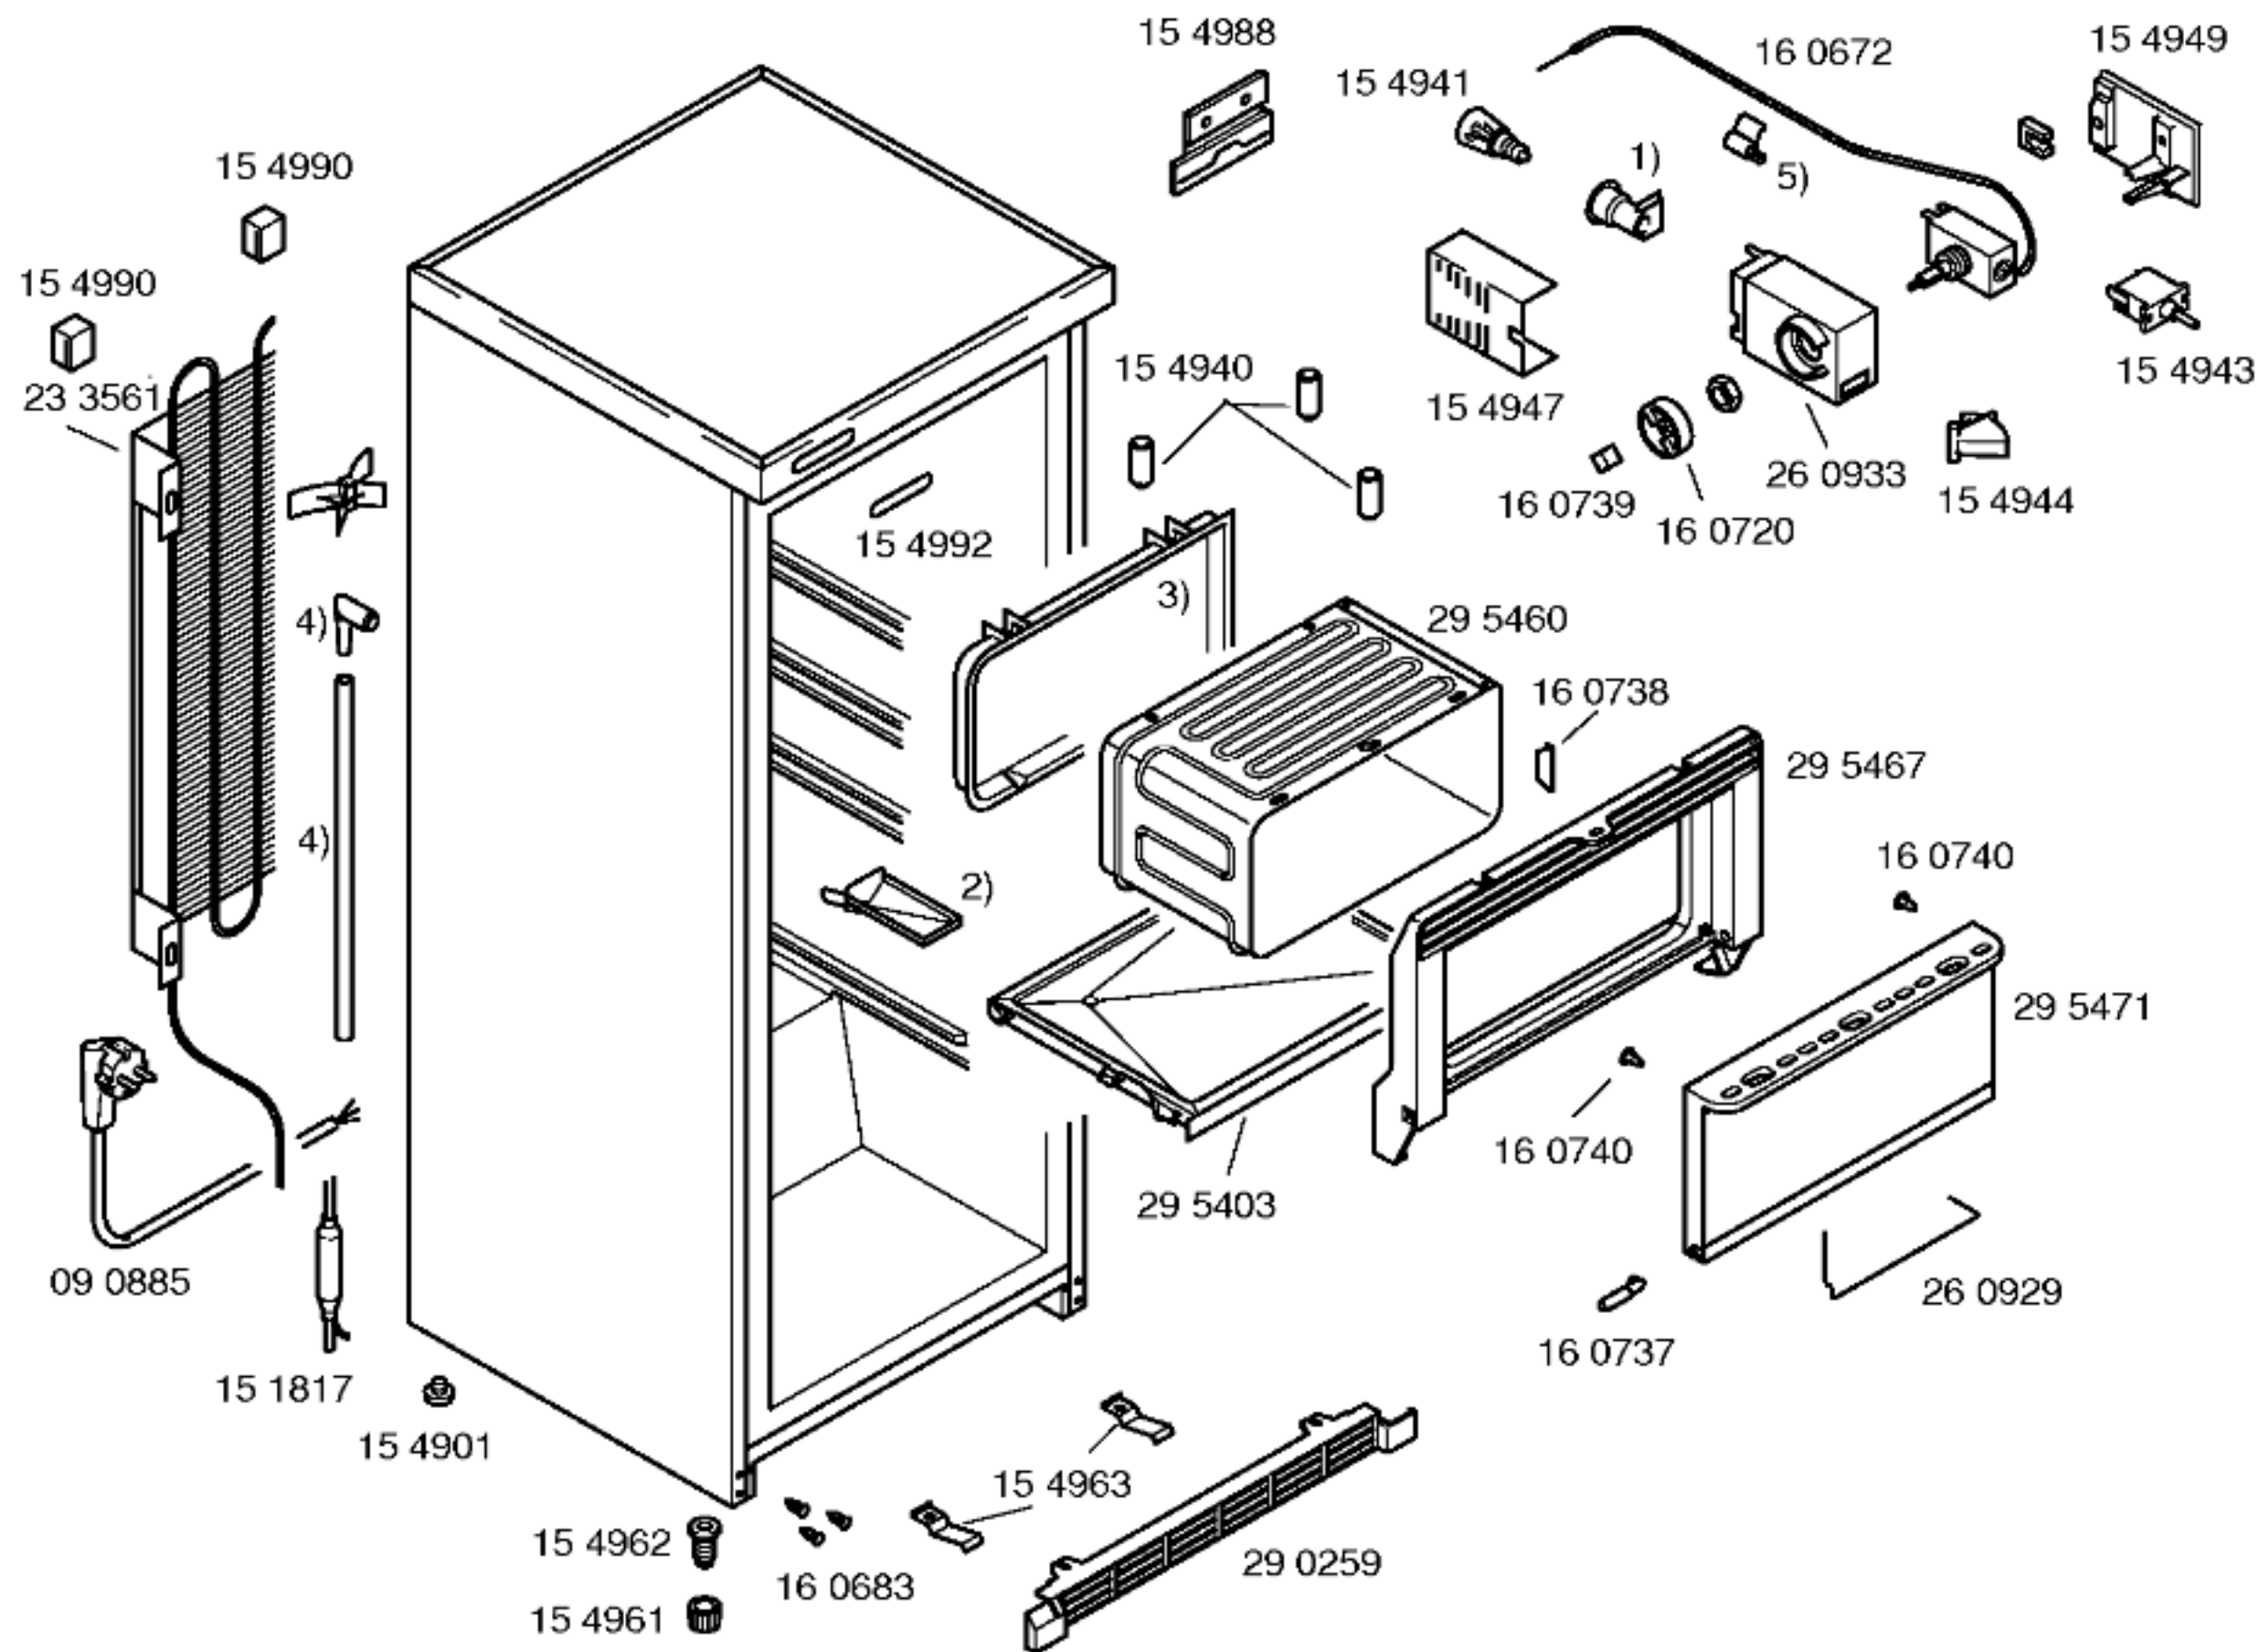


Libro de instrucciones
51 8644
(de,en,fr,es,it,pt)

Instrucciones de
reversibilidad
51 8645
(de,en,fr,nl,sv,no,
da,fi,es,pt,it)

- | | |
|----|---------|
| 1) | 15 4942 |
| 2) | 16 0736 |
| 3) | 29 5478 |
| 4) | 26 0934 |
| 5) | 15 4985 |

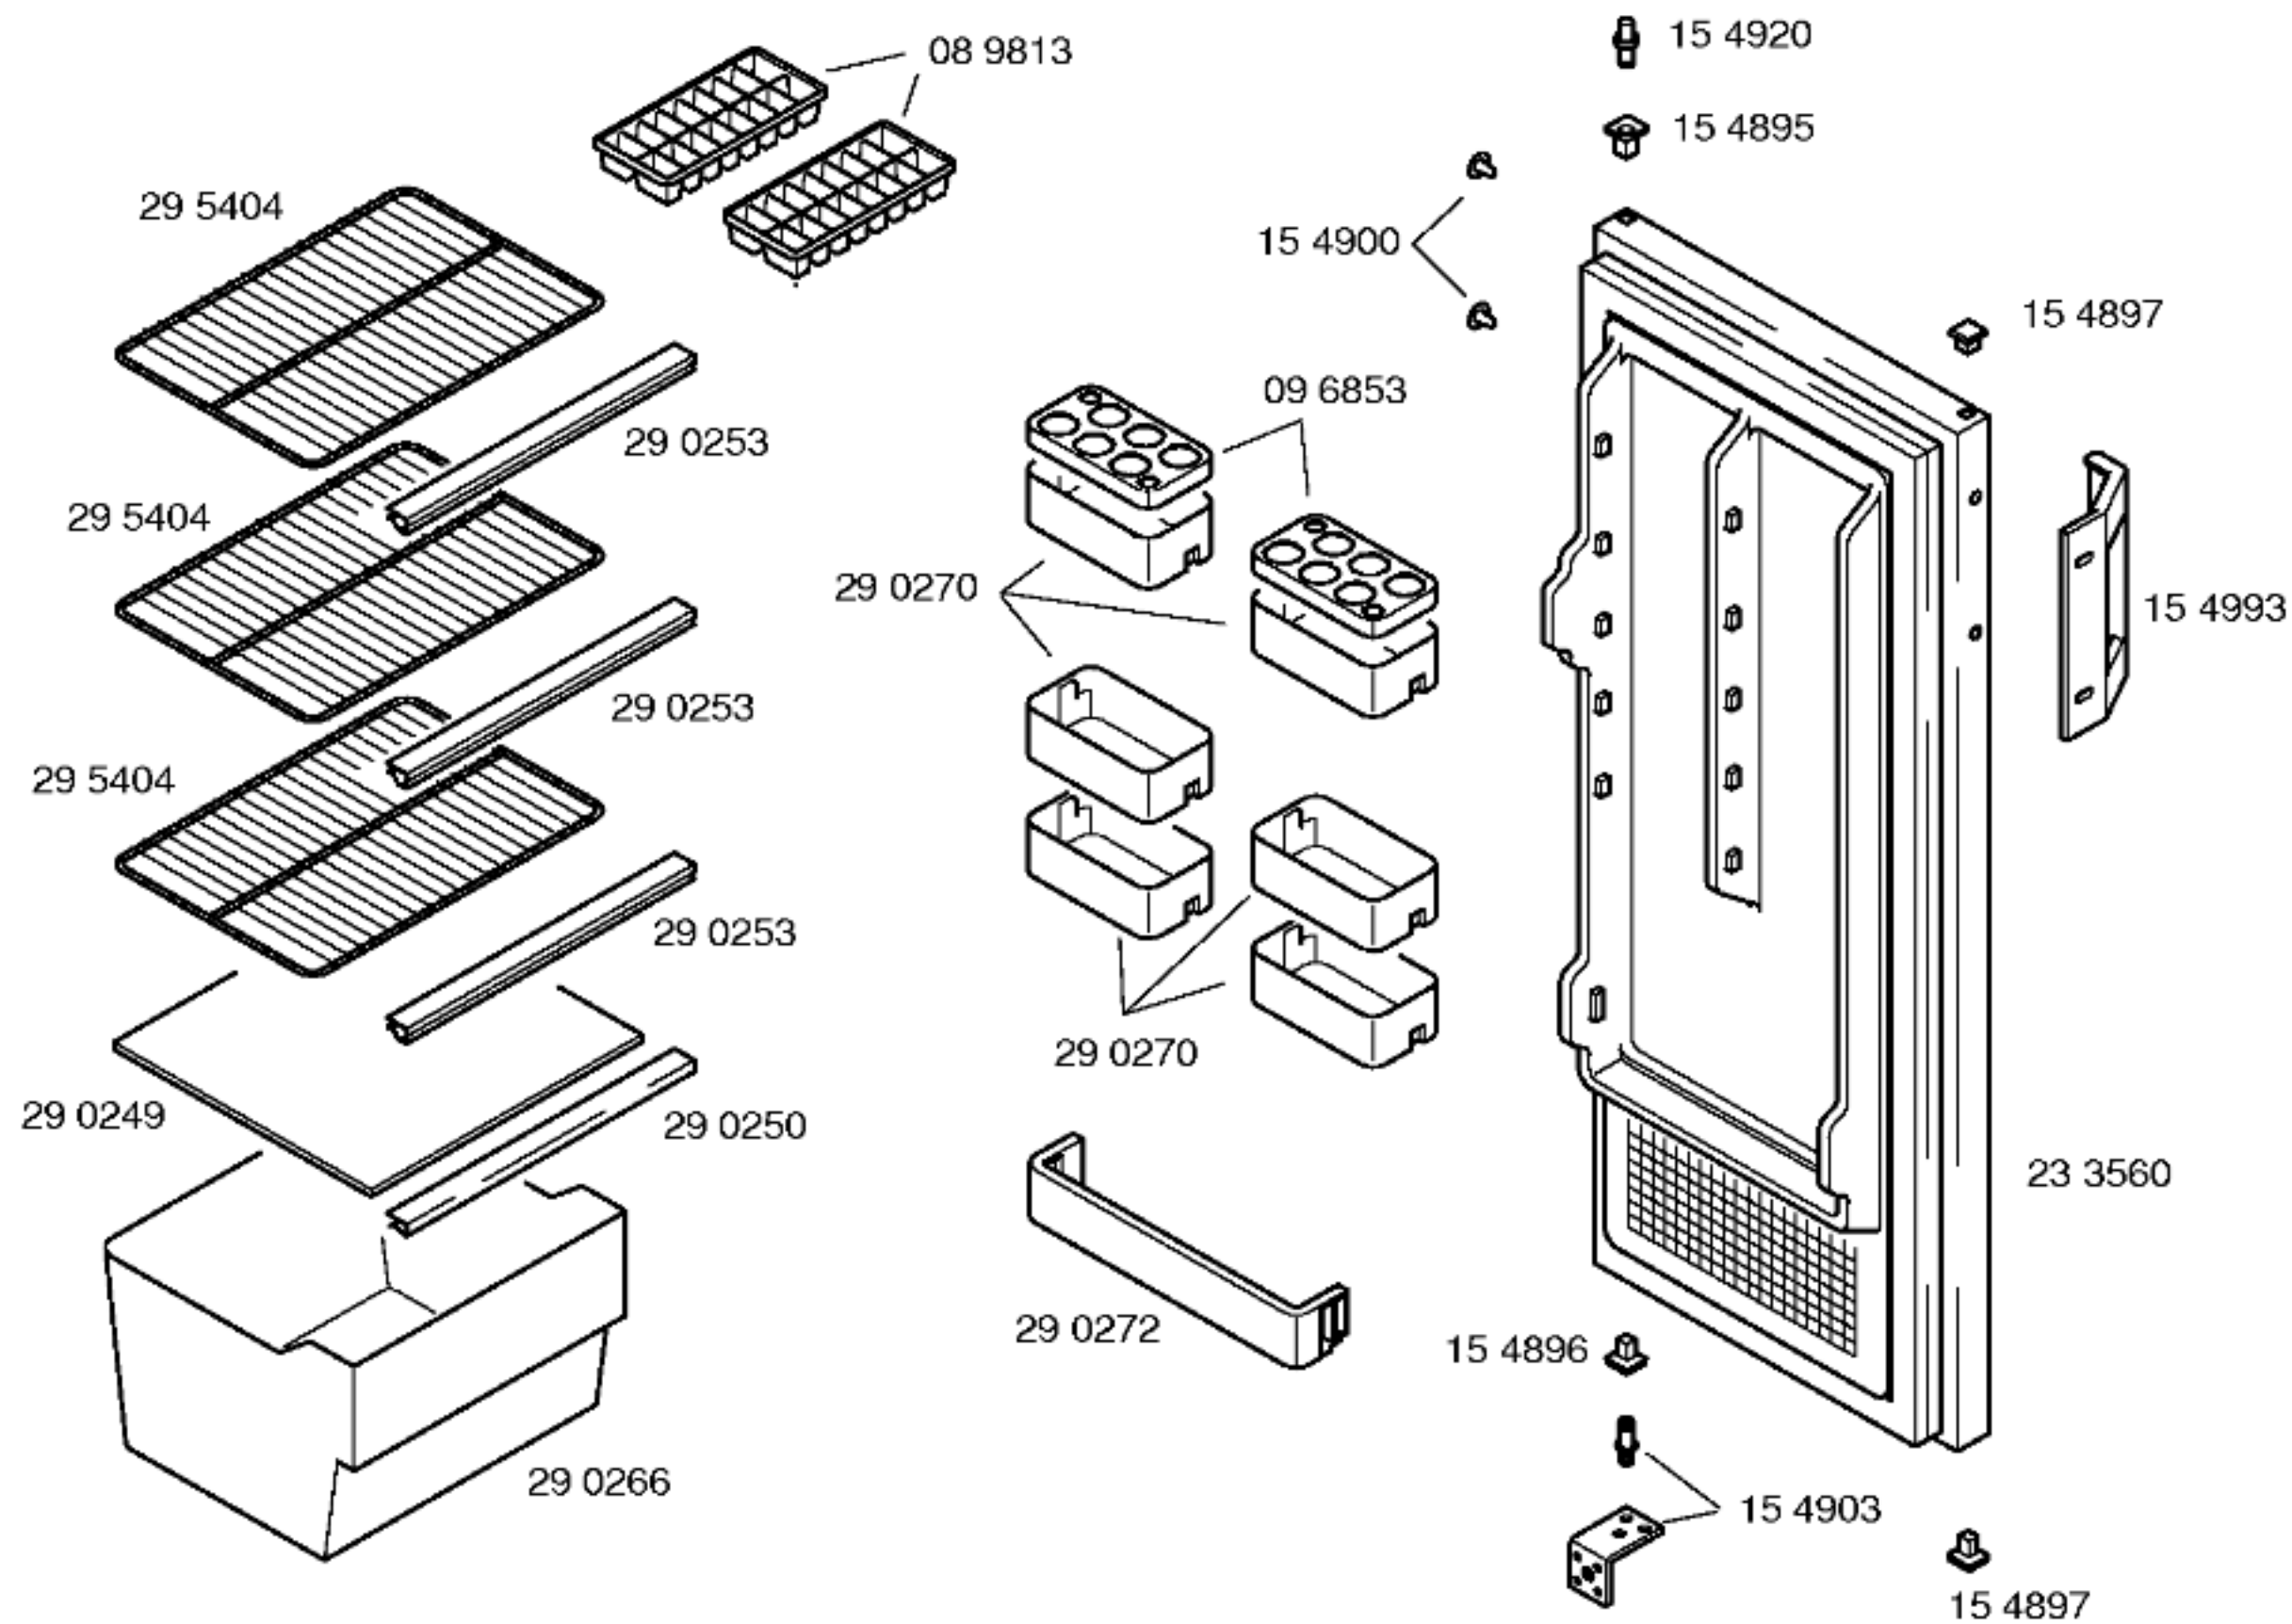

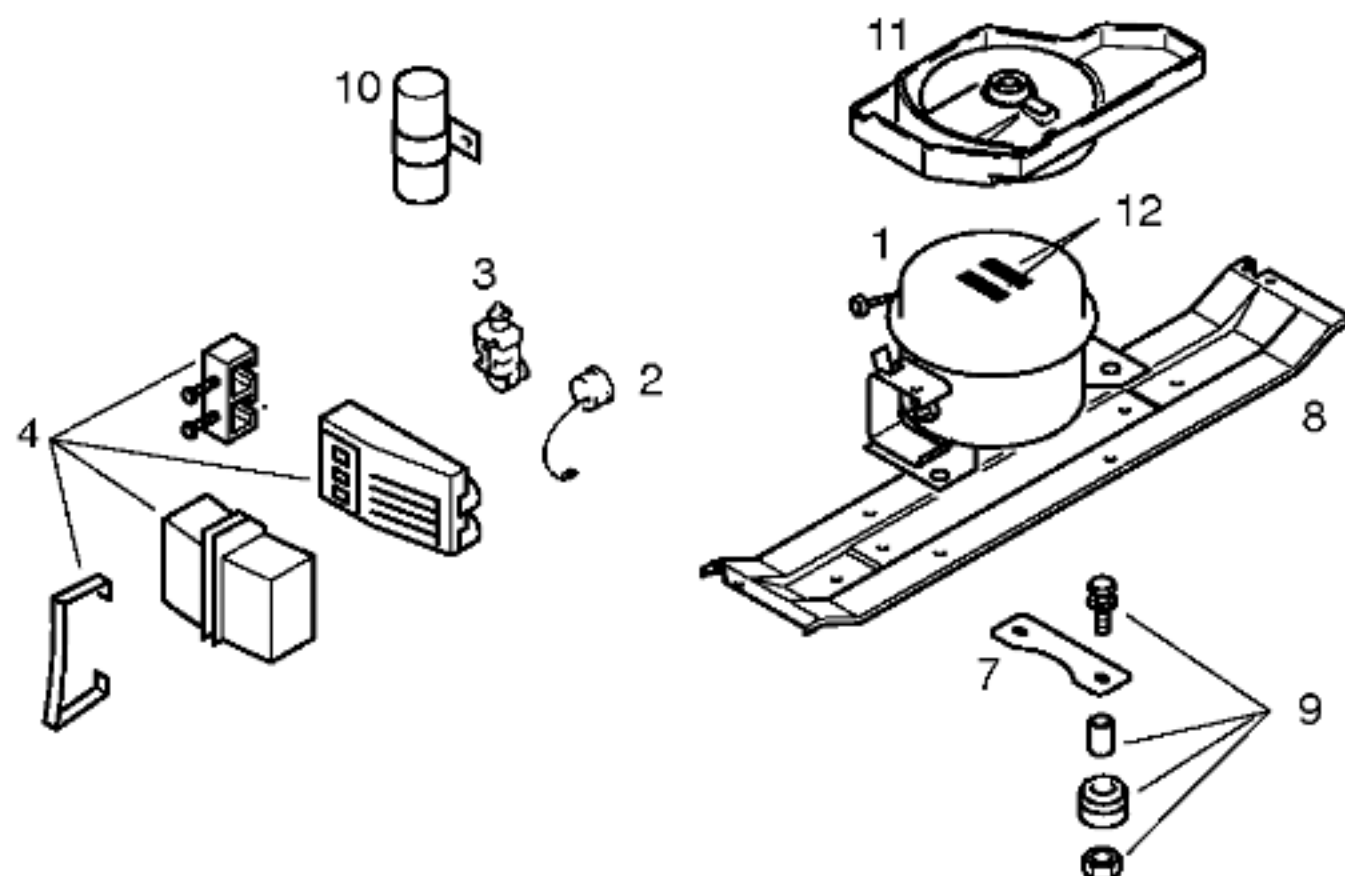

Pos.		NECCHI
	H6.AF.65	ETR 3.5
1	14 1517	14 1515
2	16 0721	16 0674
3	16 0722	16 0676
4		16 0681
5		
6		
7	15 4915	15 4915
8	29 0214	29 0214
9	15 4916	15 4916
10		
11	26 0930	26 0931
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	H6.AF.65	NECCHI ETR 3.5
---	----------	-------------------

Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'		
---	--	--

Füllmenge/Fill. quantily/Charge/Carga R134a	g	
---	---	--

Anschlußwert/Comm. load/puiss. Connect./Potenc.	W	
---	---	--

Heizung/Heater/Chaufrage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W	
---	----------	--

Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm	
---	-----	--

Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Volare/Tension/Tensión	Ohm V	
---	----------	--

Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		
--	--	--