 


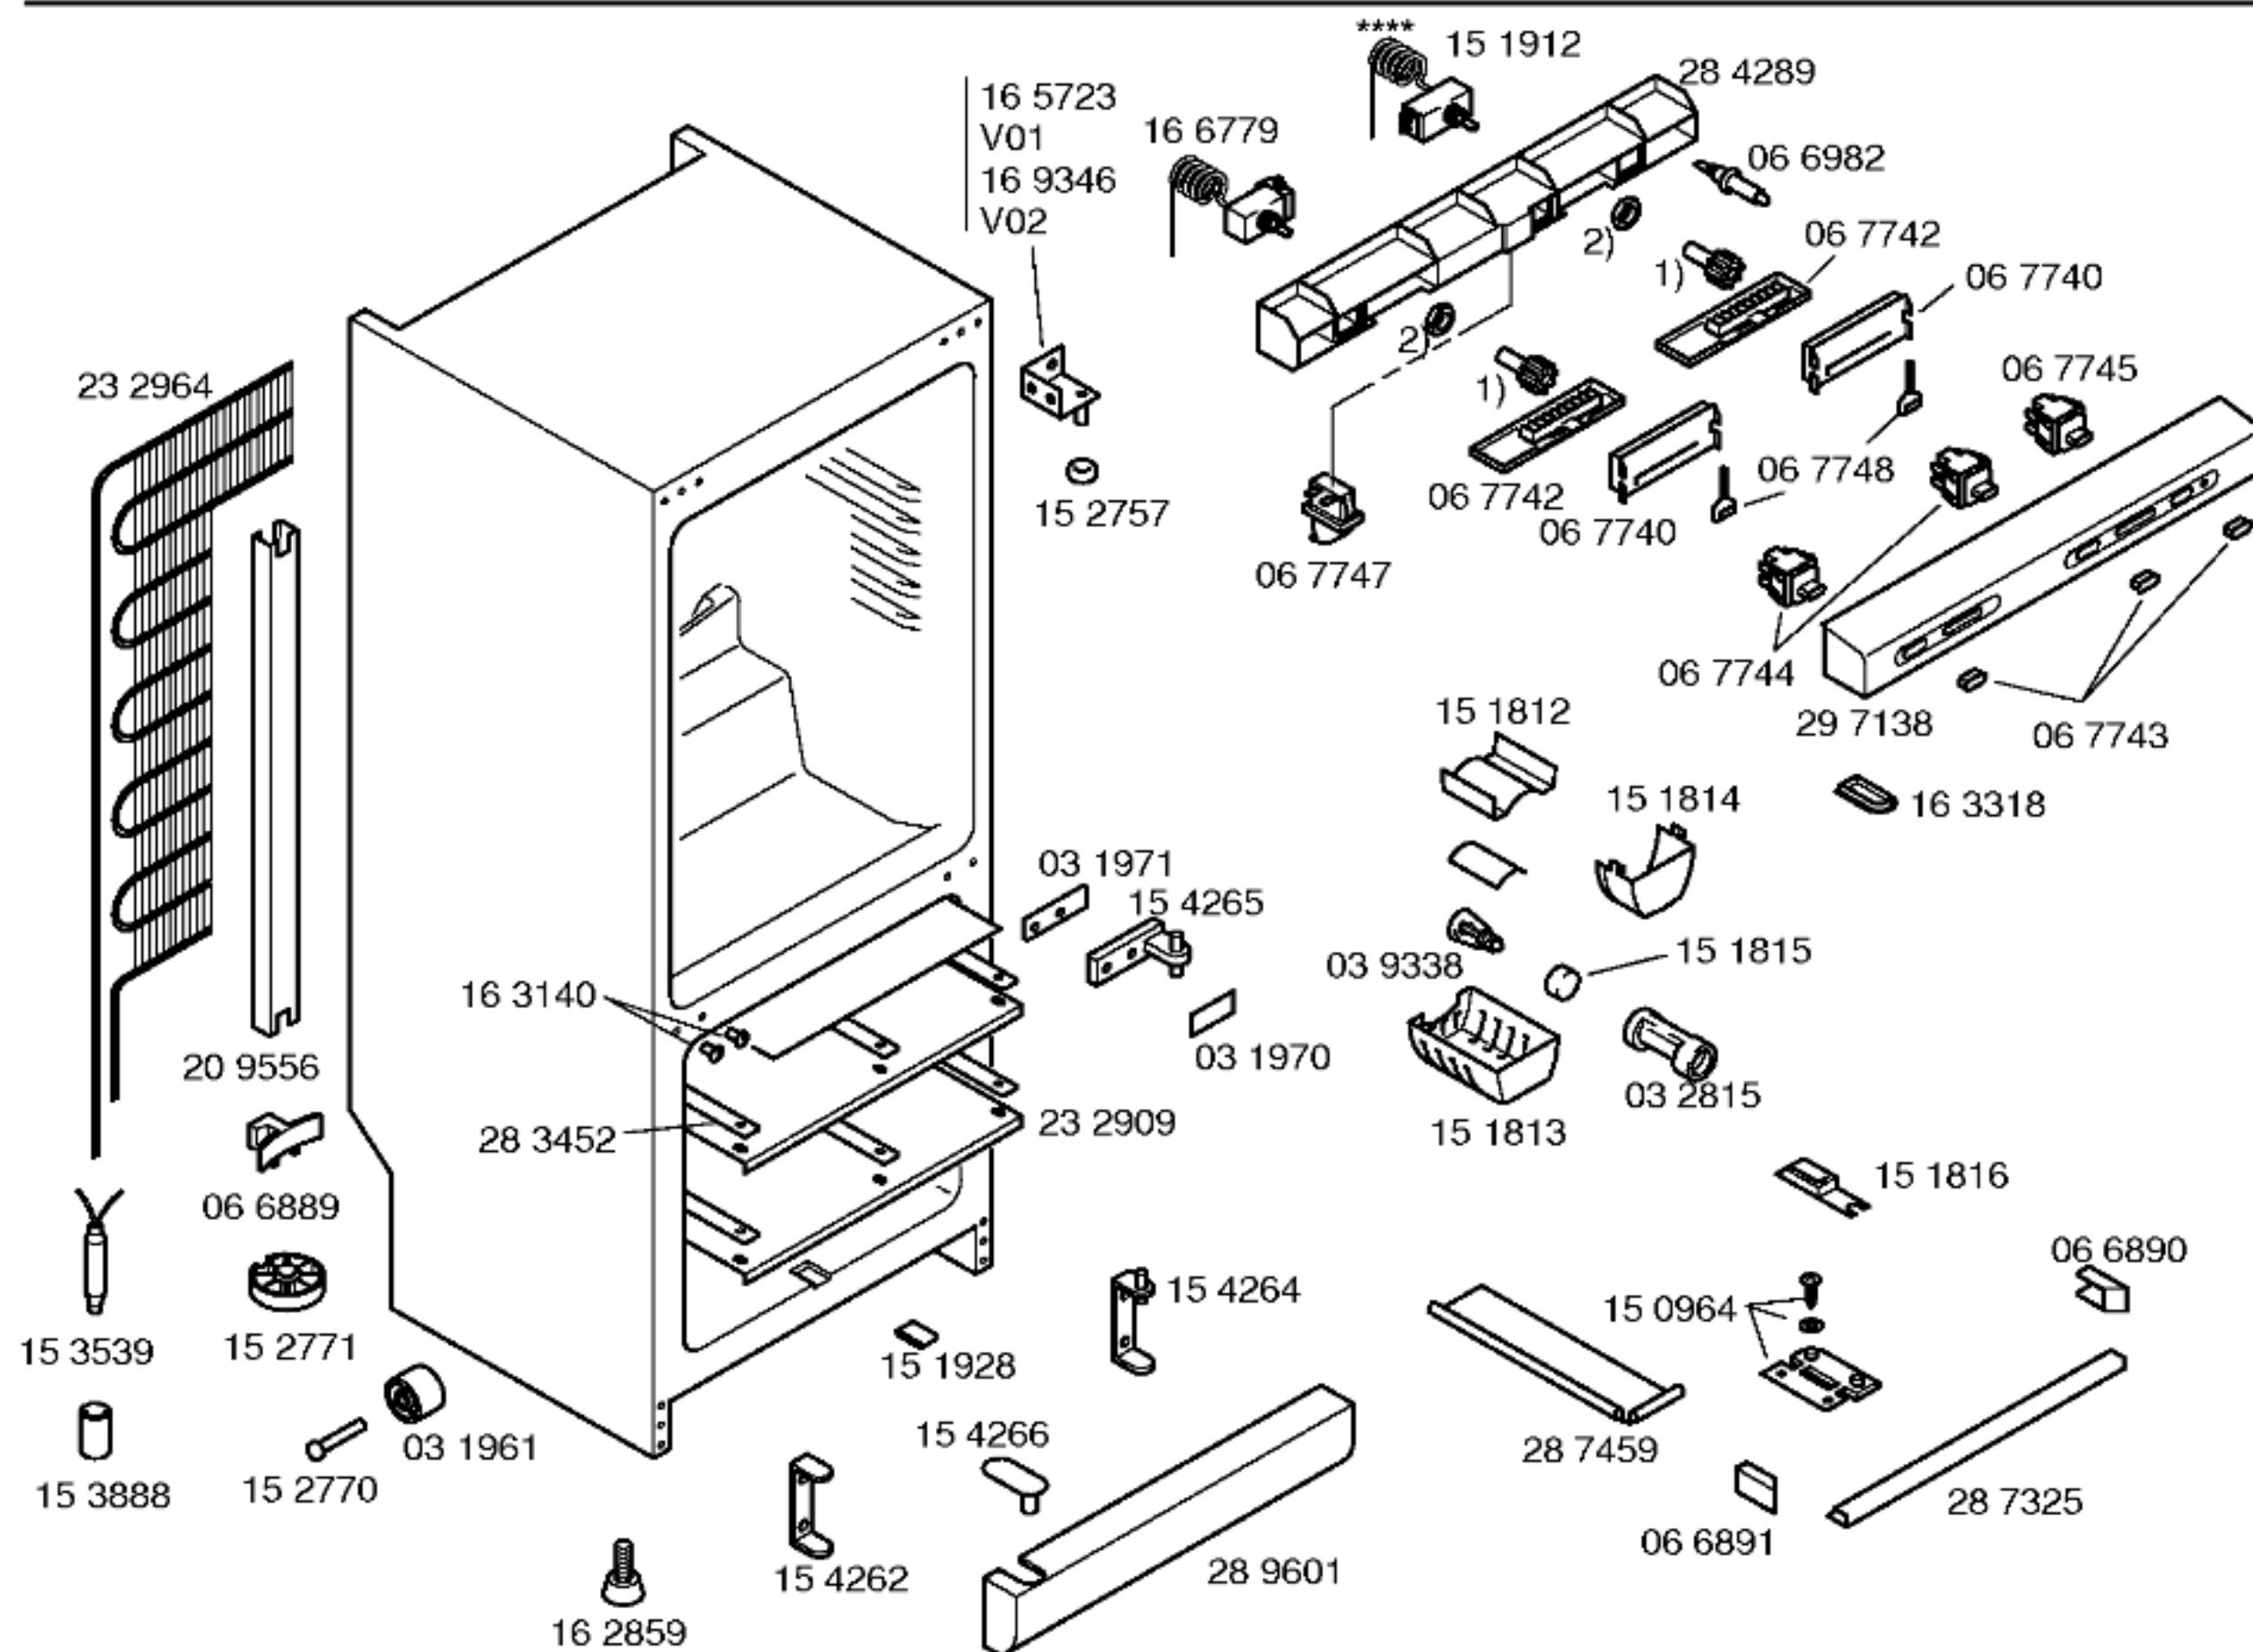


Libro de instrucciones  
51 7464  
(E,P,GB,F,NL,GR)


Libro de instrucciones  
R600a  
51 9240  
(E,GB,F,P,D,I,NL,N,GR,  
DK,S,SF,TR)

Instrucciones de montaje  
51 9729  
(D,GB,F,I,NL,E,P,GR)

Anexo ind. temp.  
52 0758  
(D,GB,F,I,NL,E,SF,  
S,N,GR,DK,P)

  1) 067746  
2) 03 3055

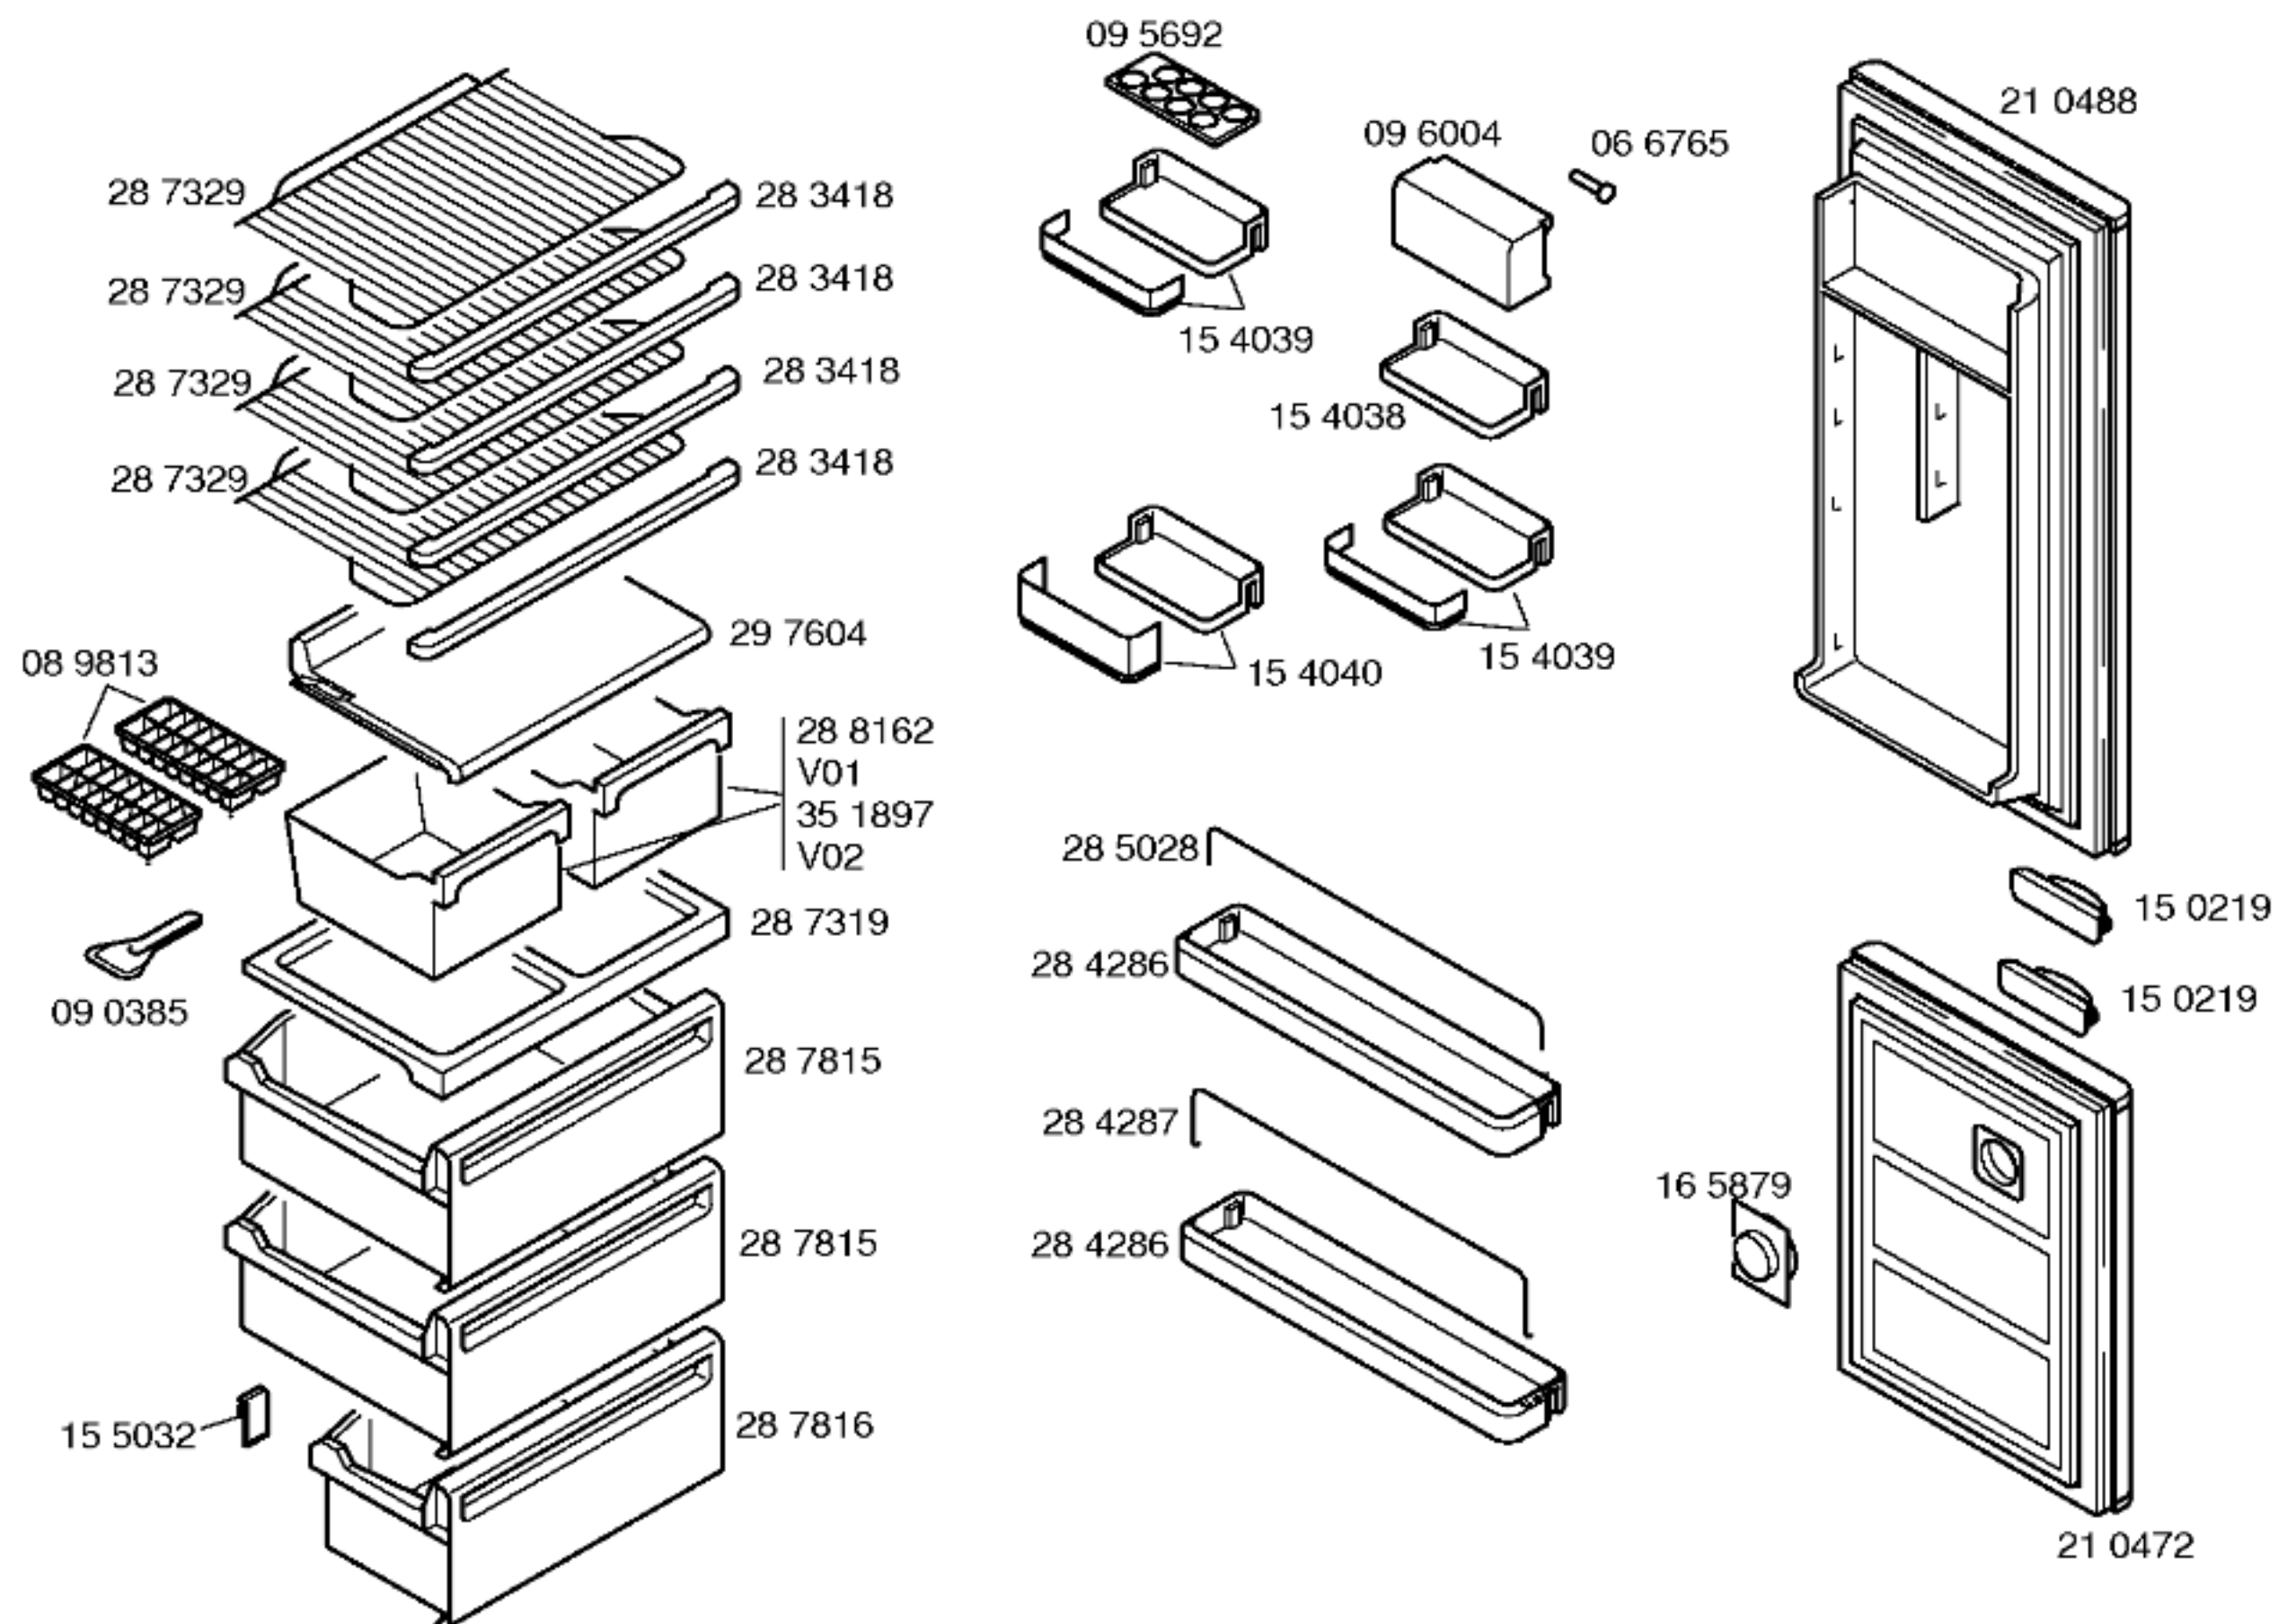

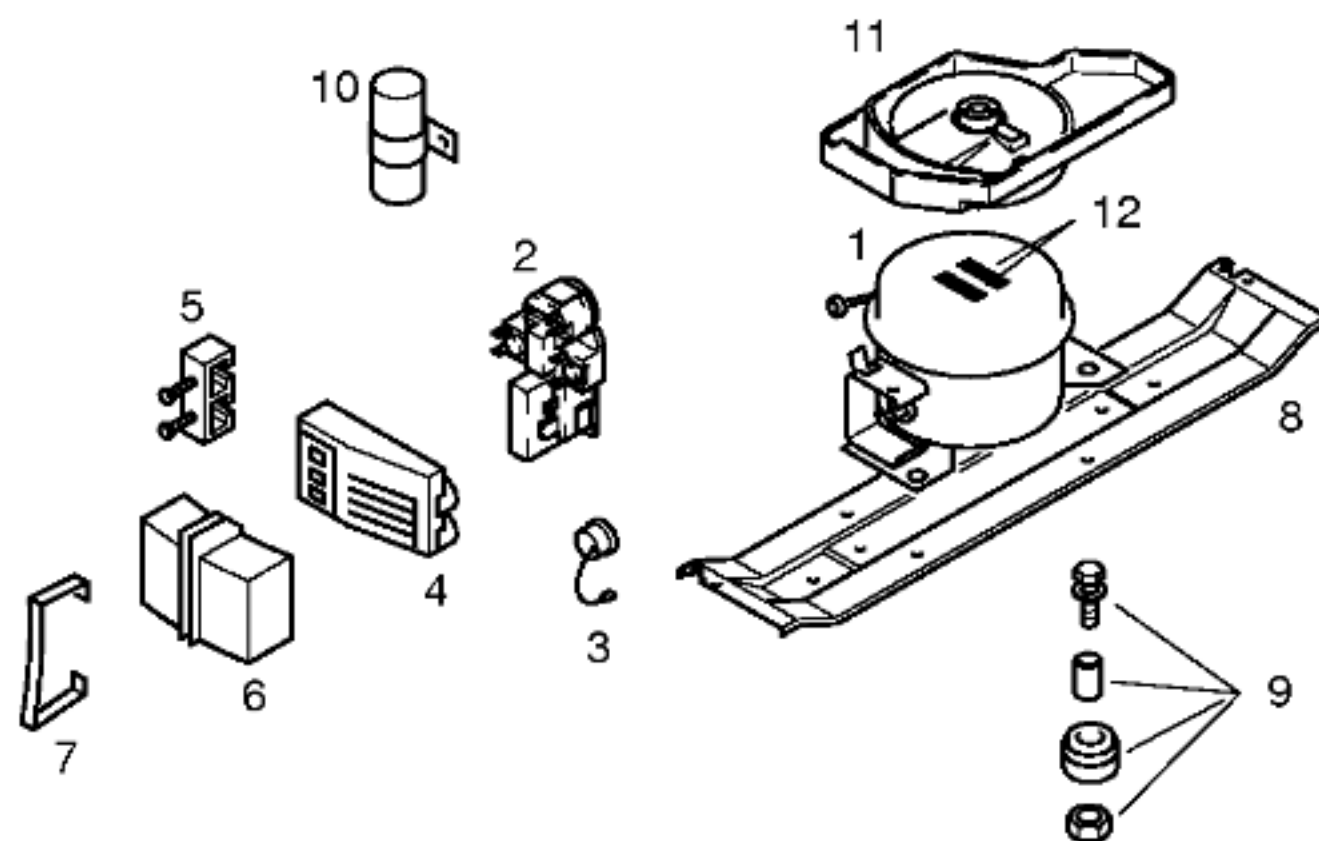

| Pos. | ****               |                    |  |  |
|------|--------------------|--------------------|--|--|
|      | Aspera<br>BPM1084Y | Aspera<br>BPM1110Y |  |  |
| 1    | 14 1723            | 14 1605            |  |  |
| 2    | 15 4315            | 15 4315            |  |  |
| 3    | 16 7769            | 16 5230            |  |  |
| 4    |                    |                    |  |  |
| 5    |                    |                    |  |  |
| 6    |                    |                    |  |  |
| 7    |                    |                    |  |  |
| 8    | 28 0162            | 28 0162            |  |  |
| 9    | 05 0166            | 05 0166            |  |  |
| 10   |                    |                    |  |  |
| 11   | 26 4123            |                    |  |  |
| 12   |                    |                    |  |  |
| 13   |                    |                    |  |  |

| TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS                                                                                                                                                                             |                                                               |                                                                  |    |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|------------------------------------------------------------------|----|
|                                                                                                                                                                                                                                               |                                                               | ****                                                             |    |
| Verdichter/Compressor/Compresseur/Compresor<br>Typ/Type/Tipo<br>Förderleistung/Delivery/Debit/Aspiración l/h<br>Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A<br>Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm<br>Hi/aux. | Aspera<br>BPM1084Y<br><br>3,60<br>29,60<br>38,50              | Aspera<br>BPM1110Y<br><br><br>24,70<br>37,65                     |    |
| Temp.Reyler/Thermostat/Termostato<br>Typ/Type/Tipo<br>Reglerstellung/Position/Conexión<br>Schaltwerte/Switching values/..<br>Valeurs de commutation/Desconex.<br>(..abtaven' od)                                                              | Danfoss<br>077B62<br>MIN. MAX<br>+6°<br>-14° -28°<br>..alarm' | Ranco<br>K54-L1924<br>MIN. MAX<br>-14° -24°<br>-21° -31°<br>-15° |    |
| Füllmenge/Fill. quantily/Charge/Carga R600a                                                                                                                                                                                                   | g                                                             | *                                                                | *  |
| Anschlusswert/Comm. load/Puiss. Connect./Potenc.                                                                                                                                                                                              | W                                                             | 71                                                               | 86 |
| Heizung/Heater/Chauflage/Resistenc.descong.<br>Widerstand/Resistance/Resistencia<br>Leistung/Power/Puissance/Potencia                                                                                                                         | Ohm<br>W                                                      |                                                                  |    |
| Ventilador/Blower/Ventilateur/Ventilador<br>Widerstand/Resistance/Resistencia                                                                                                                                                                 | Ohm                                                           |                                                                  |    |
| Magnetventil/Magnetic valve/Electrovanne/Electrovalvula<br>Widerstand/Resistance/Resistencia<br>Spannung/Voltage/Tension/Tensión                                                                                                              | Ohm<br>V                                                      |                                                                  |    |
| Temp.Reyler/Thermostat/Termostato ambiente para<br>ventilador refrigerador                                                                                                                                                                    |                                                               |                                                                  |    |

\* Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características