


**BOSCH**

V330-0722044496-D1,A1
 V330-0722044497-I1
 V330-0722044498-Exp.1
 V330-0722044499-N1,SF1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

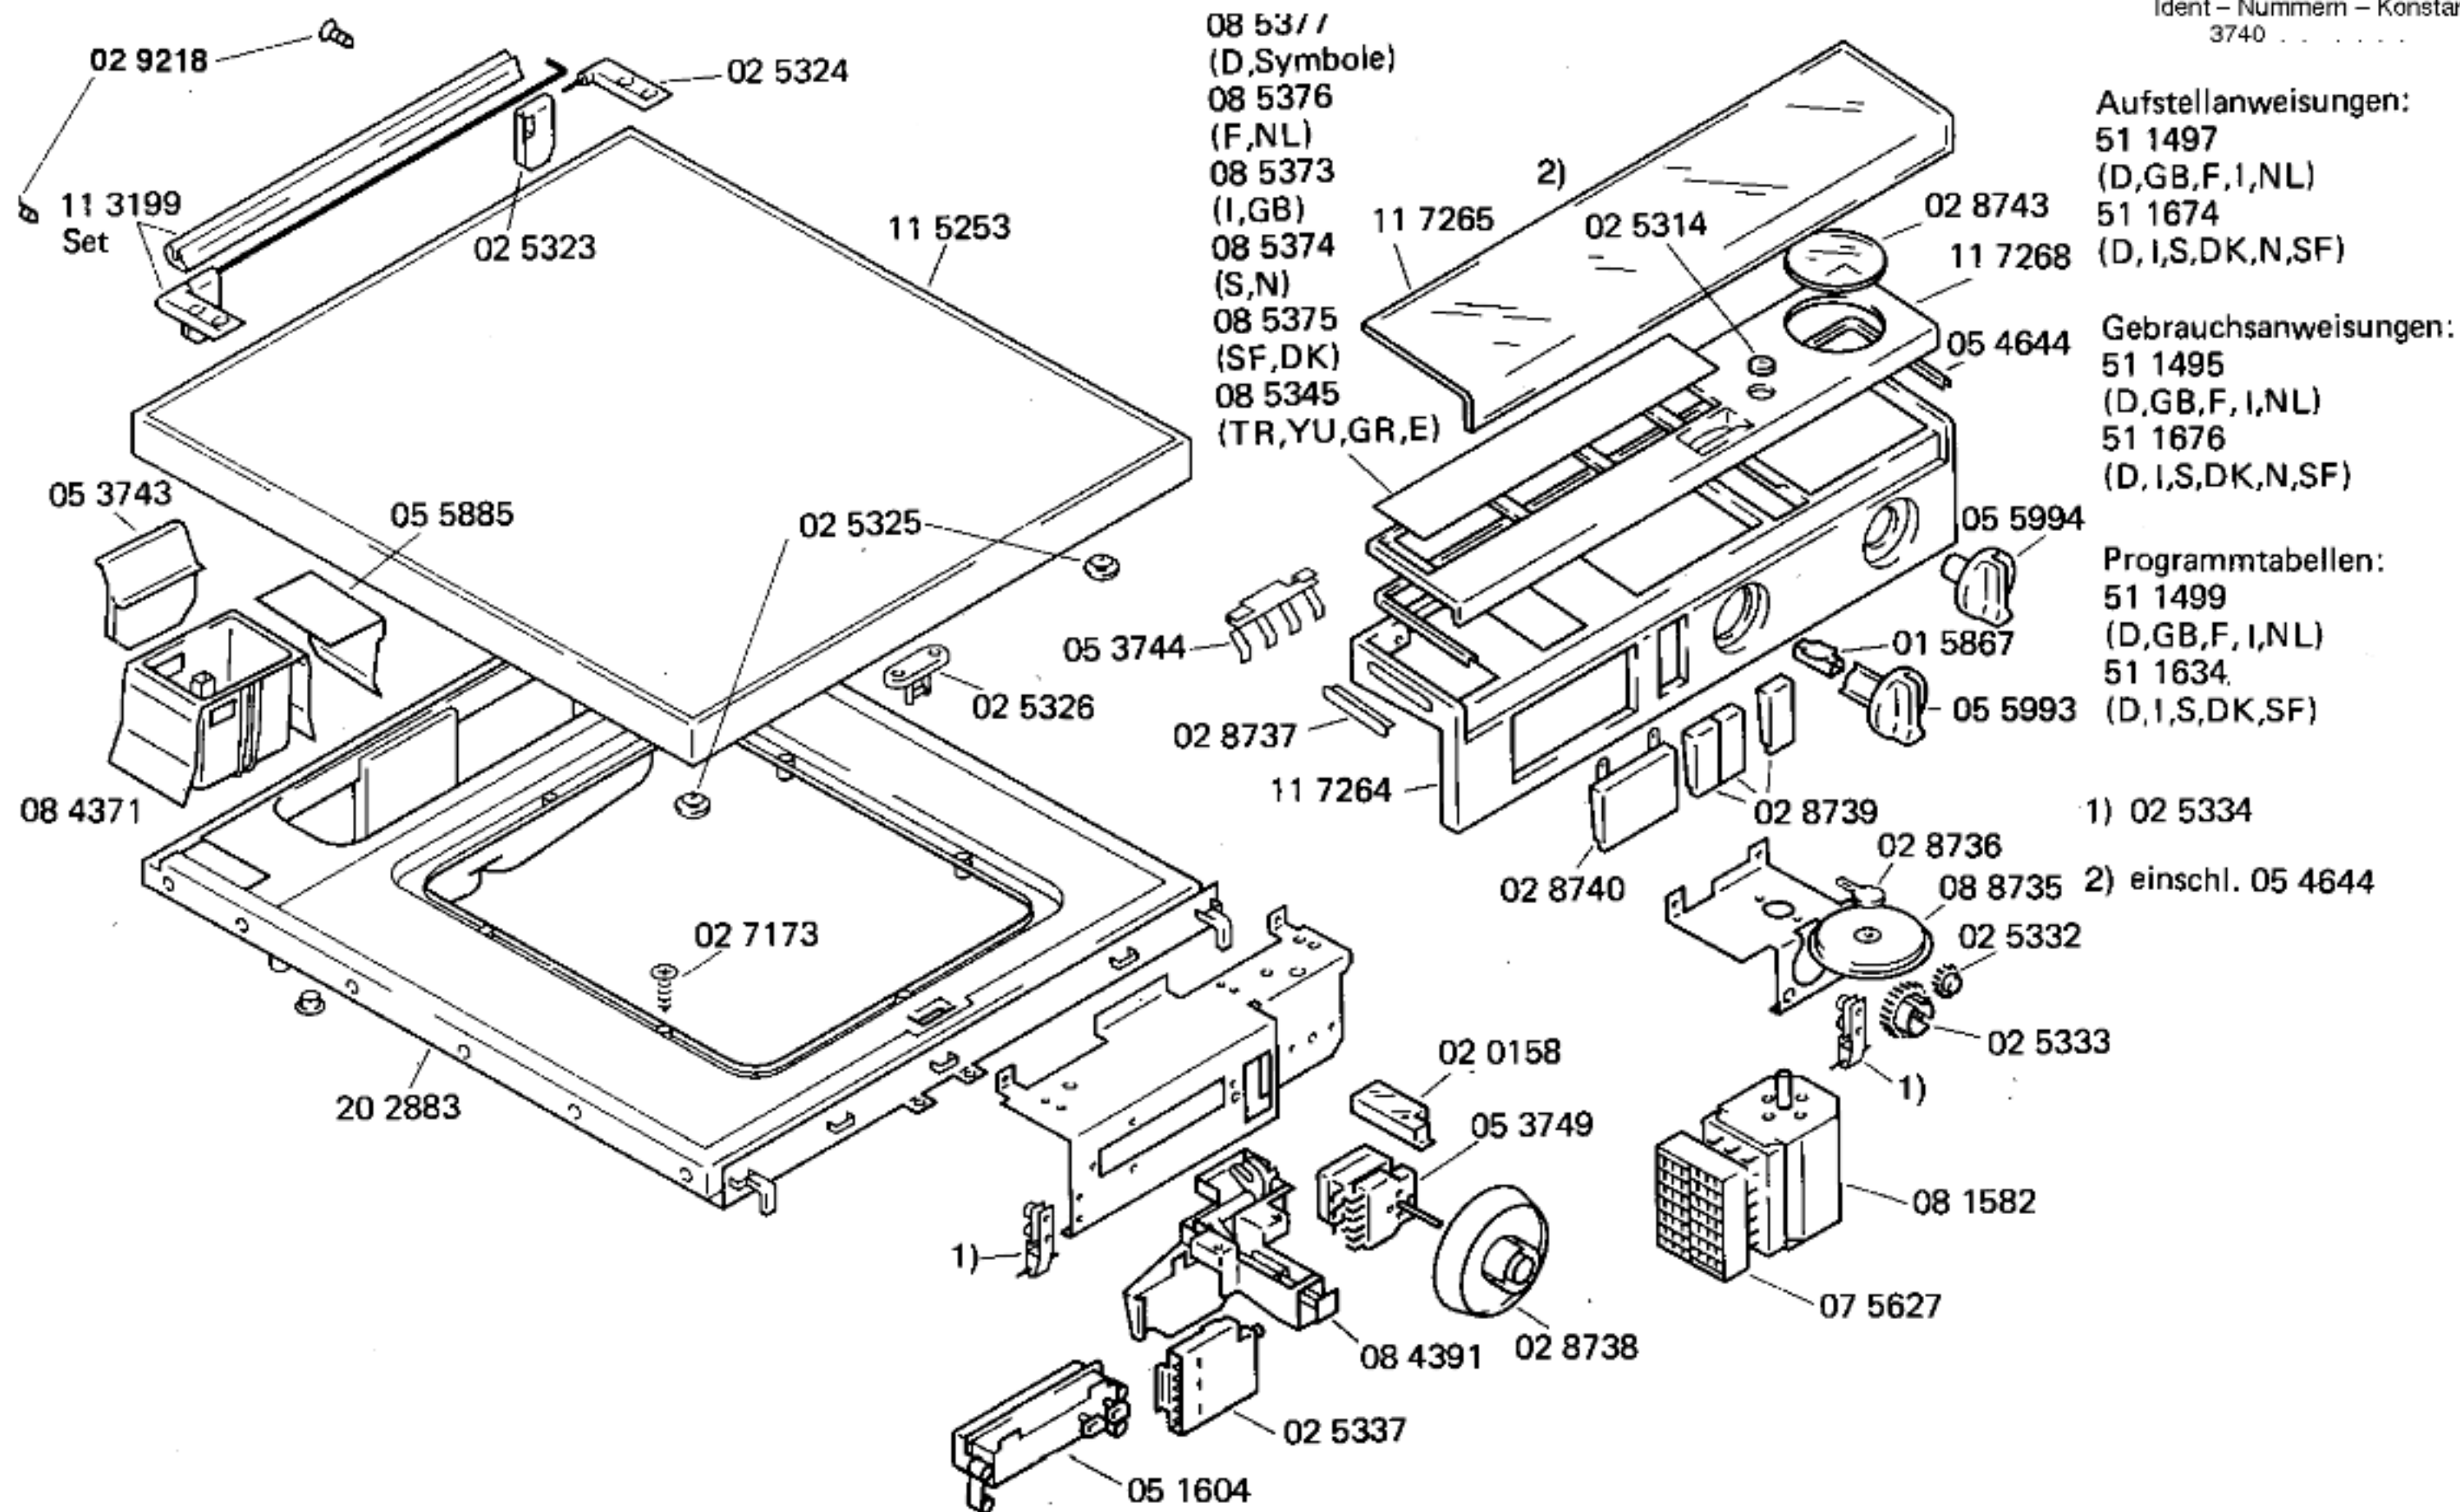

**BOSCH**

V330-0722044496-D1,A1
 V330-0722044497-I1
 V330-0722044498-Exp.1
 V330-0722044499-N1,SF1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

1) 04 5561


2) 01 4687

3) 02 5342

4) 02 8437

5) 02 5345


6) 07 3947

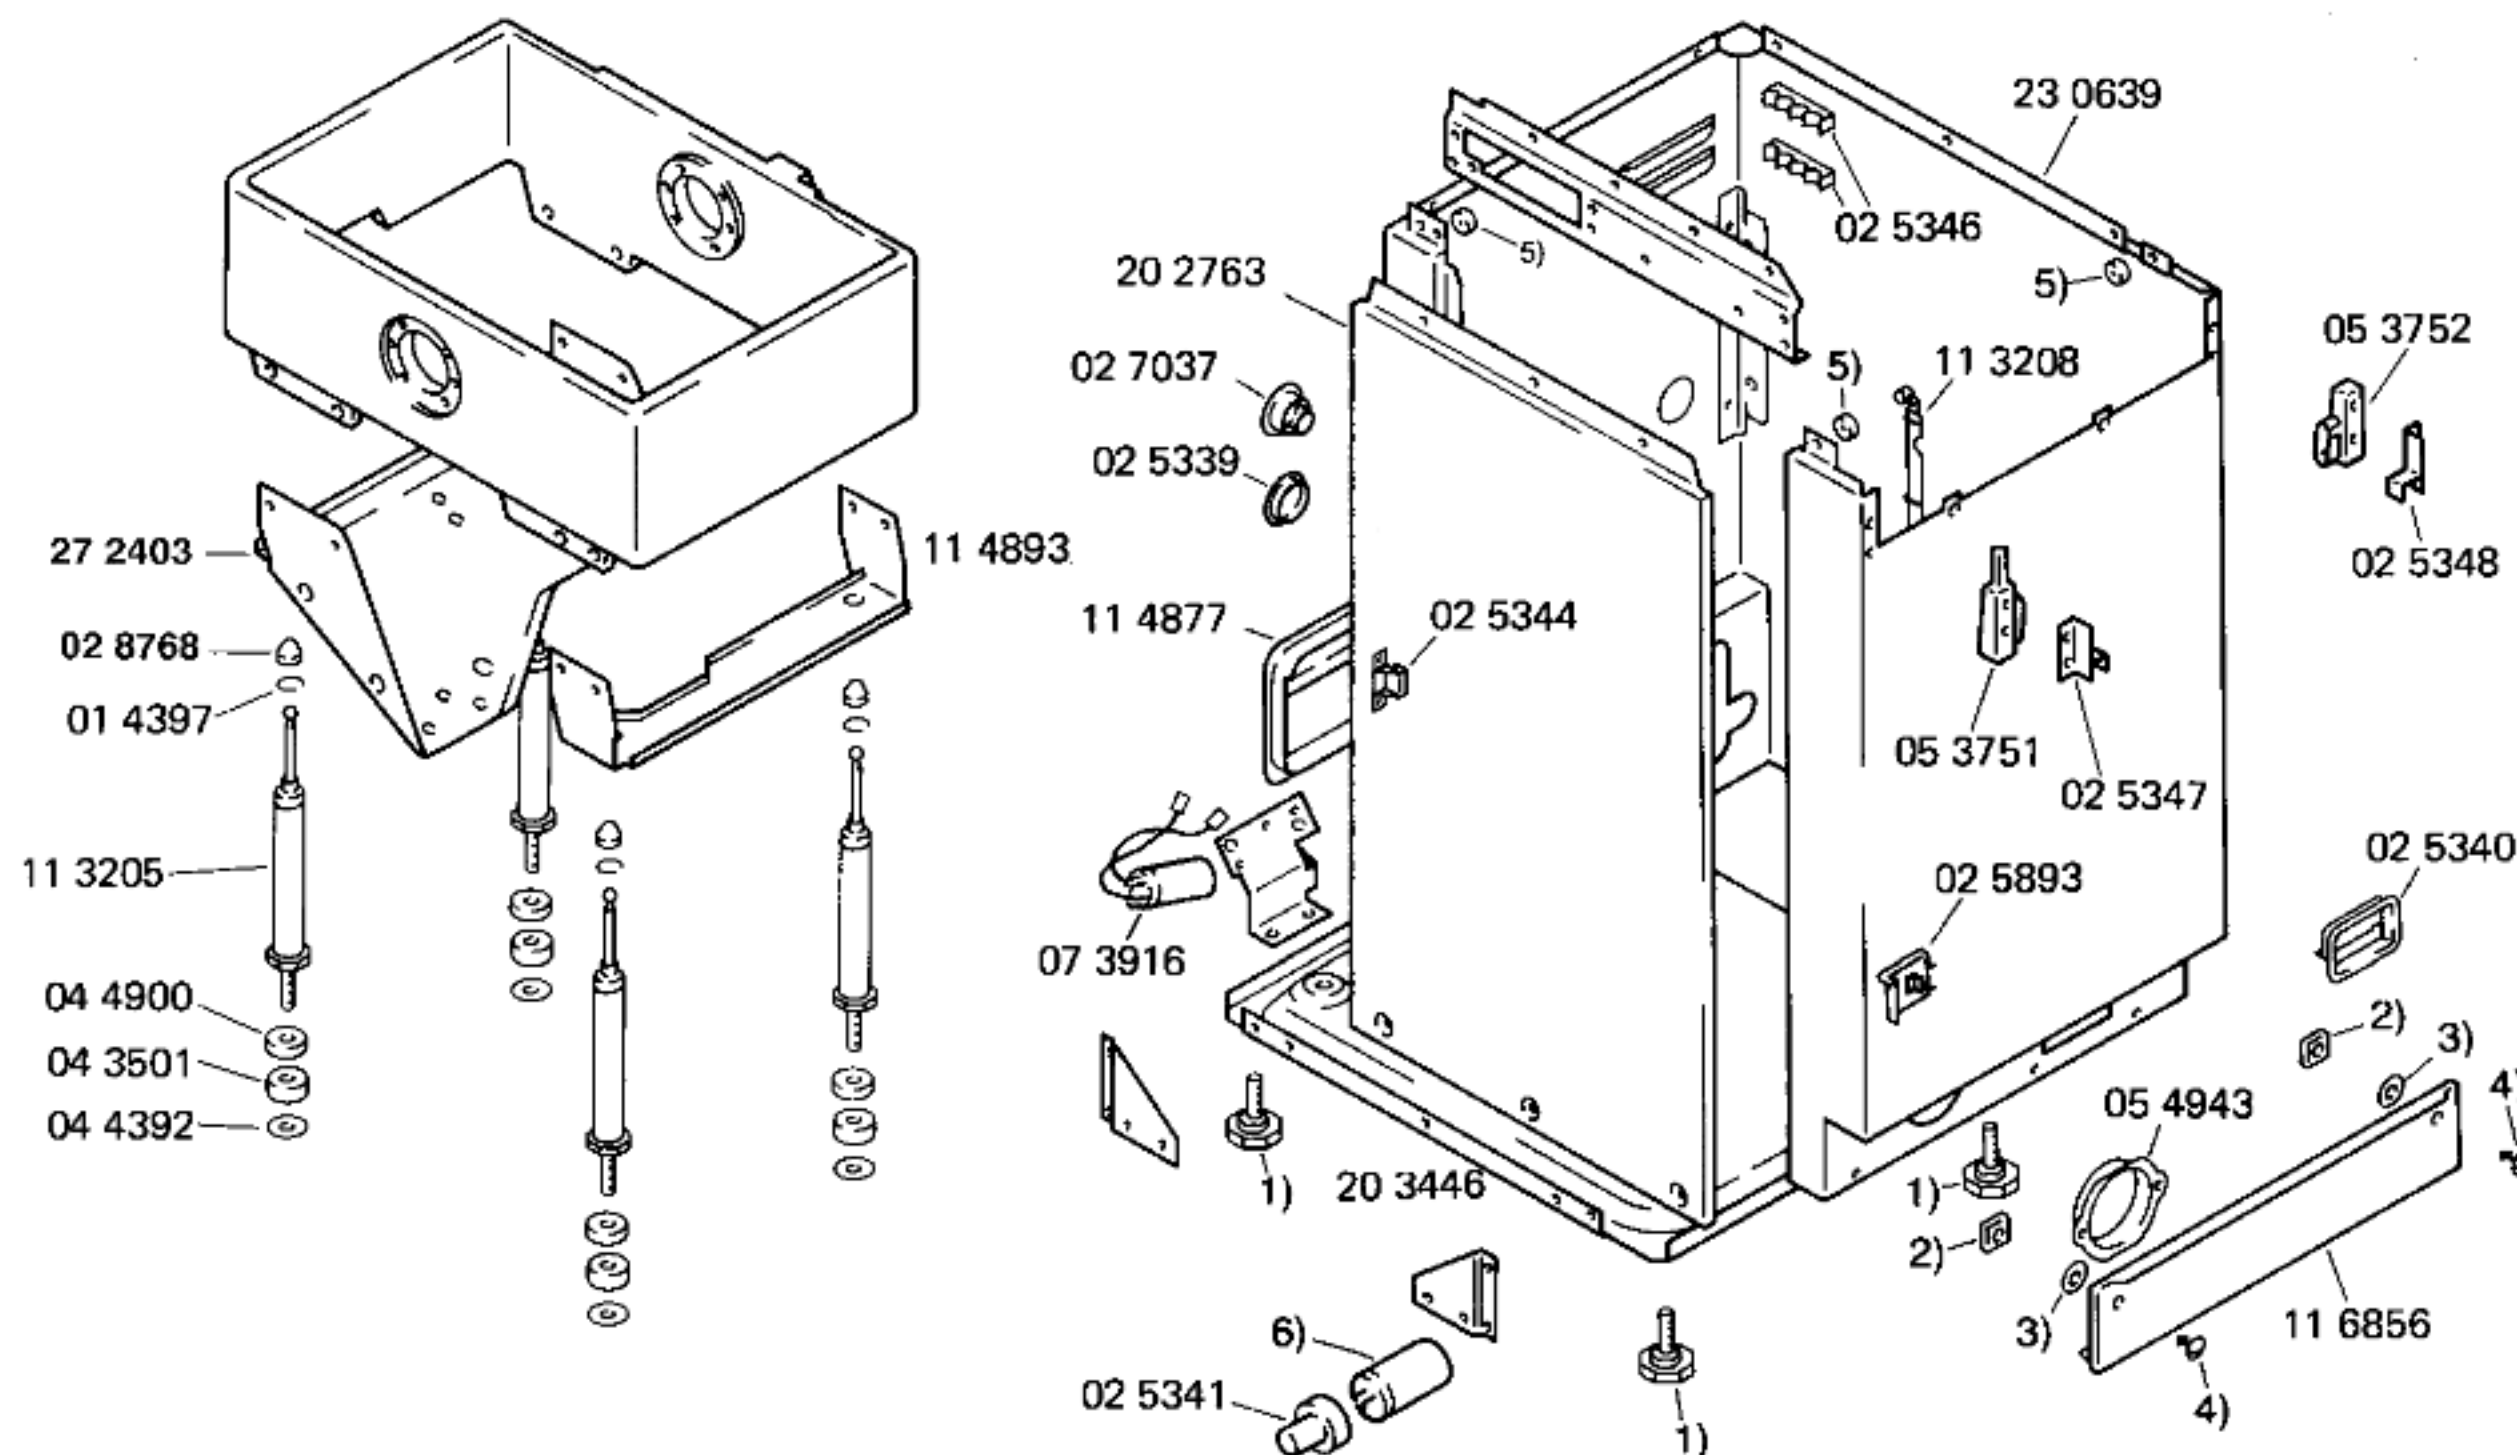

**BOSCH**

V330-0722044496-D1,A1
 V330-0722044497-I1
 V330-0722044498-Exp.1
 V330-0722044499-N1,SF1

WASCHGERÄTE
 Waschvollautomaten

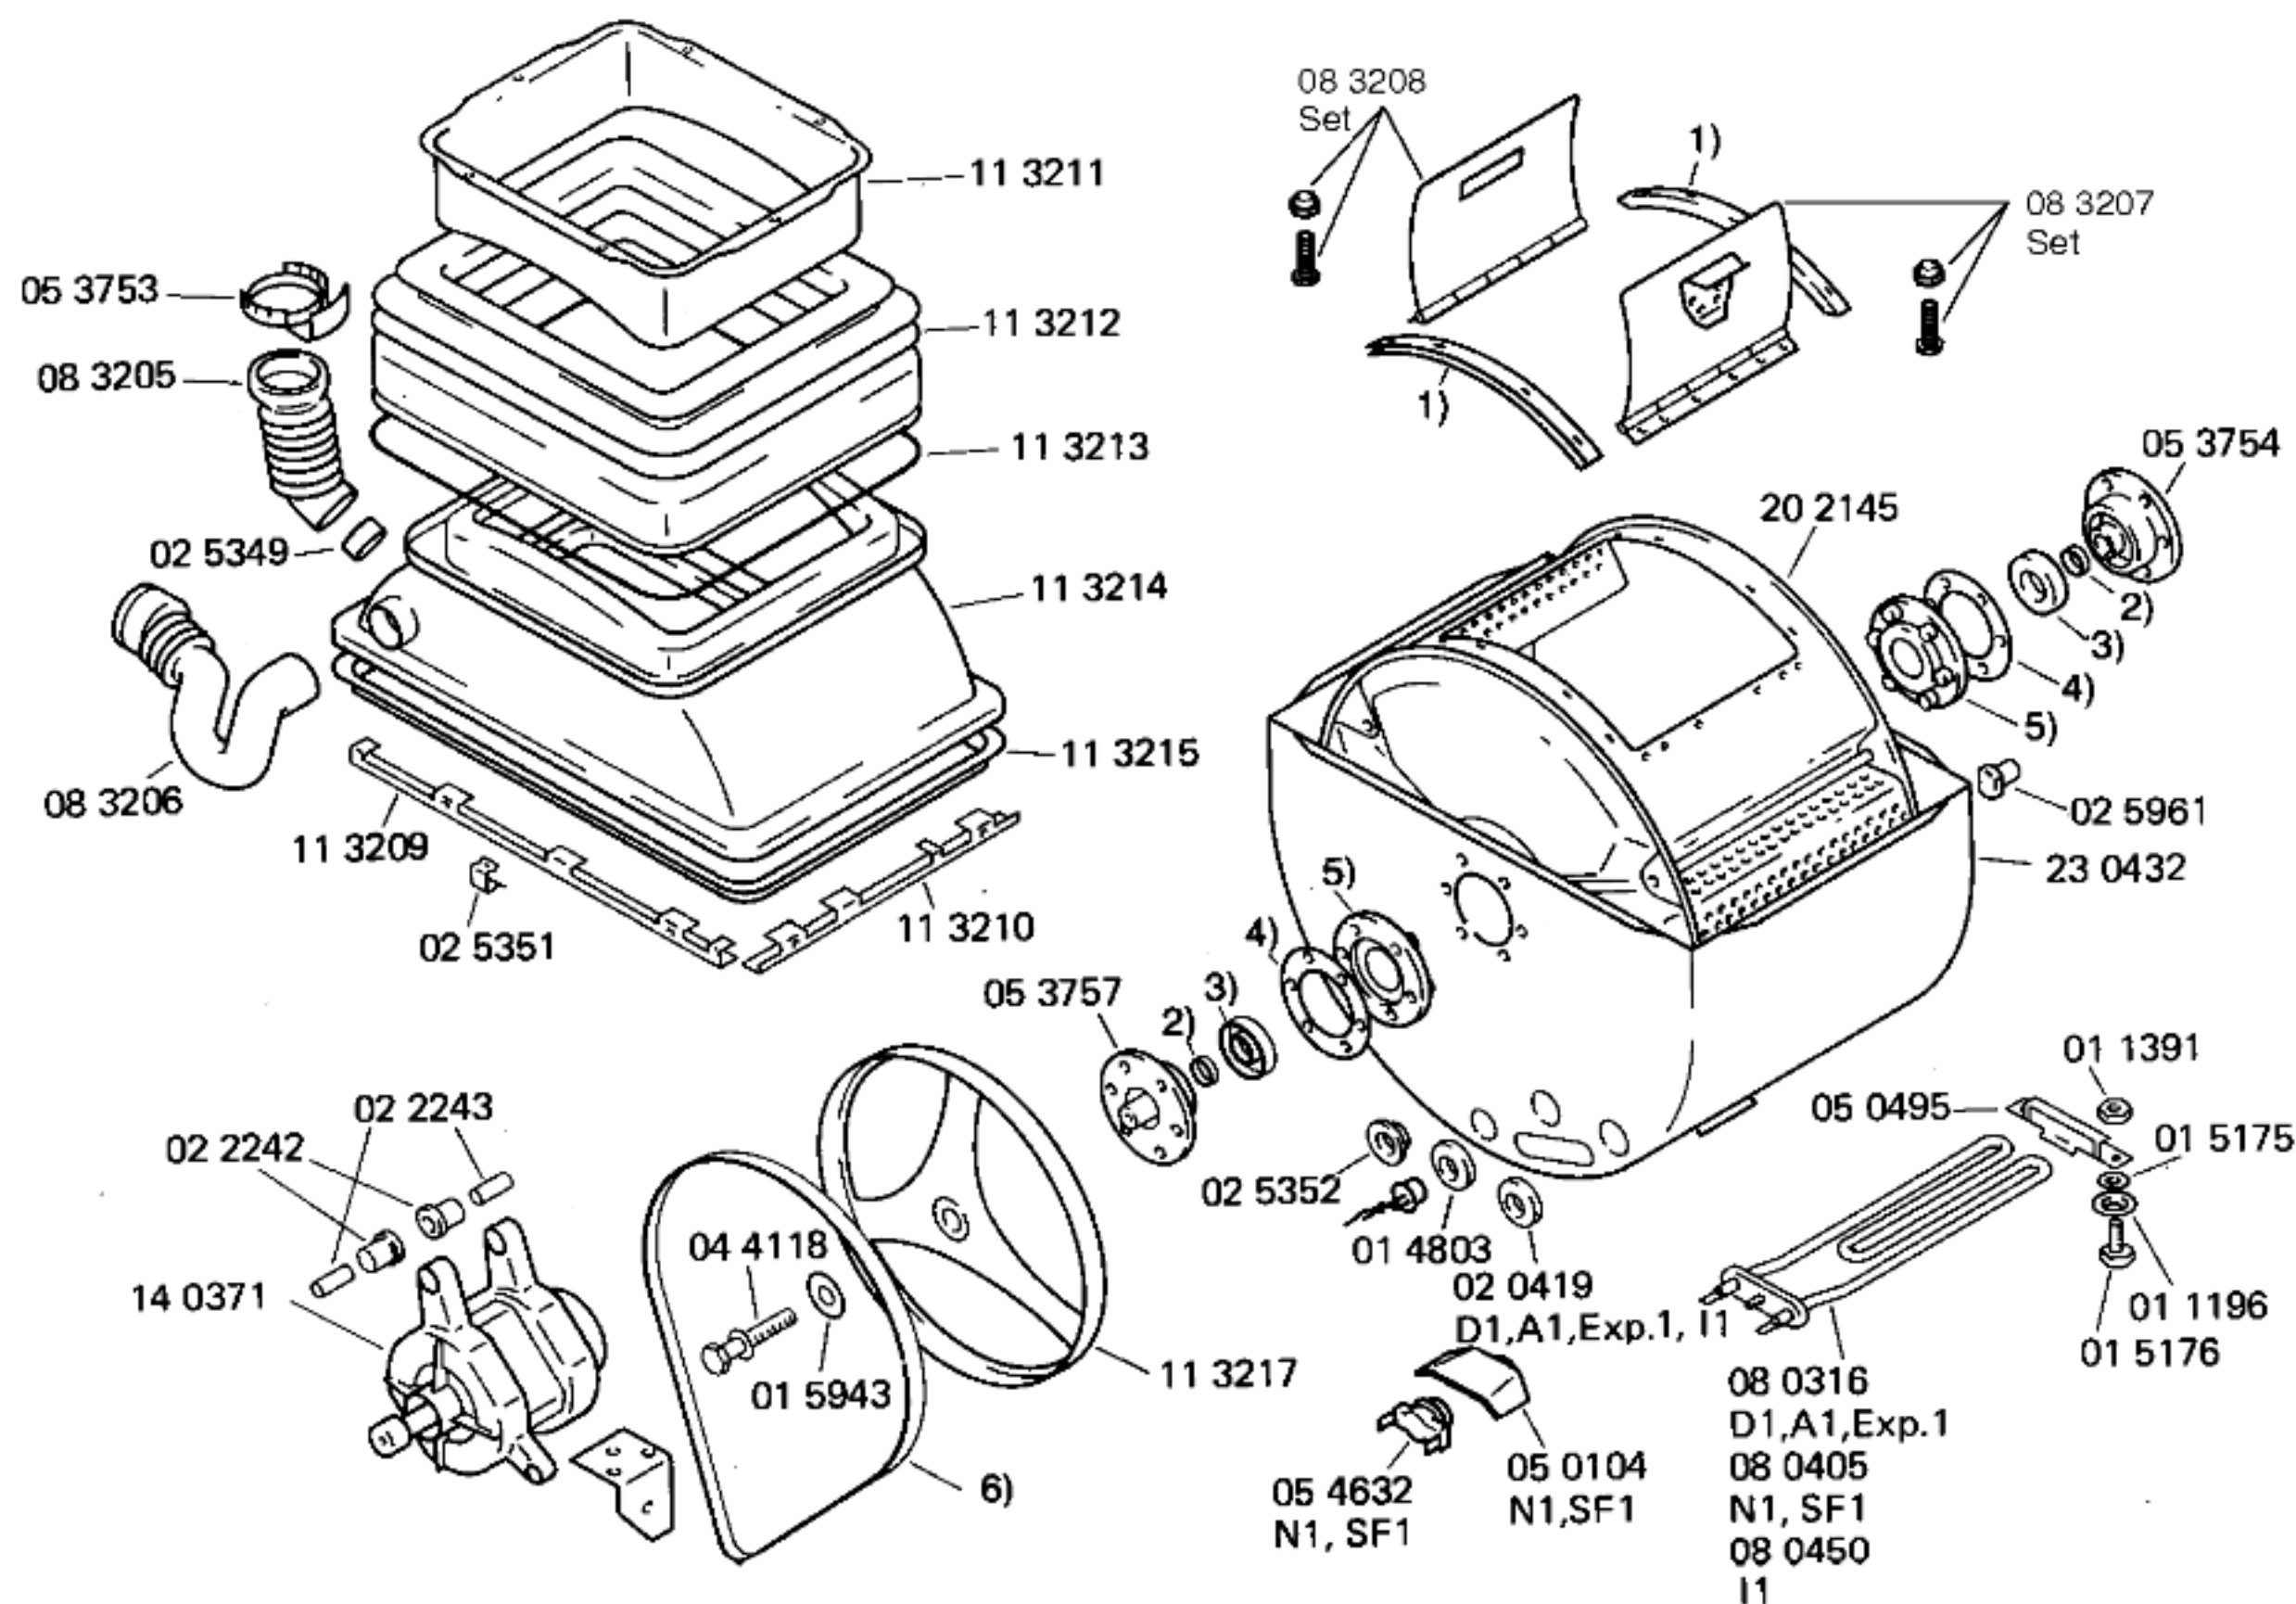

Ident - Nummern - Konstante
 3740

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 3755
- 5) 05 3756
- 6) 11 3225

**BOSCH**

V330-0722044496-D1,A1
V330-0722044497-I1
V330-0722044498-Exp.1
V330-0722044499-N1,SF1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

