



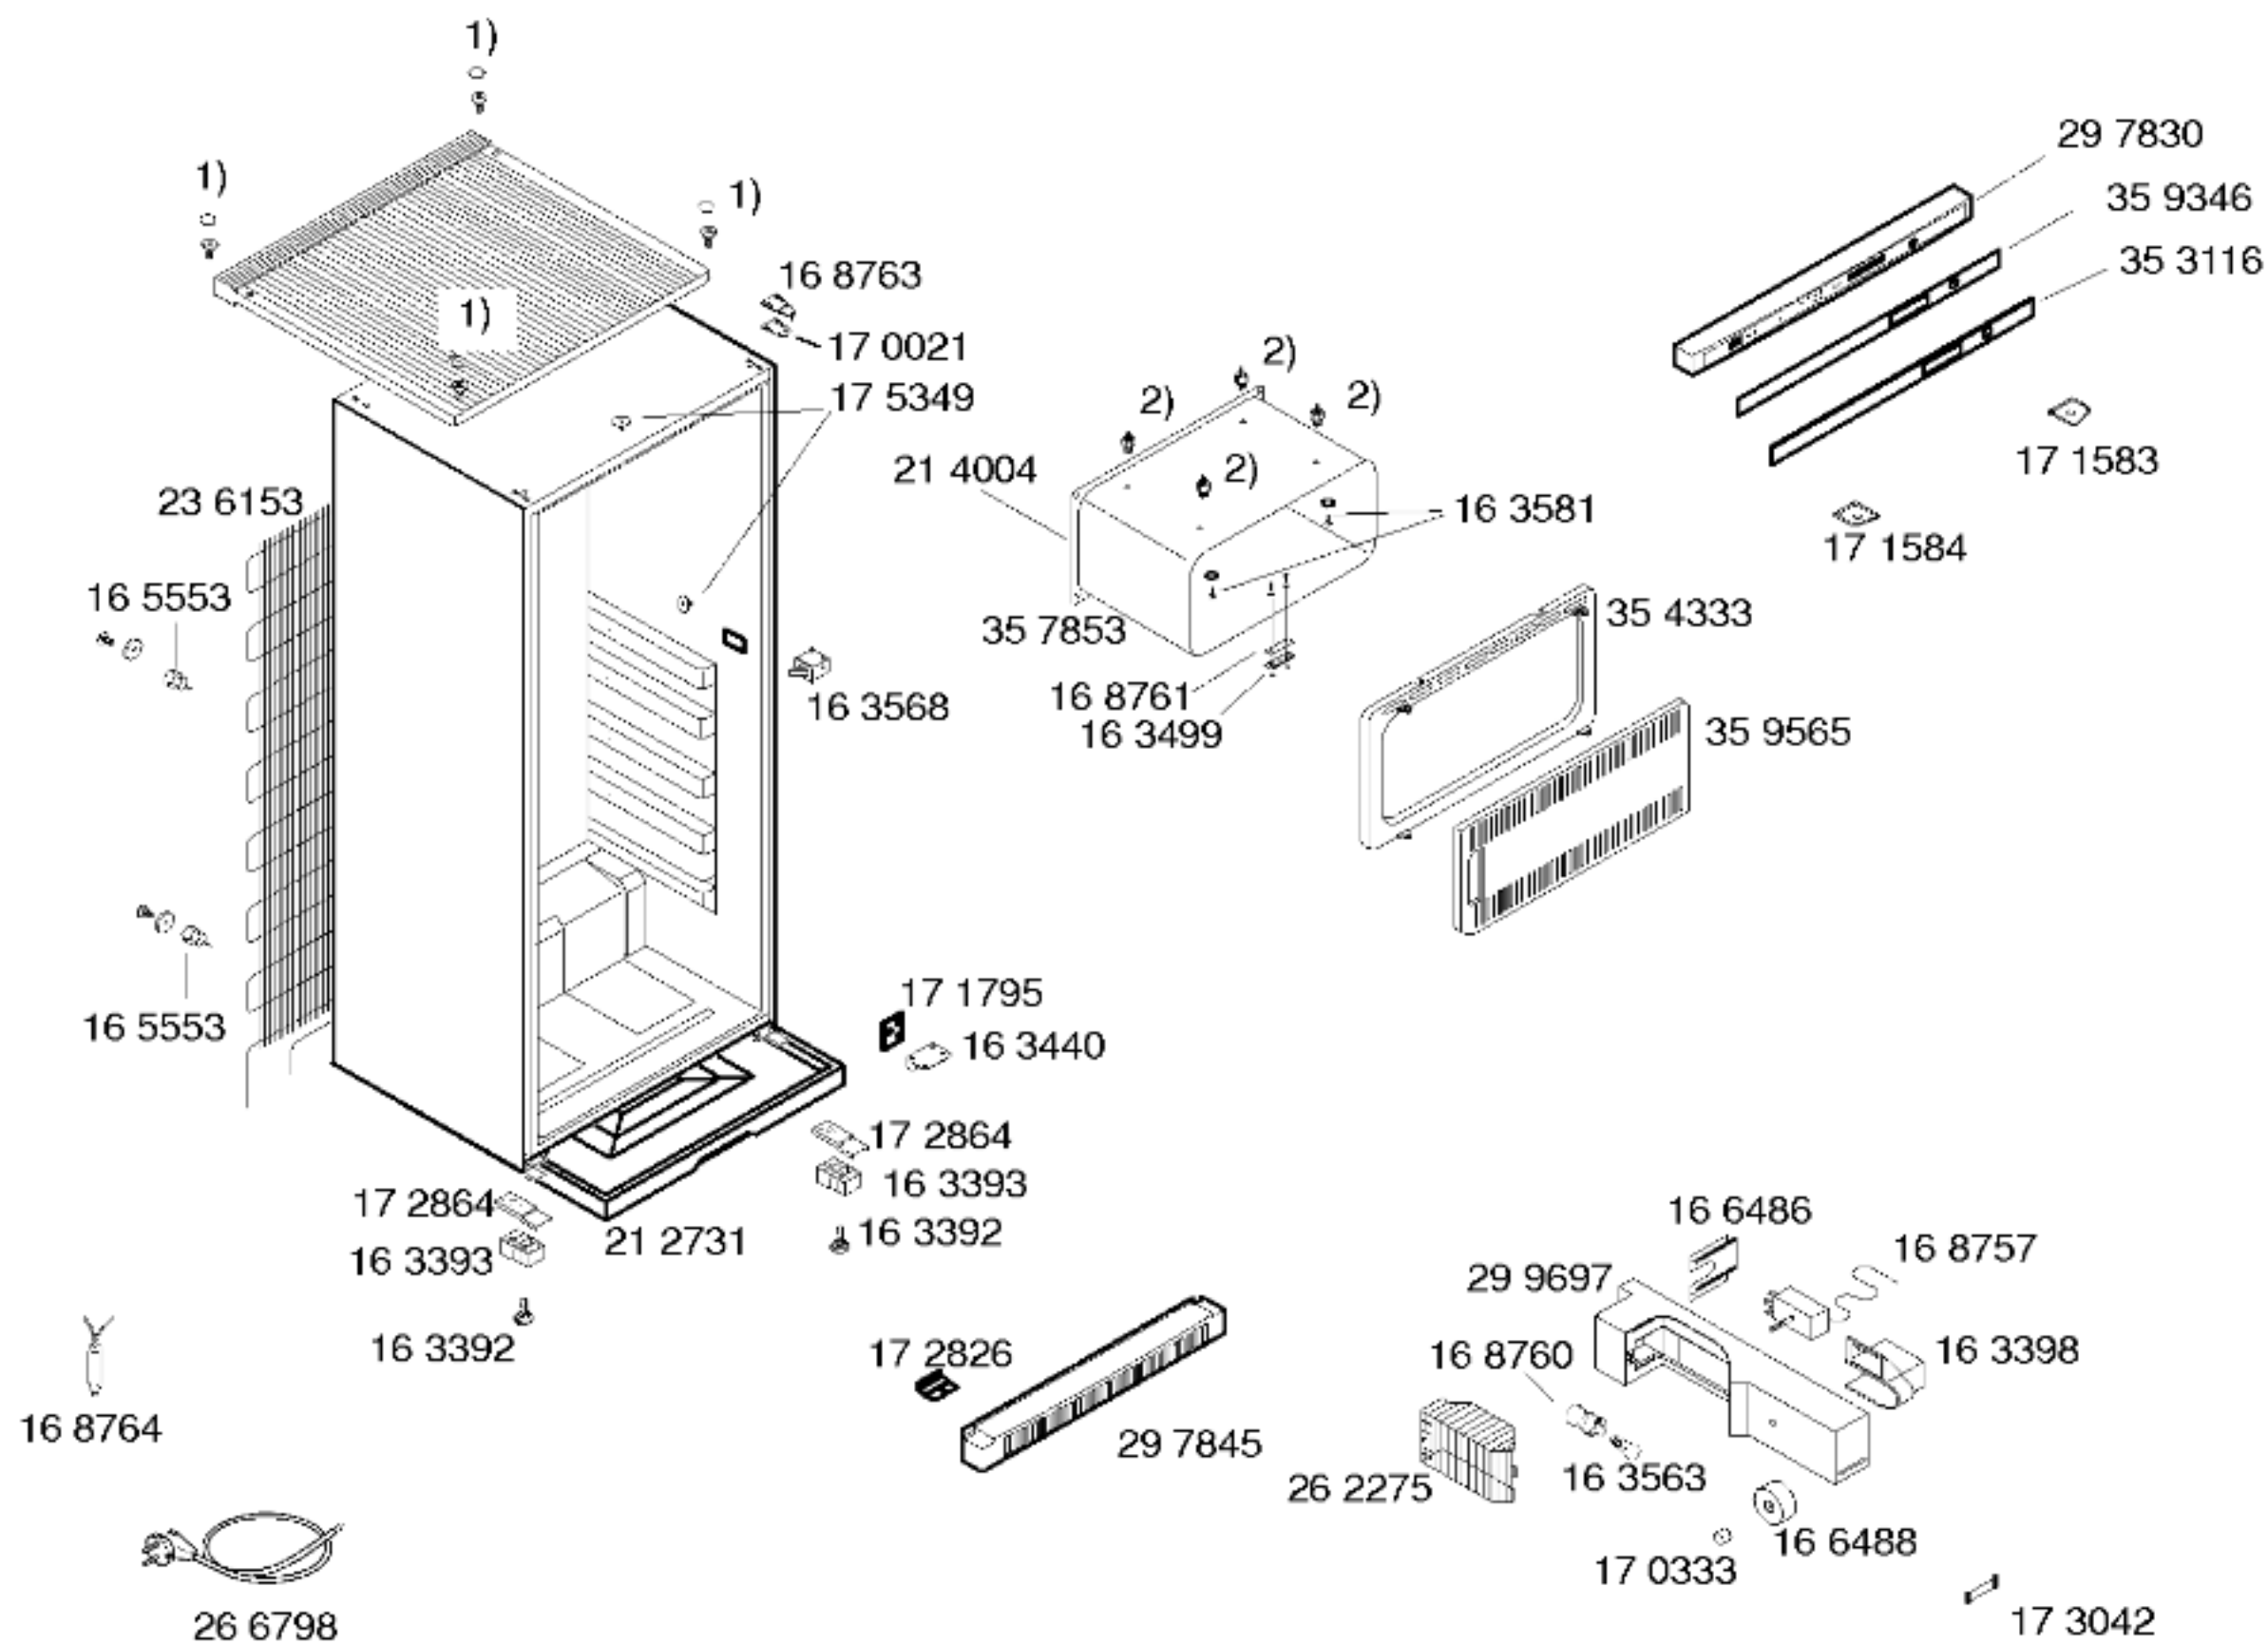


Gebrauchsanweisung
52 6456
(ES)

- 1) 16 3404
- 2) 16 8049

- 1) 21 4008
- 2) 21 4009
- 3) 26 6633
- 4) 23 6198
V01
23 6199
V02

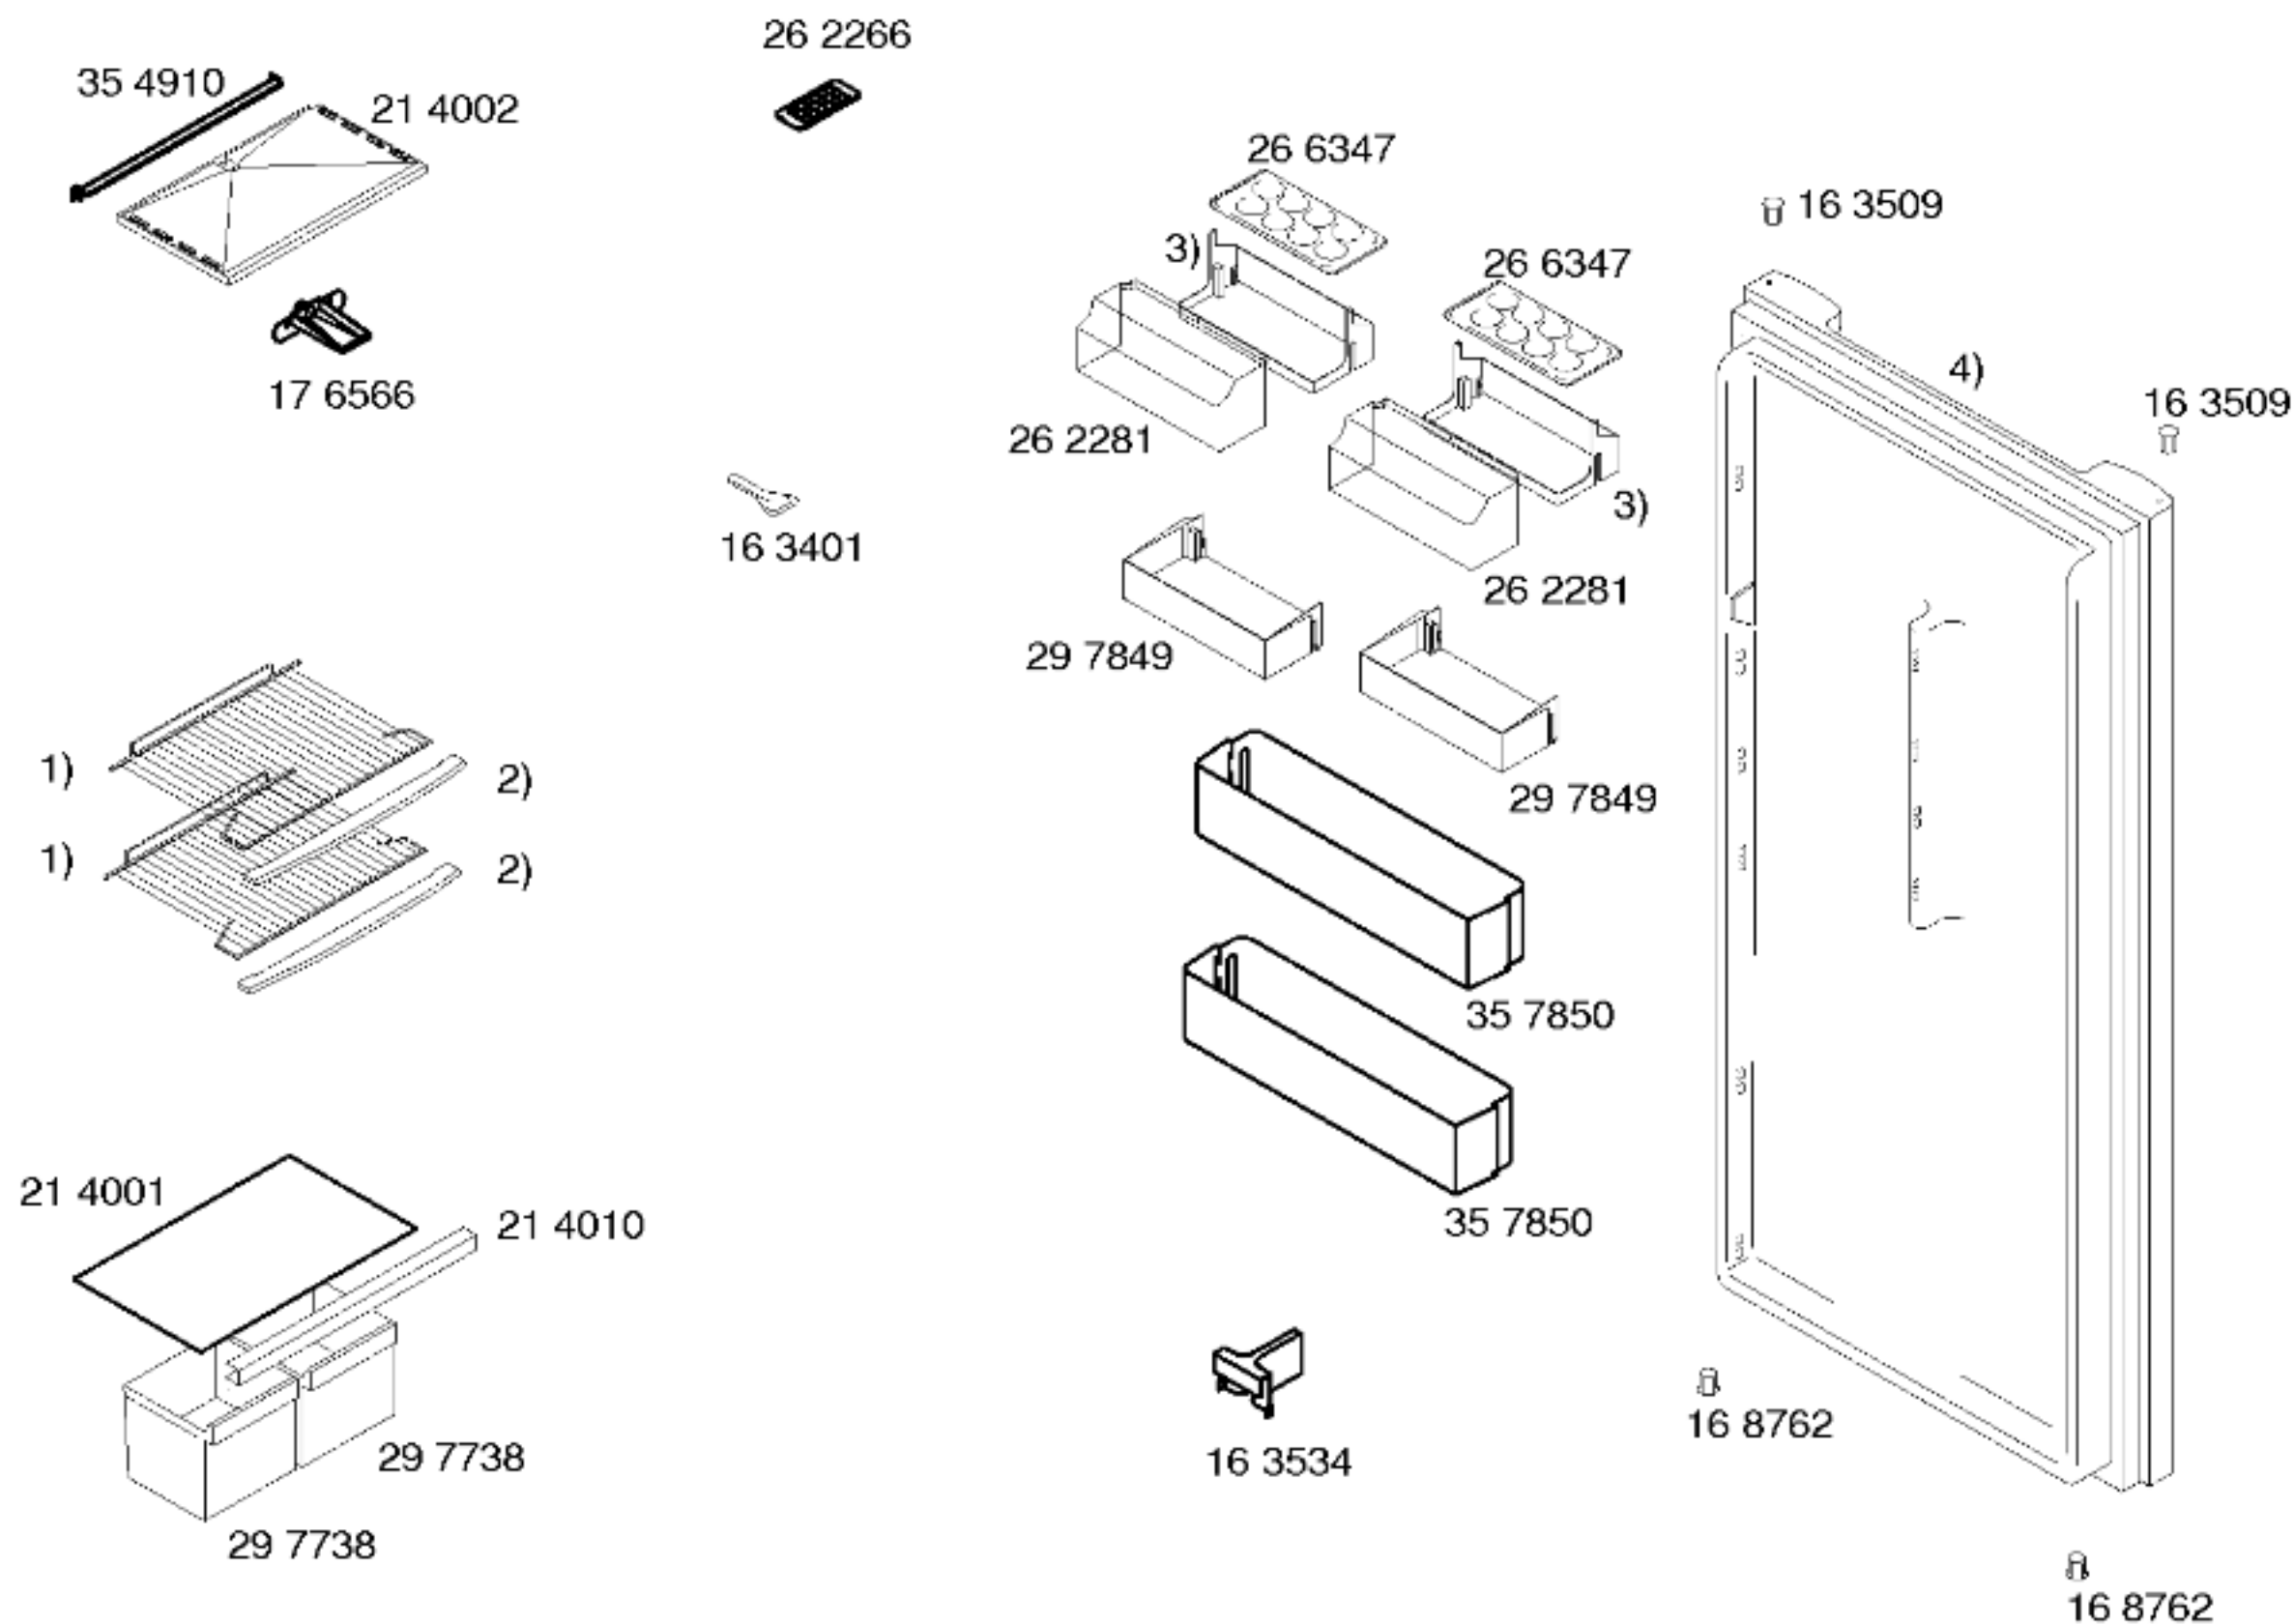

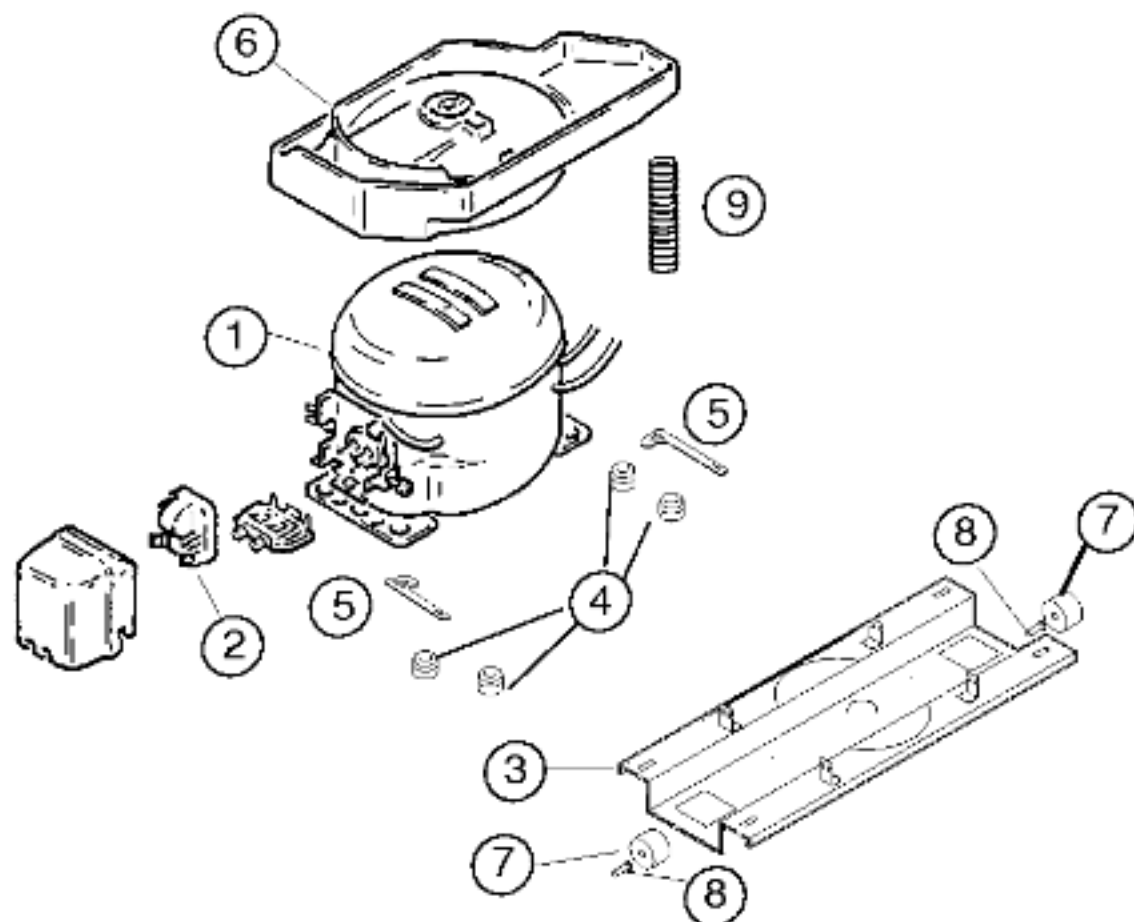

Pos.	Danfoss		
	NL6F		
1	14 1760		
2	16 5570		
3	21 4007		
4	16 3427		
5	16 3508		
6	26 5327		
7	17 5758		
8	17 5759		
9	26 8721		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BILGILER

Verdichter/Compressor/Kompresör		Danfoss		
Typ/Type/Tip		NL6F		
Förderleistung/Delivery/Verim/h				
Anlaufstrom/Starting current/Giris akimi	A	9.6		
Widerstand/Resistance/Rezistans Ha/	Ω	16		
Hi/aux.		13.6		
Temp.Reyler/Thermostat/Termostat		HANCO		
Typ/Type/Tip		K60		
Reglerstellung/Position/Termostat pozisyonu		P1129		
Schaltwerte/Actua kapama degerleri	..ein/acma °C			
Valeurs de commutation/Termostat degeri	..aus"/kapama			
(..abtaven' od)	..alarm'			
Füllmenge/Fill. quantily/ Dolum miktari	R134 a	g	*	
Anschlusswert/Comm. load/Giris gucu	W			
Heizung/Heater/Rezistans				
Widerstand/Resistance/Direnc	Ω			
Leistung/Power/Guc	W			
Ventilador/Blower/Vantilatör				
Widerstand/Resistance/Rezistans	Ω			
Magnetventil/Magnetic valve/Manyetik valf				
Widerstand/Resistance/Rezistans	Ω			
Spannung/Voltage/Gerilim	V			
Temp.Reyler/Thermostat/Termostat				

* Siehe Typenschild/Mamul etiketine bakiniz