



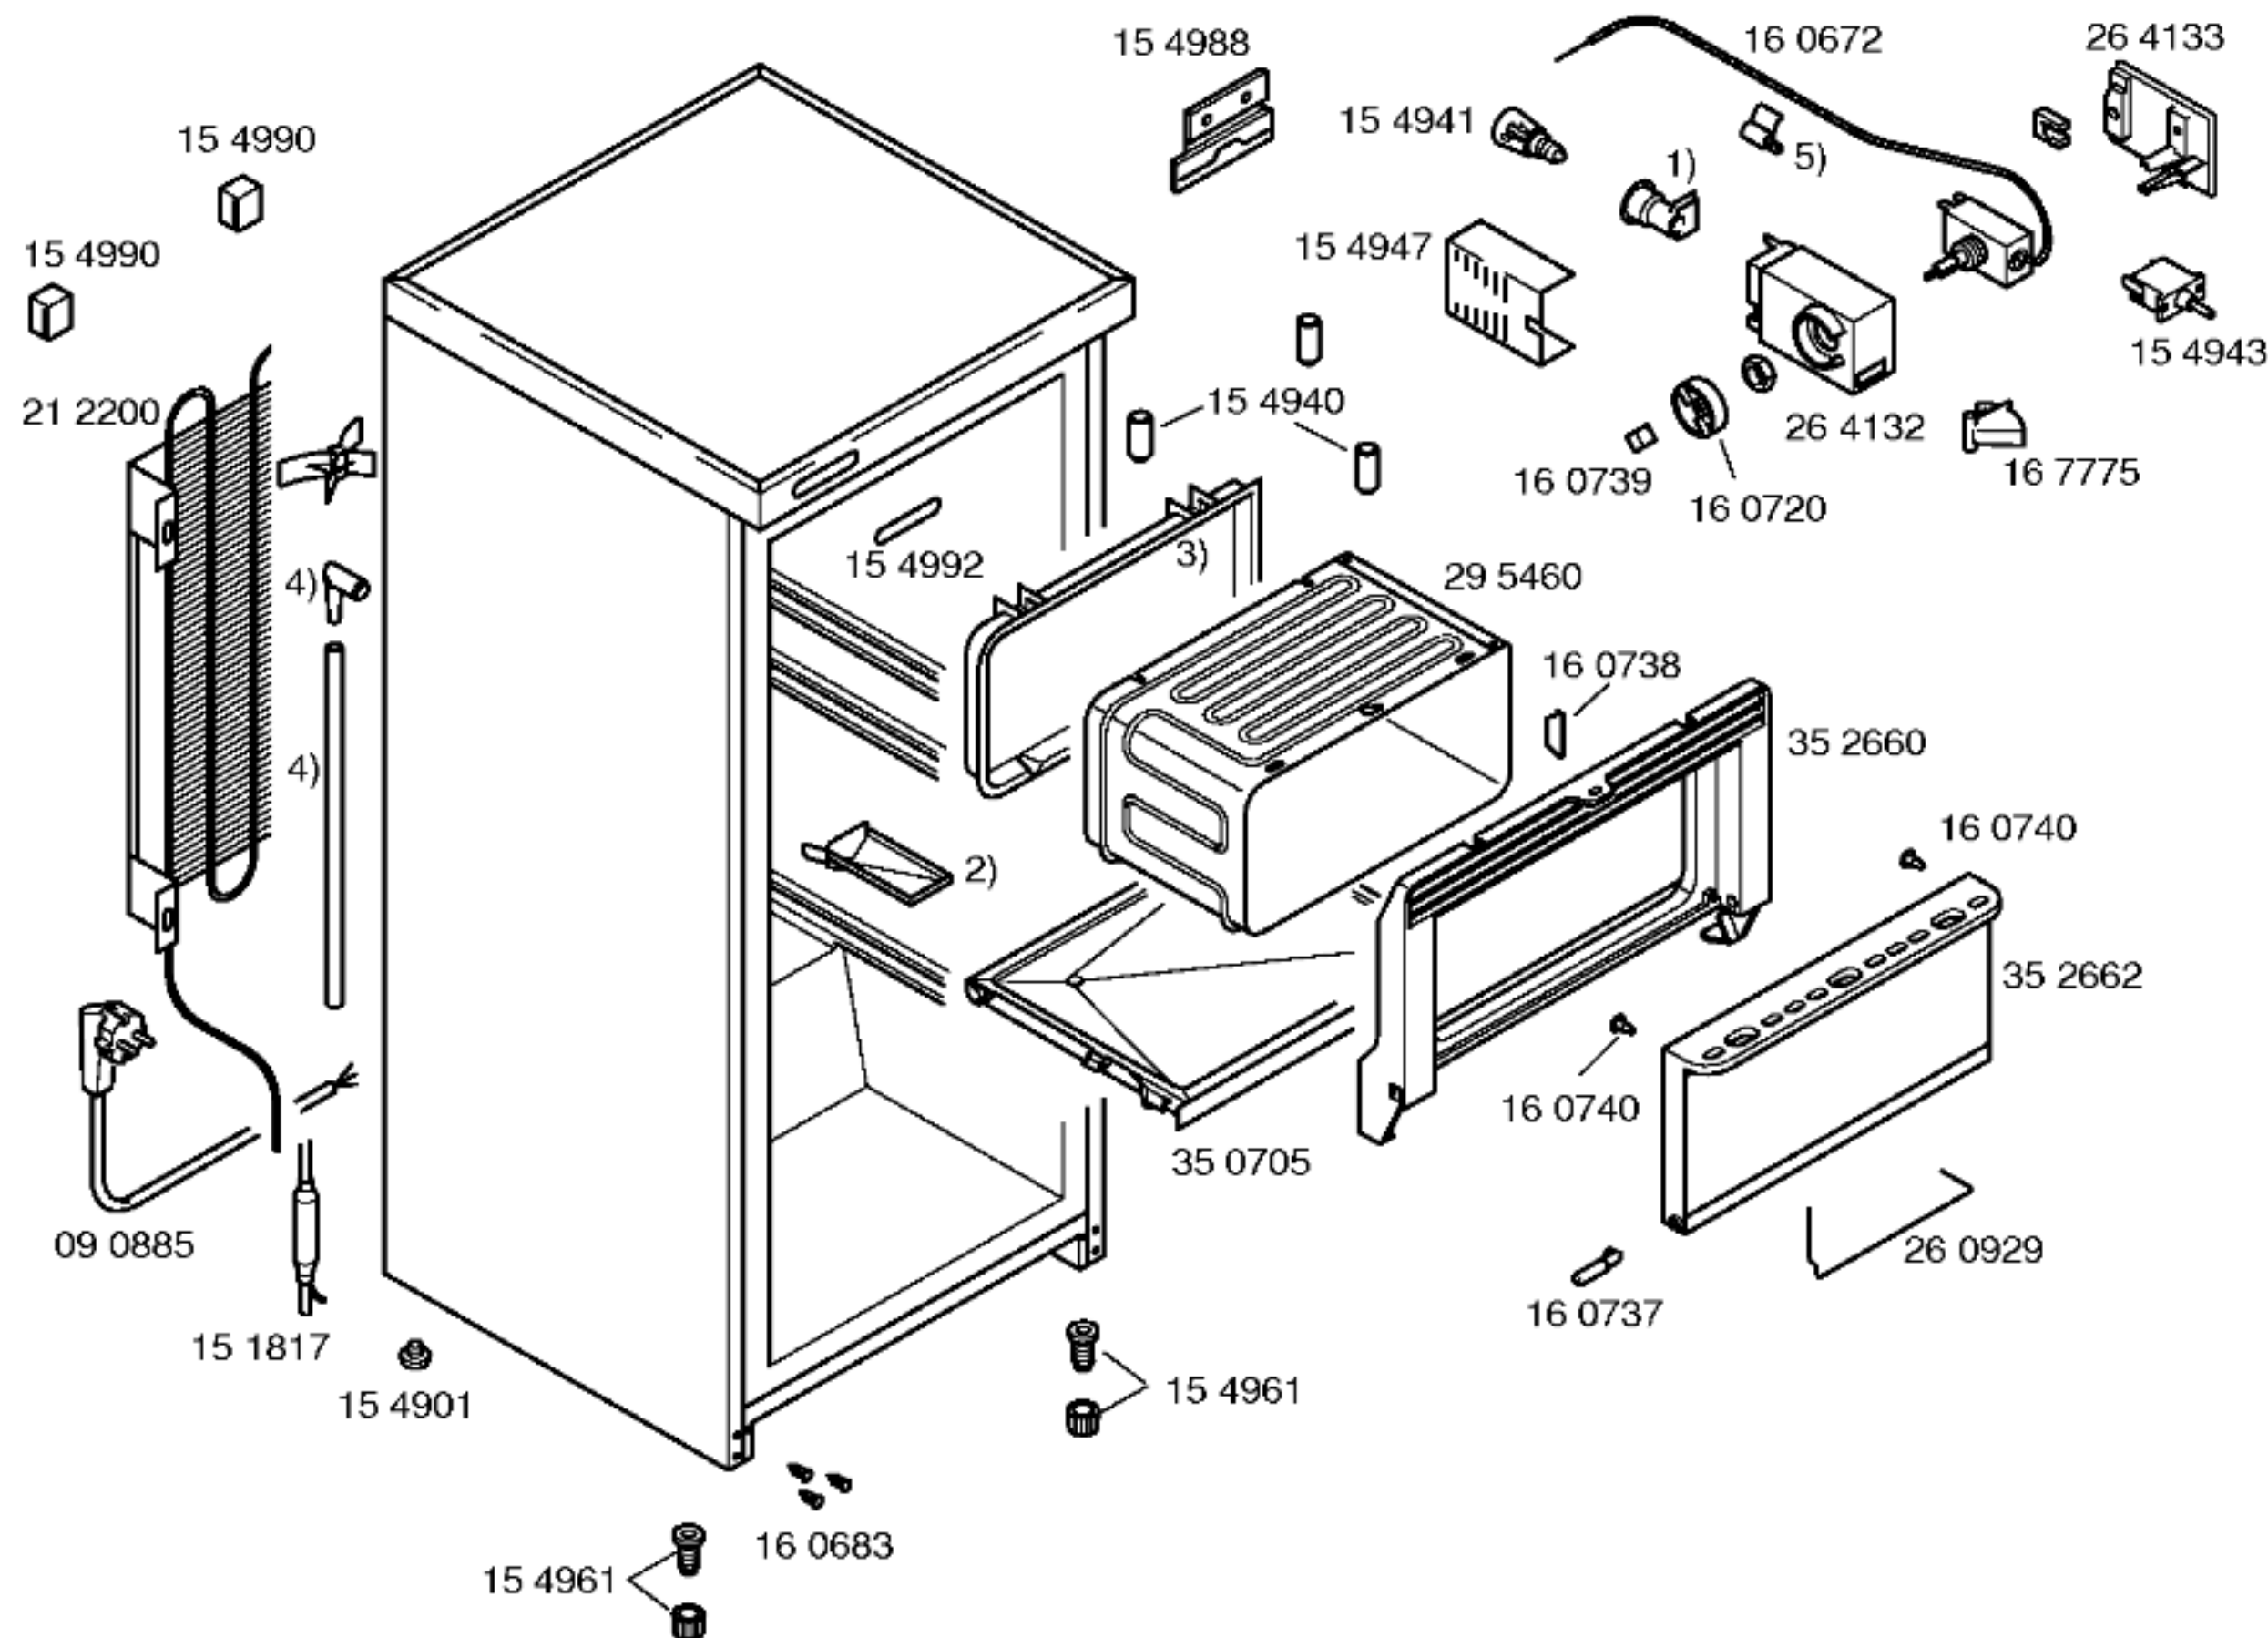


Libro de instrucciones
51 8644
(de,en,fr,es,it,pt)

Instrucciones de
reversibilidad
51 8645
(de,en,fr,nl,sv,no,
da,fi,es,pt,it)

- | | |
|----|---------|
| 1) | 15 4942 |
| 2) | 16 9496 |
| 3) | 35 2664 |
| 4) | 35 2665 |
| 5) | 15 4985 |

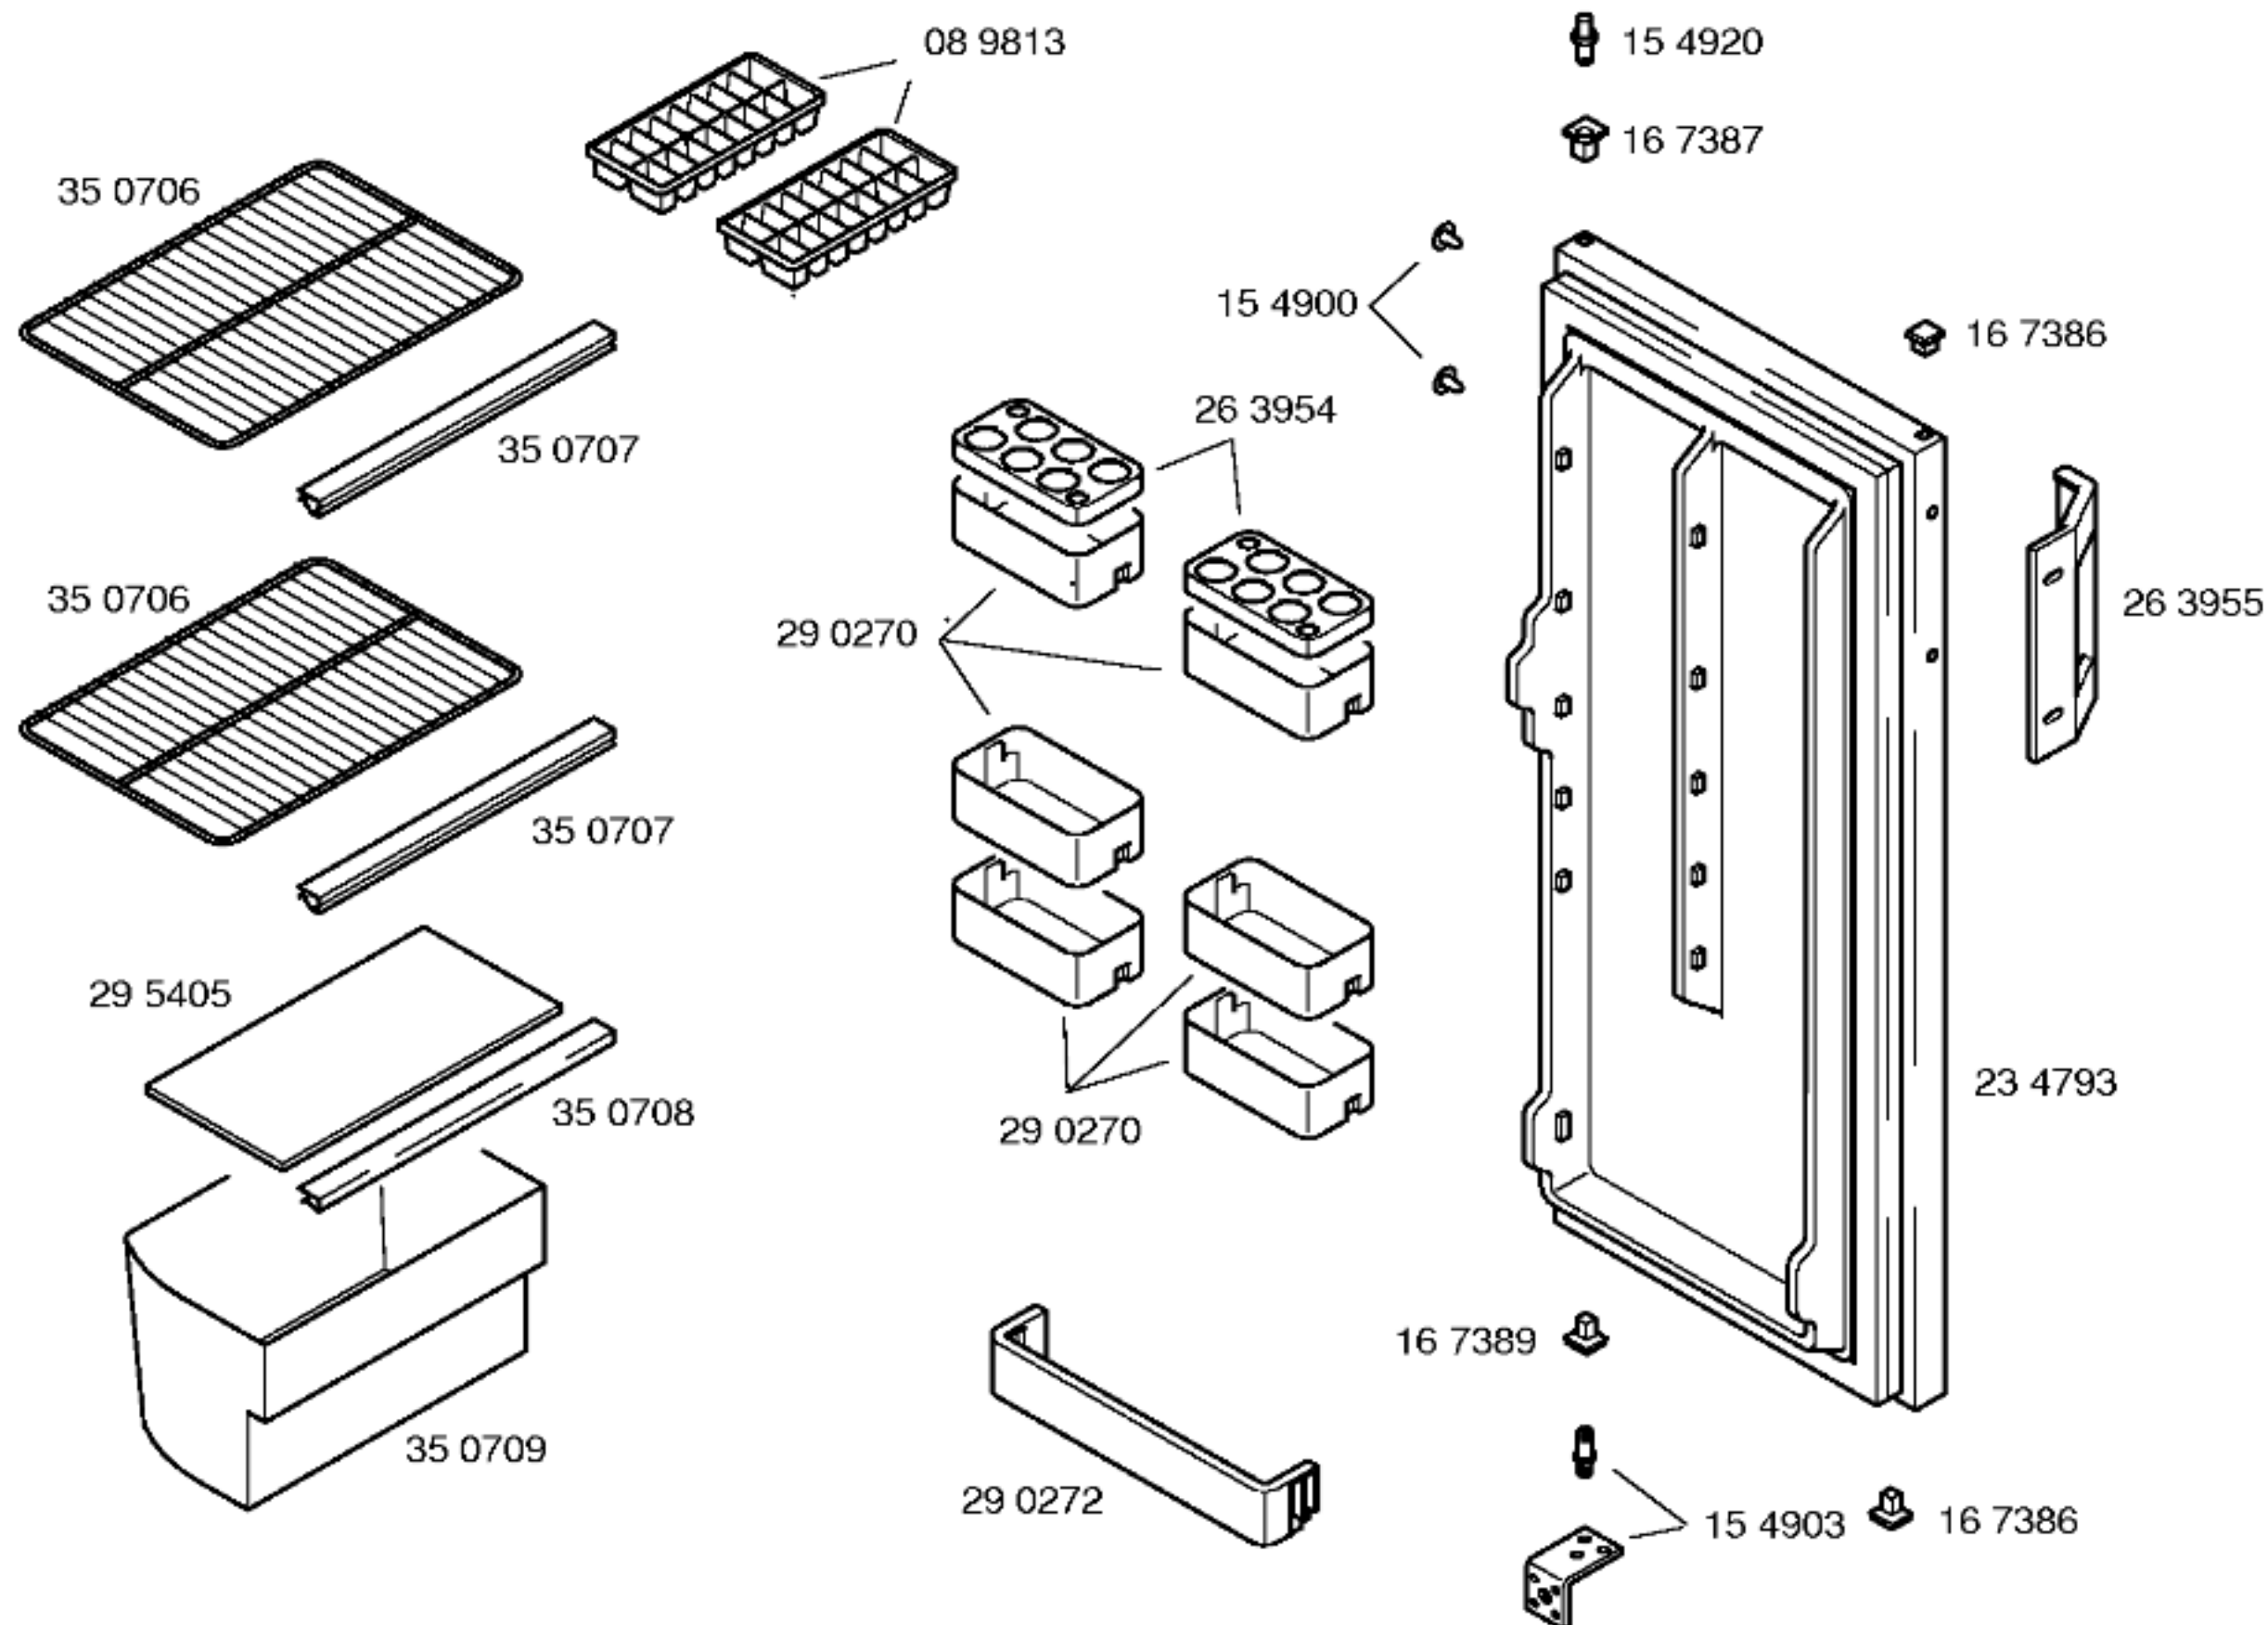

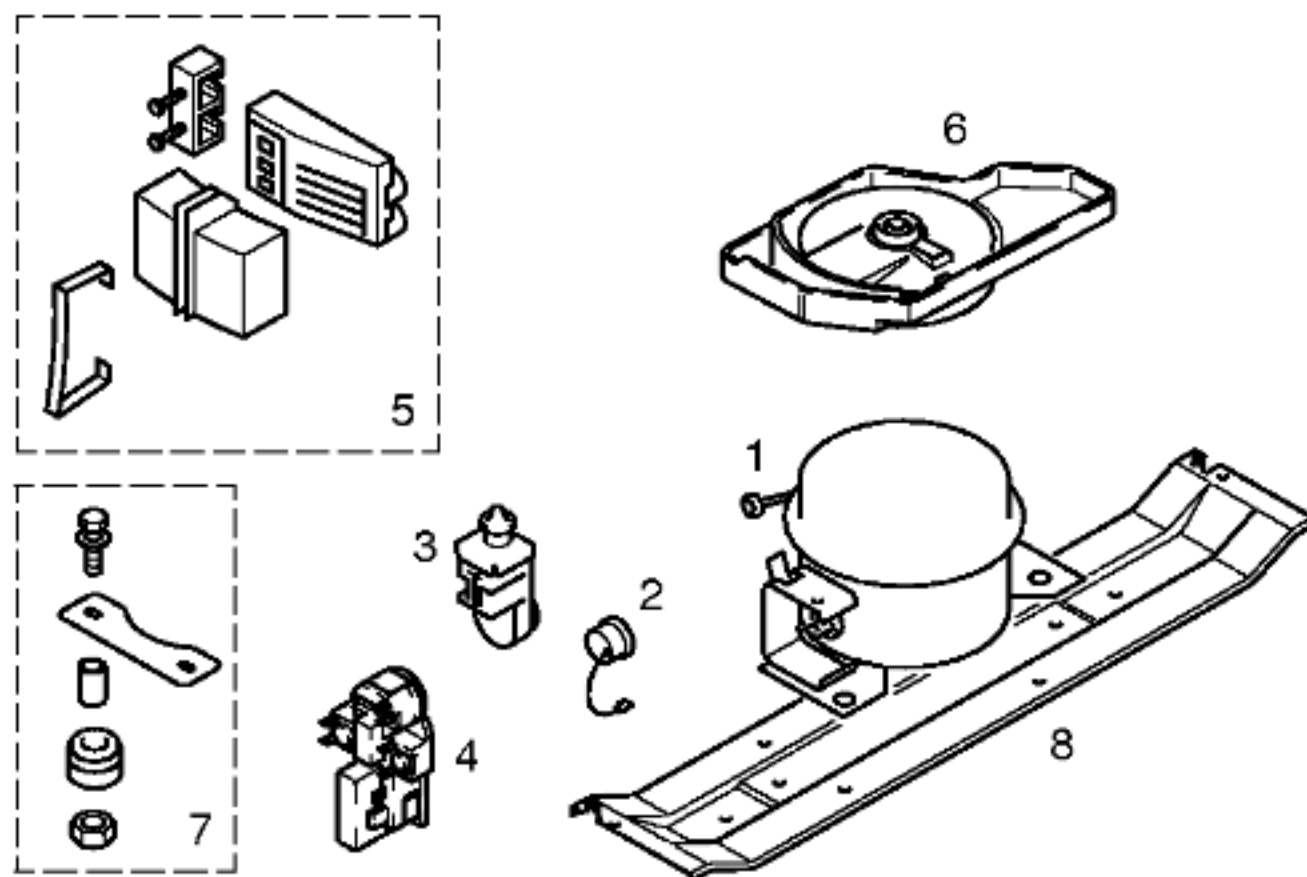

Pos.	Necchi	Zem	Aspera
	ETR.3.5	GL40AB	BP1058Z
1	14 1598	14 1598	14 1598
2	16 0674	16 7395	16 7397
3	16 0676	15 4887	15 4996
4			
5	16 0681	09 6836	16 1619
6	26 0931	26 3633	09 6855
7	05 0166	05 0166	05 0166
8	35 0684	35 0684	35 0684
9			
10			
11			
12			
13			

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS				
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Necchi ETR.3.5	Zem GL40AB	Aspera BP1058Z	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	K60–L2050 MIN. MAX.			
Füllmenge/Fill. quantily/Charge/Carga R134a. g	*			
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W				
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W				
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm				
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V				
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques /Ver plaqueta de características