




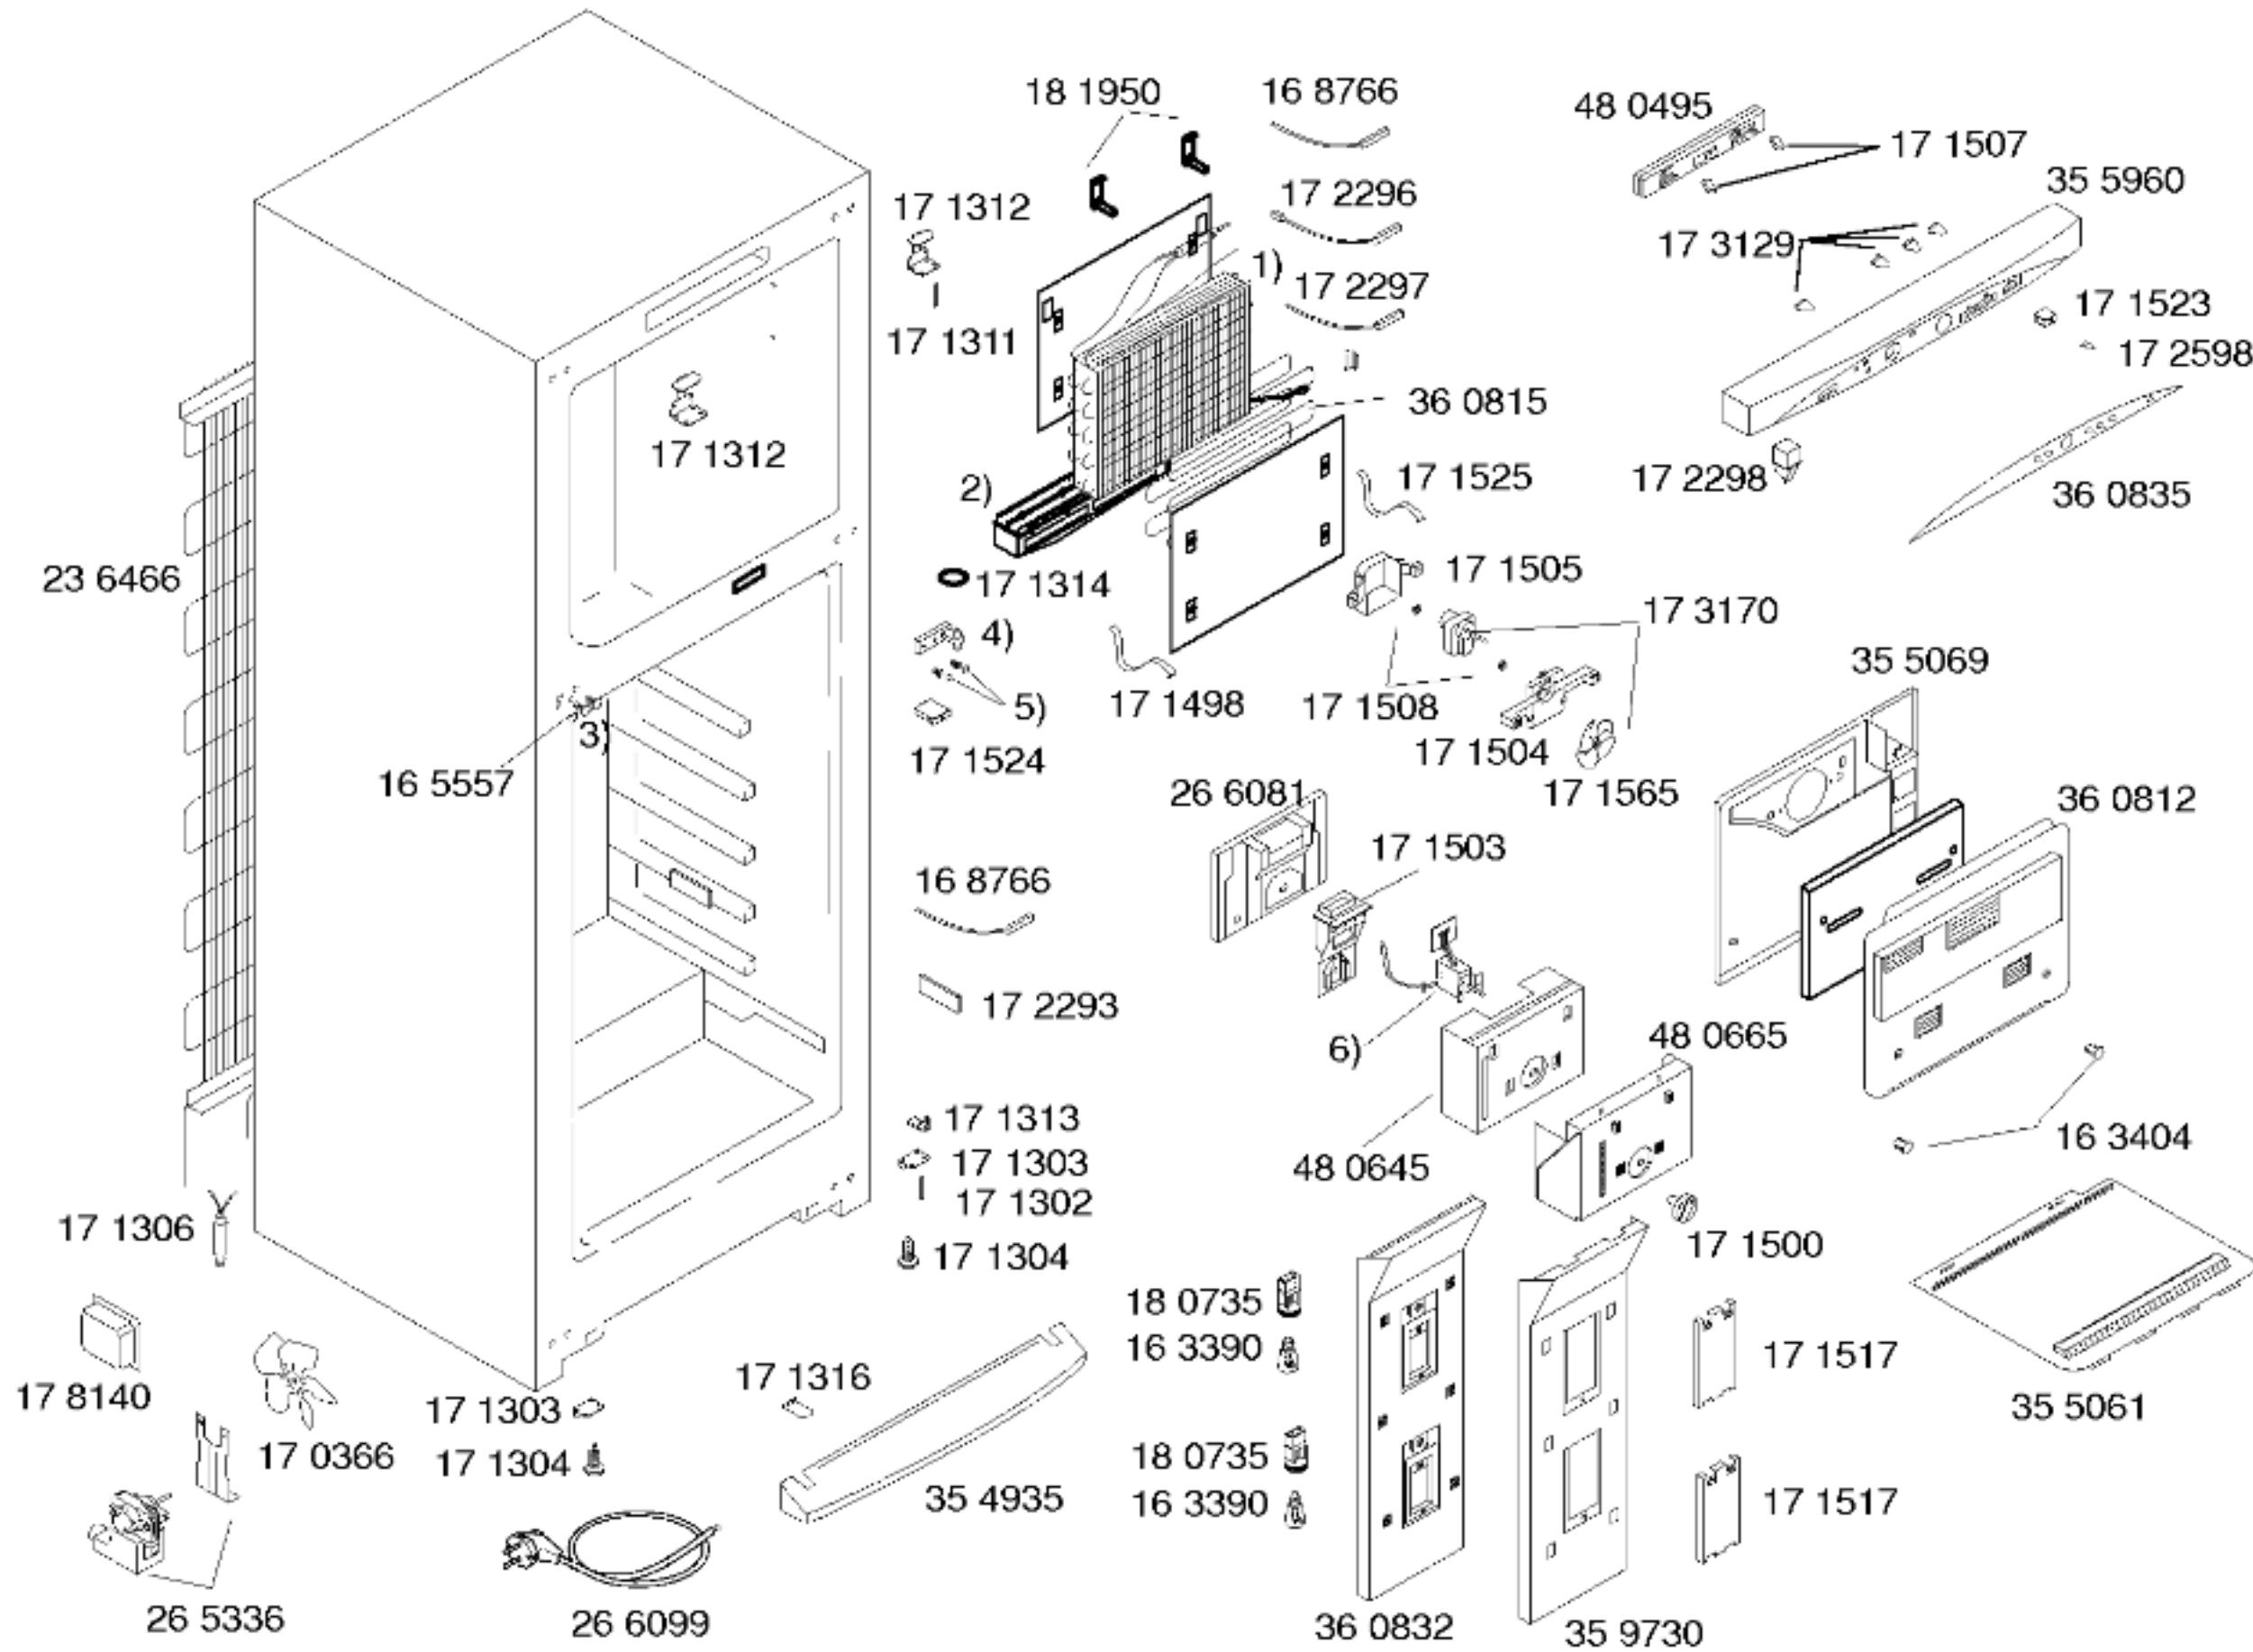

Kullanma kılavuzu
52 7025
(TR)

- 1) 36 0821
 - 2) 36 0850
 - 3) 16 5552
 - 4) 17 1308
 - 5) 17 6137
 - 6) 26 6580
- V01
18 2029
V02,V03

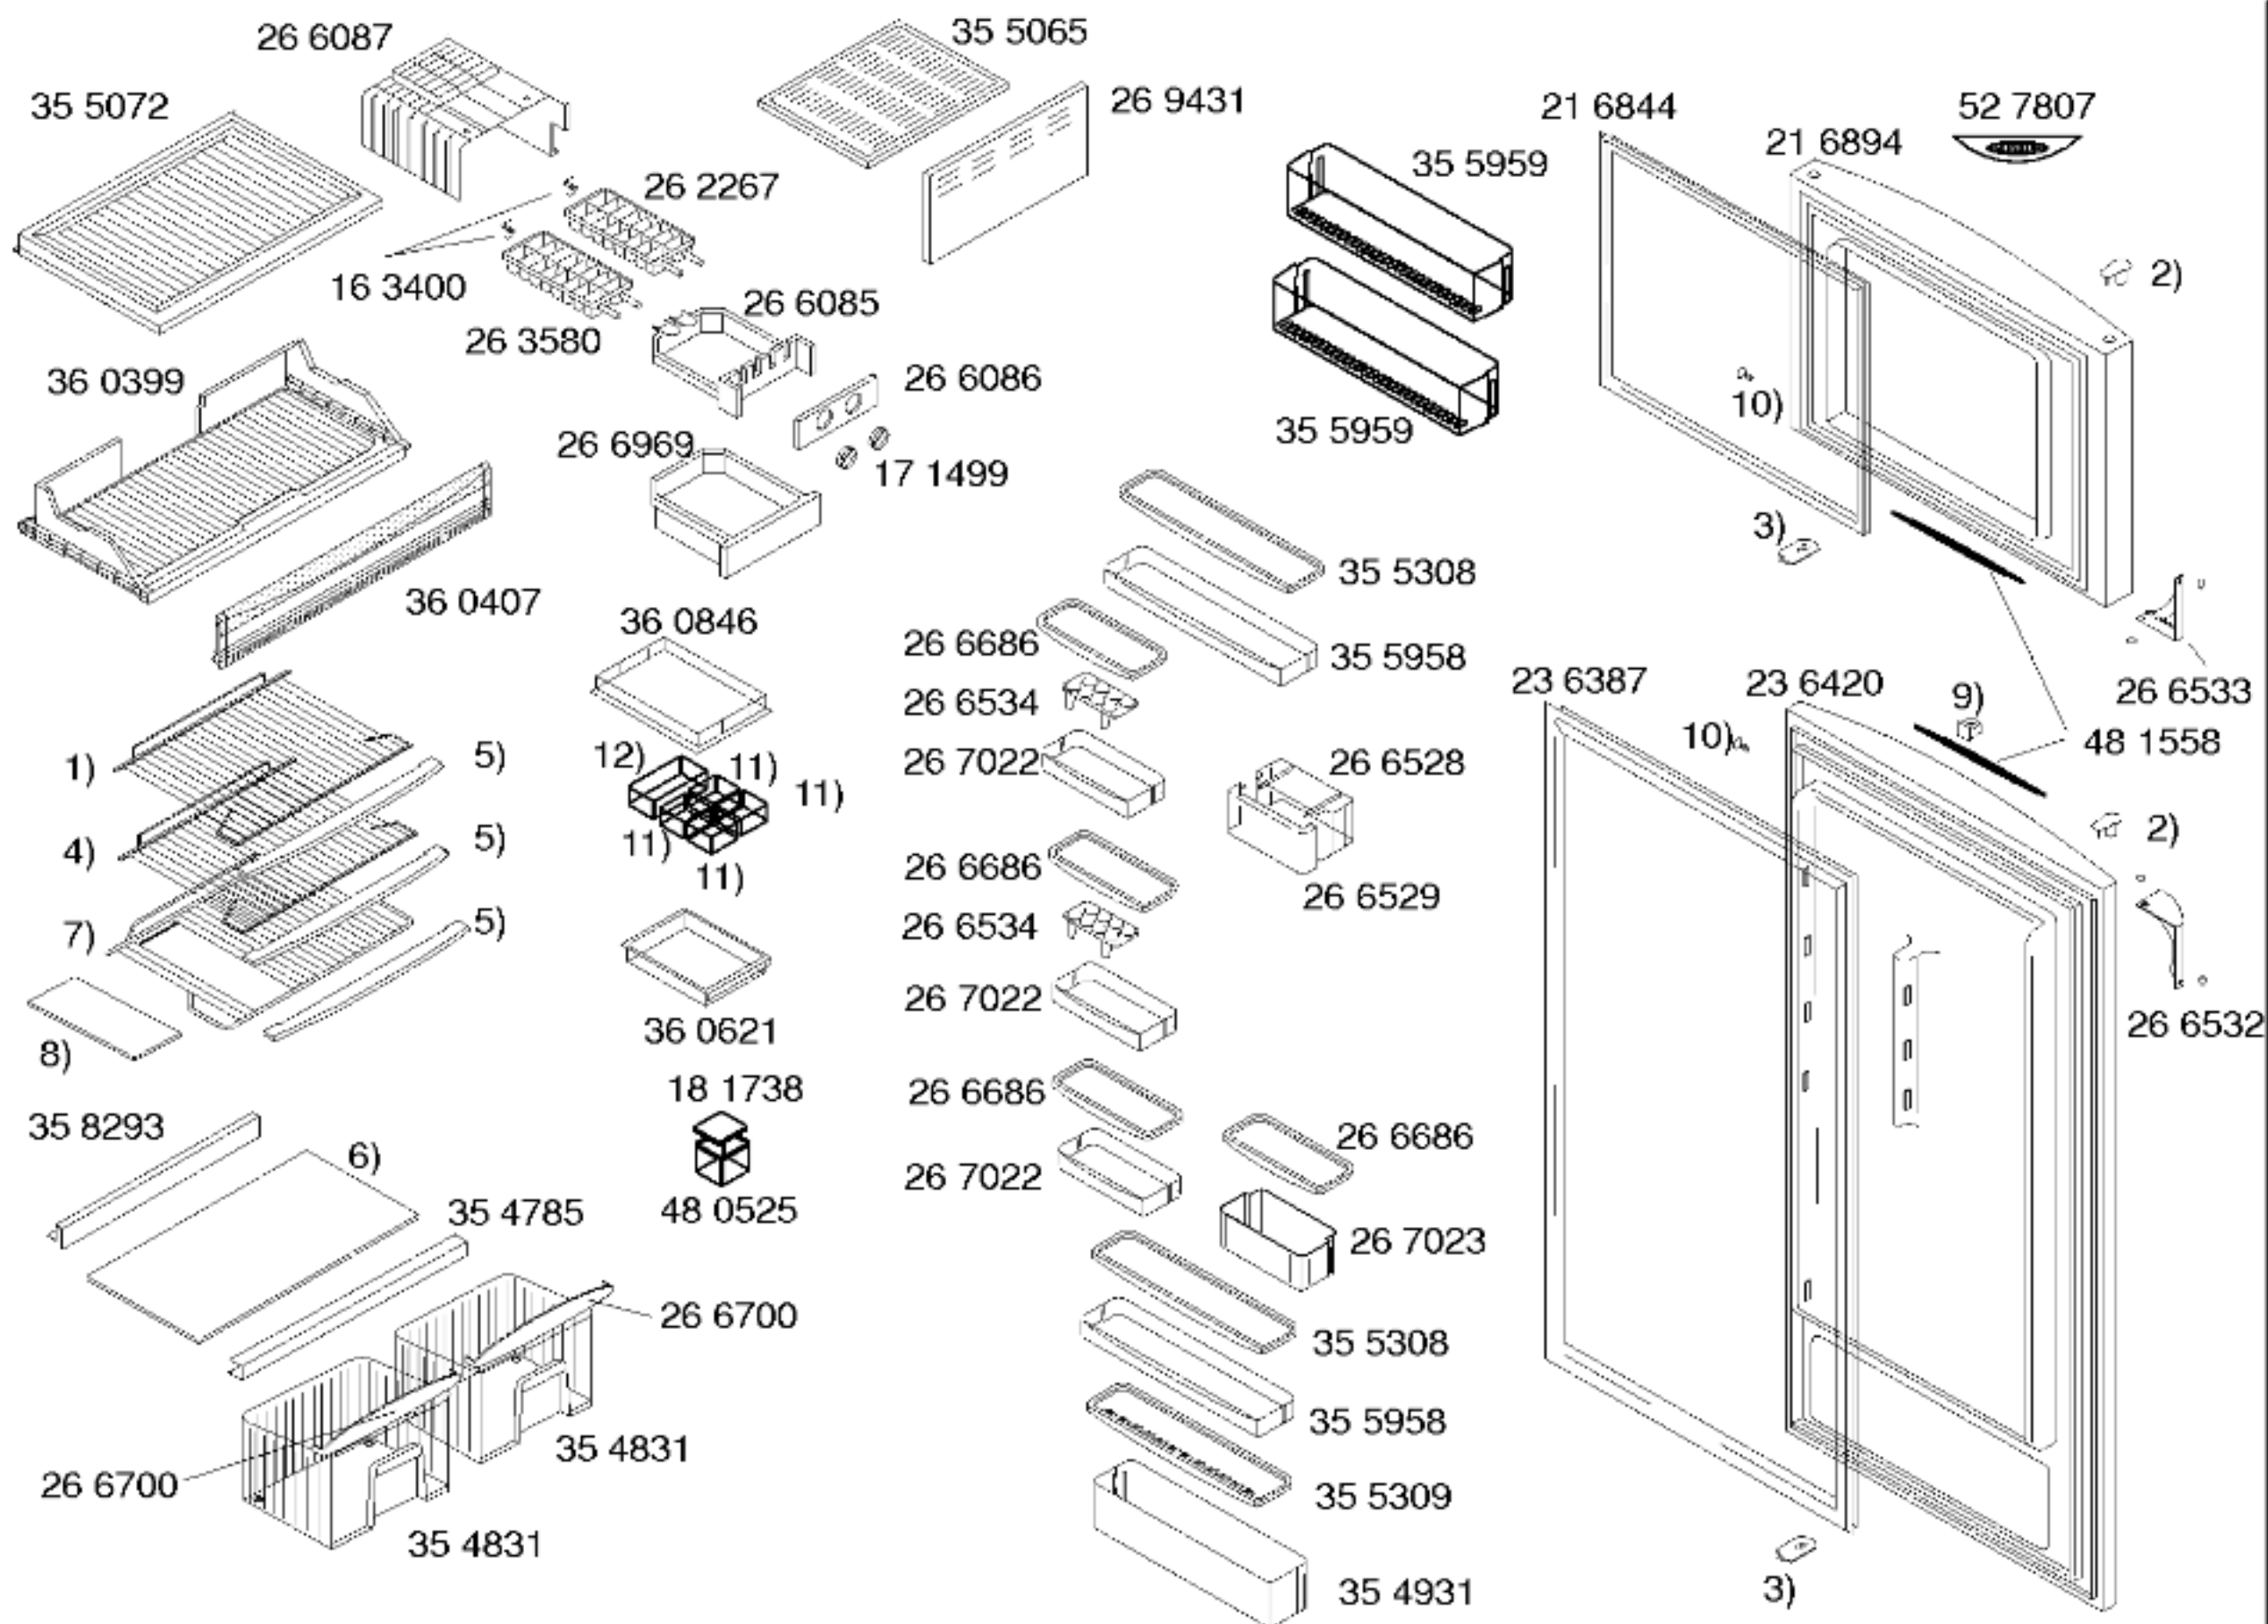

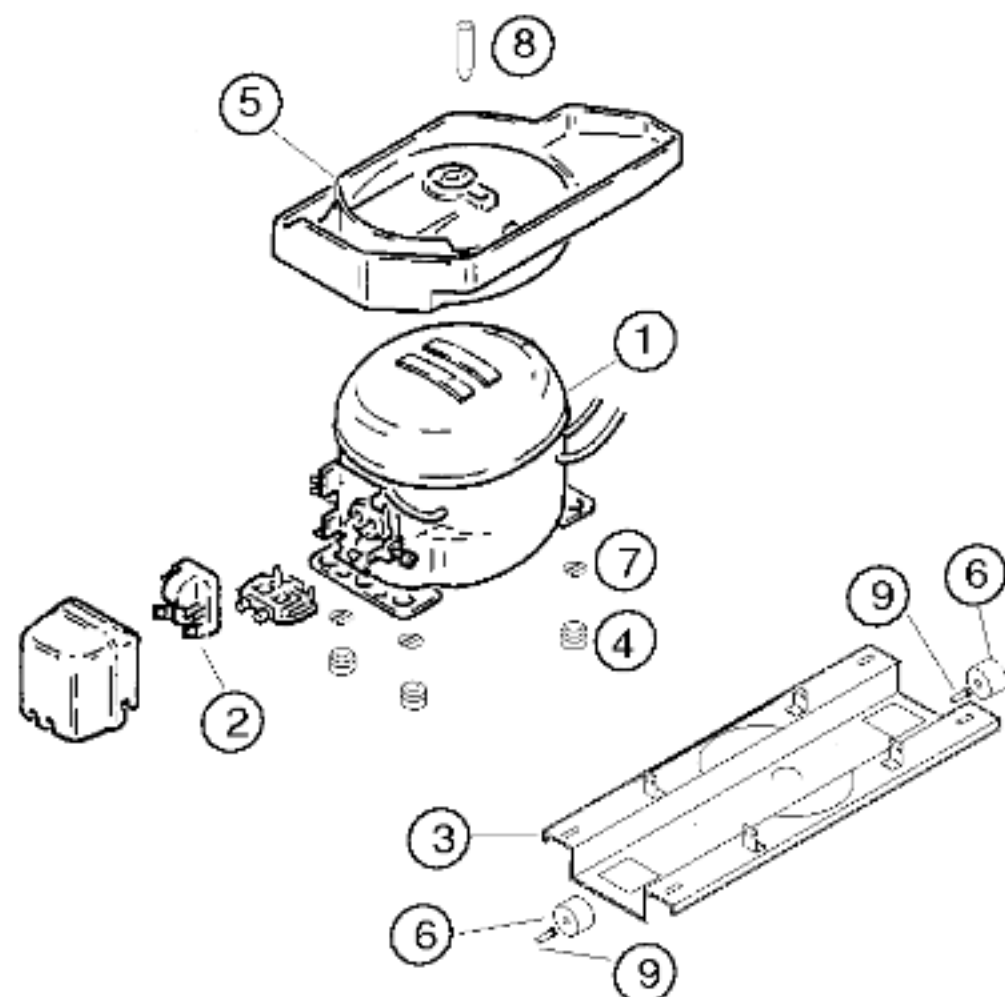

Pos.			
	Danfoss		
	NL11F		
1	14 1916		
2	16 5570		
3	35 4583		
4	16 3427		
5	26 5327		
6	17 1318		
7	17 1519		
8	17 2776		
9	18 1014		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör	Danfoss		
Typ/Type/Tip	NL11F		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A	13.6	
Widerstand/Resistance/Rezistans Ha/	Ω	8.2	
Hi/aux.		14.7	
Temp.Reyler/Thermostat/Termostat	Elektronisch		
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri	..ein/acma "C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R134a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans	Ω	Verdampfer	Ablaufrinne
Widerstand/Resistance/Direnc	W	190	20
Leistung/Power/Guc			
Ventilador/Blower/Vantilatör	Verdampfer		
Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans			
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız