



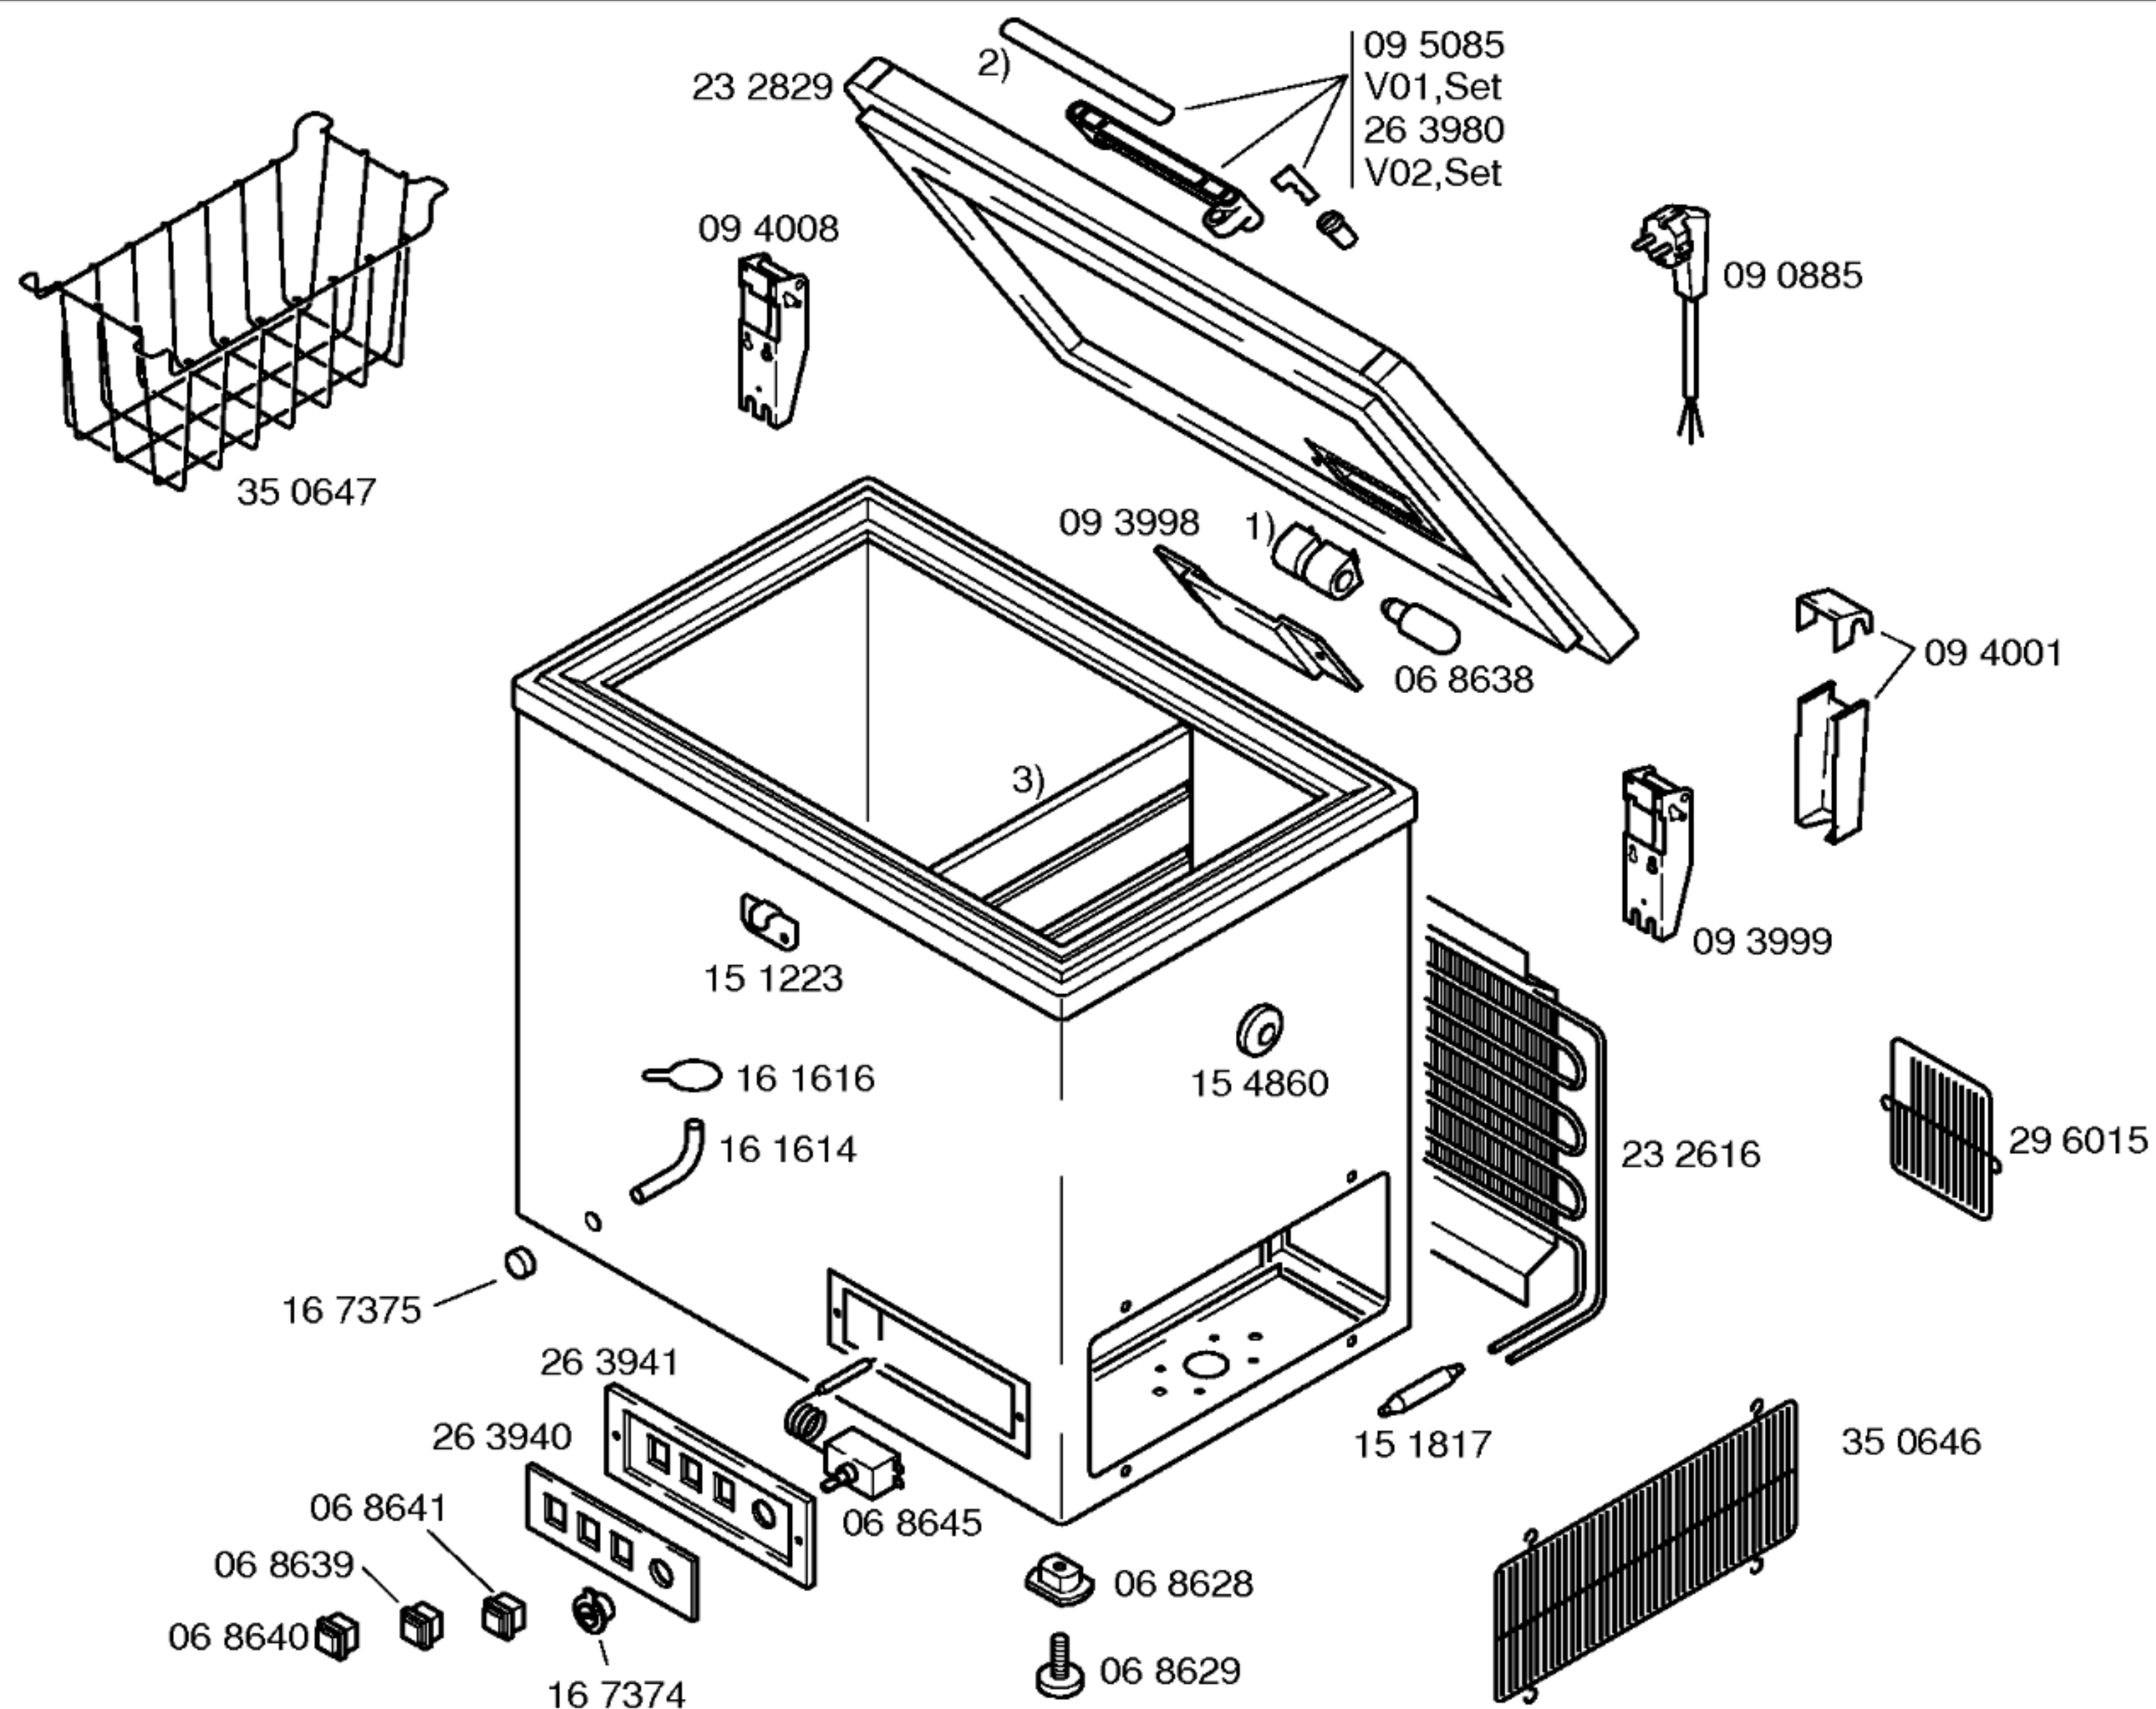

Libro de instrucciones
51 6522
(E)

- 1) 06 8643
- 2) 16 1617
V01
26 3978
V02
- 3) 28 4810
V01
21 3578
V02

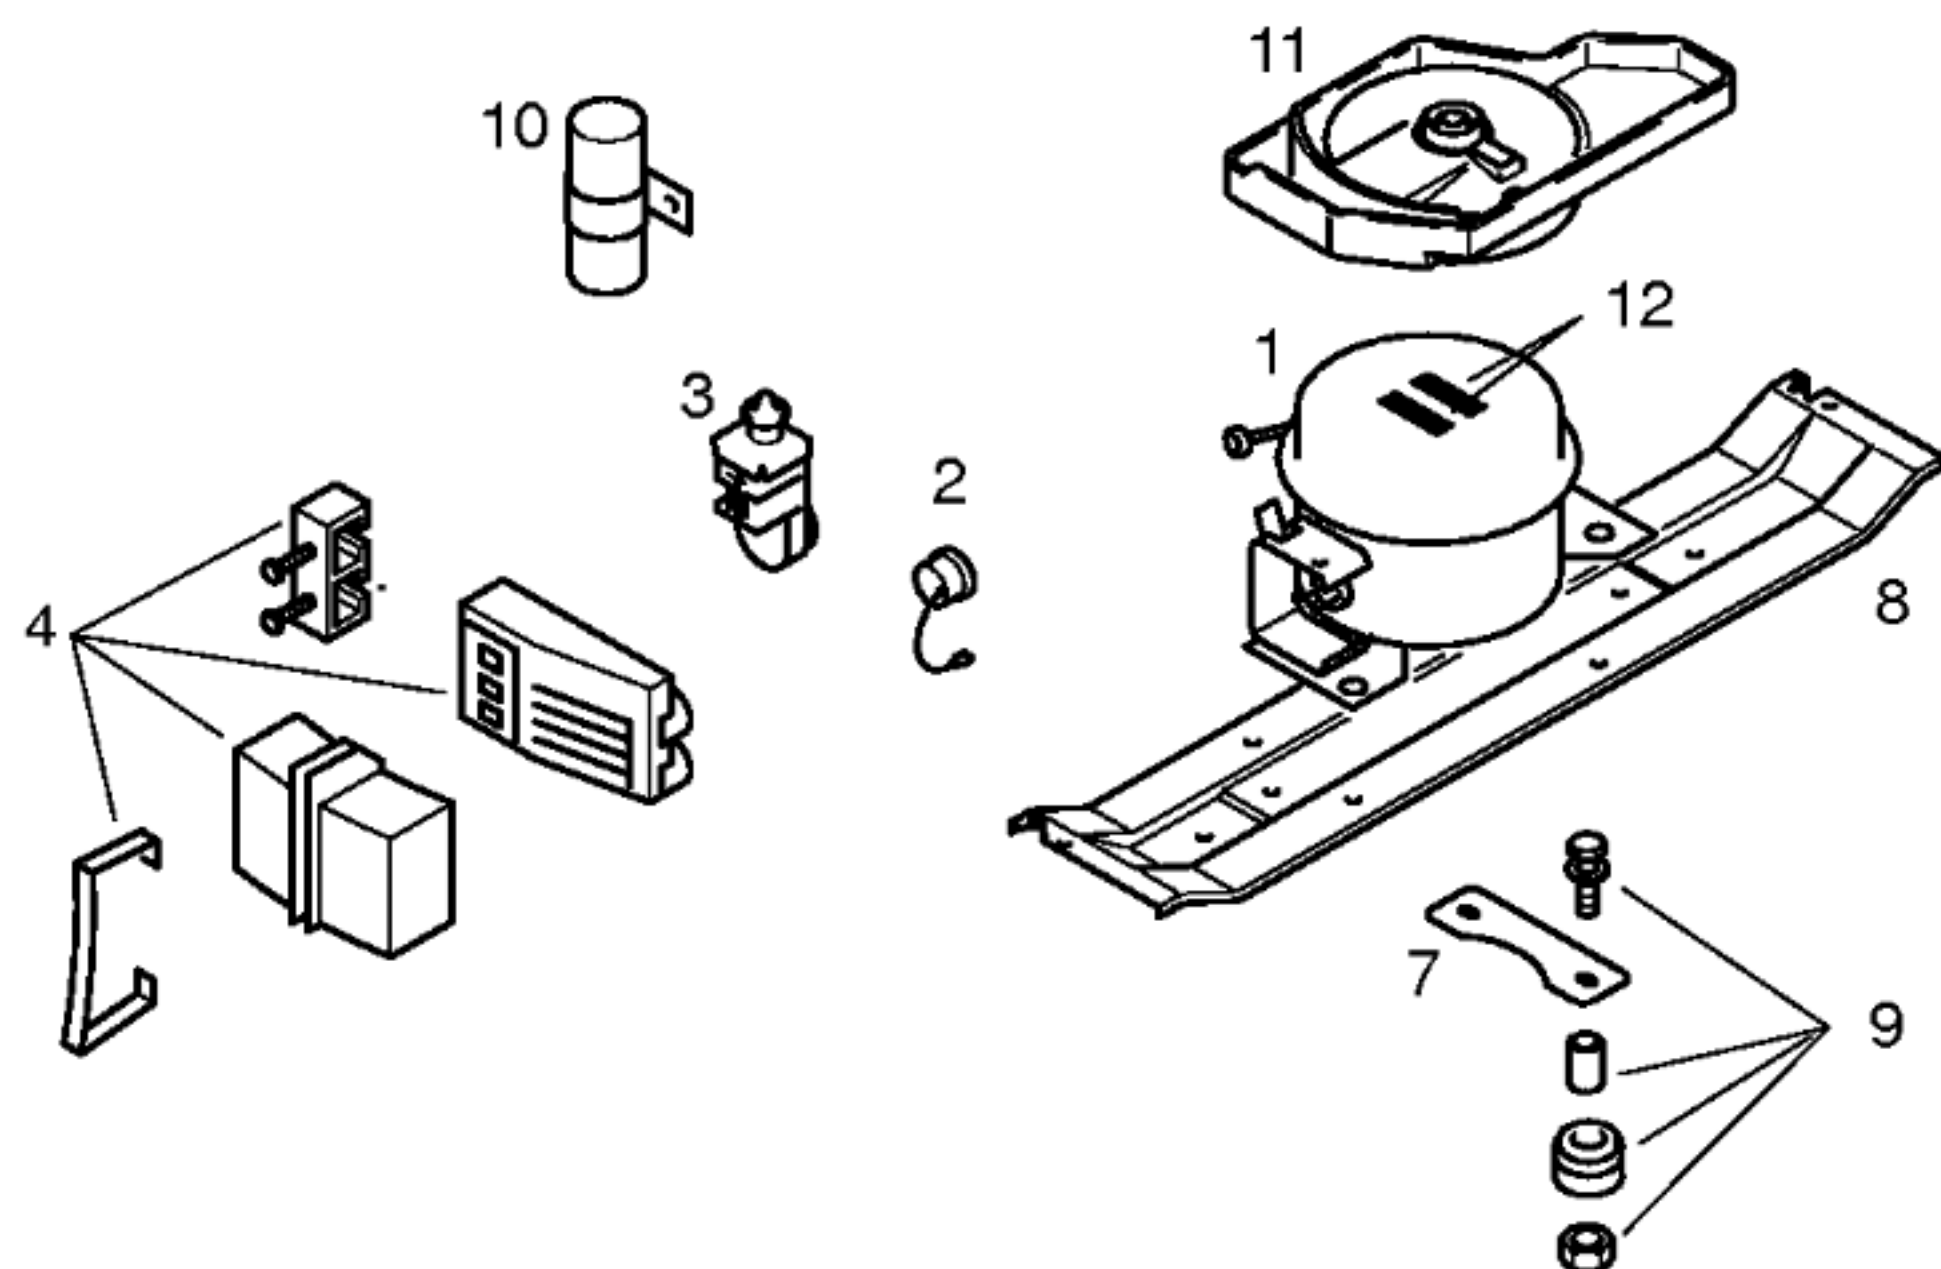

Pos.	R12	R12	R134a	
	Zanusi	Necchi	ZEM	
	E80601	ESM8	GL80AB	
1	14 0716	14 0716	14 1599	
2	03 9719		15 4890	
3	03 9716		15 4887	
4			09 6836	
5				
6				
7	27 5629			
8				
9	27 5629		15 4861	
10				
11				
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
	R12	R12	R134a
Verdichter/Compressor/Compresseur/Compresor	Zanusi	NECCHI	ZEM
Typ/Type/Tipo	E80-601	ESM8	GL80AB
Förderleistung/Delivery/Debit/Aspiración l/h			
Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A	9,8		
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	10,8		
Hi/aux.	45,6		
Temp.Reyler/Thermostat/Termostato	RANCO		
Typ/Type/Tipo	K54L1887		
Reglerstellung/Position/Conexión	MIN. MAX.		
Schaltwerte/Switching values/	..ein/conex. °C		
Valeurs de commutation/Desconex.	..aus"/descon.		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/Charge/Carga R12	g	135	135
Füllmenge/Fill. quantily/Charge/Carga 134a	g	—	—
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	160	
Heizung/Heater/Chauflage/Resistenc. descong.			
Widerstand/Resistance/Resistencia	Ohm		
Leistung/Power/Puissance/Potencia	W		
Ventilador/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia	Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula			
Widerstand/Resistance/Resistencia	Ohm		
Spannung/Voltage/Tension/Tensión	V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			