


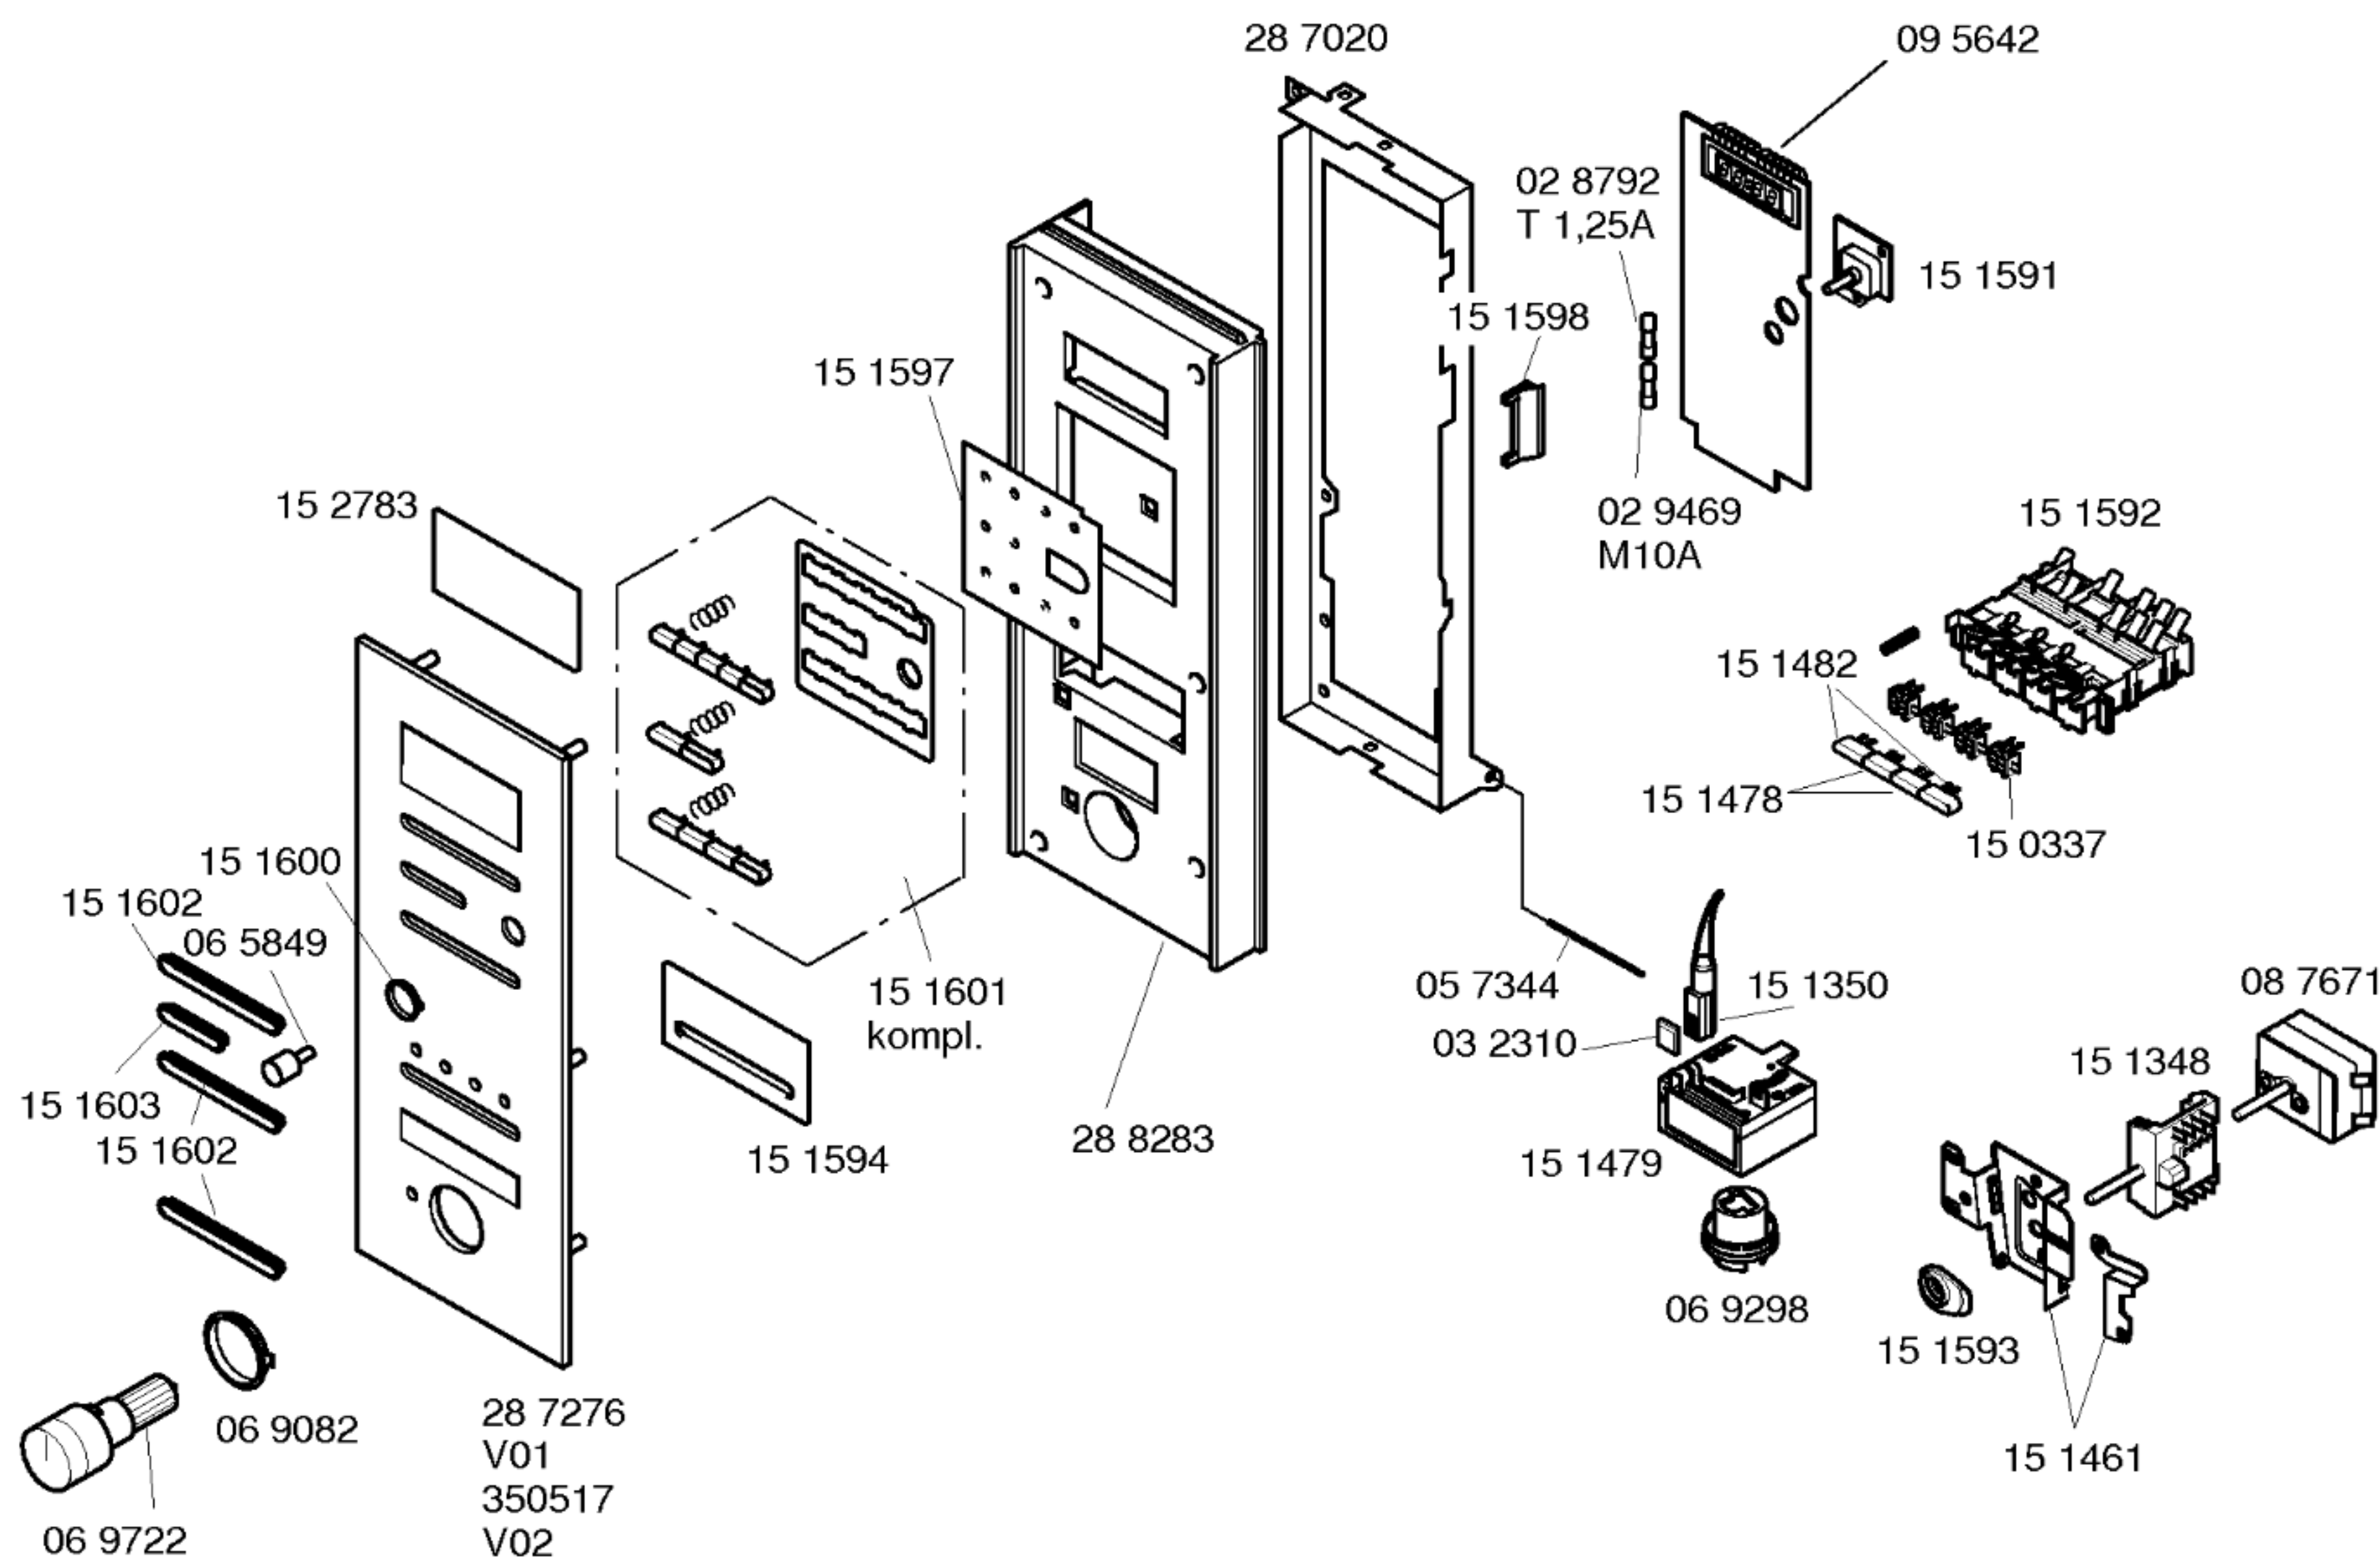

Gebrauchsanweisung
51 6973
(D,F,GB,I,NL,E)

Programmtabelle
51 7579
(D,GB,F,I,NL,E)

Montageanleitung
51 6089
(D,GB,F,I,NL)


Kochbuch
51 5729
V01
(D)
51 5849
V02
(NL)

Zubehör:


Alu-Backblech
HZ 8055

Glaspfanne
HZ 8056


Glasbräter
HZ 9150

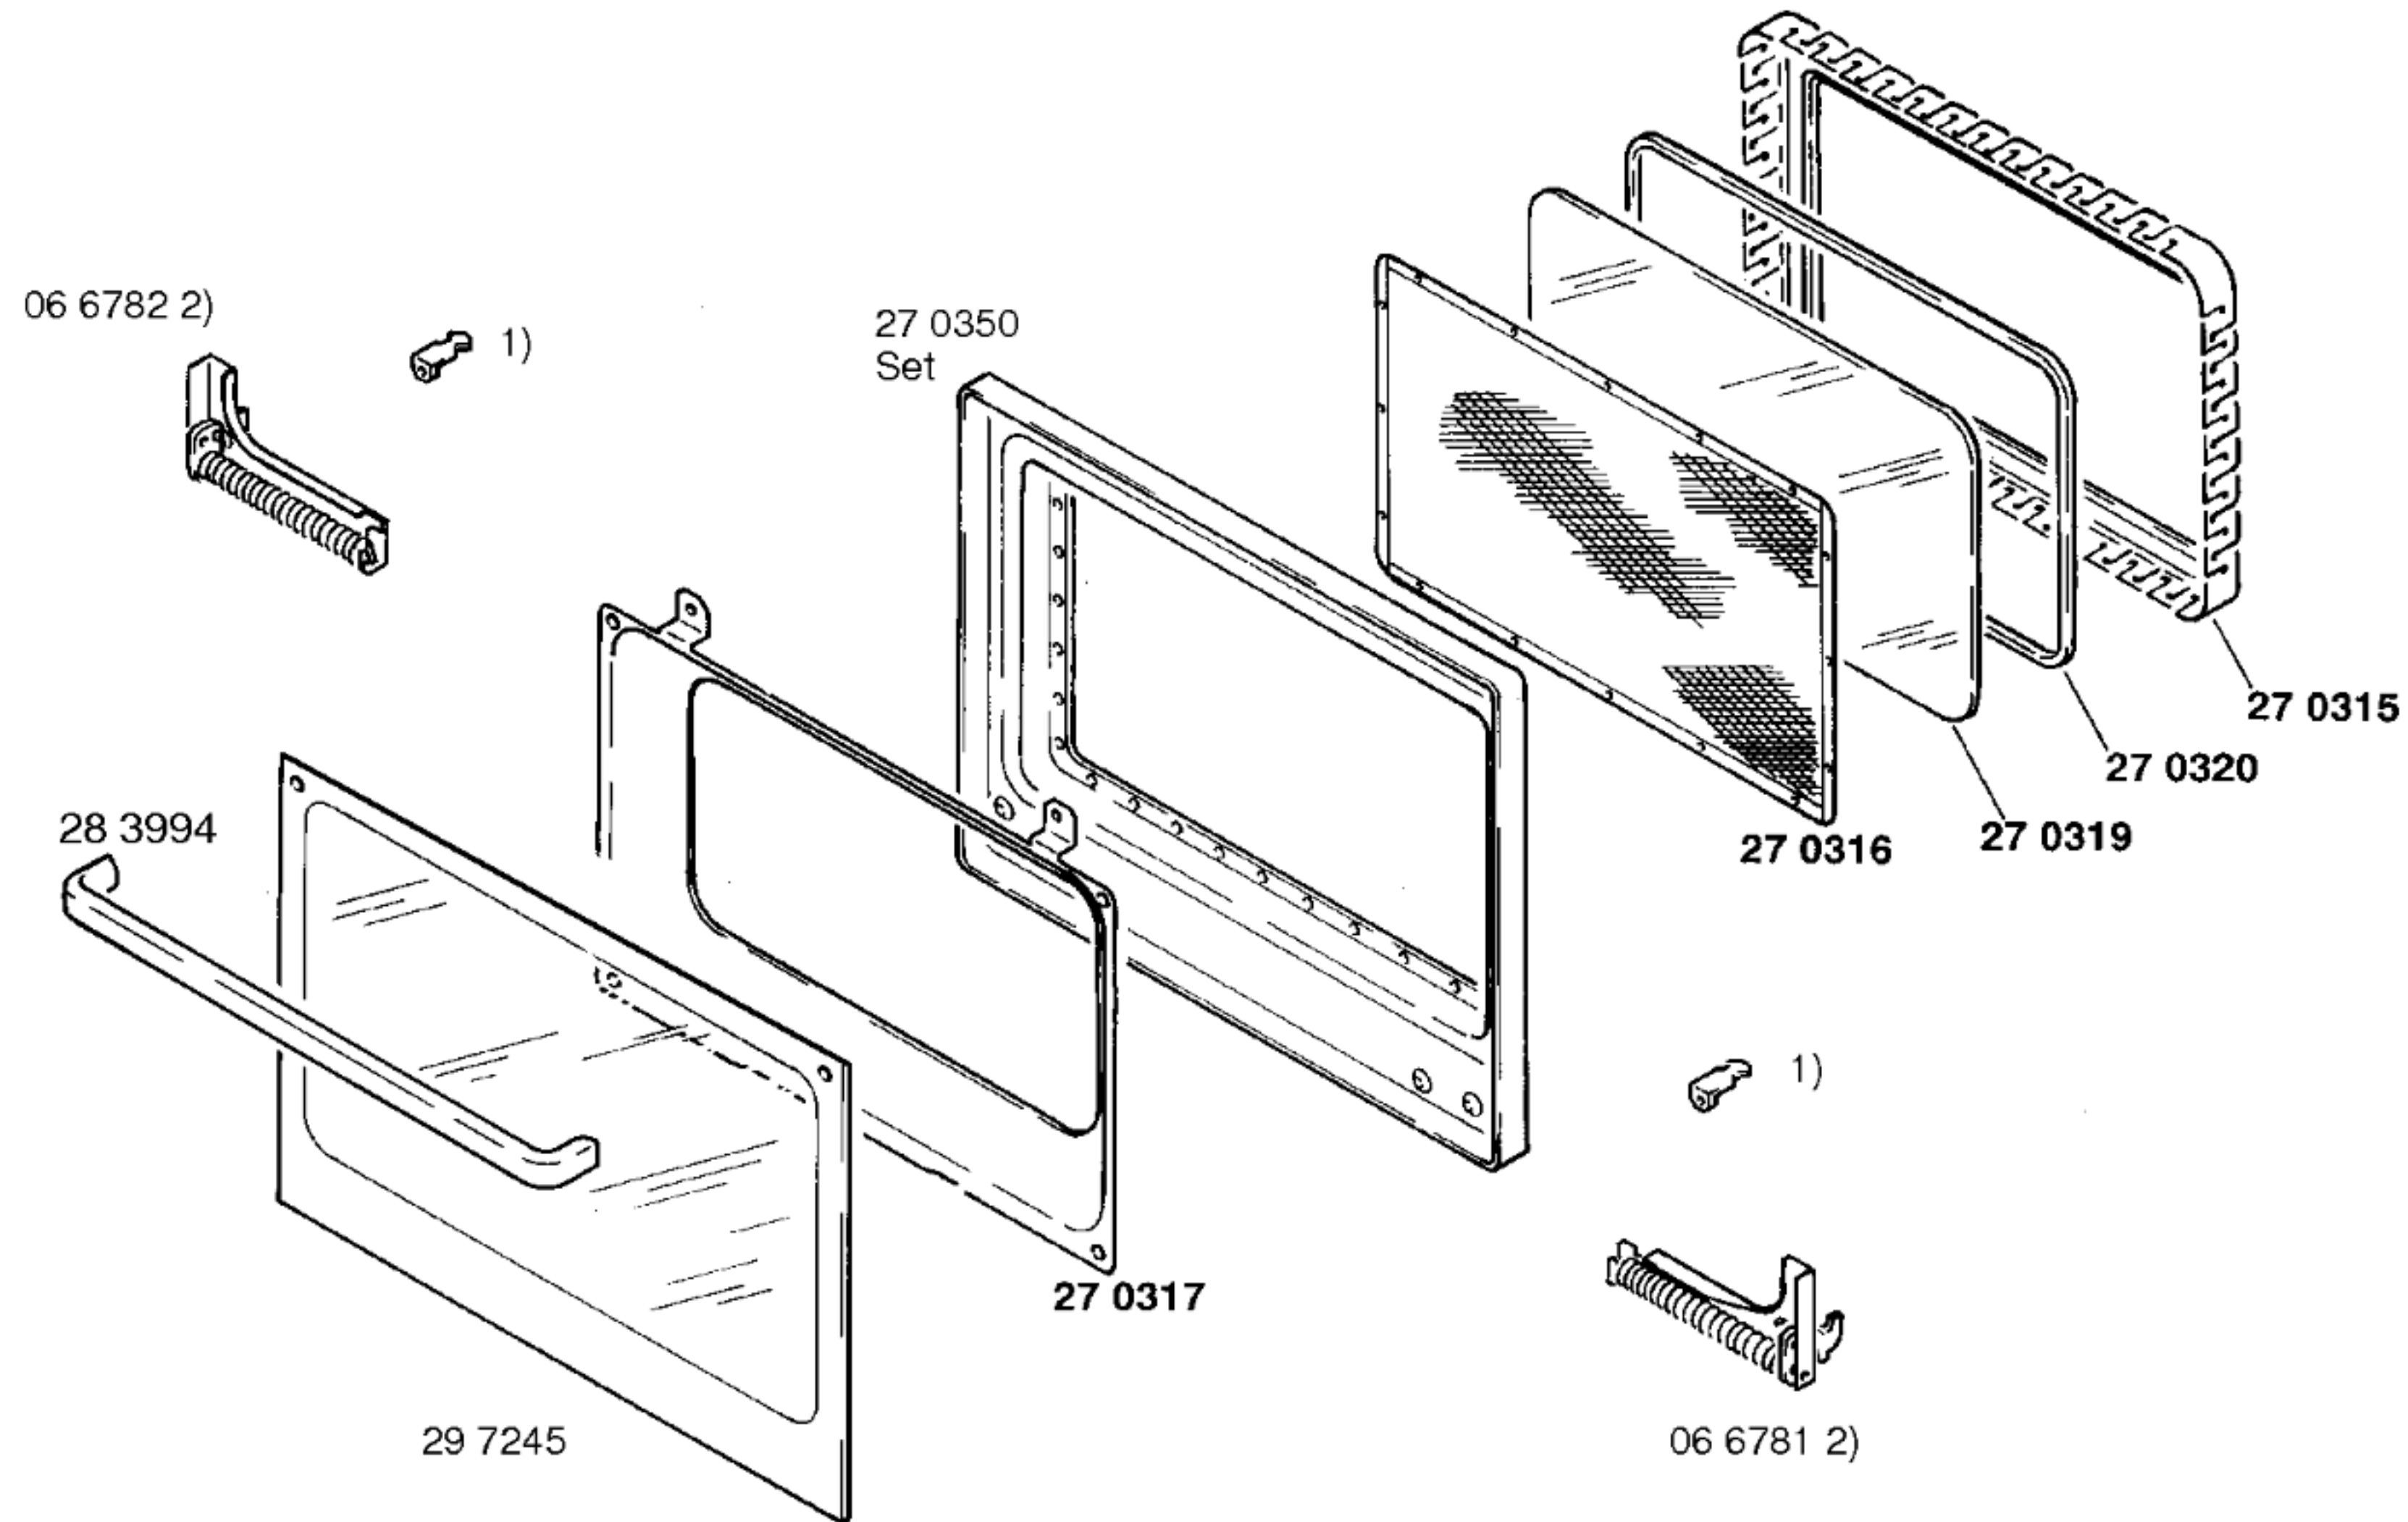

- 1) 03 0671
Stössel
- 2) 03 0813
Arretierstift

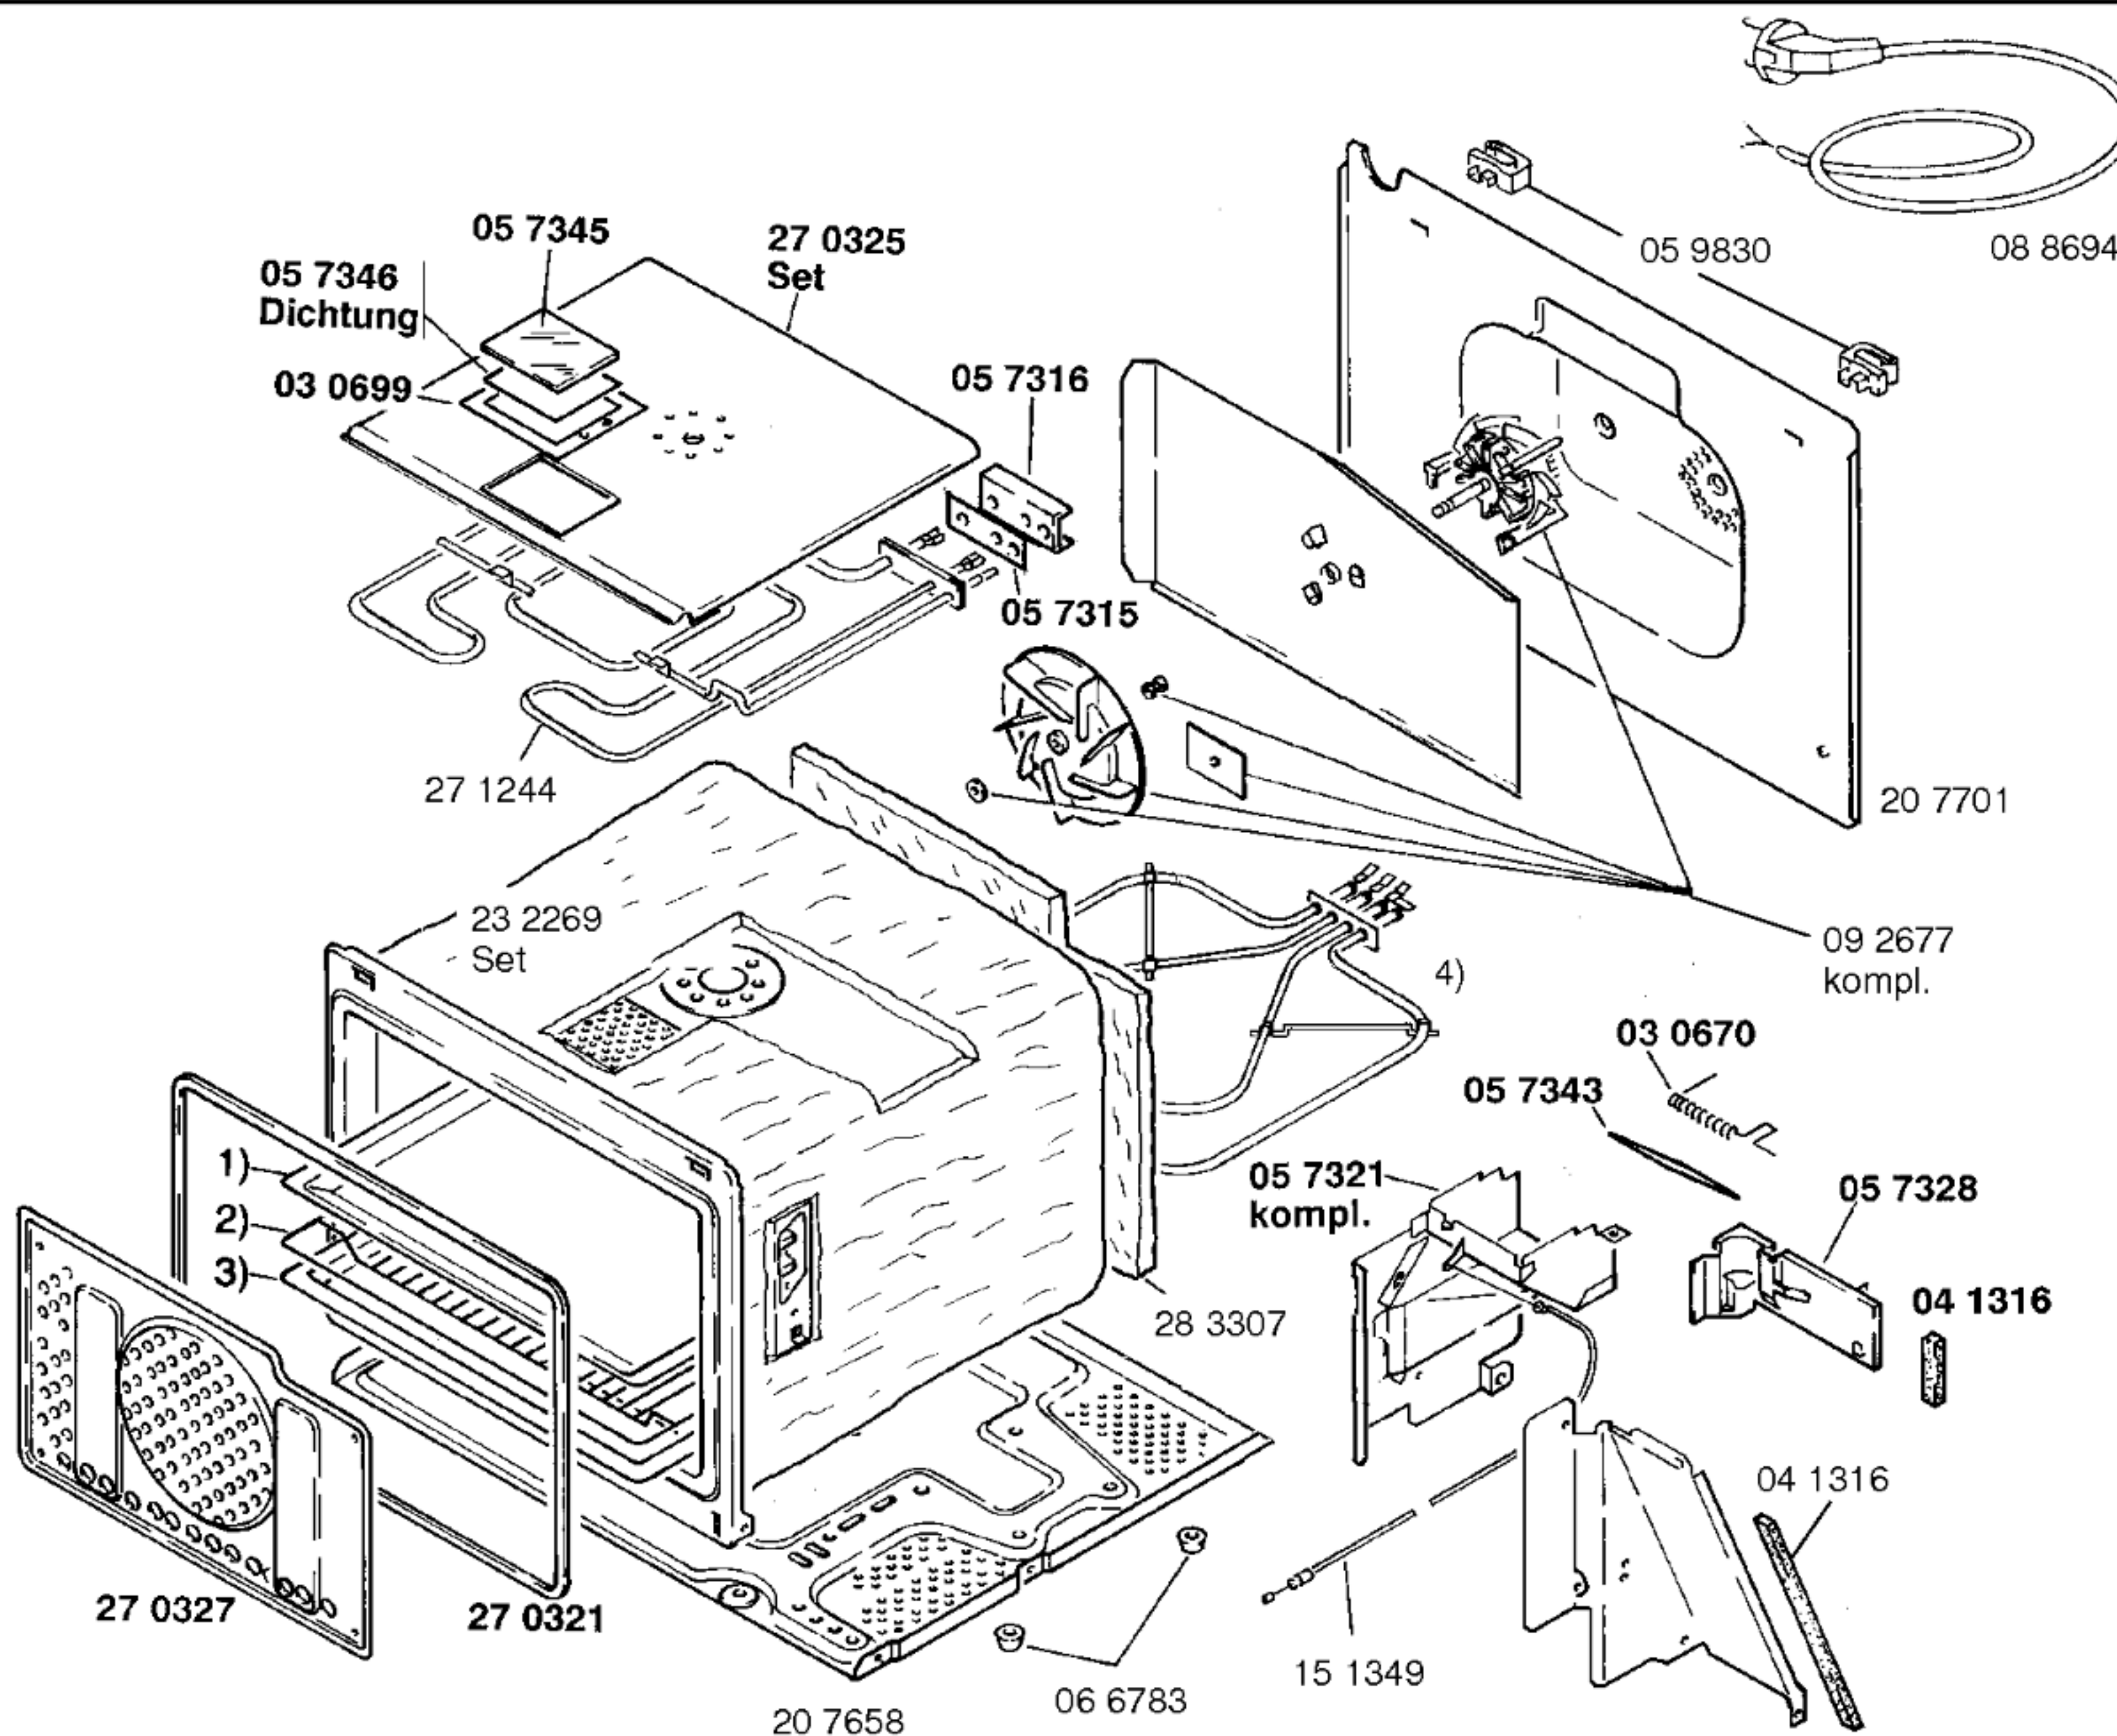

- 1) 11 4538
Backblech
 - 2) 11 4539
Rost
 - 3) 11 4537
Glasschale
 - 4) 27 0323
- 02 8732
Anschlag für Backblech

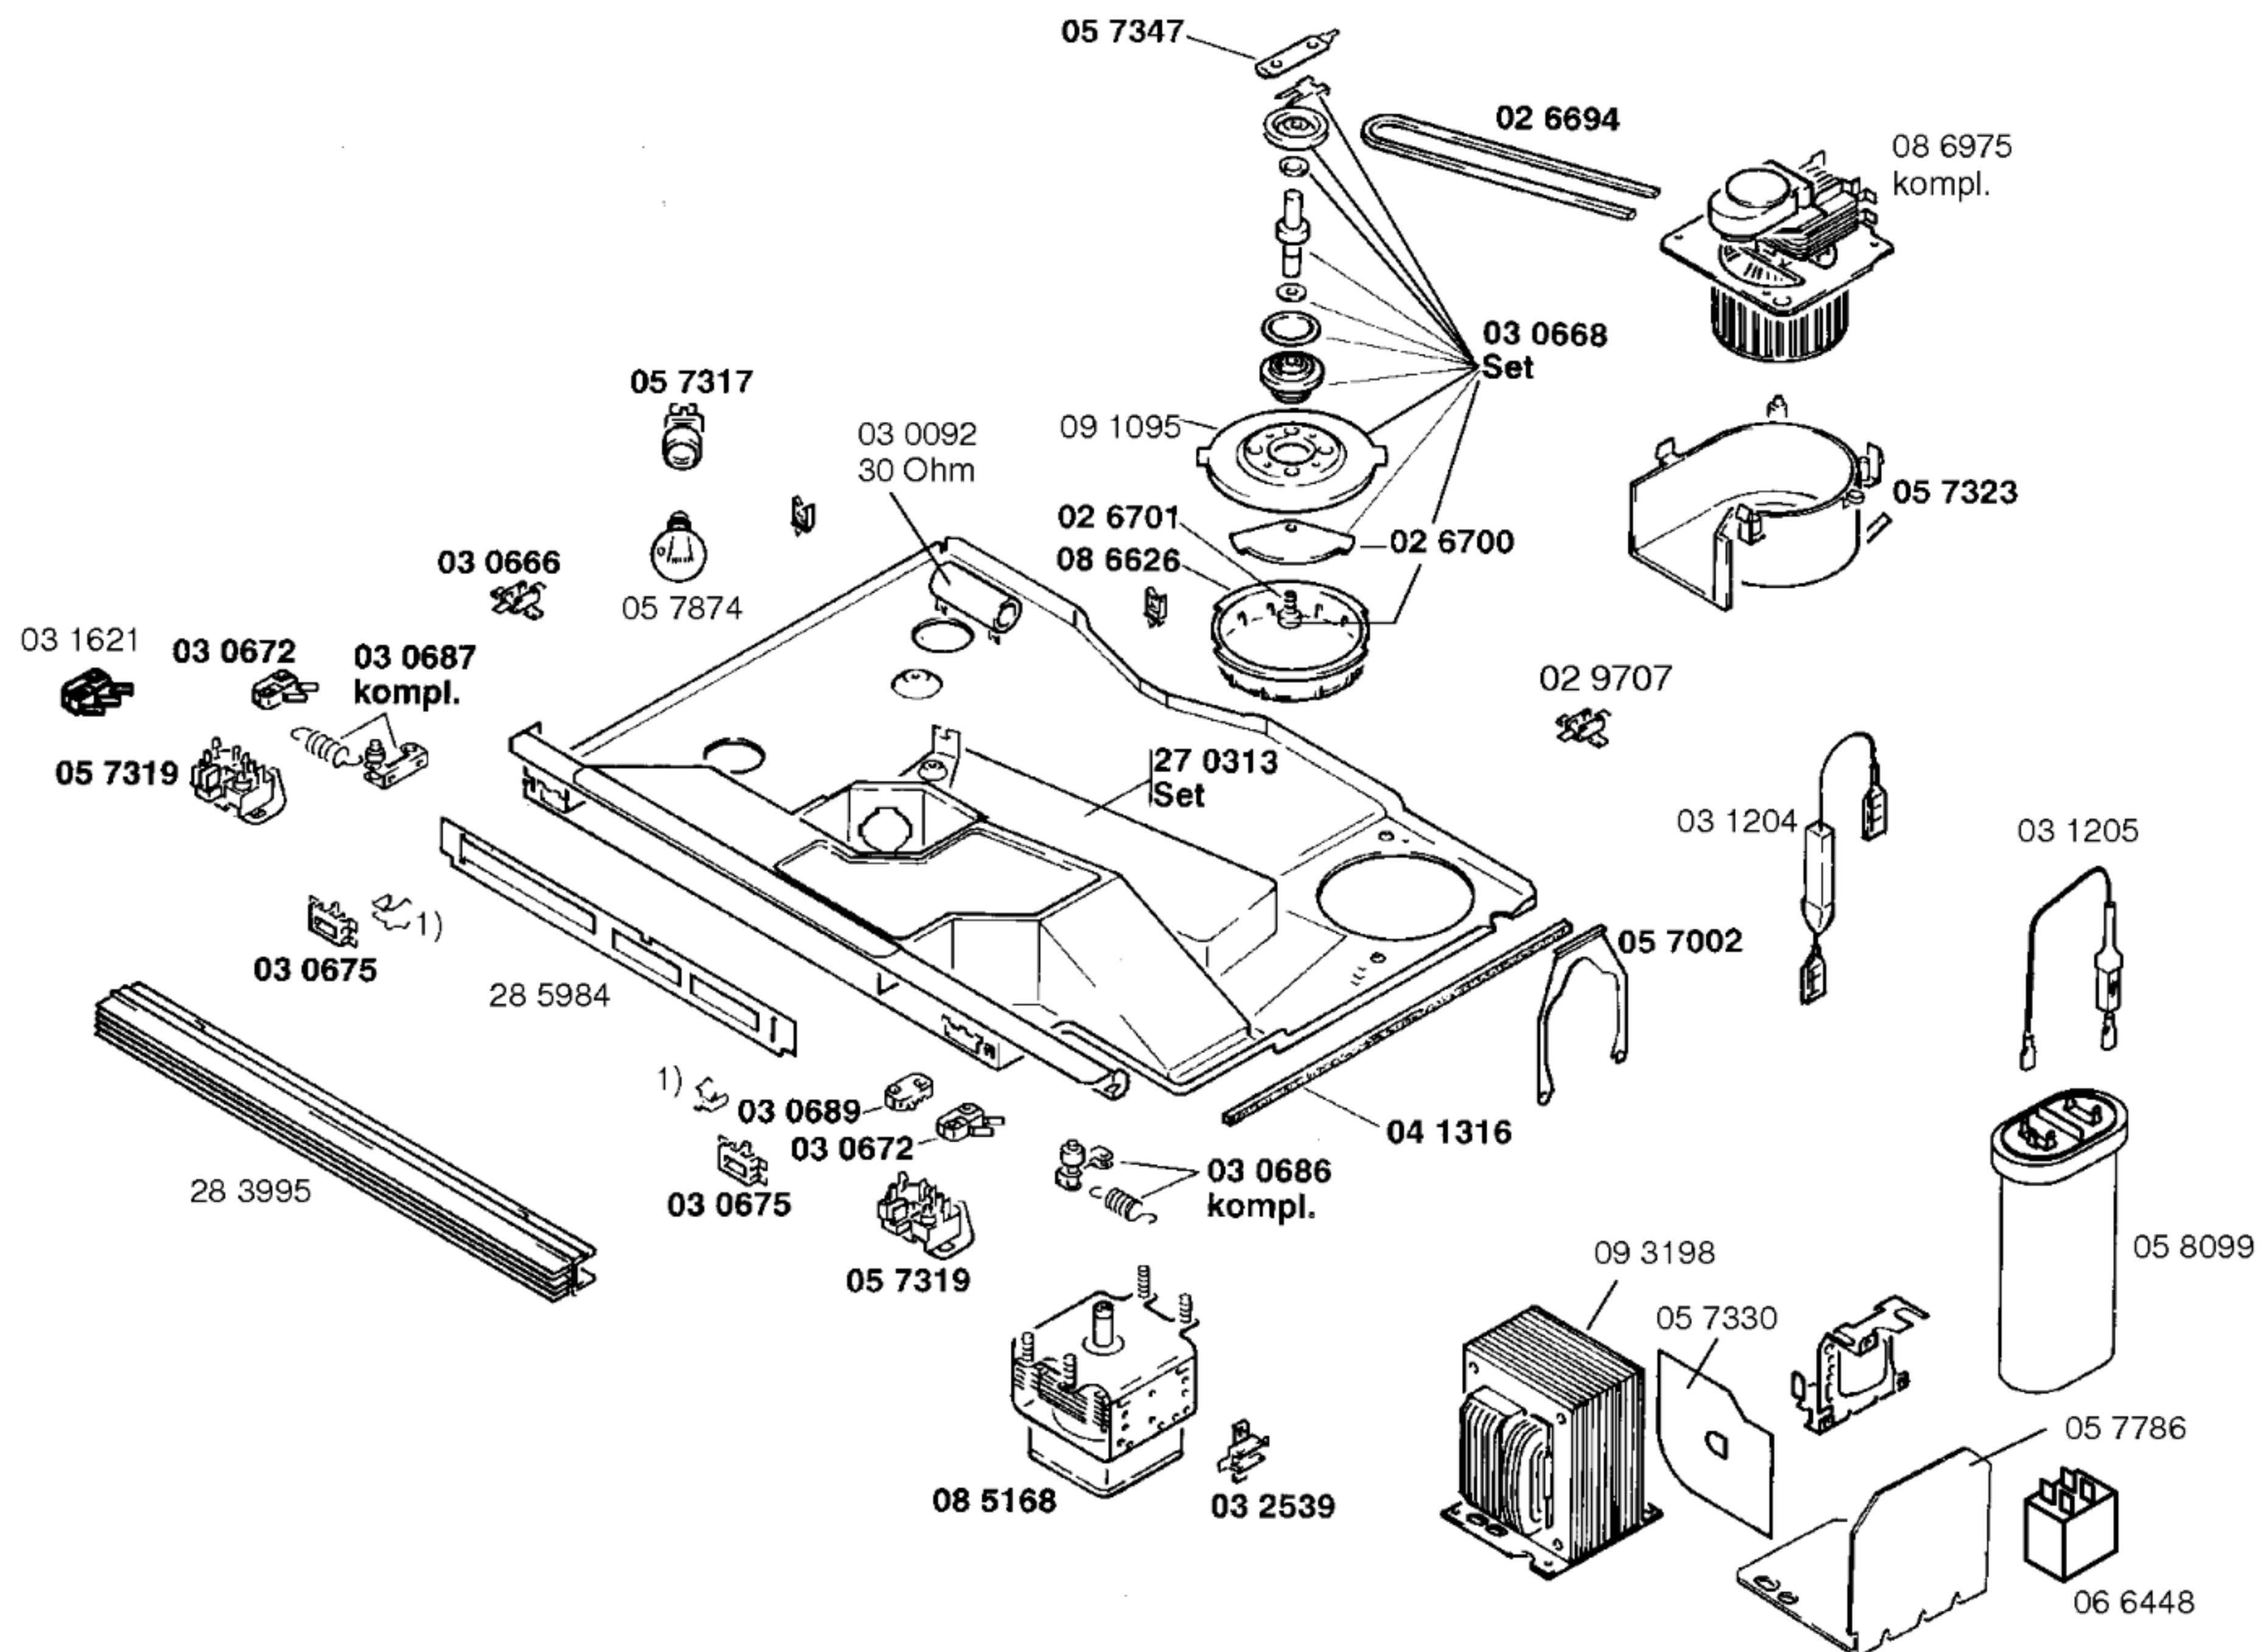

1) 06 6760

1) 06 6979

