


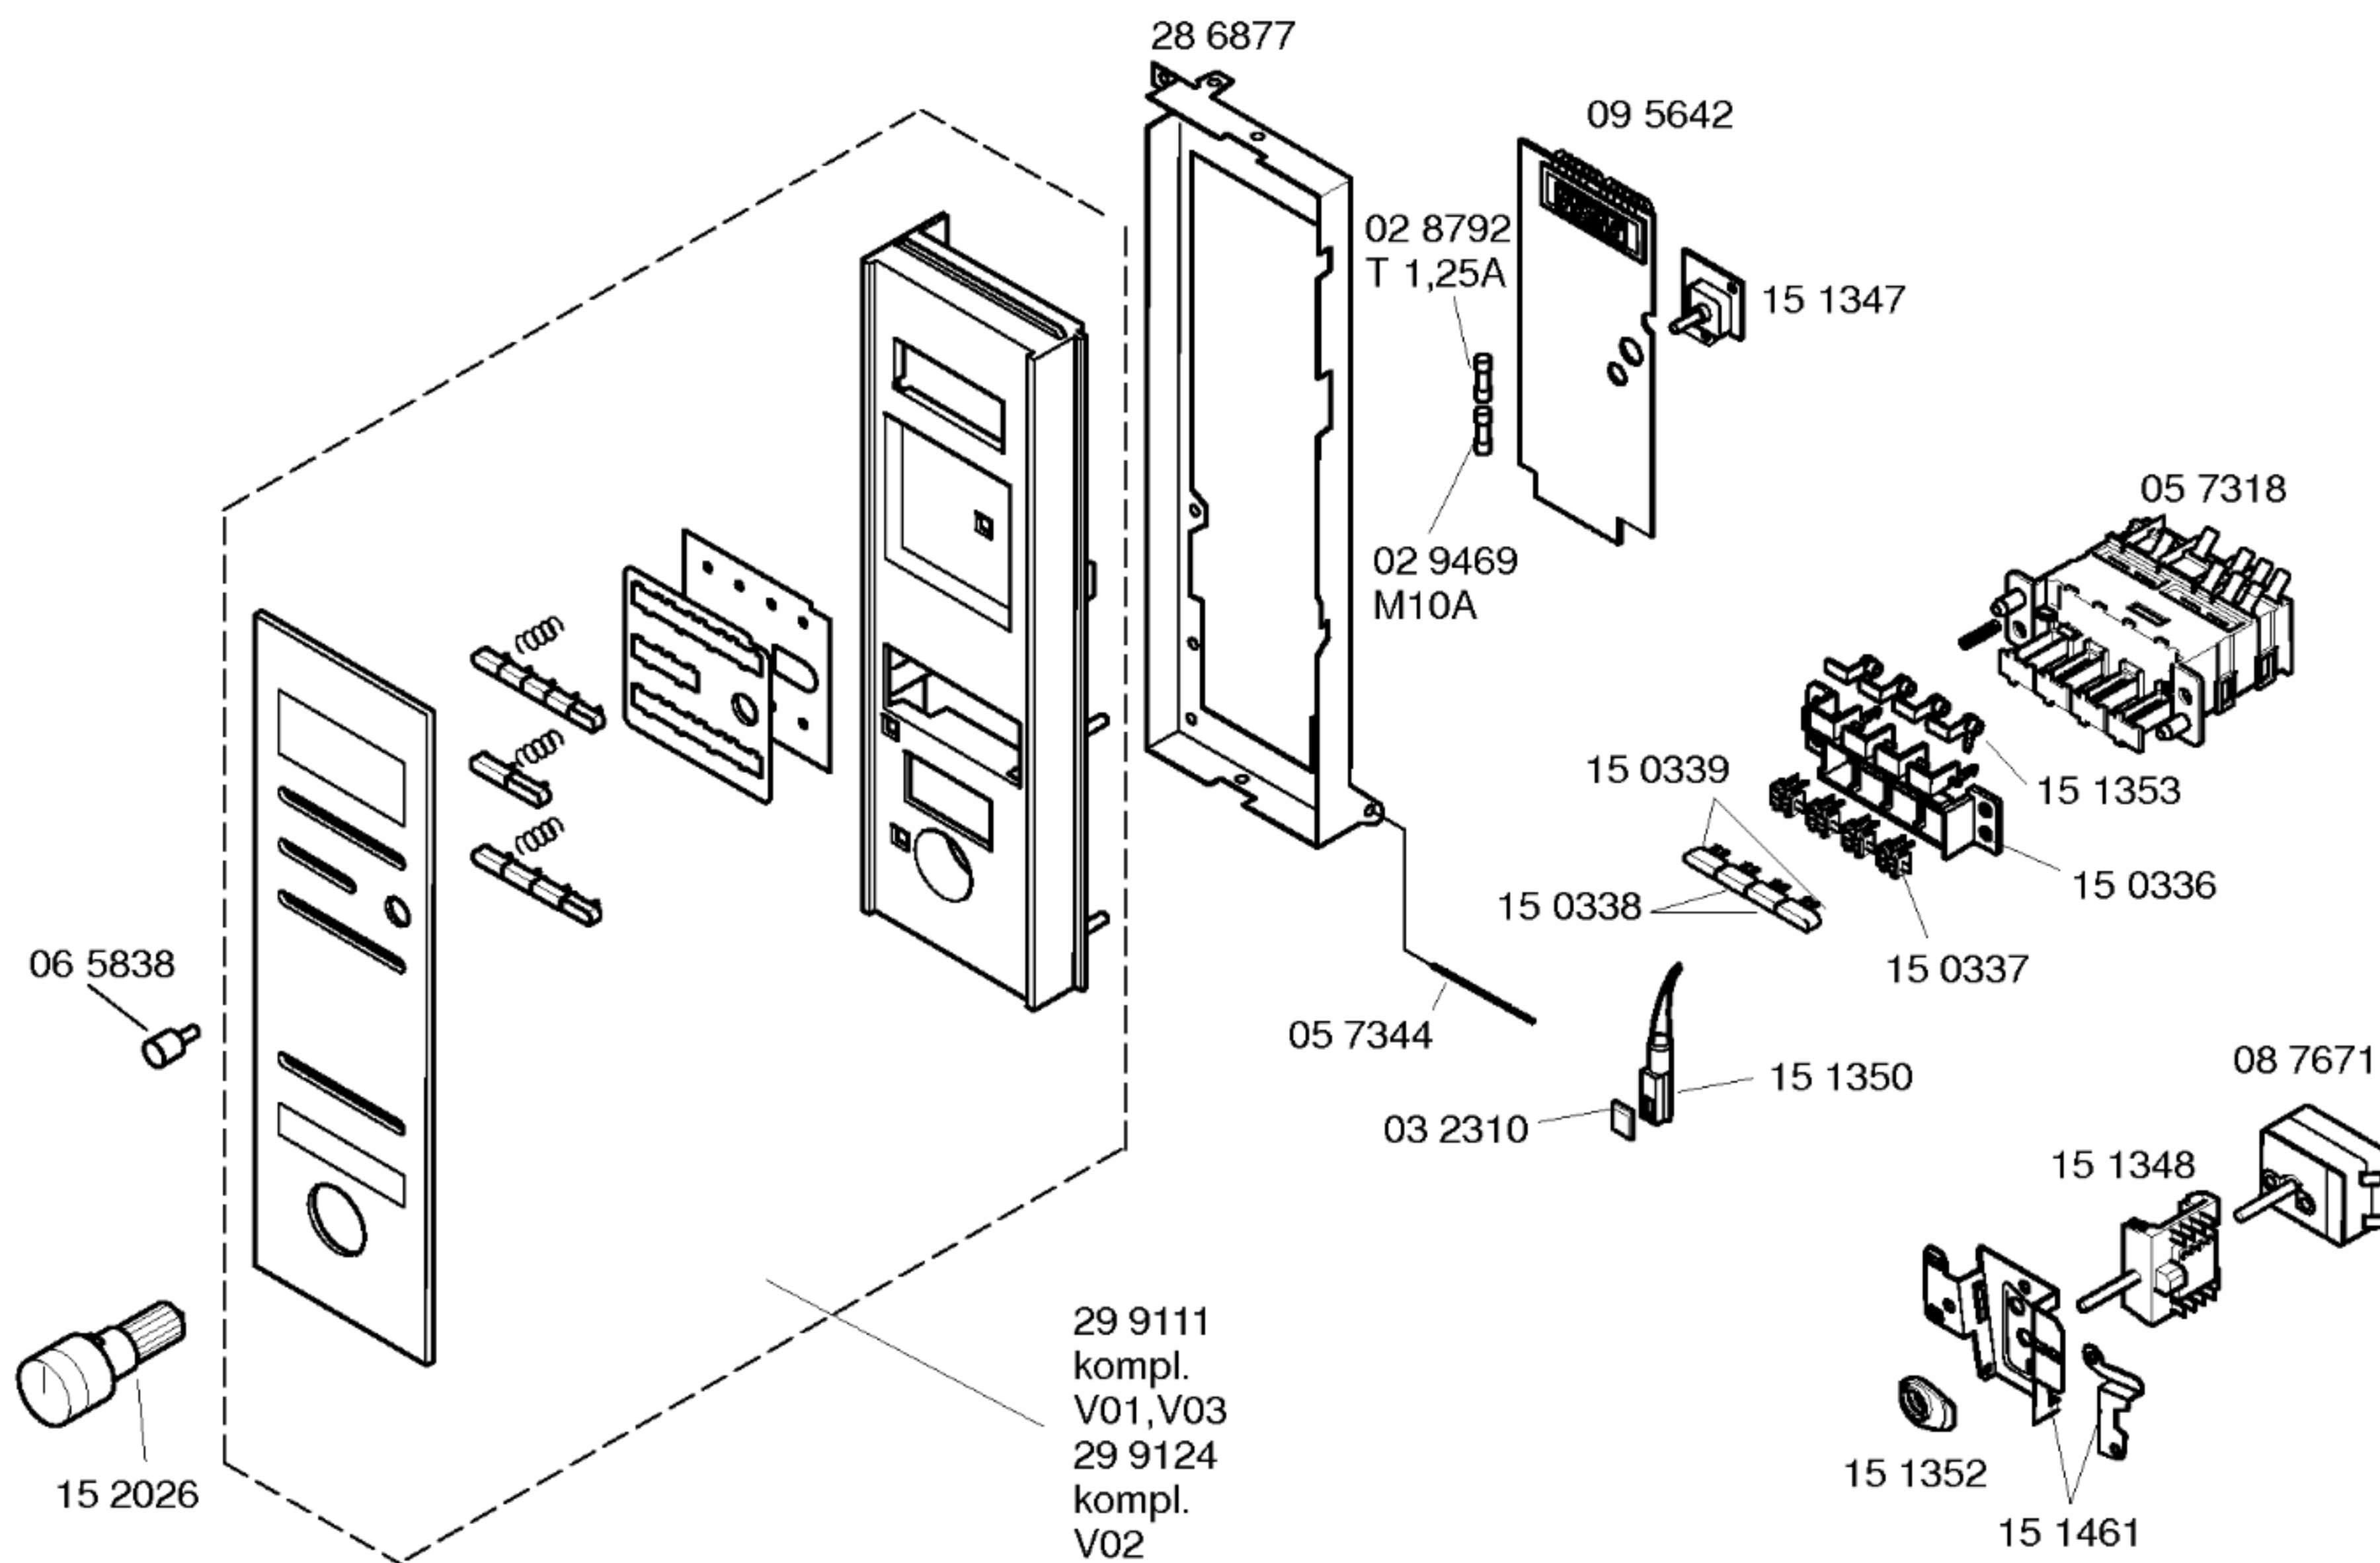



Gebrauchsanweisung
52 0104
(D,F,GB,I,NL,E)

Programmtabelle
51 7579
(D,GB,F,I,NL,E)

Kochbuch
51 5729
V01,
(D)
51 5853
V02,
(F)
51 5849
V02,
(NL)

Zubehör:
Einbaurahmen
HZ 67022
Alu-Backblech
HZ 8055
Glasbräter
HZ 9150
Glaspfanne
HZ 8056
Abdeckplatte
HZ 67720

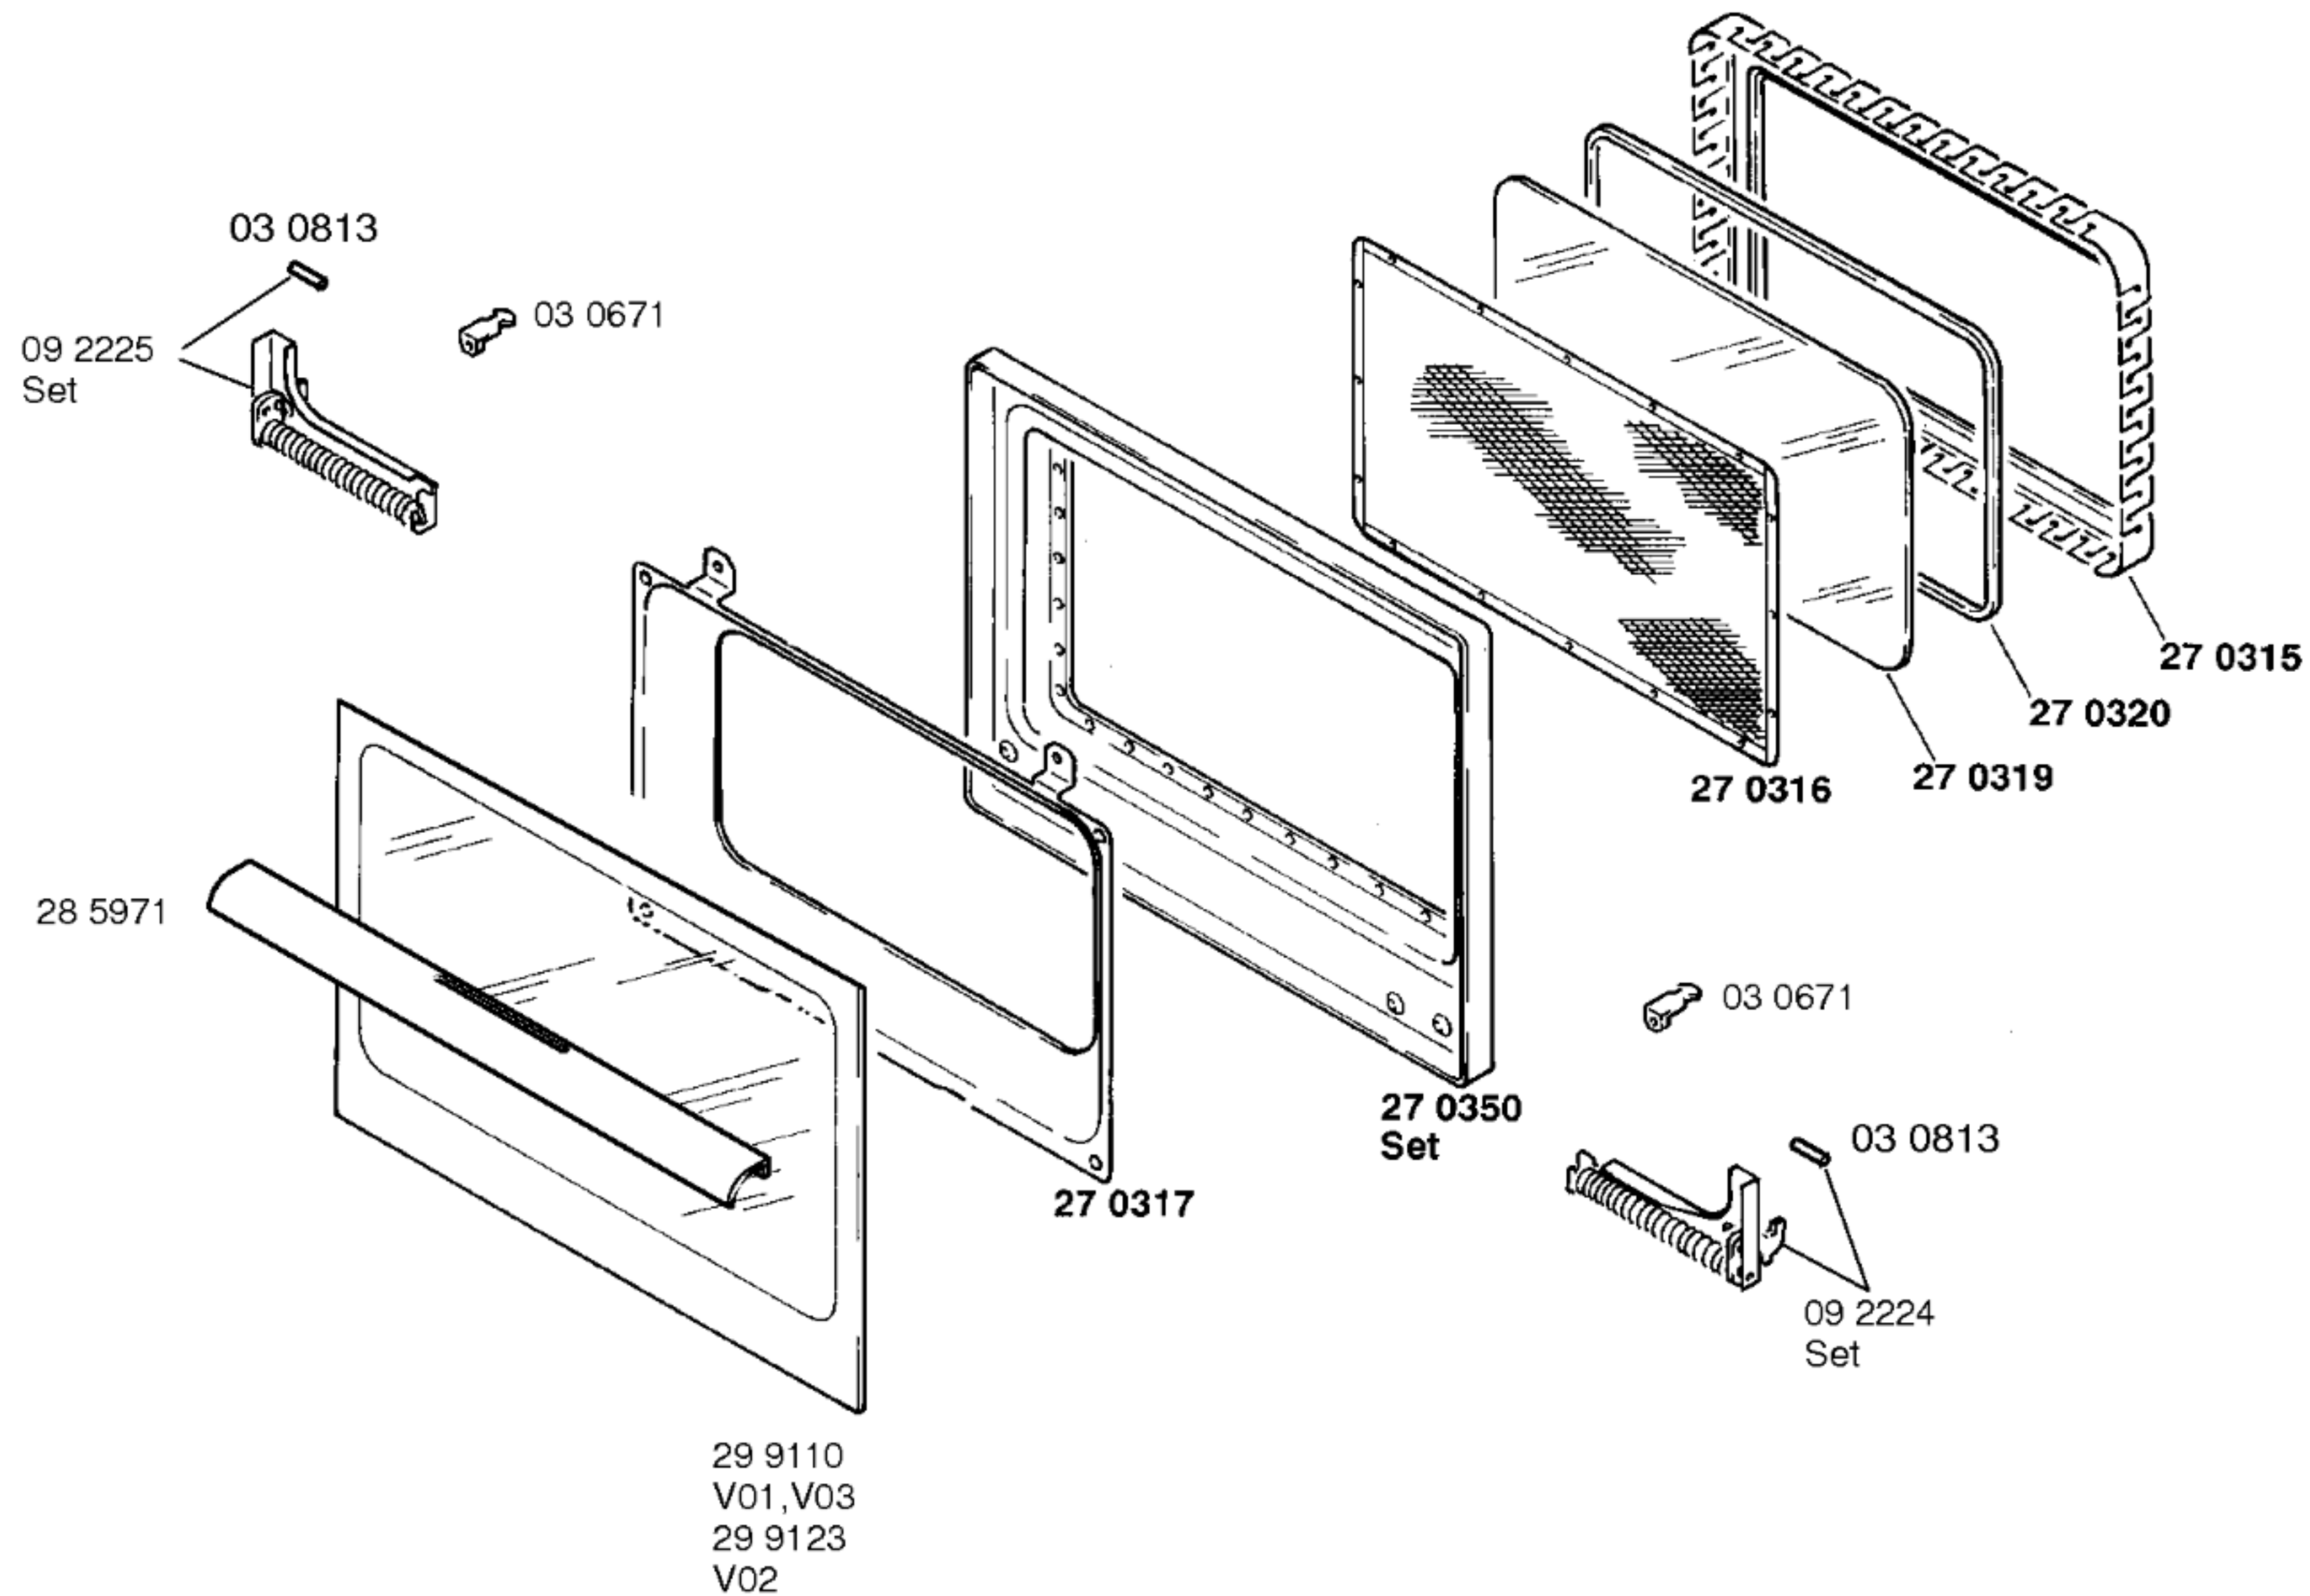

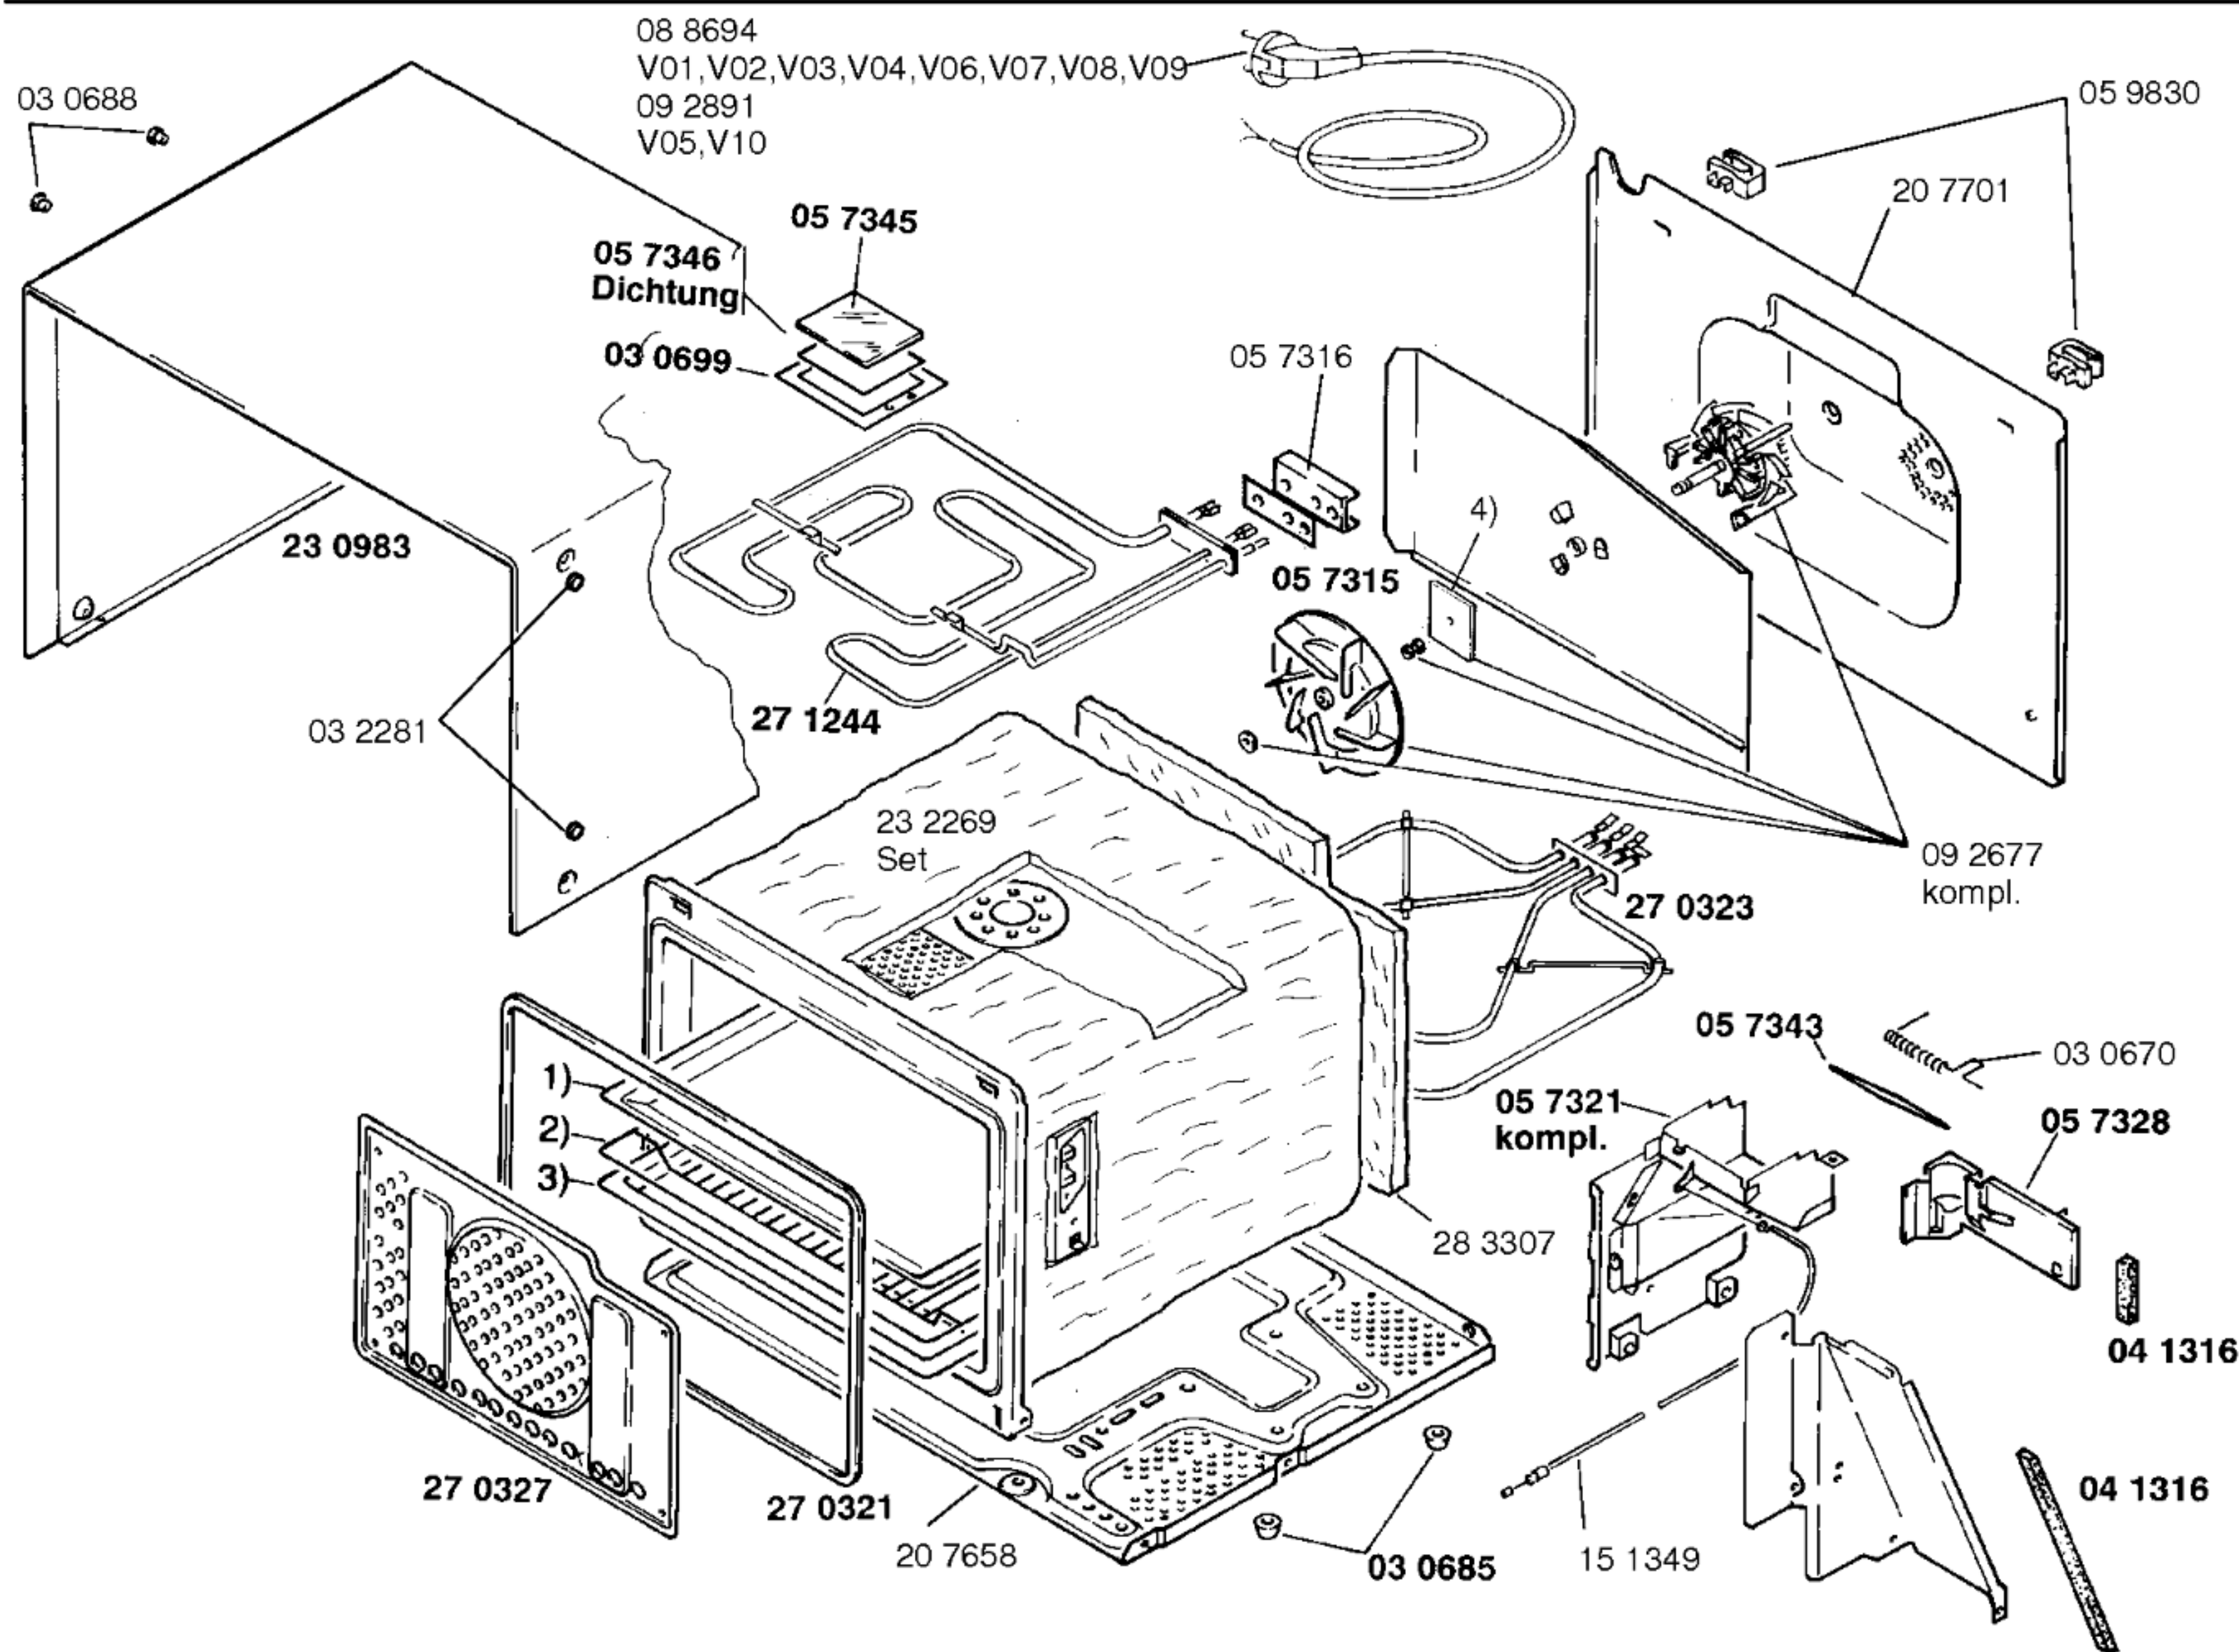

- 1) 11 4537
Glaspfanne
 - 2) 11 4539
 - 3) 11 4538
Backblech
 - 4) 03 2778
- 02 8732
Anschlag-Backblech

