



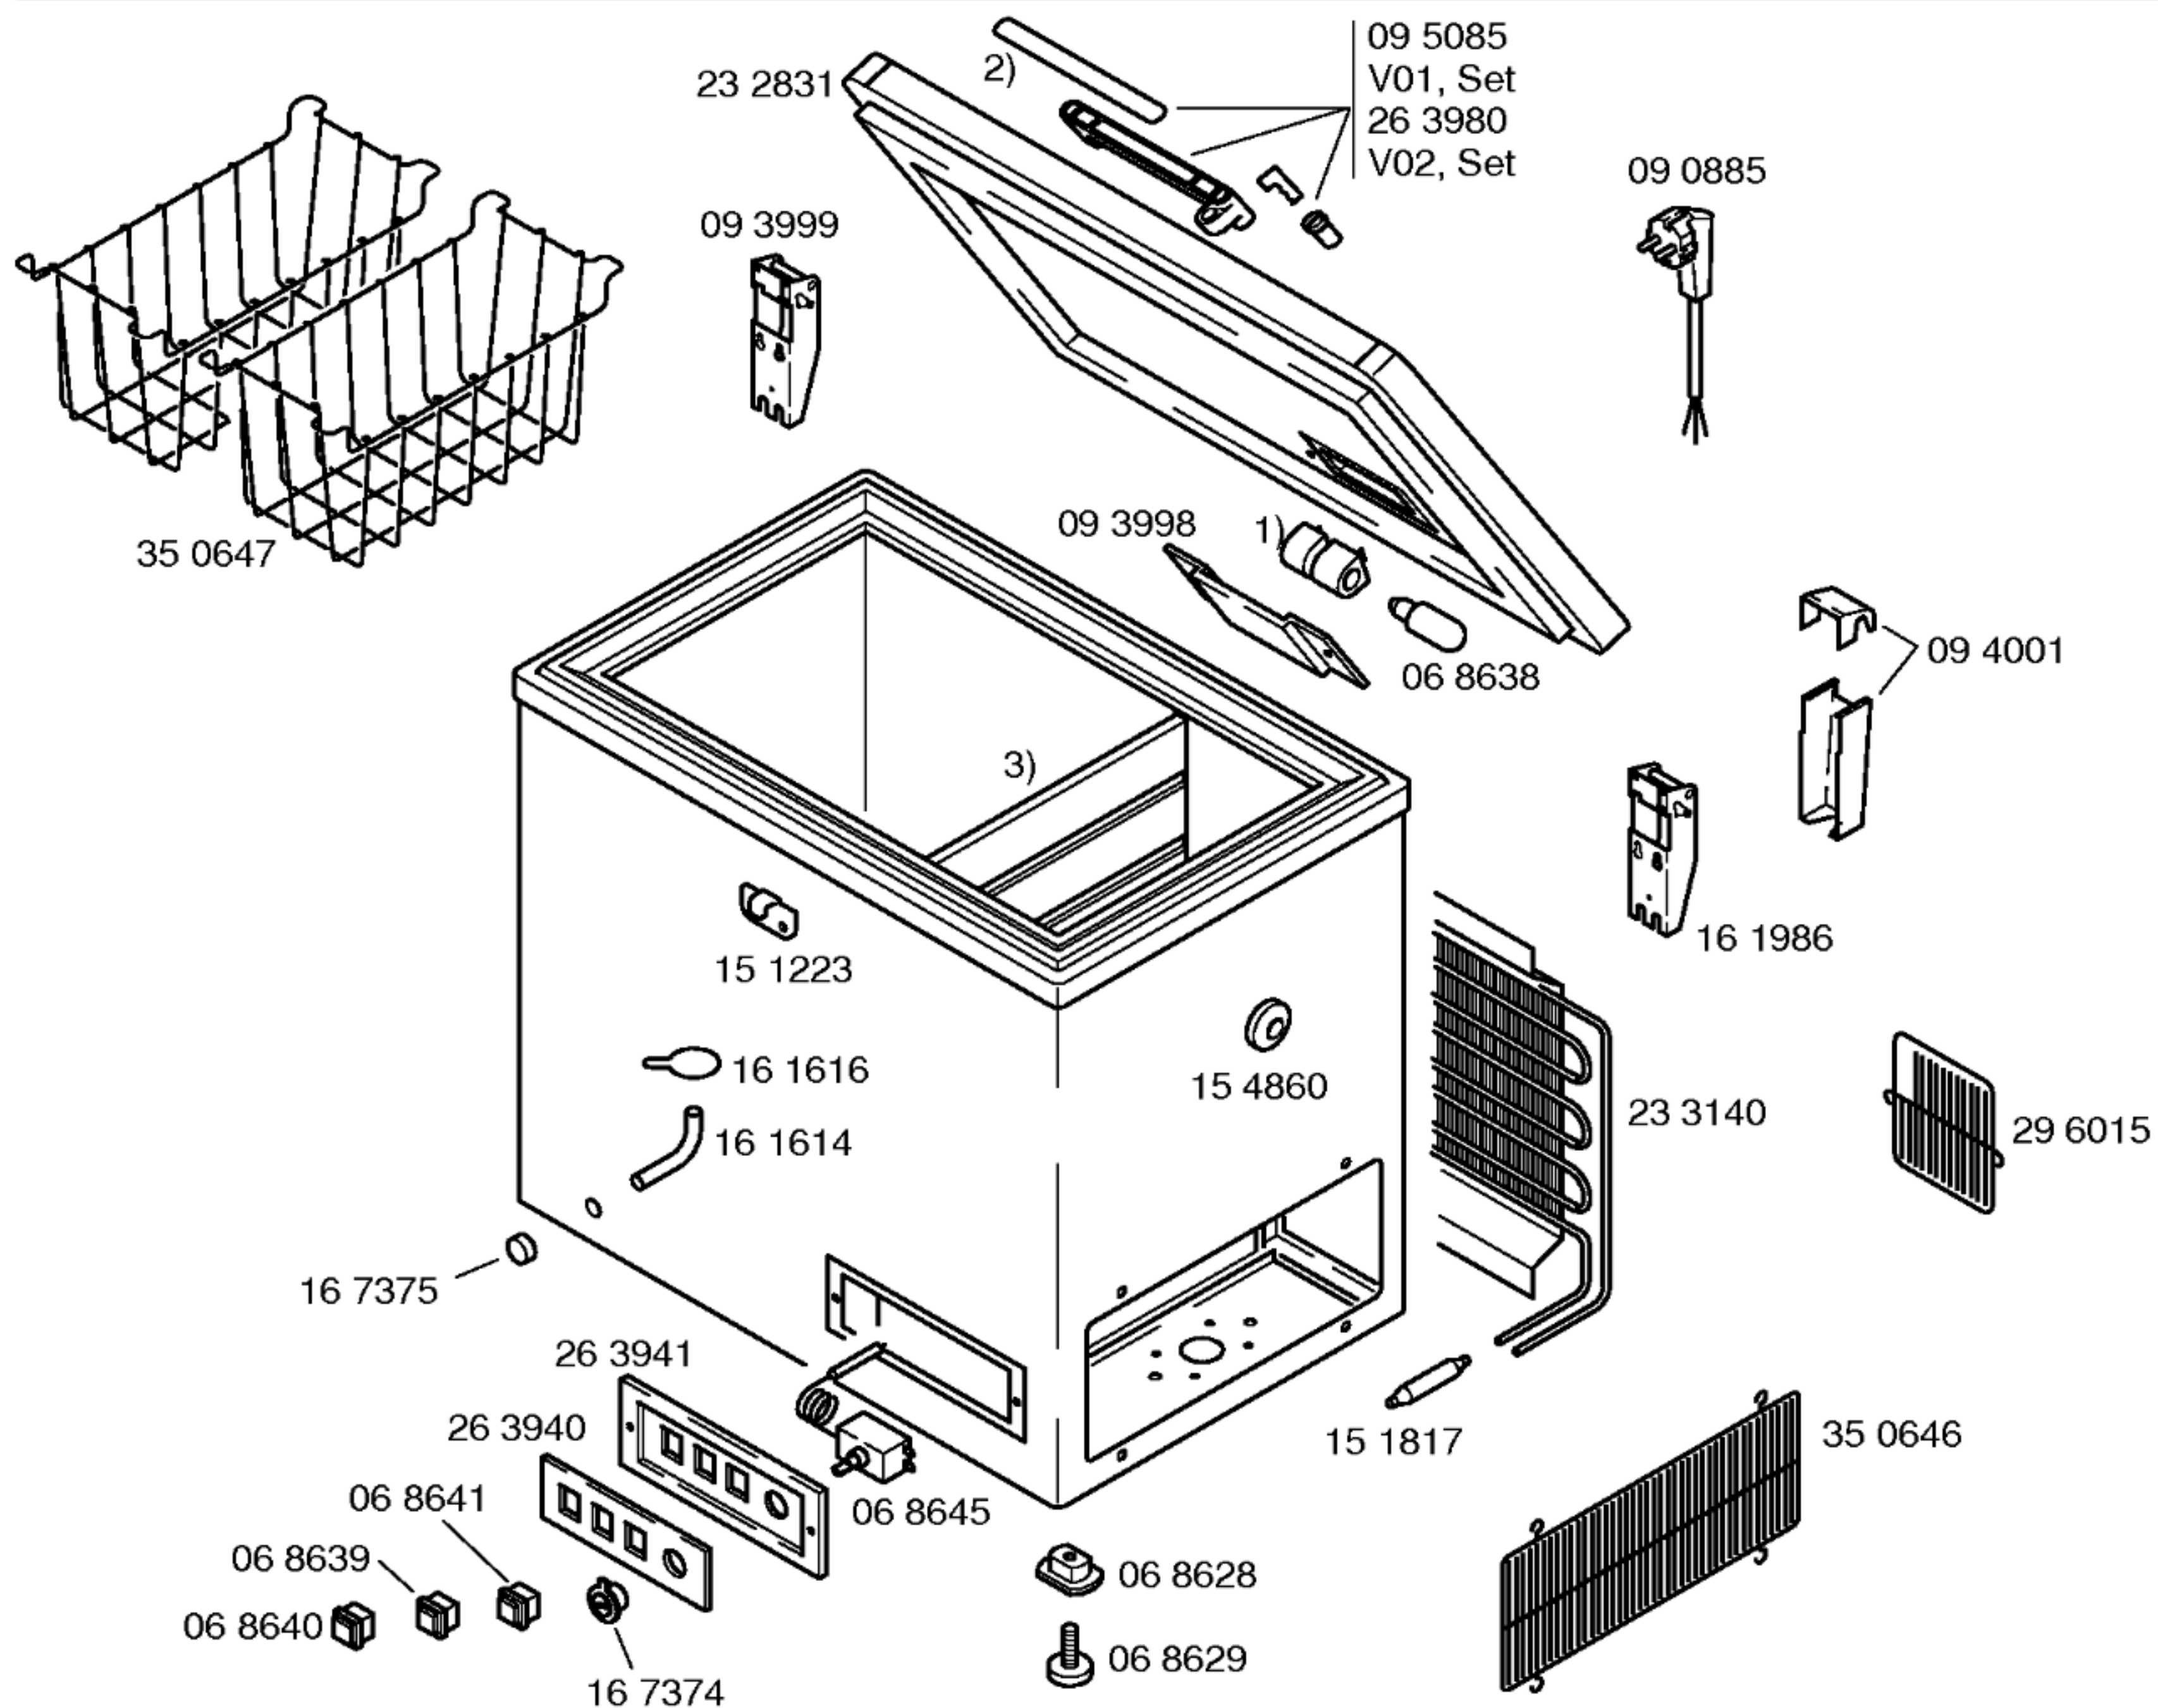

Libro de instrucciones  
51 6522  
(E)

- 1) 06 8643
- 2) 16 1617  
V01  
26 3978  
V02
- 3) 28 4810  
V01  
21 3578  
V02

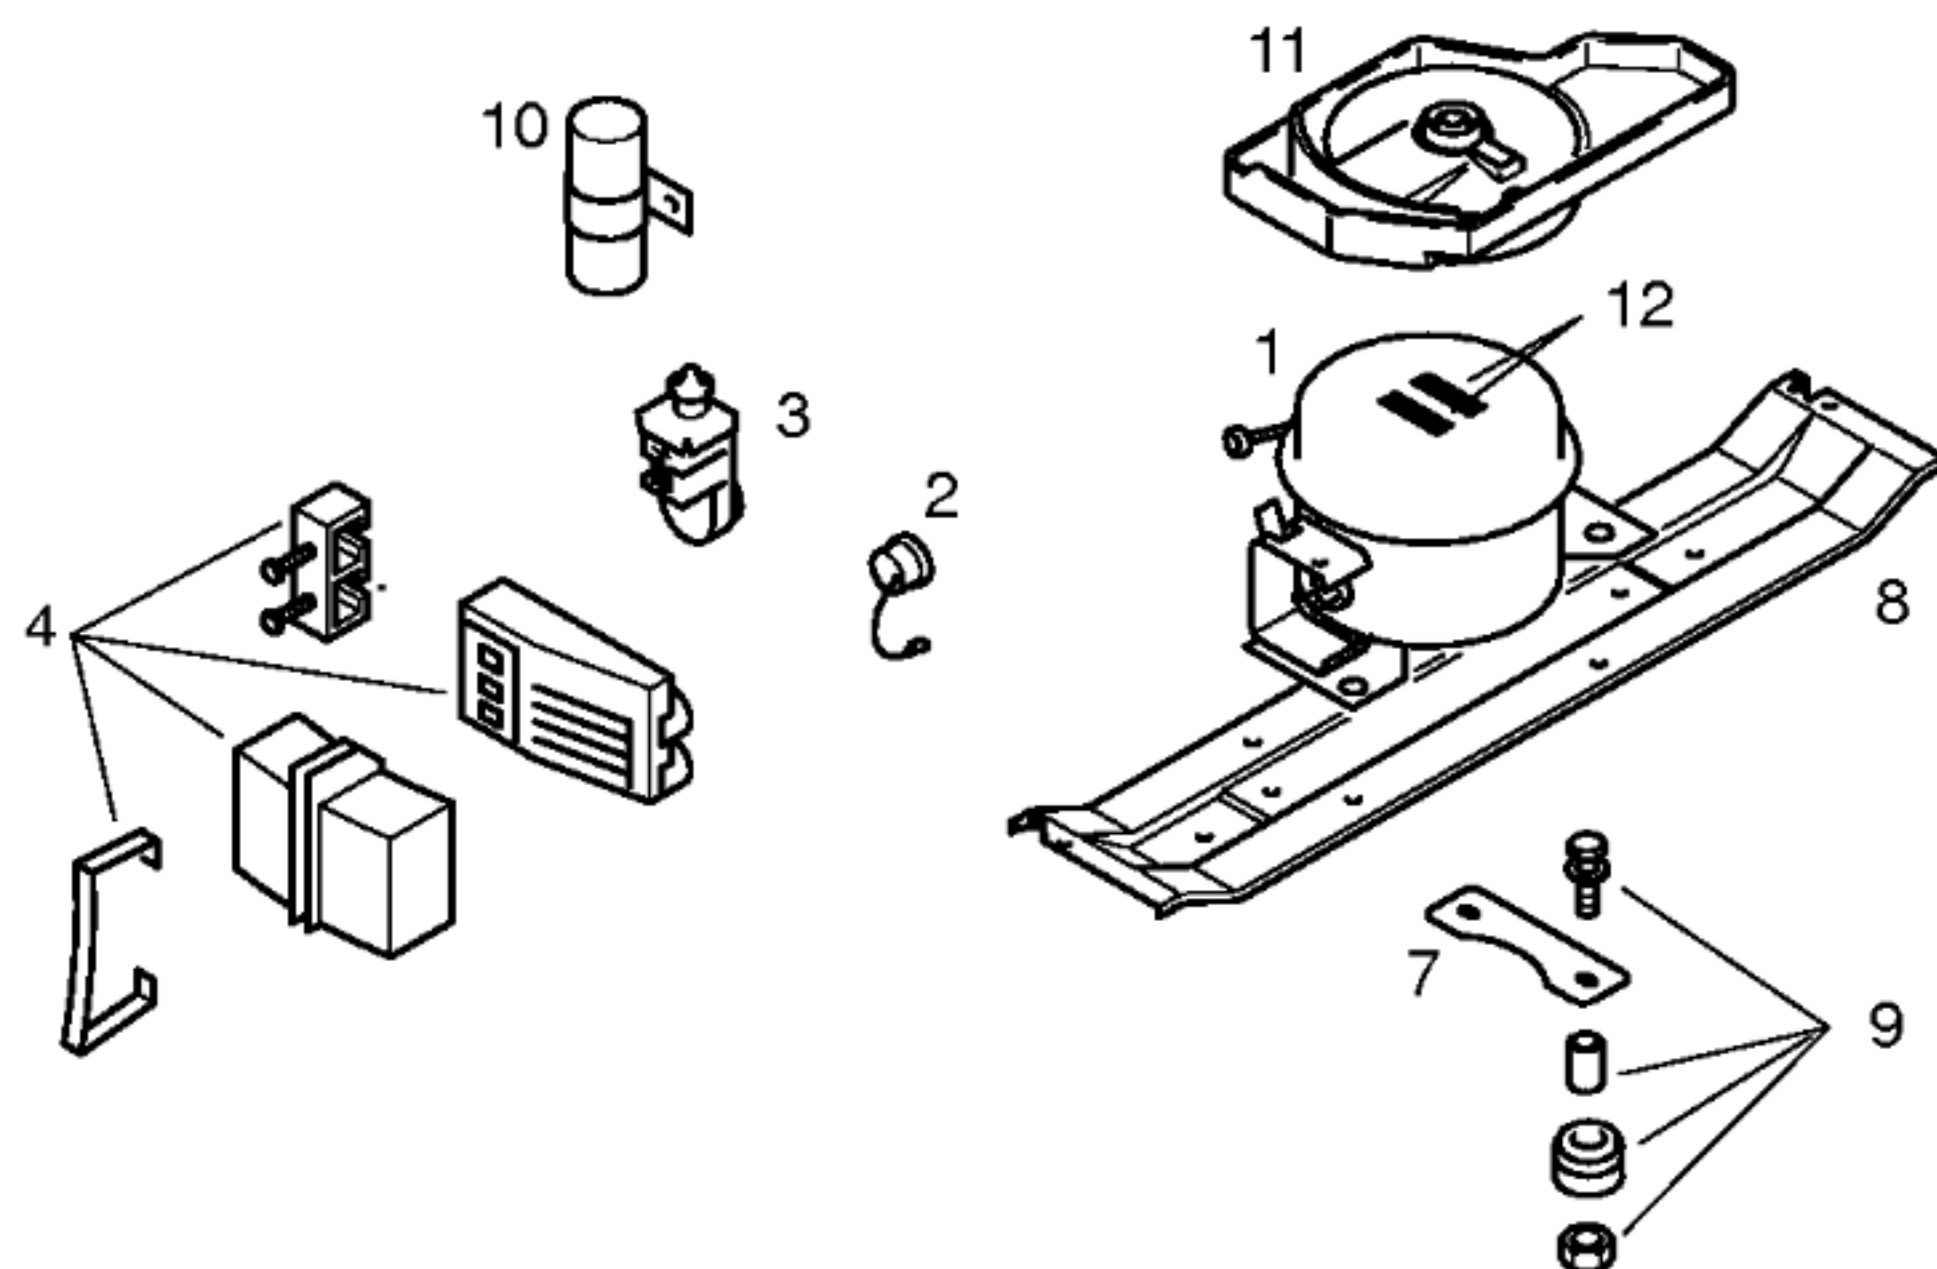

| Pos. | R12     | R134a   |  |  |
|------|---------|---------|--|--|
|      |         | Danfoss |  |  |
|      |         | NI11F   |  |  |
| 1    | 14 0784 | 14 1367 |  |  |
| 2    | 15 0603 | 15 4893 |  |  |
| 3    | 15 0603 | 15 1892 |  |  |
| 4    |         | 15 4894 |  |  |
| 5    |         |         |  |  |
| 6    |         |         |  |  |
| 7    |         |         |  |  |
| 8    |         |         |  |  |
| 9    | 06 4259 | 15 4861 |  |  |
| 10   |         |         |  |  |
| 11   | 09 3771 |         |  |  |
| 12   | 06 4260 |         |  |  |
| 13   |         |         |  |  |

| TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS       |                 |           |  |
|-------------------------------------------------------------------------|-----------------|-----------|--|
|                                                                         | R12             | R134a     |  |
| Verdichter/Compressor/Compresseur/Compresor                             |                 | Danfoss   |  |
| Typ/Type/Tipo                                                           |                 | NL11F     |  |
| Förderleistung/Delivery/Debit/Aspiración l/h                            |                 |           |  |
| Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A              | 9,96            |           |  |
| Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm                    | 11,00           |           |  |
| Hi/aux.                                                                 | 26,7            |           |  |
| Temp.Reyler/Thermostat/Termostato                                       |                 |           |  |
| Typ/Type/Tipo                                                           |                 | RANCO     |  |
| Reglerstellung/Position/Conexión                                        |                 | K54L1887  |  |
| Schaltwerte/Switching values/                                           | ..ein/conex. °C | MIN. MAX. |  |
| Valeurs de commutation/Desconex.                                        | ..aus"/descon.  | –19°      |  |
| (..abtaven' od)                                                         | ..alarm'        | –29°      |  |
|                                                                         |                 | –14°      |  |
| Füllmenge/Fill. quantily/Charge/Carga R12                               | g               | 215       |  |
| Füllmenge/Fill. quantily/Charge/Carga 134a                              | g               | —         |  |
| Anschlusswert/Comm. load/Puiss. Connect./Potenc.                        | W               | 224       |  |
| Heizung/Heater/Chauflage/Resistenc. descong.                            |                 |           |  |
| Widerstand/Resistance/Resistencia                                       | Ohm             |           |  |
| Leistung/Power/Puissance/Potencia                                       | W               |           |  |
| Ventilador/Blower/Ventilateur/Ventilador                                |                 |           |  |
| Widerstand/Resistance/Resistencia                                       | Ohm             |           |  |
| Magnetventil/Magnetic valve/Electrovanne/Electrovalvula                 |                 |           |  |
| Widerstand/Resistance/Resistencia                                       | Ohm             |           |  |
| Spannung/Voltage/Tension/Tensión                                        | V               |           |  |
| Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador |                 |           |  |