




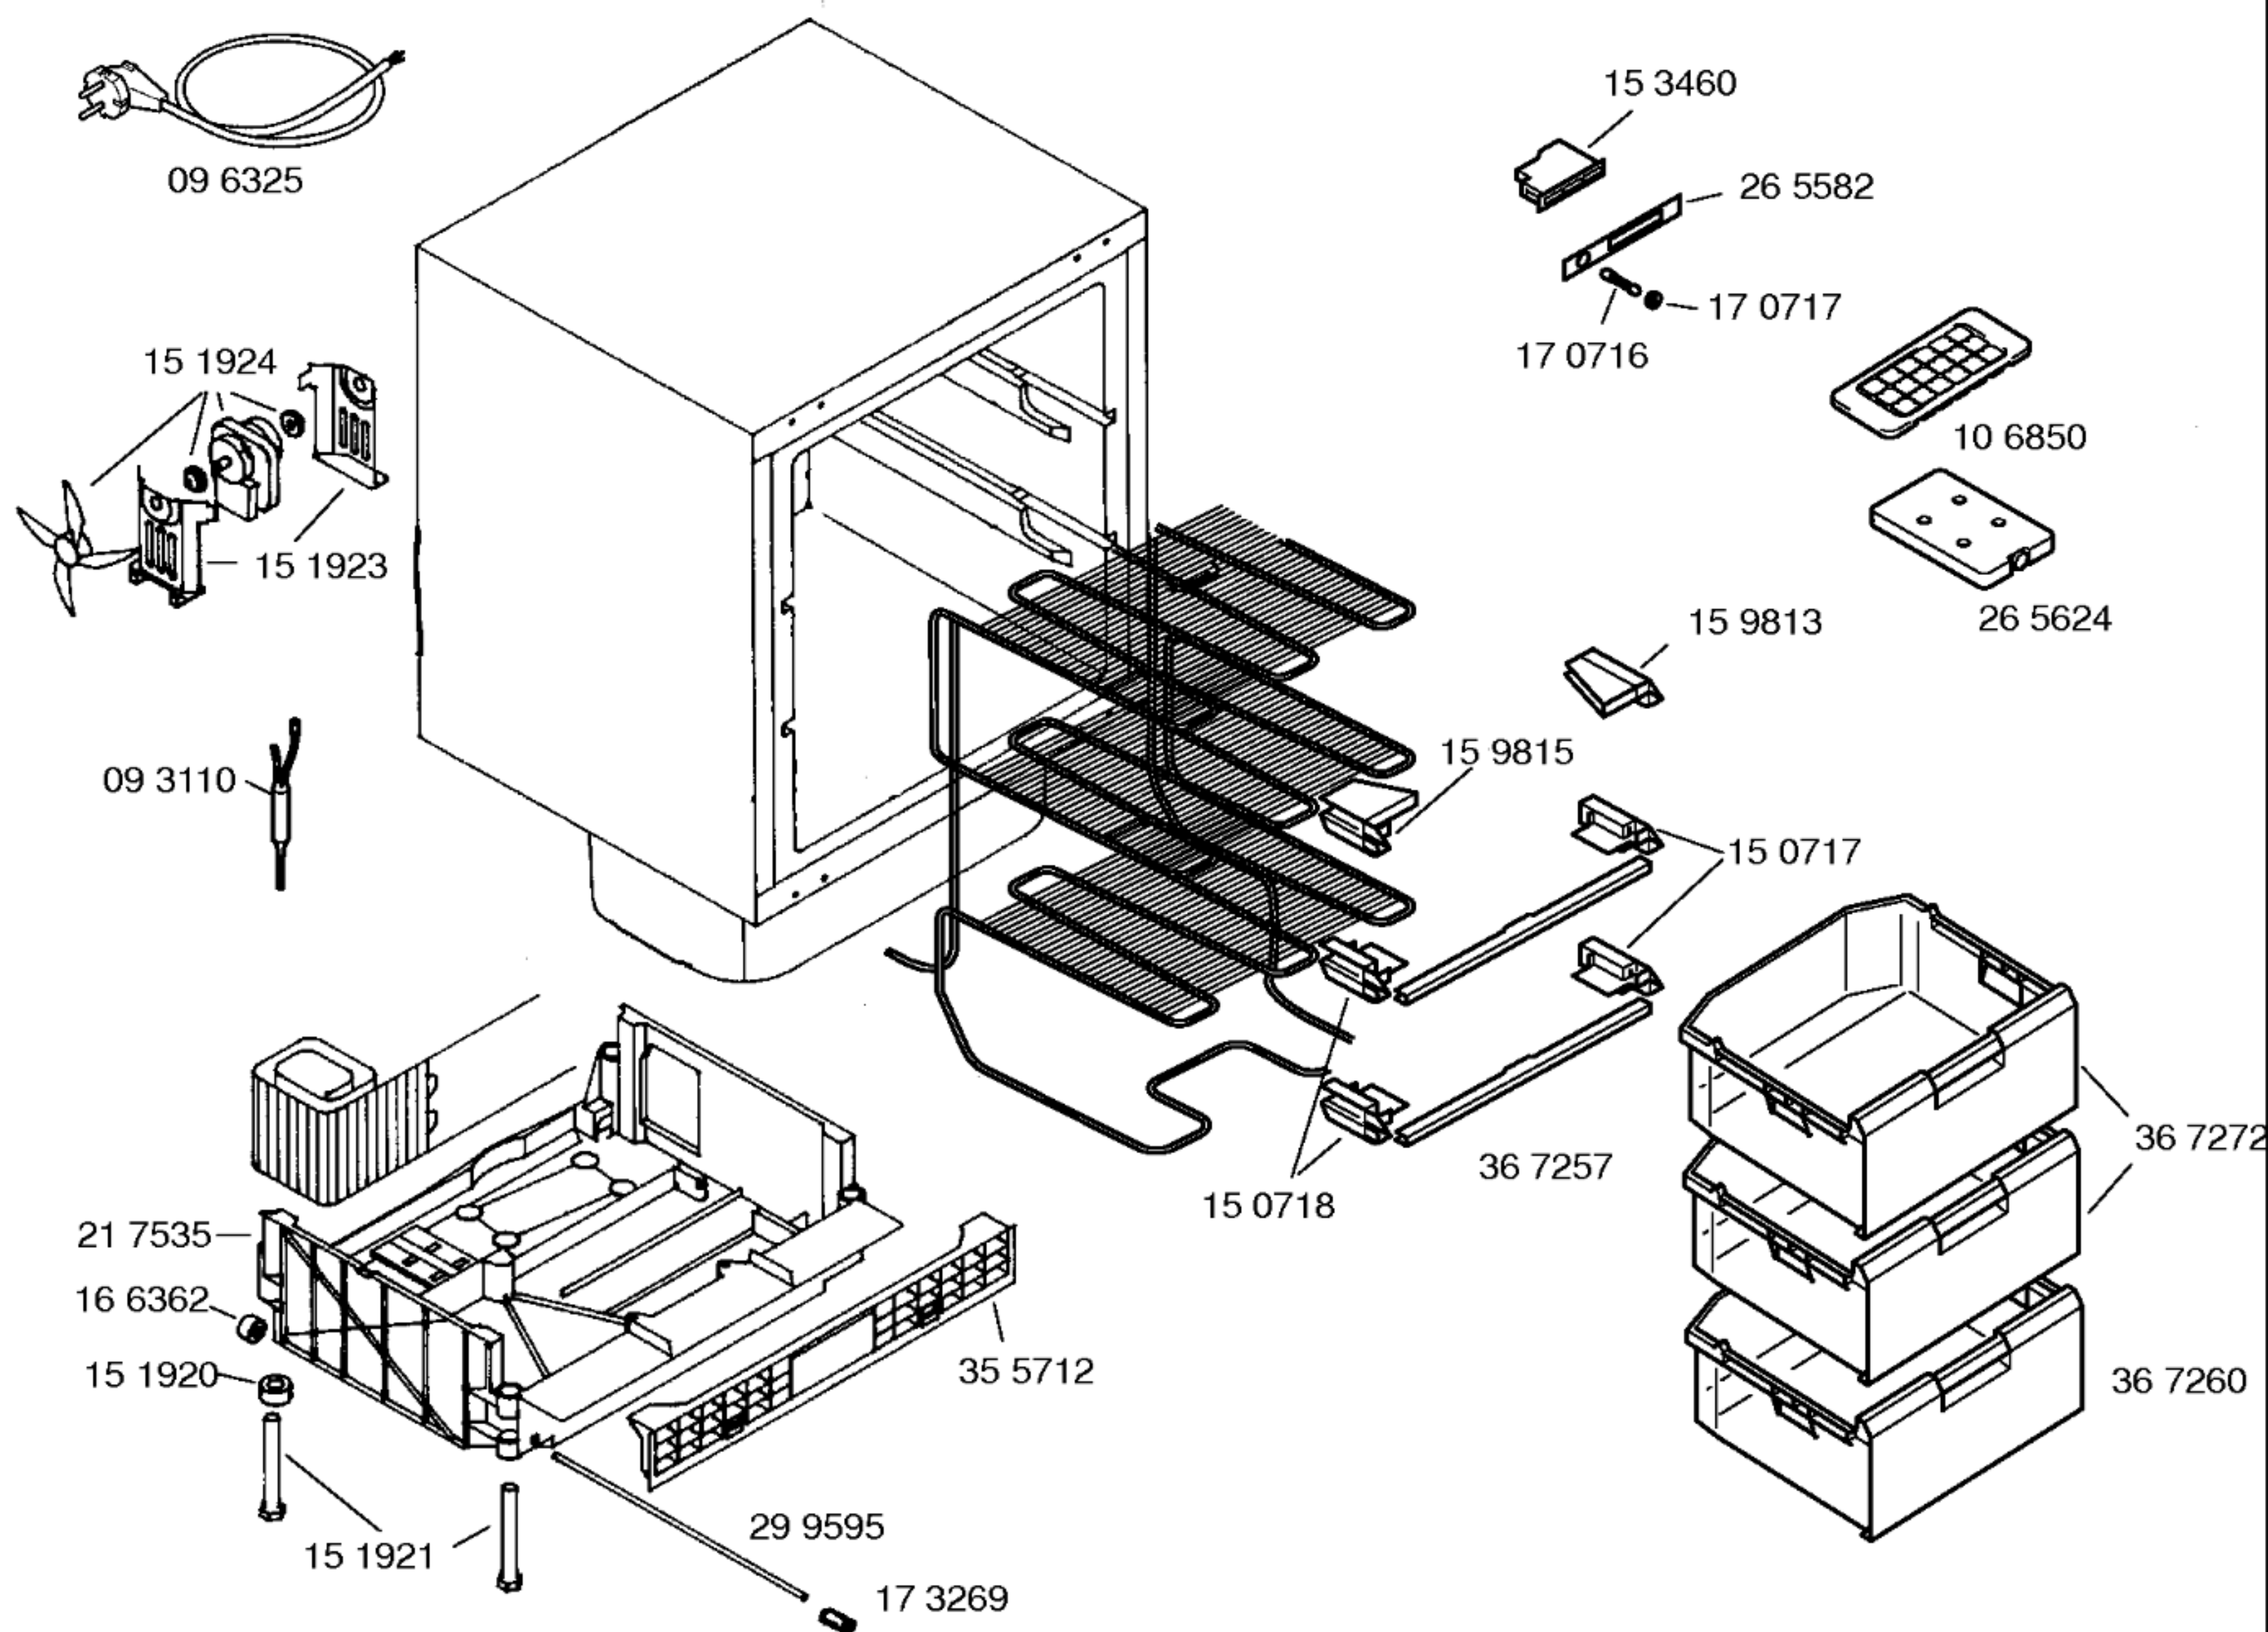

Gebrauchsanweisung
52 6331
(D,GB,F,I,NL,E,P,TR)
Montageanweisung
52 7913
(D,GB,F,I,NL,DK,N,SF,
S,E,P,TR)
Beistellsatz
26 8429
Temperaturregler
Rep-Satz
26 5271

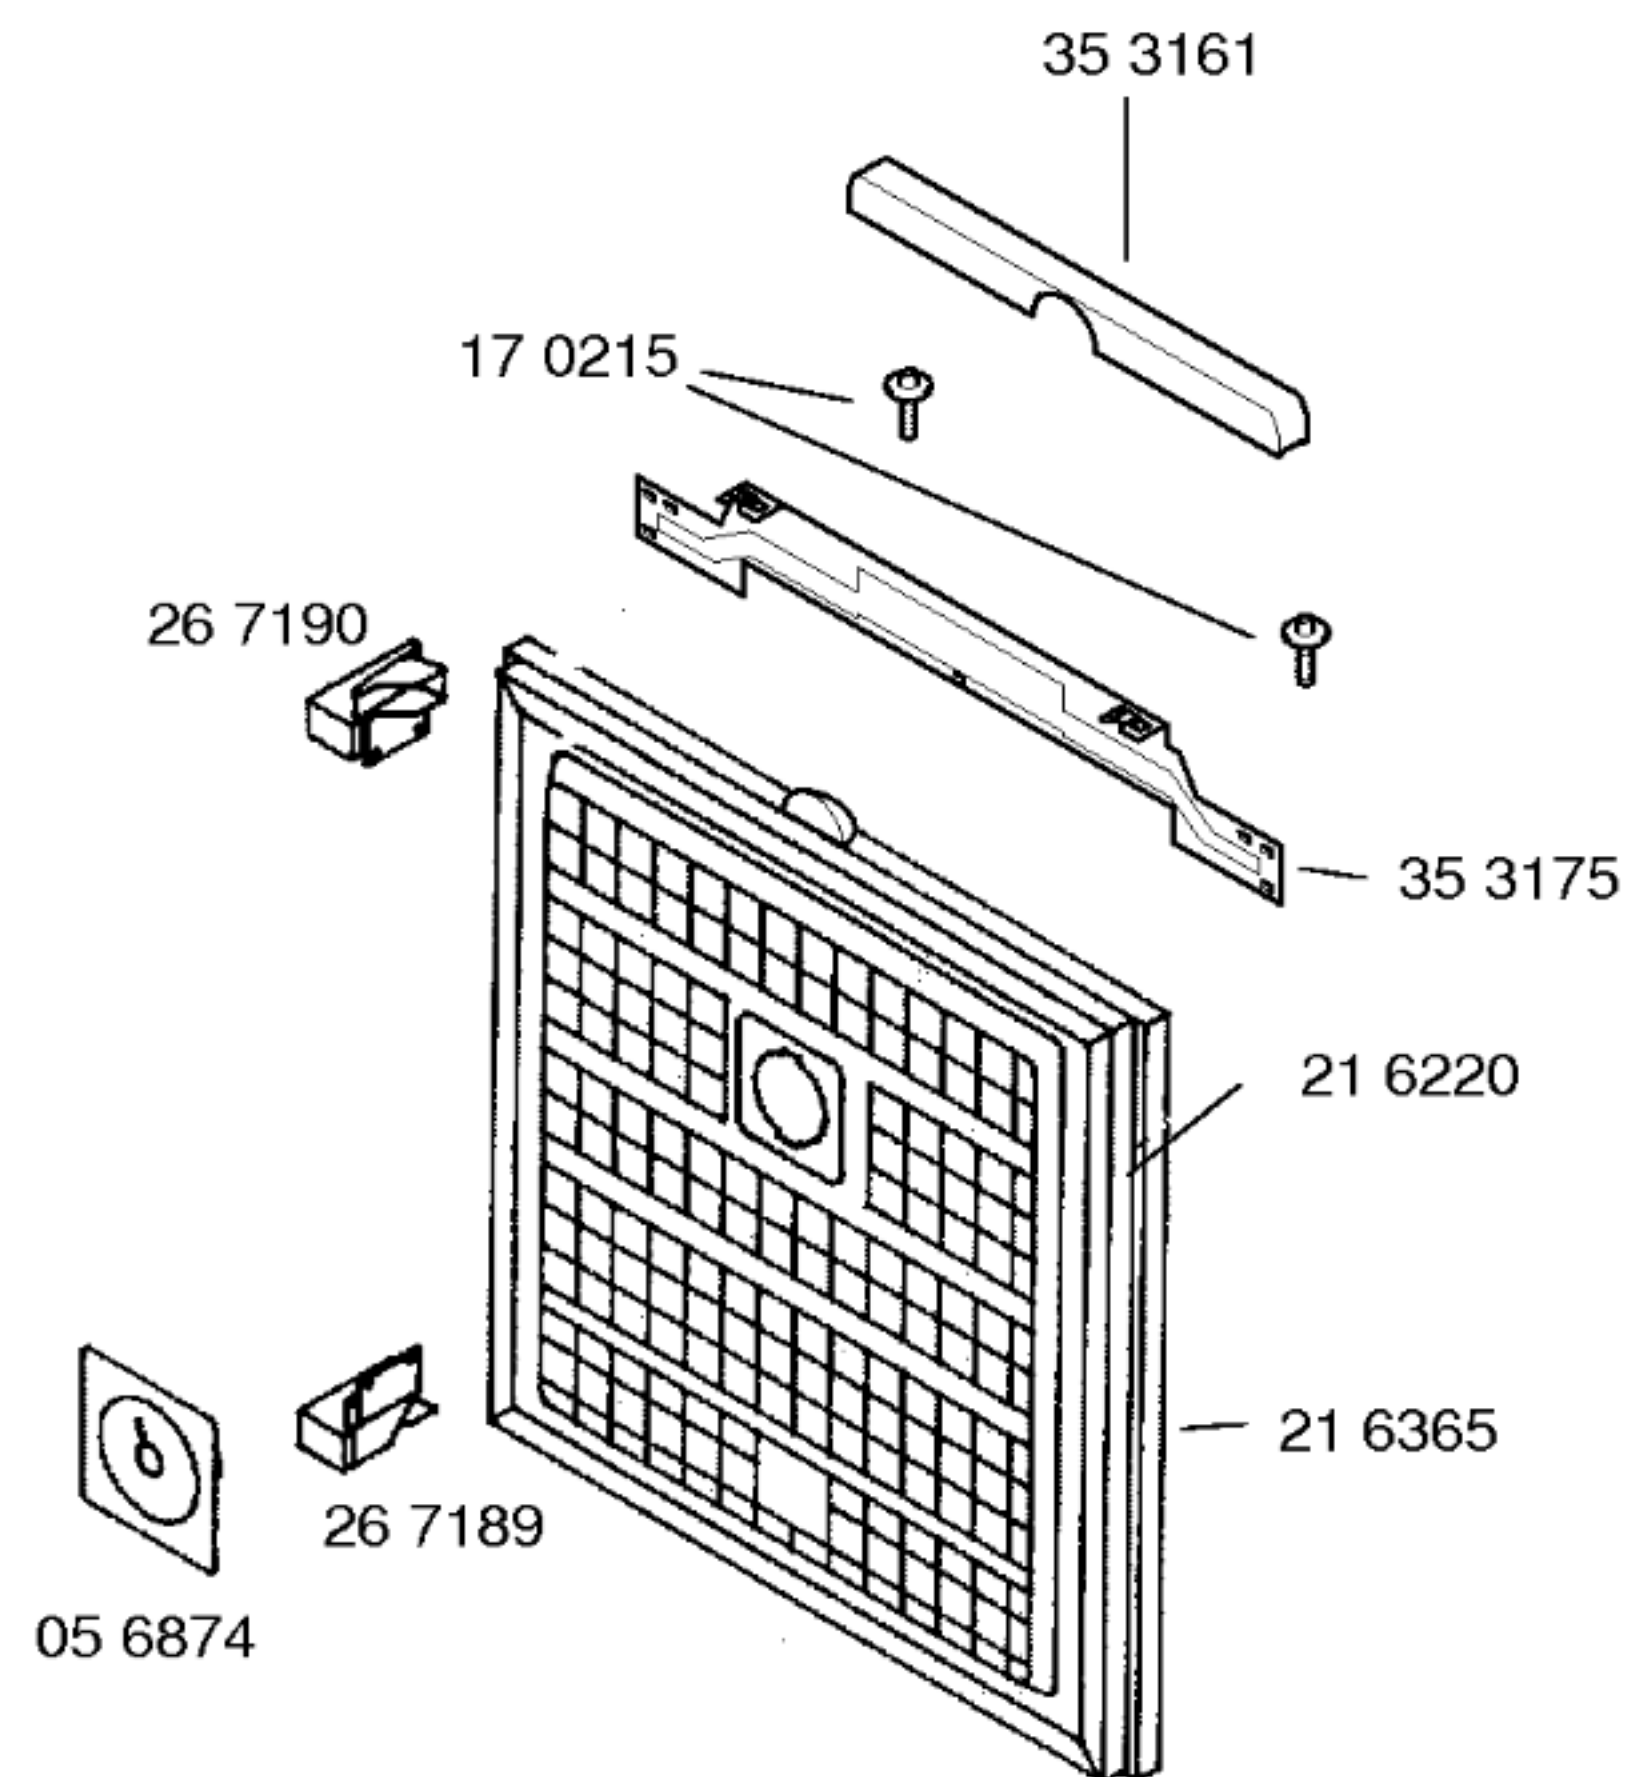

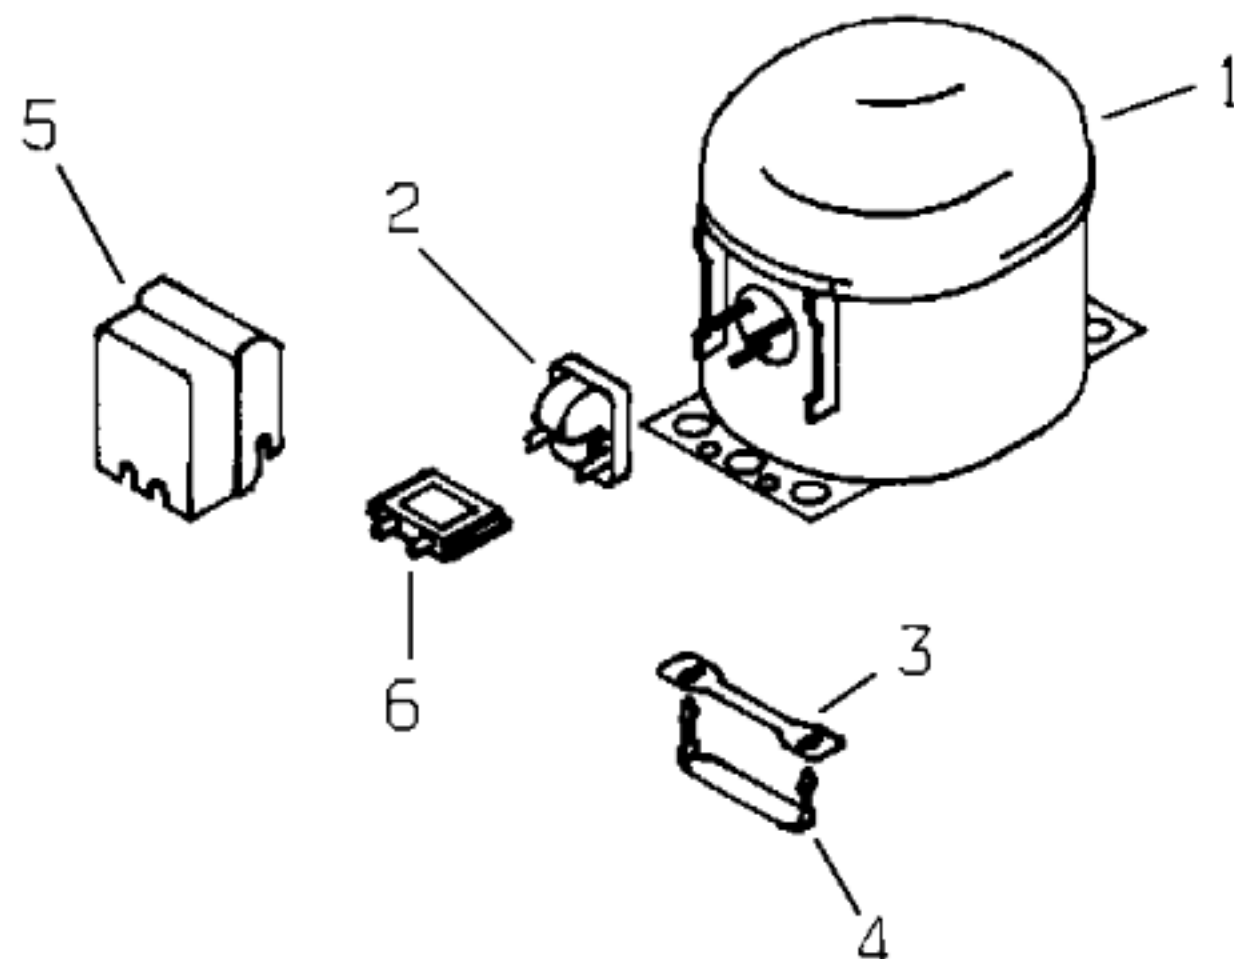

	V01	V02	
Pos.	Danfoss	Matsushita	
	TLES 9 KK2	ESS 60E	
1	14 1660	14 2158	
2	15 1055	18 3589	
3	15 1919	15 1919	
4	15 1918	15 1918	
5	15 1072	18 3590	
6	15 0760	18 3591	
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Matsushita
Typ/Type		TLES 9 KK2	ESS 60E
Förderleistung/Delivery/Débit	l/h	1589	1076
Anlaufstrom/Starting current/Cour de démarrage	A	8,8	5,6
Widerstand/Resistance/Résistance	Ha/main/prin.	16,5	30,6
	Hi/aux	16,9	26,7
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K56-1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“ °C	-25	-15
Valeurs de commutation	„aus“	-36	-23
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W	98	63
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur		MES F61-10	
Widerstand/Resistance/Résistance	Ω	680	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild