




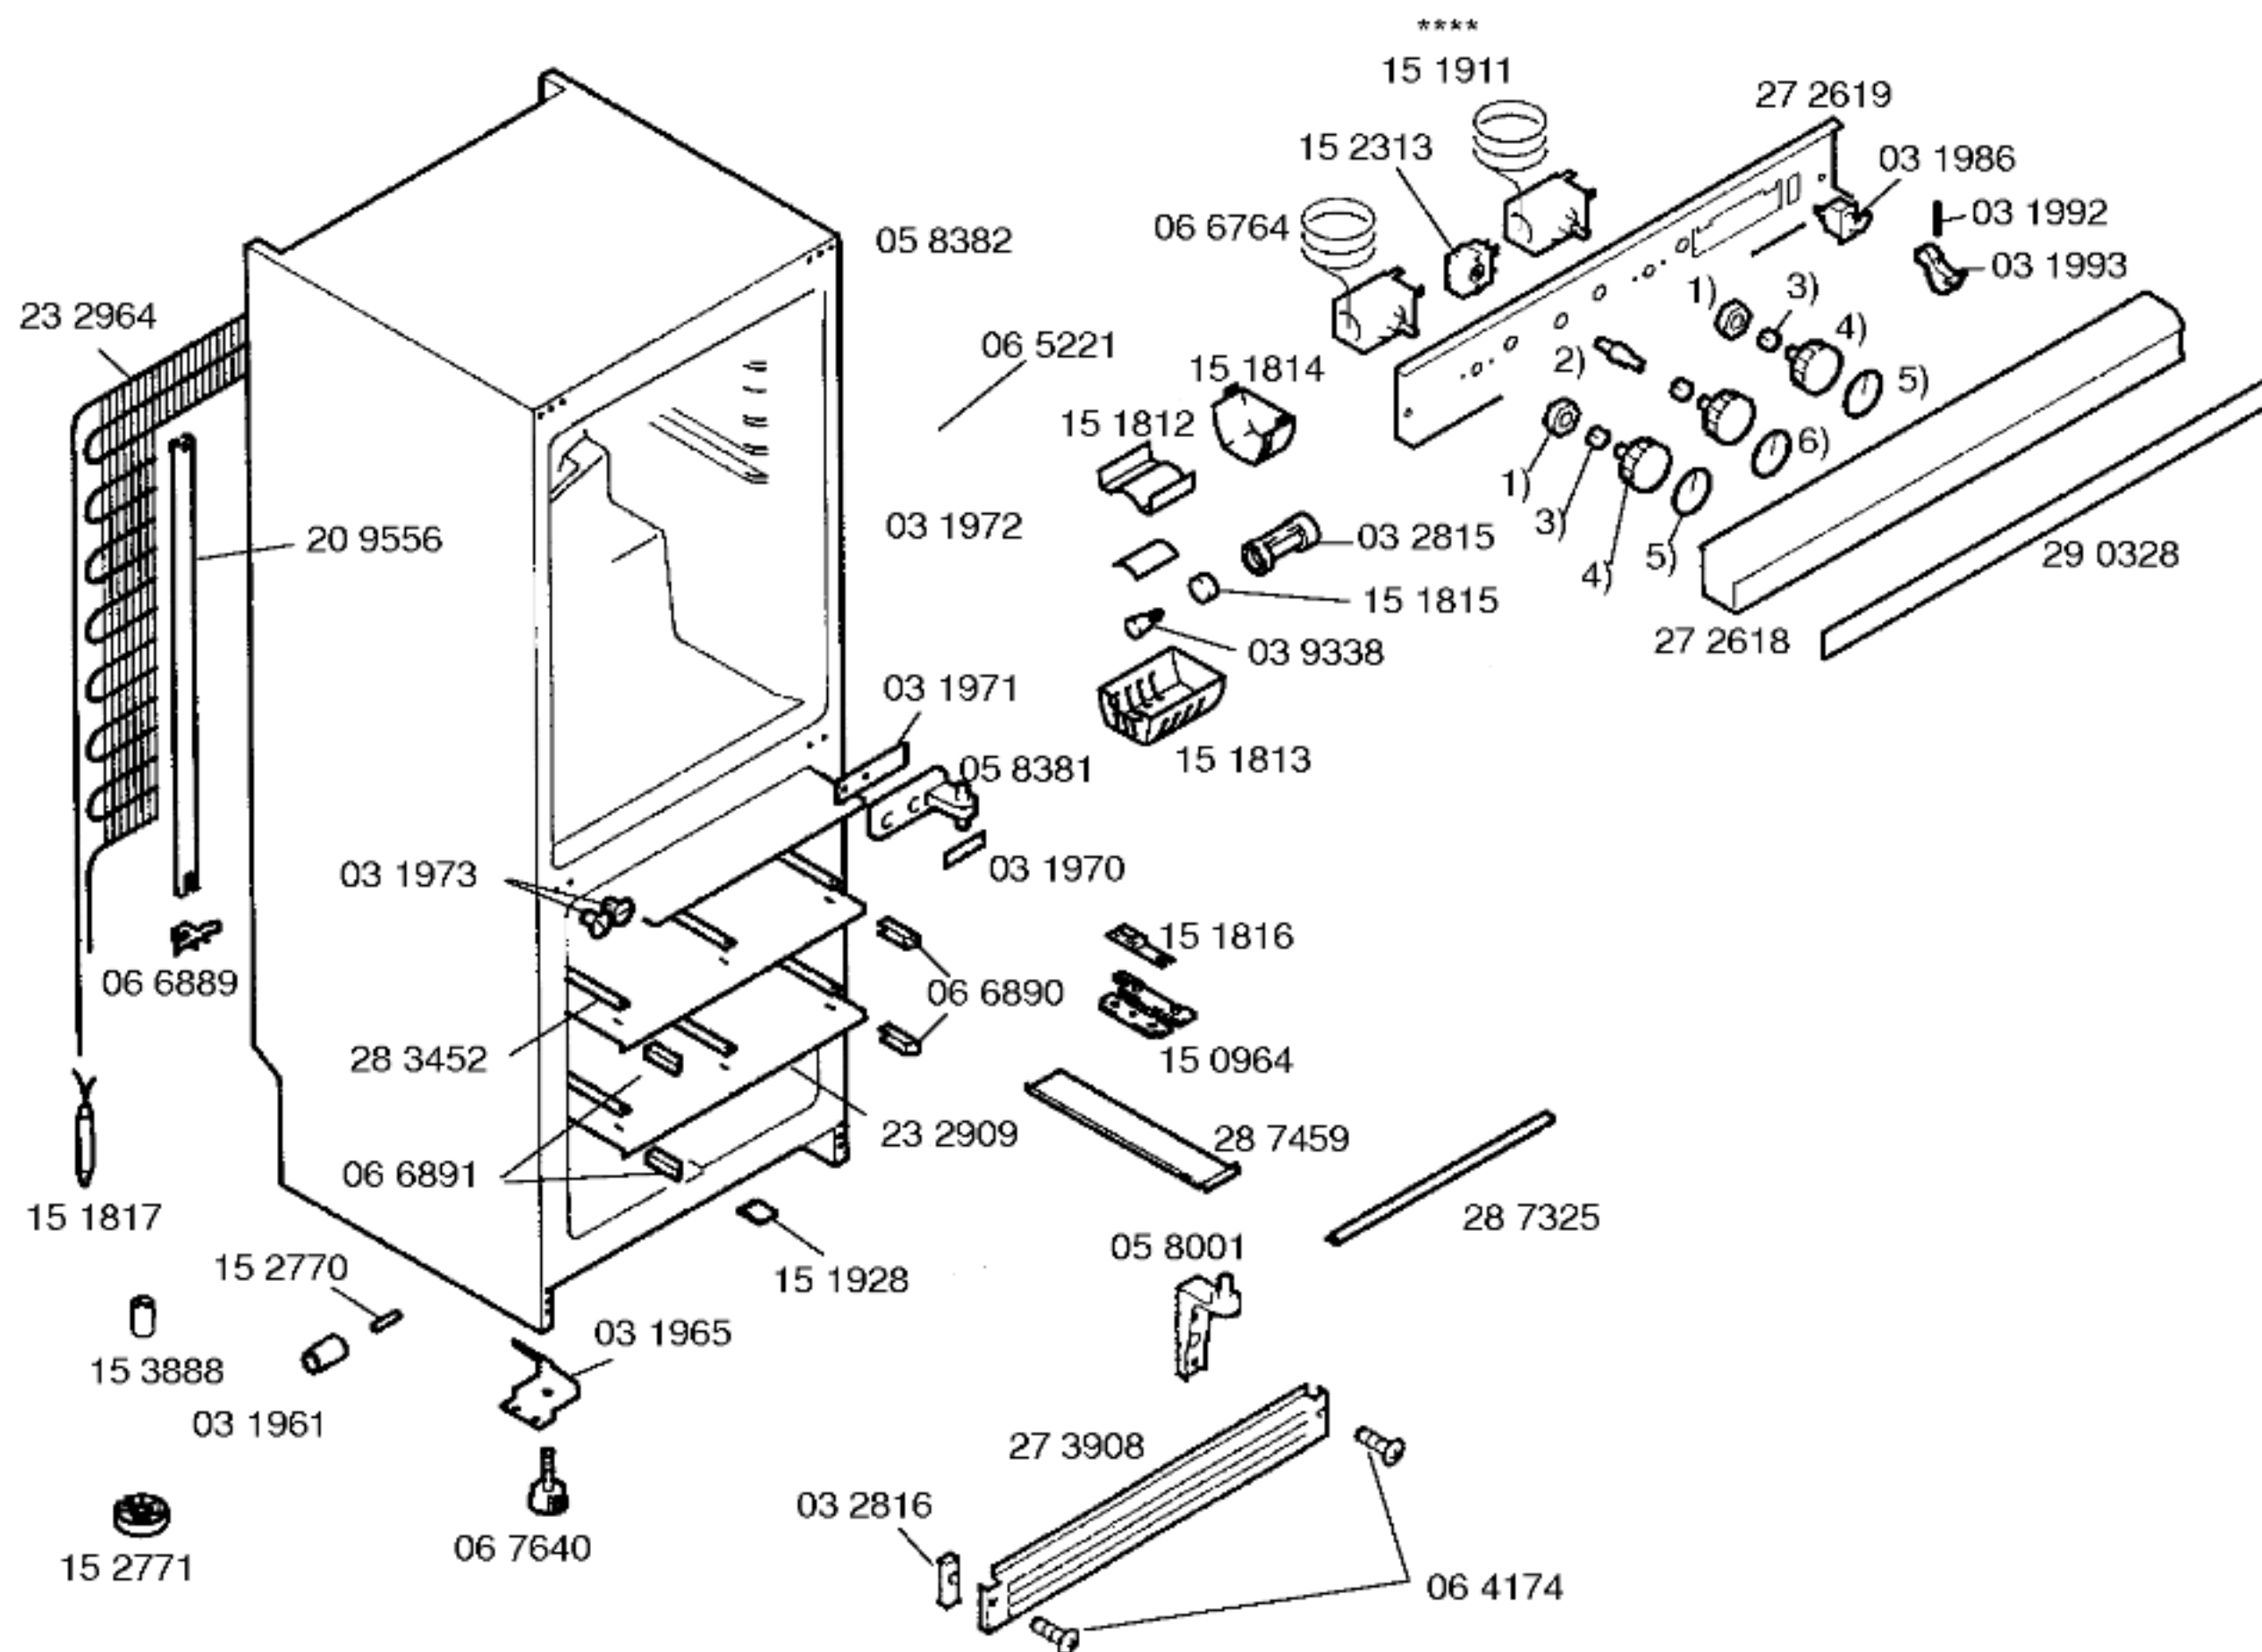

Libro de instrucciones
51 7522
(E)

- 1) 03 3055
- 2) 03 1989
- 3) 03 2905
- 4) 03 1985
- 5) 06 6770
- 6) 15 2326

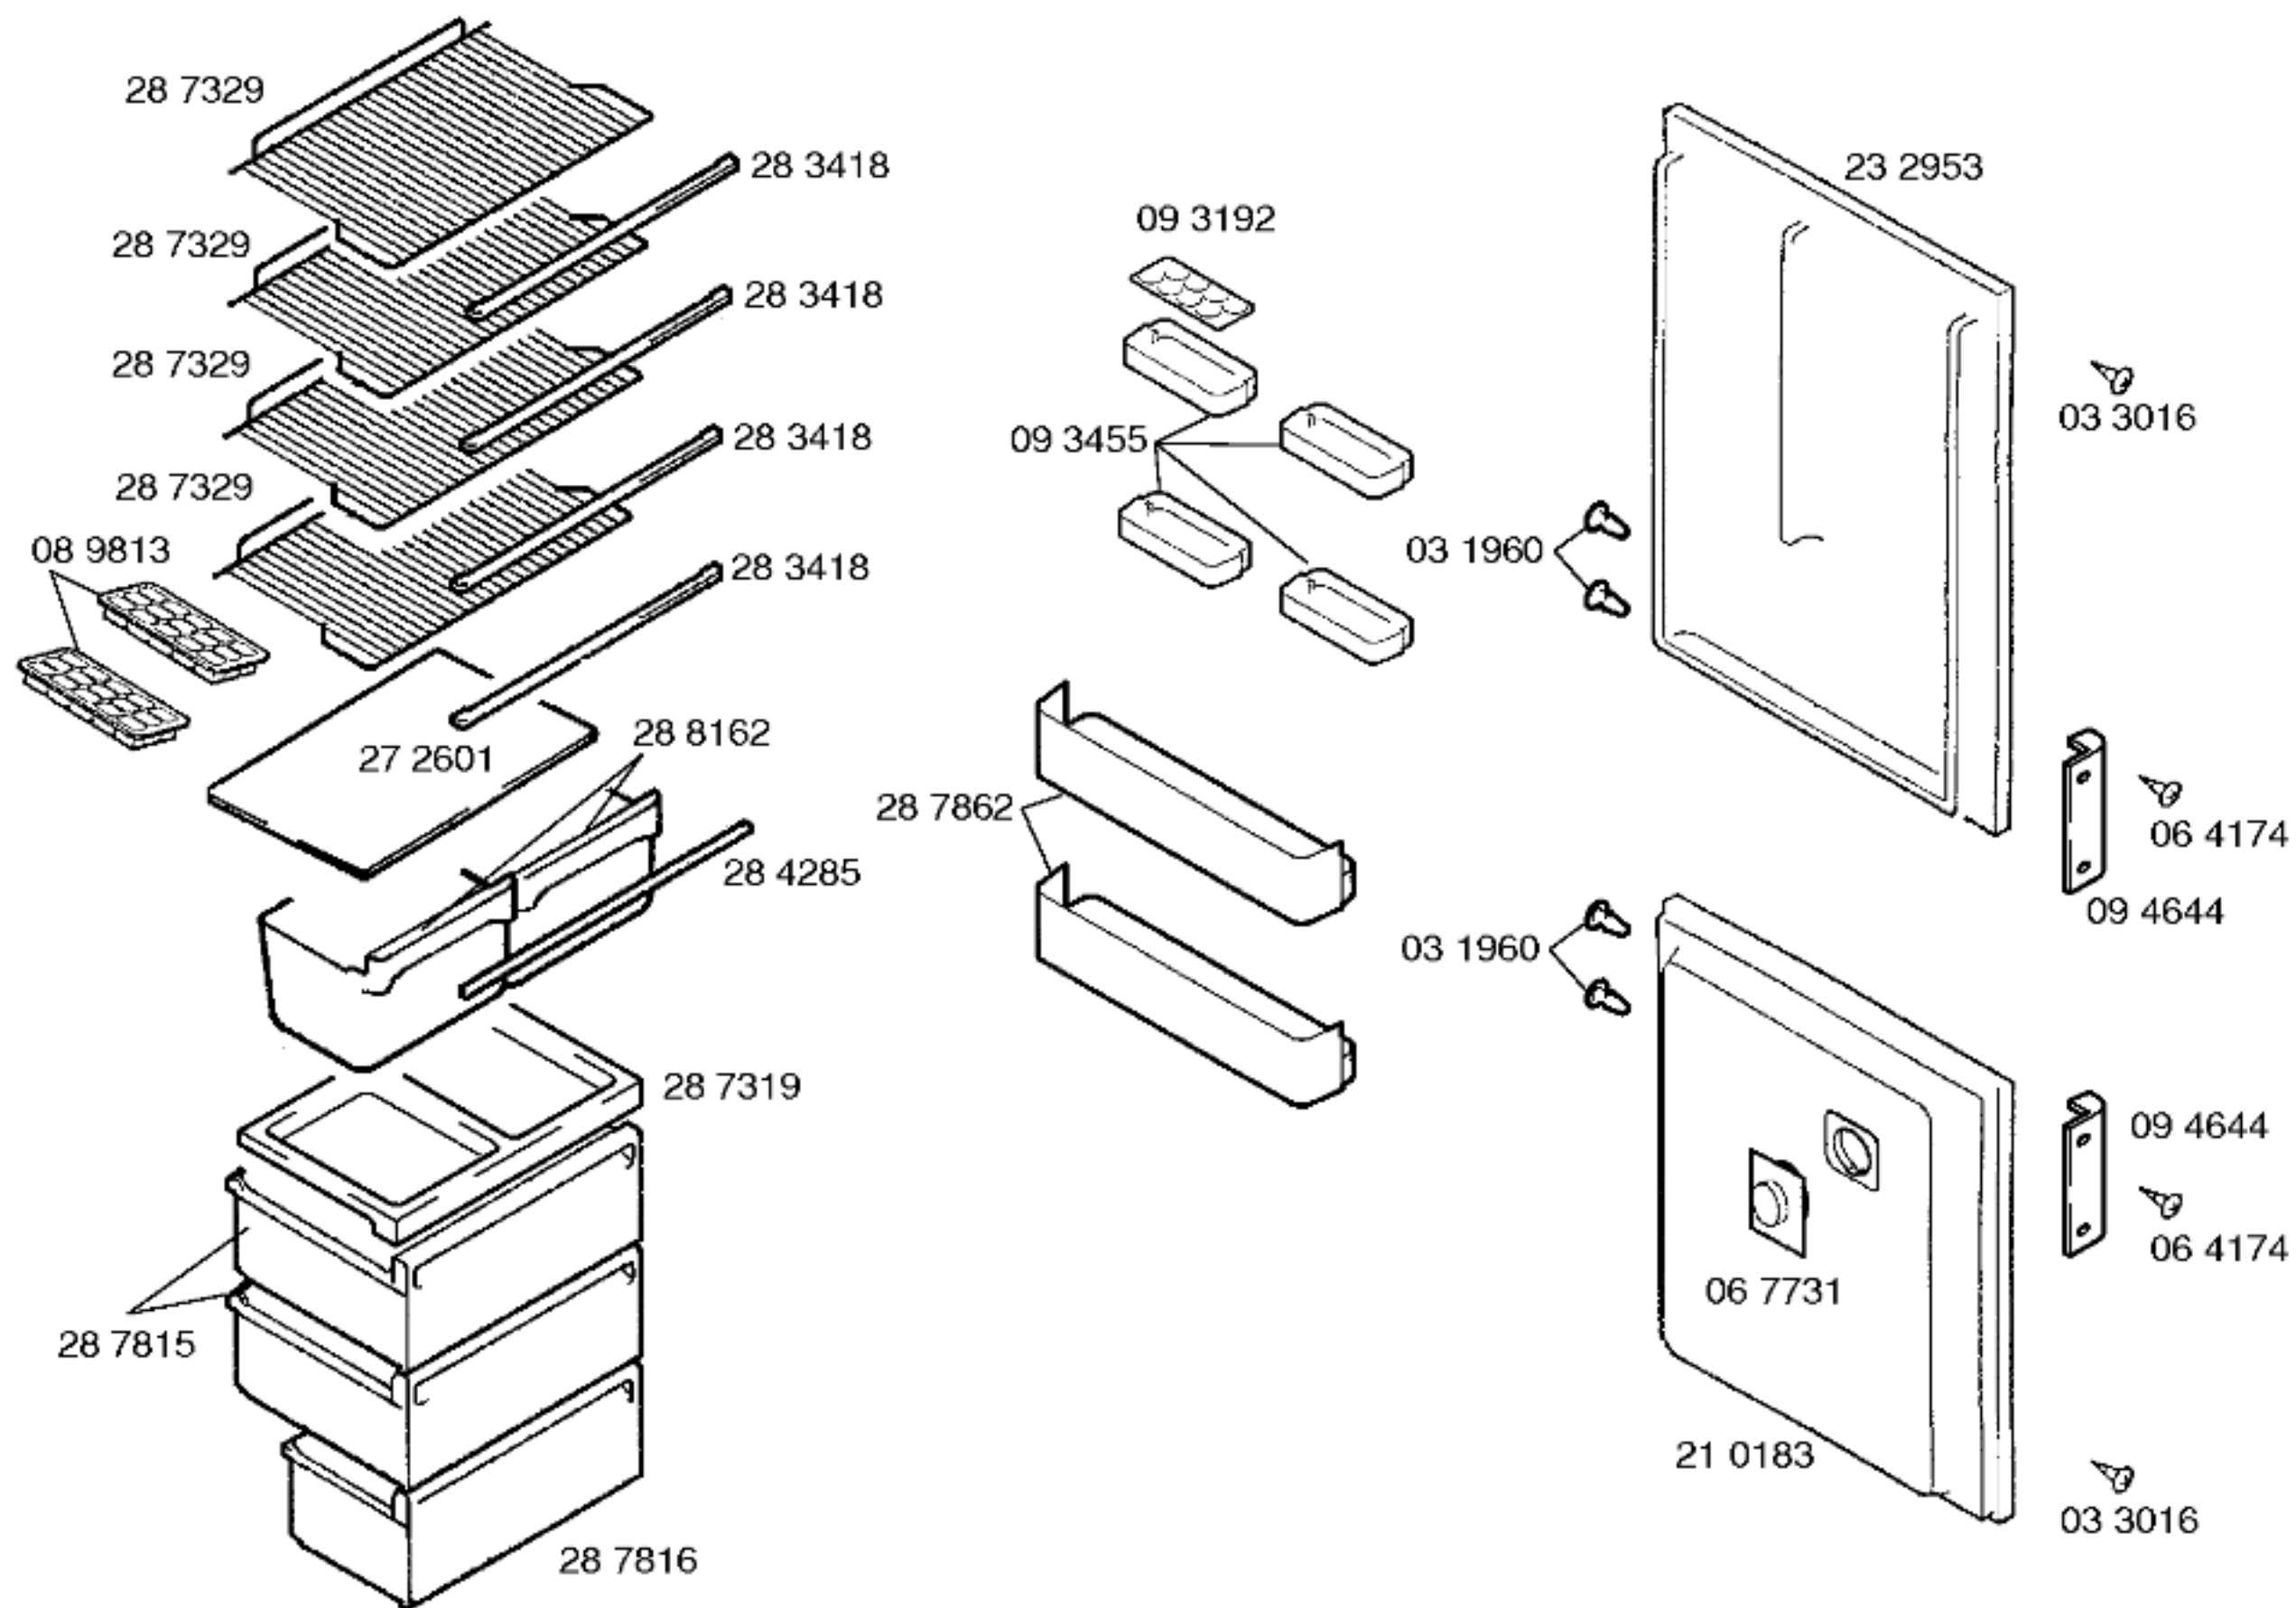

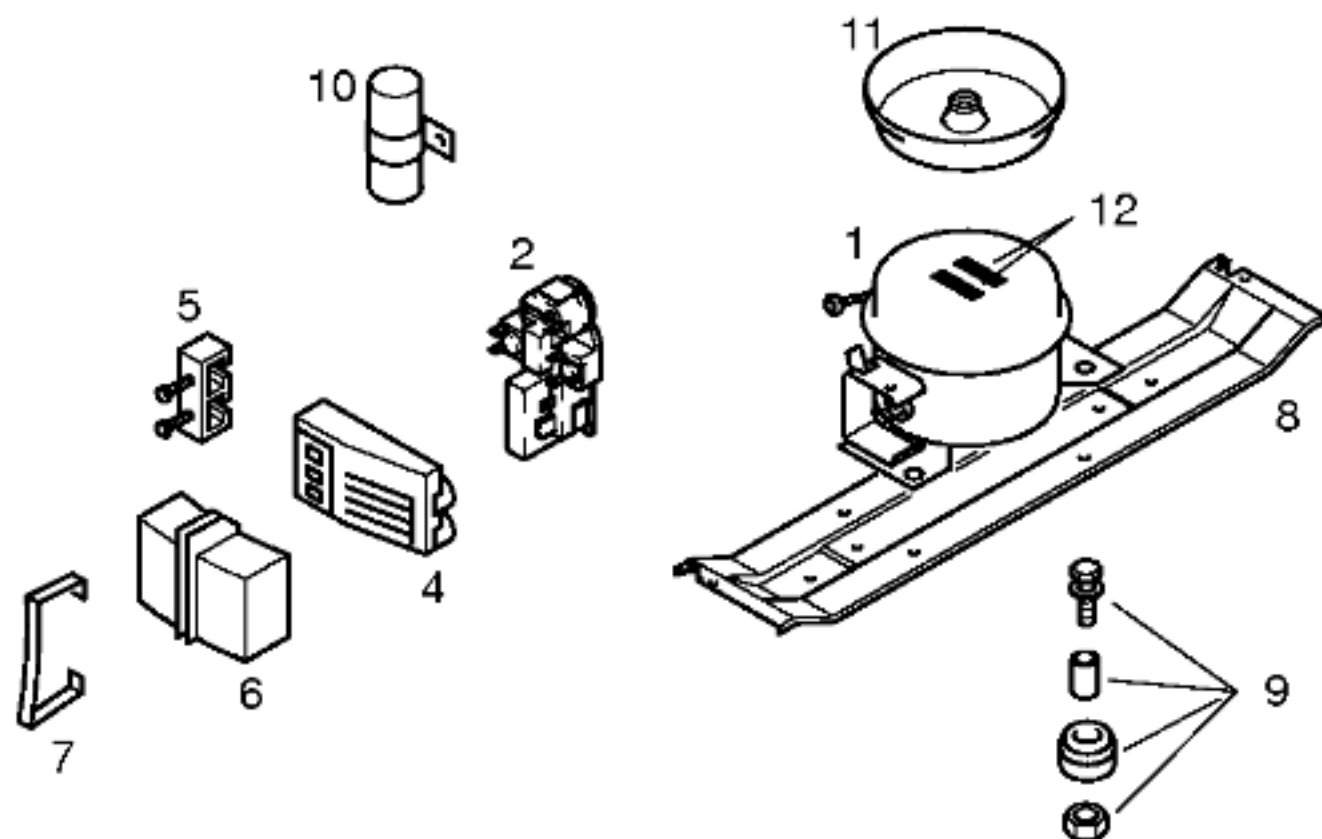

Pos.	Matsushita	U.Hermetica	ZEM	
	SB48C10W	GL45AA	GL45AA	
1	14 1290	14 1374	14 1374	
2	15 1824	15 5130	16 1555	
3				
4				
5				
6				
7				
8	28 8253	28 8253	28 8253	
9	05 0166	05 0166	05 0166	
10				
11	09 5320			
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita SB48C10WA 7,00 16,59 30,10	U. Hermetica GL45AA 8,3 21,2 24,3	ZEM GL45AA 8,3 21,2 24,3
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	DANFOSS 077B62 MIN. MAX +6° -13° -28°	RANCO K54 L1924 MIN. MAX -14° -24 -21° -31° -15°	
Füllmenge/Fill. quantity/Charge/Carga 134a g	60	125	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	87	87	108
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm			
Magnetventil/Magnetic valve/Electrovanna/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			